
Assembly & Care Guide

For Motorized Lift Desk

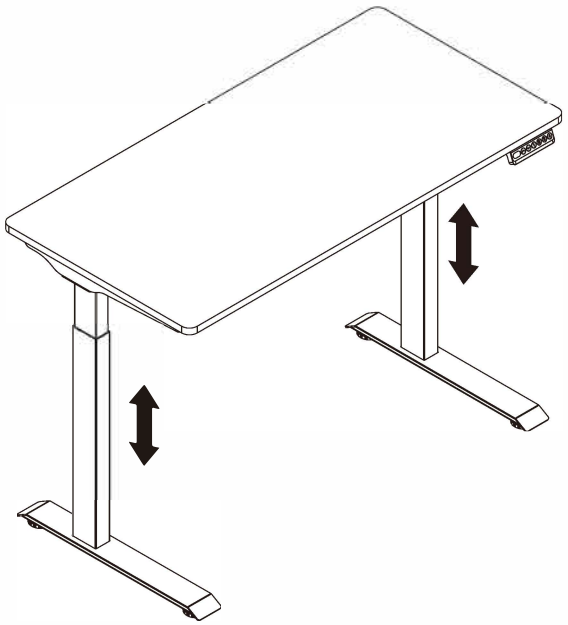

Your Packages Includes:

1 Desktop, 2 Lifting Columns, 2 Feet, 1 Display Panel, & Hardware

Please read all instructions completely before assembling your desk.

Technical Specifications:

Column Number	2
Maximum Load	110lbs
Max Speed	.87in/s
Input Voltage	100-240V
Lowest Position	30in
Highest Position	48in
Desktop Size	47in(length) X 23in(width)
Duty Cyde	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~104°F

Table of Contents

Safety Information

Parts List and Breakdowns

Installing the Columns

Installing the Feet

Installing the Hand Switch (Display Panel)

Connecting the Cables

Hand Switch (Display Panel) Operation

Trouble Shooting

Warranty

Safety Information


- Power Supply: AC100V-240V, 50/60HZ.
- Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings before first use.
- Unplug the power supply before cleaning.
- Dust the surface with a dry cloth.
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- Keep children away from motorized height adjustable desks, control units, and handsets to avoid risk of injury and electric shock.
- Keep all electrical components away from liquids.
- Do not sit or stand on the desk frame.
- Do not crawl or lie under the desk frame.
- Do not place any objects taller than 20" underneath the desk.
- Do not open any of the components; legs, control box, or switch box, to avoid the risk of injury or electric shock.
- In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary. See reset procedure in troubleshooting section.
- This motorized adjustable desk has electric motors and is designed for use in dry areas only.
- The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.
- Any other use is at user's risk.

Parts List

Tools Required:


Allen Key Wrench (Included)

Hardware Included:

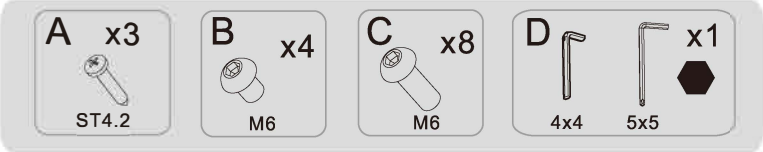


Parts List:

No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Tabletop	1	②	Lifting column	2	③	Hand switch	1
④	Feet	2	⑤	Power plug	1	⑥	Adaptor	1
⑦	Cable mounts	4	⑧	Cable	1			

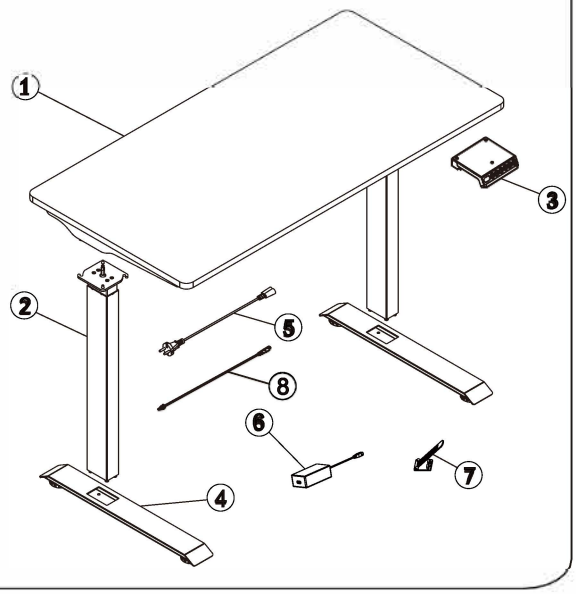


Assembly Instructions


Step 1: Installing the Lifting Column

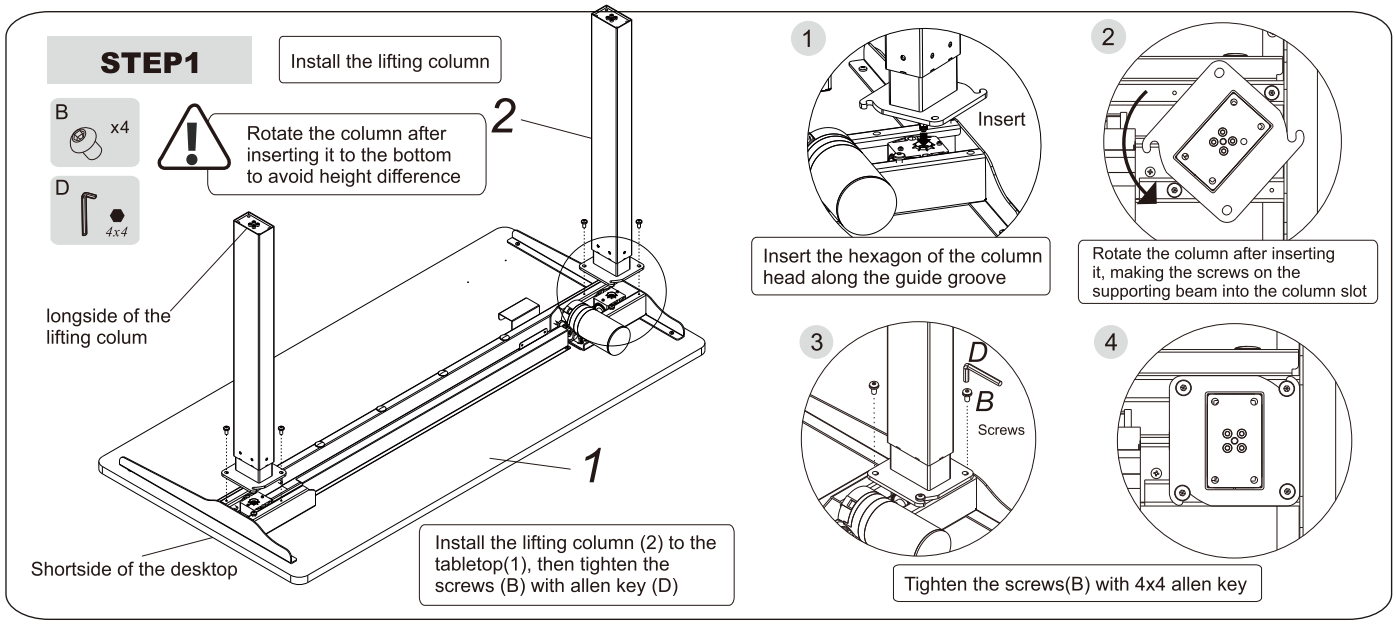


Step 2: Installing the Feet

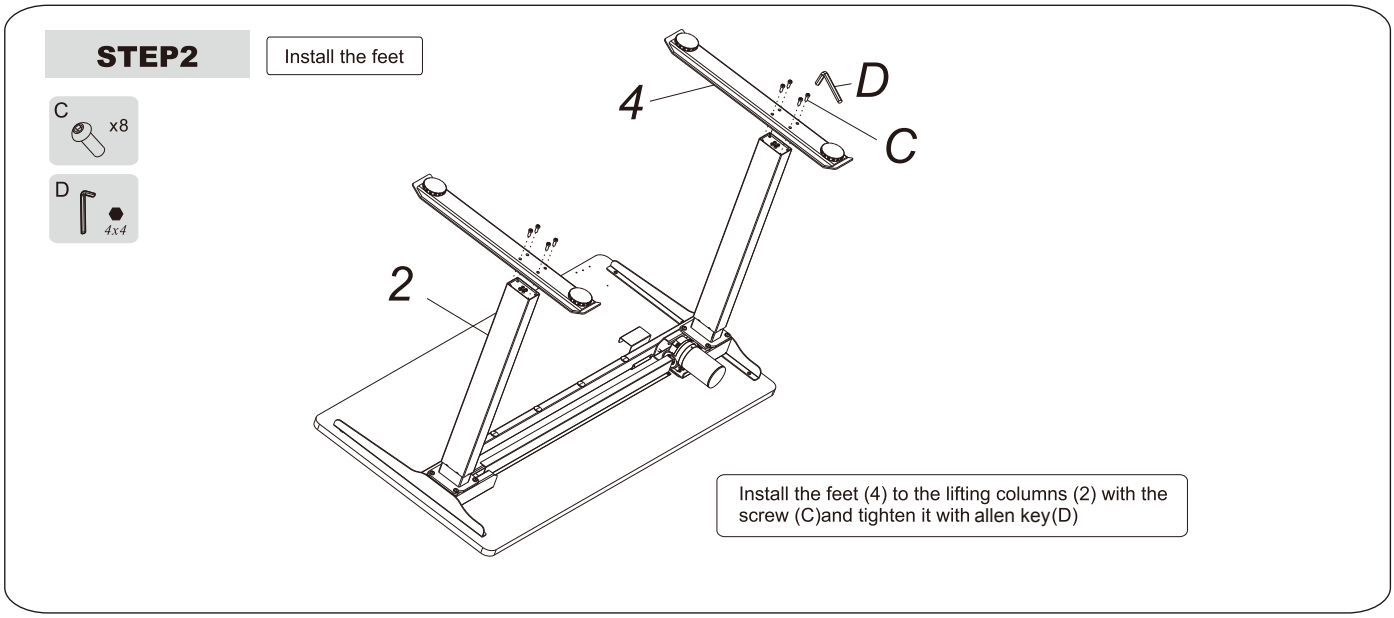


Step 3: Installing the Hand Switch (Display Panel)

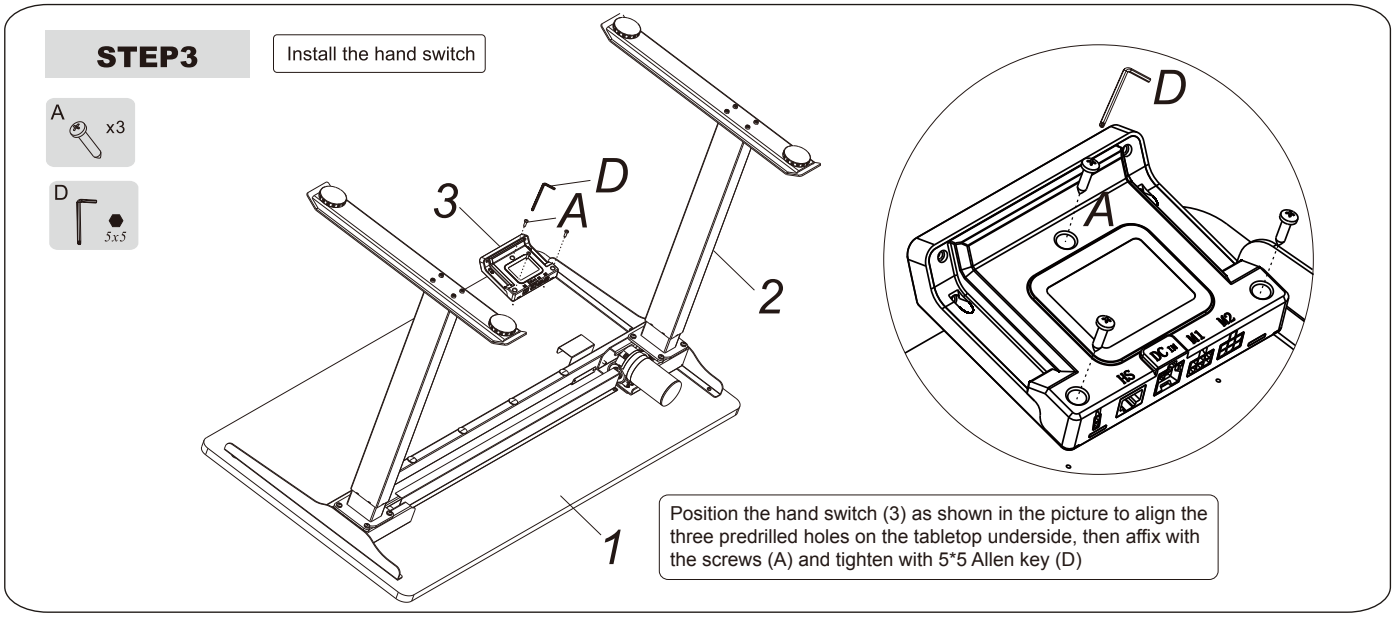

Step 4: Connecting the Cables to the Adaptor

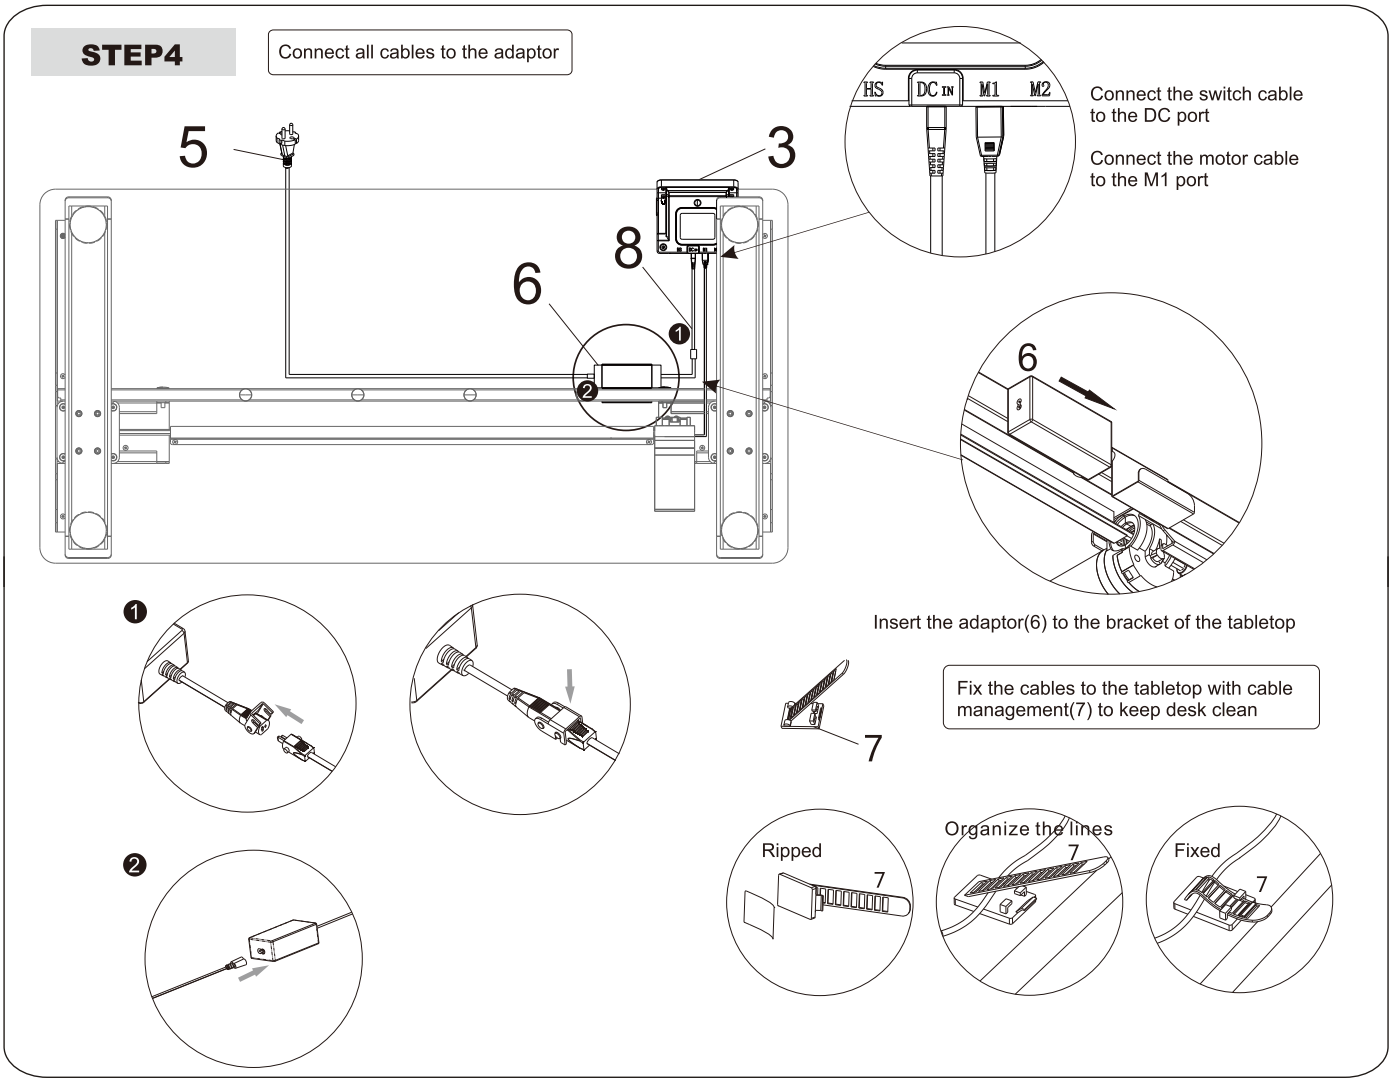

Hand Switch (Display Panel) Instructions

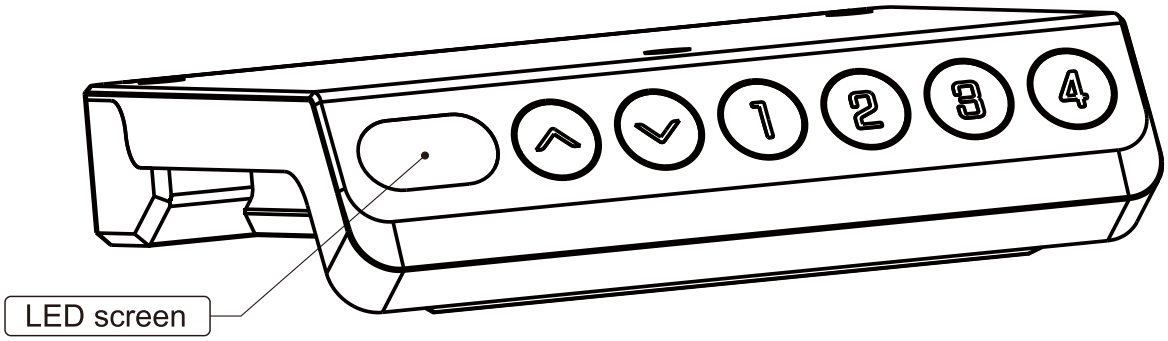

The display panel has 6 buttons as noted below:

(1) "▲" : Up button, adjust the desk upwards
(2) "▼" : Down button, adjust the desk downwards
(3) "1" : Position 1, user's first stored height position
(4) "2" : Position 2, user's second stored height position
(5) "3" : Position 3, user's third stored height position
(6) "4" : Position 4, user's fourth stored height position

- **Height Adjustable Function:** 1. Press the " ▲" button, the desk rises, press and hold to continue to rise, the screen will show "top" when rising to the highest point
  2. Press the "▼ " button, the desk descends, press and hold to continue to descend, the screen will show "bot" when descending to the lowest point
- **Height Memory Function:** 1. When the desktop is stationary, press and hold the button "1" for 3 seconds, the buzzer will generate a sound prompt and the display shows "S-1", the save is successful, and then adjust the desktop to any height, click the button "1" to adjust the desk to the original memory height.
  2. Button "2", "3", "4"all have the same memory height function as Button "1", repeat the above steps.

- **Reset Operation:** 1. When the height of the device is incorrect or an error code appears, the device needs to be reset and corrected. Press and hold the button”3” and button”4” simultaneously for 3 seconds to enter this function.
  2. After entering the reset function, the display shows “RST”, press and hold the “▼” button to reset the device. When the desktop descends to the lowest height, it will bounce upward and run until it is displayed “bot”, that is, the reset is completed.
- **Adjust the Anti-Collision Sensitivity:** 1. Press and hold the ” ▲”button and ” ▼”button simultaneously for 3 seconds to switch the sensitivity. Switch 1 gear for every operation, there are 4 gear range, A-0, A-1, A-2,A-3.
  2. When the display shows “A-0”, the desk turns off the anti-collision function; “A-3” for high sensitivity; “A-2” for middle sensitivity; “A-1” for low sensitivity. (Factory default A-0)
  3. When the desk rises or descends, it will rebound immediately when it encounters an obstacle to protect.
- **Troubleshooting:**
  1. Reset: When the LED shows"RSr" or "rSt", press and hold “▼”button to reset the desk, when the desktop descends to the lowest height, it will bounce upward and run until the LED shows “bot”, that is, the reset is completed.
  2. When it does't work and the LED shows "E01" or "E02", please retry 18 mins later.
  3. If the “▼” button does't work, and the LED shows other code, please check the cable connection and then cut off thepower for at least 10 seconds. Reconnect to the power and press “▼” button to start the reset process when it shows the "RSr" or "rSt" .
  4. If all these above process are inefficient, plz contact our customer service.

Office Furniture Warranty

2-Year Limited Warranty Program

For a period of two (2) years after purchase will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal office use only and is not intended for industrial or public use. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty replacement is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, chips, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including chips, scratches or stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Damage to frames/welds resulting from improper assembly is not covered. General frame rusting is not covered.
6. Fading and/or discoloration of fabrics resulting from exposure to the elements, chemicals, oils, fluids or any other cause are not covered.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER XLS PRODUCTS, INC., THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.