
TANÜR
PIZZA OVEN

Manual & Safety Instructions

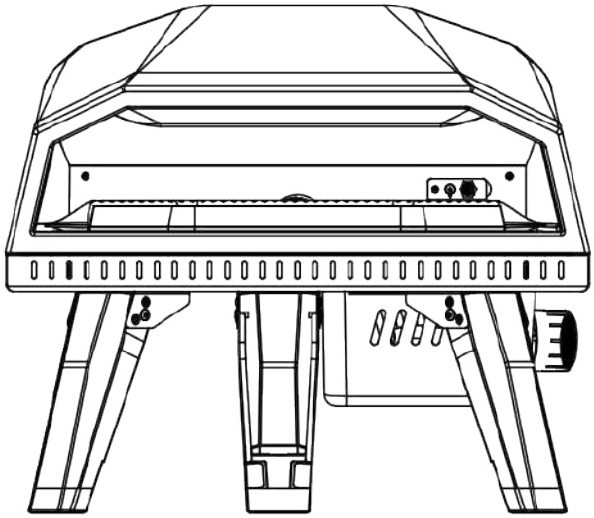

EN

⚠ WARNING

To reduce the risk of fire, burn hazard or other injury, read this safety manual carefully and completely before using this appliance.

⚠ WARNING

Before cleaning, make sure the gas supply and control knob is in the OFF position and that the burner and oven has cooled.

⚠ DANGER

- **Never operate this appliance unattended.**
- **If a fire should occur, keep away from the appliance and immediately call your fire department. Do not attempt to extinguish an oil or a grease fire with water.**

Failure to follow these instructions could result in fire, explosion or burn hazard which could cause property damage, personal injury or death.

⚠ DANGER

If you smell gas:

- **Shut off gas to the appliance**
- **Extinguish any open flame**
- **If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.**

Failure to follow these instructions could result in fire, explosion or burn hazard which could cause property damage, personal injury or death.

⚠ WARNING

FOR OUTDOOR USE ONLY

⚠ WARNING

When using a match to light the appliance, make sure to use the included matchstick holder.

⚠ WARNING

a. Keep the fuel supply hose away from any heated surface(s).
b. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
c. Keep children and pets away from the appliance at all times.
d. Do not move the appliance when in use.
e. This appliance is not intended for and should never be used as a heater.

⚠ WARNING

Spiders and insects can nest inside the burner of the appliance and disrupt gas flow. Inspect the burner at least once a year. A clogged tube can lead to a fire beneath the appliance.

⚠ WARNING

Gas cylinders must be stored outdoors, out of the reach of children, and should not be stored in a building, garage, or any other enclosed area.

⚠ WARNING

Do not store gas cylinder in a building, garage or any other enclosed area and keep out of reach of children at all times.

⚠ WARNING

Check all gas supply fittings for leaks before each use. Do not use the appliance until all connections have been checked and do not leak.

⚠ WARNING

Do not smoke while leak testing. Never leak test with an open flame.

⚠ WARNING

When lighting, keep your face and hands as far away from the appliance as possible.

⚠ WARNING

Minimum clearance from sides of unit to combustible construction is 610mm (24 inches).

Minimum clearance from back of unit to combustible construction is 915mm (36 inches).

⚠ WARNING

This manual includes an instruction to clean and inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being put into operation. The replacement hose assembly shall be that specified by the manufacturer.

⚠ WARNING

This manual states that an oven, fryer or broiler shall not be used on or under any apartment or condominium balcony or deck.

⚠ WARNING

This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.
Read and follow all warnings and instructions before assembling and using the appliance.
Follow all warnings and instructions when using the appliance. Keep this manual for future reference.

⚠ WARNING

This appliance is not intended to be installed in or on a boat. This appliance is not intended to be installed in or on a recreational vehicle.

⚠ WARNING

Do not modify the appliance

CAUTION: The burner tube openings must be positioned properly over the valve orifices

⚠ WARNING

This appliance shall be used only outdoors, and shall not be used in a building, garage, or any other enclosed area.

⚠ WARNING

The appliance is not intended for commercial use.

⚠ WARNING

This manual includes a list of required parts necessary for the safe operation of the appliance, directions for proper assembly and for assembly of installed parts and accessories supplied with the appliance, and proper procedures for gas leak testing.

⚠ WARNING

The appliance should not be located or used under overhead unprotected combustible construction materials or surfaces. For a grill, fryer or broiler, the minimum clearance shall be at least 10ft (3m) from any structure or combustible material.

⚠ WARNING

Turn off the gas supply at the gas cylinder after use.

⚠ WARNING

This appliance must be kept away from flammable materials during use

⚠ LP GAS CYLINDER WARNING

1. Do not store spare liquid propane gas cylinder under or near this appliance.
2. Never fill the cylinder beyond 80 percent capacity.
3. Liquid propane cylinder must be fitted with an OVERFILL PROTECTION DEVICE (OPD).
4. The cylinder supply system must be arranged for vapour withdrawal.
5. If the information above is not followed exactly, a fire resulting in death or serious injury may occur.
6. This manual states that the installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58; or Natural Gas and Propane Installation Code, CSA B149.1; Propane Storage and Handling, CSA B149.2
7. The cylinder to be used must be constructed and marked in accordance with the specifications for LP gas cylinders, U.S. Department of Transportation (DOT) or the Standards for cylinders, Spheres and Tubes for the Transportation of Dangerous Goods, CAN/CSA-B339.


⚠ WARNING

The appliance will be hot during and after use. Use insulated oven mitts or gloves for protection from hot surfaces.

Connecting the gas hose to your TANüR

Always route the gas hose away from the oven. The hose must not touch the oven body.

⚠ WARNING Hose pipe can be a tripping hazard

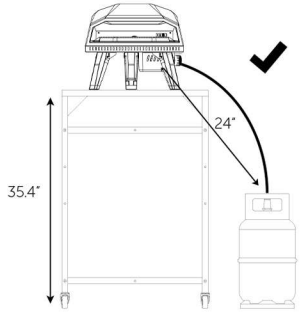

Before lighting

Inspect the gas supply hose prior to turning on the gas. If there is evidence of cut, wear or abrasion, it must be replaced prior to use.

Screw the regulator onto the gas cylinder. Leak check the hose and regulator connections with a soap and water solution before lighting the appliance.

Only the pressure regulator and gas hose assembly supplied with this appliance should be used. If replacement pressure regulators and hose assemblies are required, they should be those specified by the appliance manufacturer, Ooni Limited.

Safety practices to avoid injury

When properly cared for, your oven will provide safe, reliable service for many years. However, extreme care must be used as the oven produces intense heat that can increase the risk of accidents.


When using this oven basic practices must be followed, including but not limited to following:

- Do not repair or replace any part of the oven unless specifically recommended in this manual. All other service should be referred to a qualified technician.
- Children should not be left alone or unattended in an area where the oven is being used. Do not allow children to sit, stand or play around the oven at any time.
- Never let clothing or other flammables come in contact with or too close to any burner or hot surface until it has cooled. The fabric could ignite, causing serious personal injury.
- For personal safety, wear proper apparel. Loose fittings garments or sleeves should never be worn while using the oven. Some synthetic fabrics are highly flammable and should not be worn while cooking.
- Do not heat unopened food containers as a build-up of pressure may cause the containers to burst. When lighting the burner, always pay close attention to what you are doing.
- When using the oven, do not touch the outer shell, stone baking board or immediate surroundings as these areas become extremely hot and could cause burns.
- Do not use the oven to cook extremely fatty meats or other products which increase flare-up.
- Keep the area surroundings the oven free from combustible material including fluids, trash and vapours such as gasoline or charcoal lighter fluid.
- Do not obstruct the flow of combustion and ventilation air.
- Never use the oven in extremely windy conditions.
- The temperature under the oven is high. Do not place the oven on a table with flammable table clothes, plastic or any other inflammable materials.

Parts List

1. TANüR oven
2. Stone baking board

1.

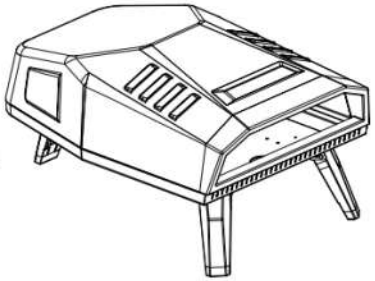


2.




Assembly


Before assembly, make sure all parts are present. If any part is missing or damaged, do not attempt to assemble the appliance. Contact customer service for replacement parts.

Step 1
Unfold the legs

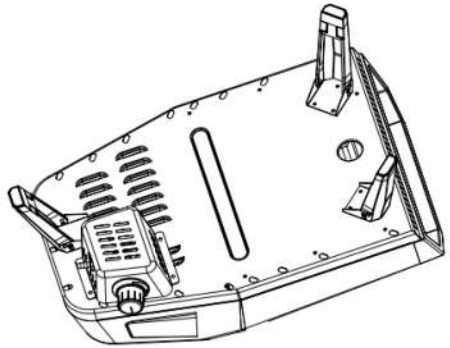

Step 2
Insert the stone baking board

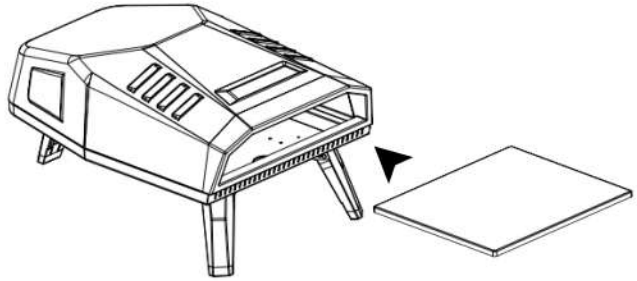

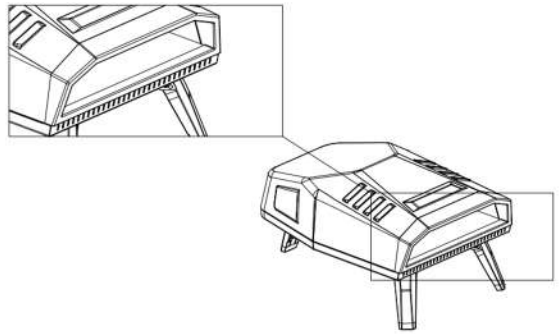


Step 3

Connect to gas canister

Regulators will vary depending on region.

⚠ WARNING

- Please always keep the gas bottle in upright position.
- The size for 20 lbs LP gas cylinder is 12.2 inches in diameter and 17.9 inches tall
- If the appliance is not in use, the gas must be turned off at the supply cylinder.
- The cylinder used must include a collar to protect the cylinder valve.
- The minimum distance for the appliance and the 20lb gas tank is 25 inches apart.

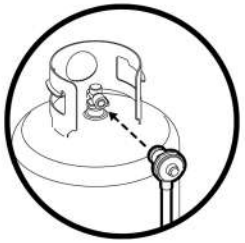

QCC1 gas regulator

This gas fitting is clockwise. Make sure that the tank is completely switched off and screw the regulator as far as possible into the gas tank valve.

Connecting the liquid propane gas cylinder

1. The cylinder valve should be in OFF position.
2. Make sure the burner valve is in OFF position.
3. Inspect the valve connections, port and regulator assembly. Remove debris and inspect the hose for damage.
4. When connecting the regulator assembly to the valve, use your hand to tighten the nut clockwise until it stops. Use of a wrench could damage the quick coupling nut and result in a hazardous situation.
5. Open the cylinder valve fully by turning the valve counter-clockwise.
6. Before lighting the oven, use a soap and water solution to check all connections for leaks.
7. If a leak is found, turn the cylinder valve OFF, and do not use the oven until local liquid propane dealer can make repairs.

Disconnecting the liquid propane gas cylinder

1. Turn the oven burner valve OFF and make sure the oven is cool.
2. Turn the liquid propane cylinder valve OFF by turning clockwise until it stops.
3. Detach the regulator assembly from the cylinder valve by turning the quick coupling nut counter-clockwise.
4. Place dust cap for cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

Converting to Fixed Fuel Systems (Large Propane Tank)

⚠ WARNING

FIRE, EXPLOSION, AND CARBON-MONOXIDE HAZARD


If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide may result causing property damage, personal injury, or loss of life.

This conversion kit shall be installed by a qualified agency in accordance with the appliance ,manufactures instructions and all applicable codes and requirements of the Authority Having Jurisdiction. The qualified agency is responsible for the proper installation of this kit. The Installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.


- Only applicable with TANûR and LEHäVA ovens
- **NOT INCLUDED:** DH22 model hose and quick connectors to Fixed Fuel System
- The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5kPa).
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5kPa).

Instructions


1. **Caution:** Before proceeding with the conversion; shut off the gas supply and ensure the oven is cool to the touch. Remove the baking stone and turn the oven upside down.
2. Remove the gas hose using a 19mm wrench.

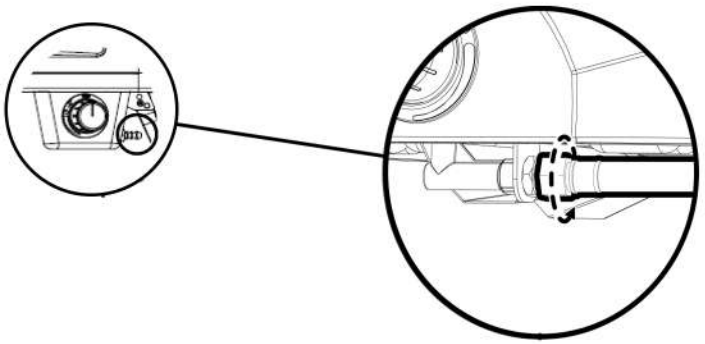

3. Attach DH22 gas hose using a 19mm wrench.

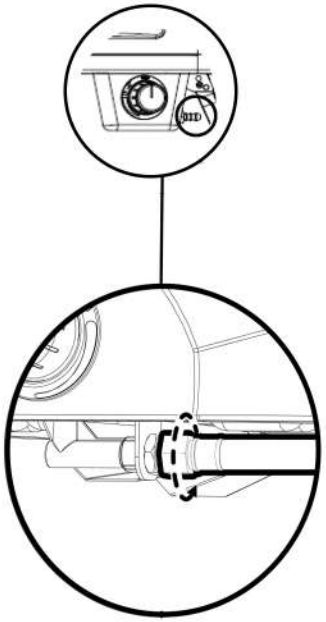

4. Attach quick connectors at the end of the gas hose and connect to the fixed fuel system.

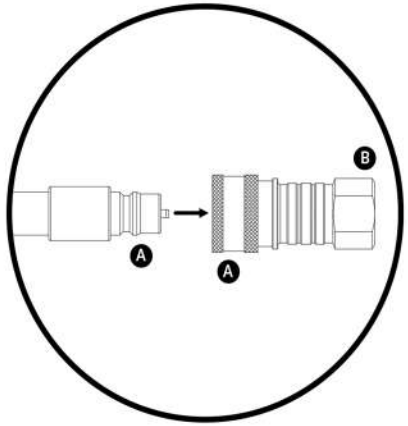

5. Perform a leak test to ensure connection is safe and proper. (p. 10)

Operating instructions

Using the oven

Each burner is rated at 13,300 BTU/Hr.

To begin:


1. Make sure the oven has been leak tested and properly placed.
2. Remove any remaining packing material.
3. Light the burner using the lighting instructions below

Lighting instruction

To light the burner


Read all instructions before lighting.

1. Make sure the control knob is in OFF position, and then turn the liquid propane cylinder valve ON by slowly turning counter-clockwise.
2. Push in and slowly turn the control knob anticlockwise until you hear a click and the burner ignites.
3. Continue to push in the control knob for 5 seconds after ignition and then release.
4. If burner doesn't light within 5 seconds, turn the knob OFF, wait 5 minutes and repeat the lighting.

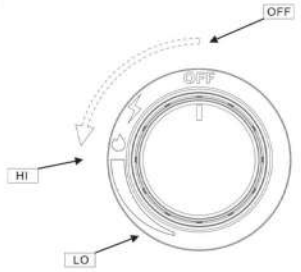

To light with a match

1. If burner will not light after several attempts using the control knob, the burner may be lit with a match.
2. If you have already attempted to light the burner using the control knob, wait 5 minutes for any gas to dissipate.
3. Insert a match into the matchstick holder, ignite the match and insert through the oven opening to the burner.
4. Push and turn the control knob to HI slowly, the burner should ignite immediately.
5. Continue to push in the control knob for 5 seconds after ignition and then release.
6. If the burner does not light within seconds, turn the control knob OFF and wait 5 minutes and try again.

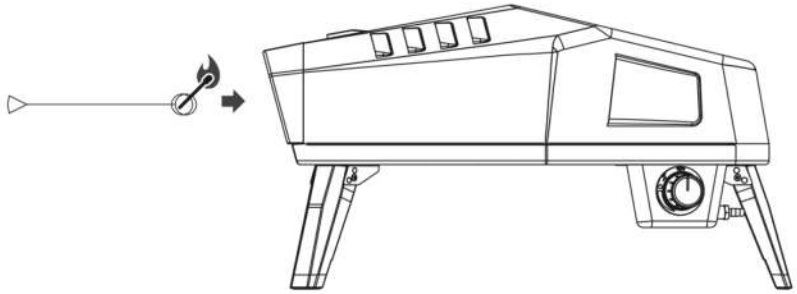

Leak testing

General

Although the gas connections of the appliance are leak tested prior packing and shipment, a complete test must be performed at the installation site.
Before each use, check all the gas connections for leak testing using the procedure listed below. If the smell of gas is detected at any time, you should immediately stop using and check the entire system for leaks.

Before testing

Make sure all packing material has been removed from the appliance.
Make a solution of one part liquid detergent and one part water. You will need a spray bottle, brush or rag to apply the solution to the fittings.

To test

1. Turn the burner valve OFF.
2. Turn the liquid propane cylinder valve on counter-clockwise to open the valve.
3. Apply the soap solution to all gas fittings. Soap bubbles would appear where a leak is present.
4. If a leak is present, immediately turn the gas supply OFF and tighten leaky fittings.
5. Turn the gas back ON and recheck.
6. Should the gas continue to leak from any of the fittings, turn the gas supply OFF and contact customer service.

Care and maintenance

Store TANüR oven out of direct sunlight and indoors where possible and when storing for extended periods of time. TANüR oven should not be exposed to harsh weather conditions such as snow, heavy rain and strong winds.

Wait for TANüR oven to cool completely before moving

The outer shell of TANüR oven may fade over time and through use. This will not affect performance.

Stone baking board

1. **DO NOT** use the stone over an open flame
2. Avoid extreme temperature change to the stone. **DO NOT** place frozen foods on a hot stone
3. The stone is fragile and can break if bumped or dropped
4. The stone is very hot during use and stays hot for a long time after use.
5. **DO NOT** cool the stone with water when the stone is hot
6. After cleaning the stone with water, please dry the stone before use. This can be done in a conventional oven at 60°C (140°F) for 2 hours.
7. Burnt on food can be cleaned by flipping the stone where it will clean itself due to the high oven temperatures

Oven Interior

Wipe down with a paper towel between uses to remove any debris.

Other areas of oven

Clean when required using a non abrasive sponge

Troubleshooting

Problem	Possible Cause	Prevention/Solution
Burner will not light	1. No gas flow 2. Coupling nut and regulator not fully connected 3. Obstruction of gas flow 4. Disengagement of burner to valve 5. Incorrect assembly	1. Check to see if propane tank is empty 2. Turn the coupling nut about one-half to three quarters additional turn until solid stop. Tighten by hand only - do not use tools 3. Clear burner tube 4. Re-engage burner and valve 5. Check steps in assembly instructions
Sudden drop in gas flow or low flame	1. Out of gas	1. Check for gas in propane tank 2. Turn off gas control knob, wait 30 seconds and light oven. If flames are still low, turn off gas control knob and propane tank valve. Disconnect regulator. Reconnect regulator and leak test. Turn on propane tank valve, wait 30 seconds and then light oven.
Flames blow out	1. High or gusting winds 2. Low on propane gas	1. Turn front of oven away from wind 2. Refill propane tank 3. Refer to Sudden drop in gas flow above
Flare-up	1. Grease build up 2. Excessive fat in meat 3. Excessive cooking temperature 4. Excess flour on the cooking surface	1. Clean oven 2. Trim fats from meat before cooking 3. Adjust (lower) temperature accordingly 4. Brush remnant flour from cooking surface 5. Flip stone
Flashback (fire in burner tube, roaring sound from burner)	1. Burner and/or burner tubes are blocked 2. Pressure drop during ignition	1. Turn gas control knob off. Clean burner and/or burner tubes. 2. Turn off oven, ensure the tank valve is fully open (if applicable) and relight.

The TANüR oven Customer Service can be reached via www.flameking.com

Product technical information

Model number

TANüR

Product Label

Manufacturer: Flame King Inc. **Model:** TANüR
ANS Z21.89-2017 CSA 1.18-2017 Outdoor Cooking Specialty Gas Appliance
For outdoor use only. If stored indoors, detach and leave cylinder outdoors.

- Do not store spare LP-gas cylinder under or near the appliance.
- Never fill the cylinder beyond 80 percent full.
- If the information beyond is not followed exactly, a fire causing death or serious injury may occur.
- Minimal clearance from sides and back of the unit to combustible construction, 24 inches from the sides and 24 inches from the front.
- Do not use the appliance under overhead combustible surfaces.
- CAUTION: The gas pressure regulator provided with this appliance must be used. Replace only with the regulator Model No. A300USL. This regulator is set for an outlet pressure of 11 iwc.
- Turn off the LP supply at cylinder when appliance is not in use.
- This appliance is not intended for commercial use.
- The instruction manual contains important information necessary for the proper assembly and safe use of the appliance.
- Read and follow all warnings and instructions before assembling and using the appliance.
- Follow all warnings and instructions when using the appliance.
- If instruction or parts are missing contact support.ooni.com

	Propane	Rate Input (BTU/H)
Components	Orifice Size	
Main Burner	0.74mm	13300


LIGHTING INSTRUCTION - TO LIGHT THE BURNER
Read all instructions before lighting

- Make sure the control knob is in OFF position, and then turn the liquid propane cylinder valve ON by slowly turning counterclockwise.
- Push in and slowly turn the control knob anticlockwise until you hear a click and the burner ignites.
- If burner doesn't light within 5 seconds, turn the knob OFF, wait 5 minutes and repeat the lighting.

Flame King inc., 8616 Slauson Ave., Pico Rivera, CA, 90660

PA-A00010

- Always route the gas hose away from the oven. The hose must not touch the oven body.
- **WARNING** Hose pipe can be a tripping hazard
- Coloca siempre el tubo flexible de gas alejado del horno. El tubo flexible no debe tocar el cuerpo del horno.
- **ADVERTENCIA** El tubo flexible puede generar riesgo de tropiezos
- Éloignez toujours le tuyau à gaz du four. Le tuyau ne doit pas toucher à la structure du four.
- **MISE EN GARDE** Le tuyau peut présenter un risque de trébuchement

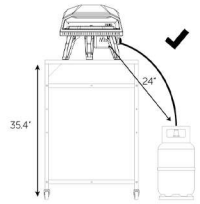

PA-A00010

Fabricante: Flame King Inc.
Modelo: TANüR
Flame King inc., 8616 Slauson Ave., Pico Rivera, CA, 90660

- No almacenes la bombona de gas LP de repuesto debajo o cerca del aparato.
- Nunca llenes la bombona más del 80%.
- Si no se siguen al pie de la letra las indicaciones anteriores, puede producirse un incendio que cause la muerte o lesiones graves.
- La distancia mínima entre los laterales y la parte trasera de la unidad a la construcción combustible debe ser de 24 pulgadas por los lados y 24 pulgadas desde la parte delantera.
- No utilices el aparato debajo de superficies elevadas que sean combustibles.
- ADVERTENCIA: Es necesario utilizar el regulador de presión de gas suministrado con este producto. Sustitúyalo únicamente por el regulador modelo A300USL. Este regulador está ajustado para una presión de salida de 11 iwc.
- Cierra el suministro de LP en la bombona cuando el aparato no esté en uso.
- Este aparato no está diseñado para uso comercial.
- El manual de instrucciones contiene información importante necesaria para el montaje correcto y el uso seguro del aparato.
- Lee y sigue todas las advertencias e instrucciones antes de montar y utilizar el aparato.
- Sigue todas las advertencias e instrucciones cuando utilices el aparato.
- Si faltan instrucciones o piezas, ponte en contacto con support.ooni.com

INSTRUCCIONES DE ENCENDIDO - PARA ENCENDER EL QUEMADOR: lee todas las instrucciones antes de encenderlo

- **Asegúrate de que el mando de control esté en posición de apagado (OFF) y, a continuación, pon la válvula de la bombona de propano líquido en la posición de encendido (ON) girándola lentamente hacia la izquierda.**
- **Presiona y gira lentamente el mando de control hacia la izquierda hasta que escuches un clic y el quemador se encienda.**
- **Si el quemador no se enciende en 5 segundos, pon el mando en posición de apagado (OFF), espera 5 minutos y repite el proceso de encendido.**

ANS Z21.89-2017 CSA 1.18-2017 Aparato de gas especializado para cocinar al aire libre. Solo para uso en exteriores. Si se almacena en interiores, desconecta la bombona y déjala al aire libre.

	Propano	Tasa de entrada (BTU/h)
Componentes	Tamaño del orificio	
Quemador principal	0.74mm	13300

Le Fabricant: Flame King Inc.
Modeler: TANüR
Flame King inc., 8616 Slauson Ave.,
Pico Rivera, CA, 90660

- Ne rangez pas le cylindre à gaz de rechange LP sous l'appareil ou à proximité.
- Ne remplissez jamais le cylindre à plus de 80 % de sa capacité.
- Le non-respect des consignes ci-dessus pourrait causer un incendie mortel ou de blessures graves.
- Le dégagement minimum entre les côtés de l'unité et une construction combustible est de 24 po des côtés et de 24 po du devant.
- N'utilisez pas l'appareil sous des surfaces combustibles.
- ATTENTION : Le régulateur de pression de gaz fourni avec cet appareil doit être utilisé. Remplacez-le uniquement par le régulateur de modèle n° A300USL. Ce régulateur est réglé pour une pression de sortie de.
- Fermez l'alimentation LP au cylindre lorsque l'appareil n'est pas utilisé.
- Cet appareil n'est pas conçu pour un usage commercial.
- Ce manuel d'instruction comprend d'importantes informations nécessaires au bon assemblage et à l'utilisation sécuritaire de l'appareil.
- Assurez-vous de lire et de suivre tous les avertissements et les instructions avant d'assembler et d'utiliser l'appareil.
- Assurez-vous de suivre tous les avertissements quand vous utilisez l'appareil.
- Conservez ce manuel à titre de référence.
- Si les instructions ou des pièces sont manquantes, communiquez avec le service d'assistance à support.ooni.com

INSTRUCTIONS D'ALLUMAGE - POUR ALLUMER LE BRÛLEUR
Lisez bien toutes les instructions avant de procéder à l'allumage.

- **Assurez-vous que le bouton de commande est en position ARRÊT, puis activez la vanne du cylindre de propane liquide en la tournant lentement dans le sens contraire des aiguilles d'une montre.**
- **Enfoncez le bouton de commande et tournez-le lentement dans le sens contraire des aiguilles d'une montre jusqu'à ce qu'il s'enclenche et que le brûleur s'allume.**
- **Si le brûleur ne s'allume pas, fermez le bouton de commande, attendez 5 minutes puis recommencez le processus d'allumage.**

ANS Z21.89-2017 CSA 1.18-2017 Cuisiner en plein air spécialisés appareils à gaz. Pour une utilisation extérieure seulement. Si l'appareil est rangé à l'intérieur, retirez le cylindre et laissez-le à l'extérieur.

	Propane	Taux d'entrée (BTU/H)
Composant	Taille de l'orifice	
Brûleur principal	0.74mm	13300

TANüR - Outdoor Use Gas Grill				
Gas Type	Number of Burners	Injector Size Main Burner	Total Gas Consumption BTU	Gas Pressure KPa
Propane	1	0.74	13300	2.74

Manufacturer Address:
Flame King inc., 8616 Slauson Ave., Pico Rivera, CA, 90660