

SKU:SF001082

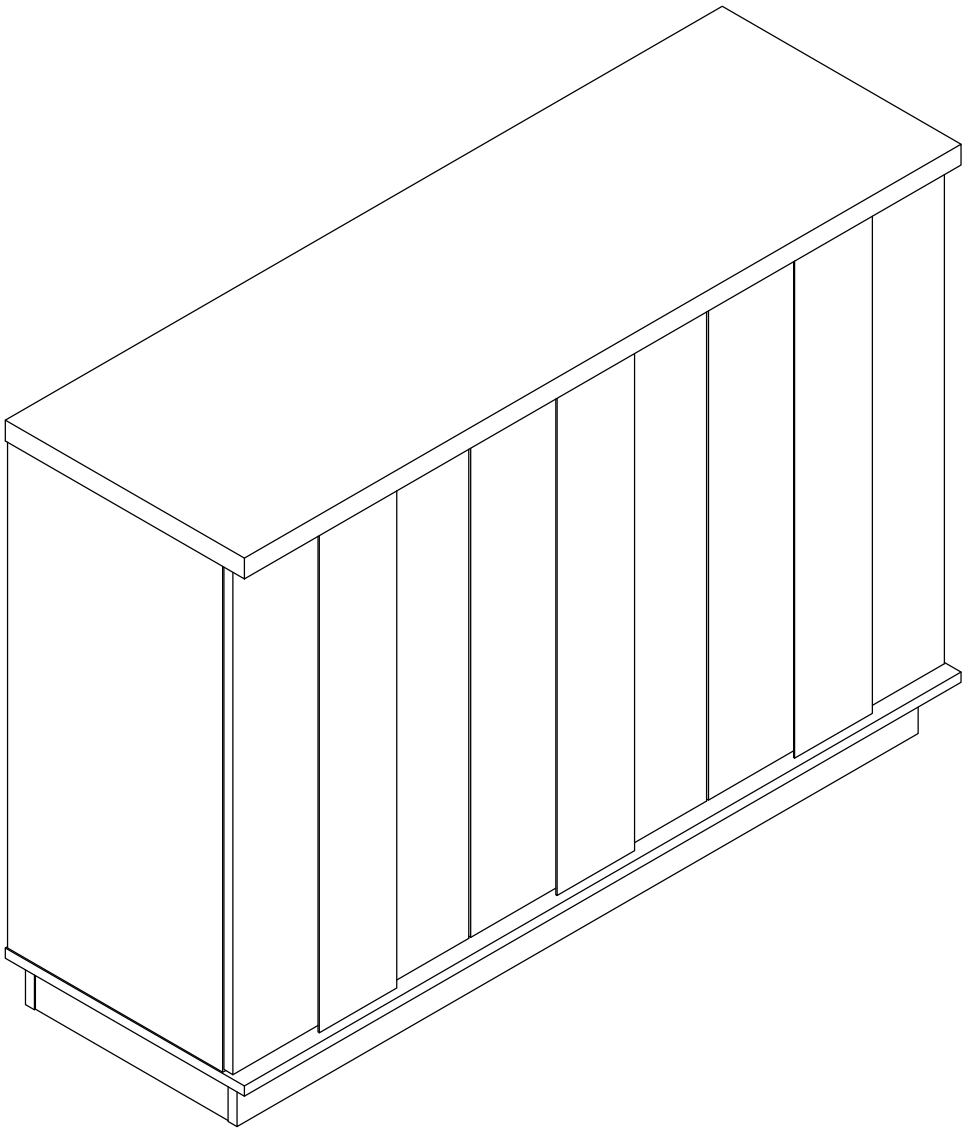

BOARD IDENTIFICATION

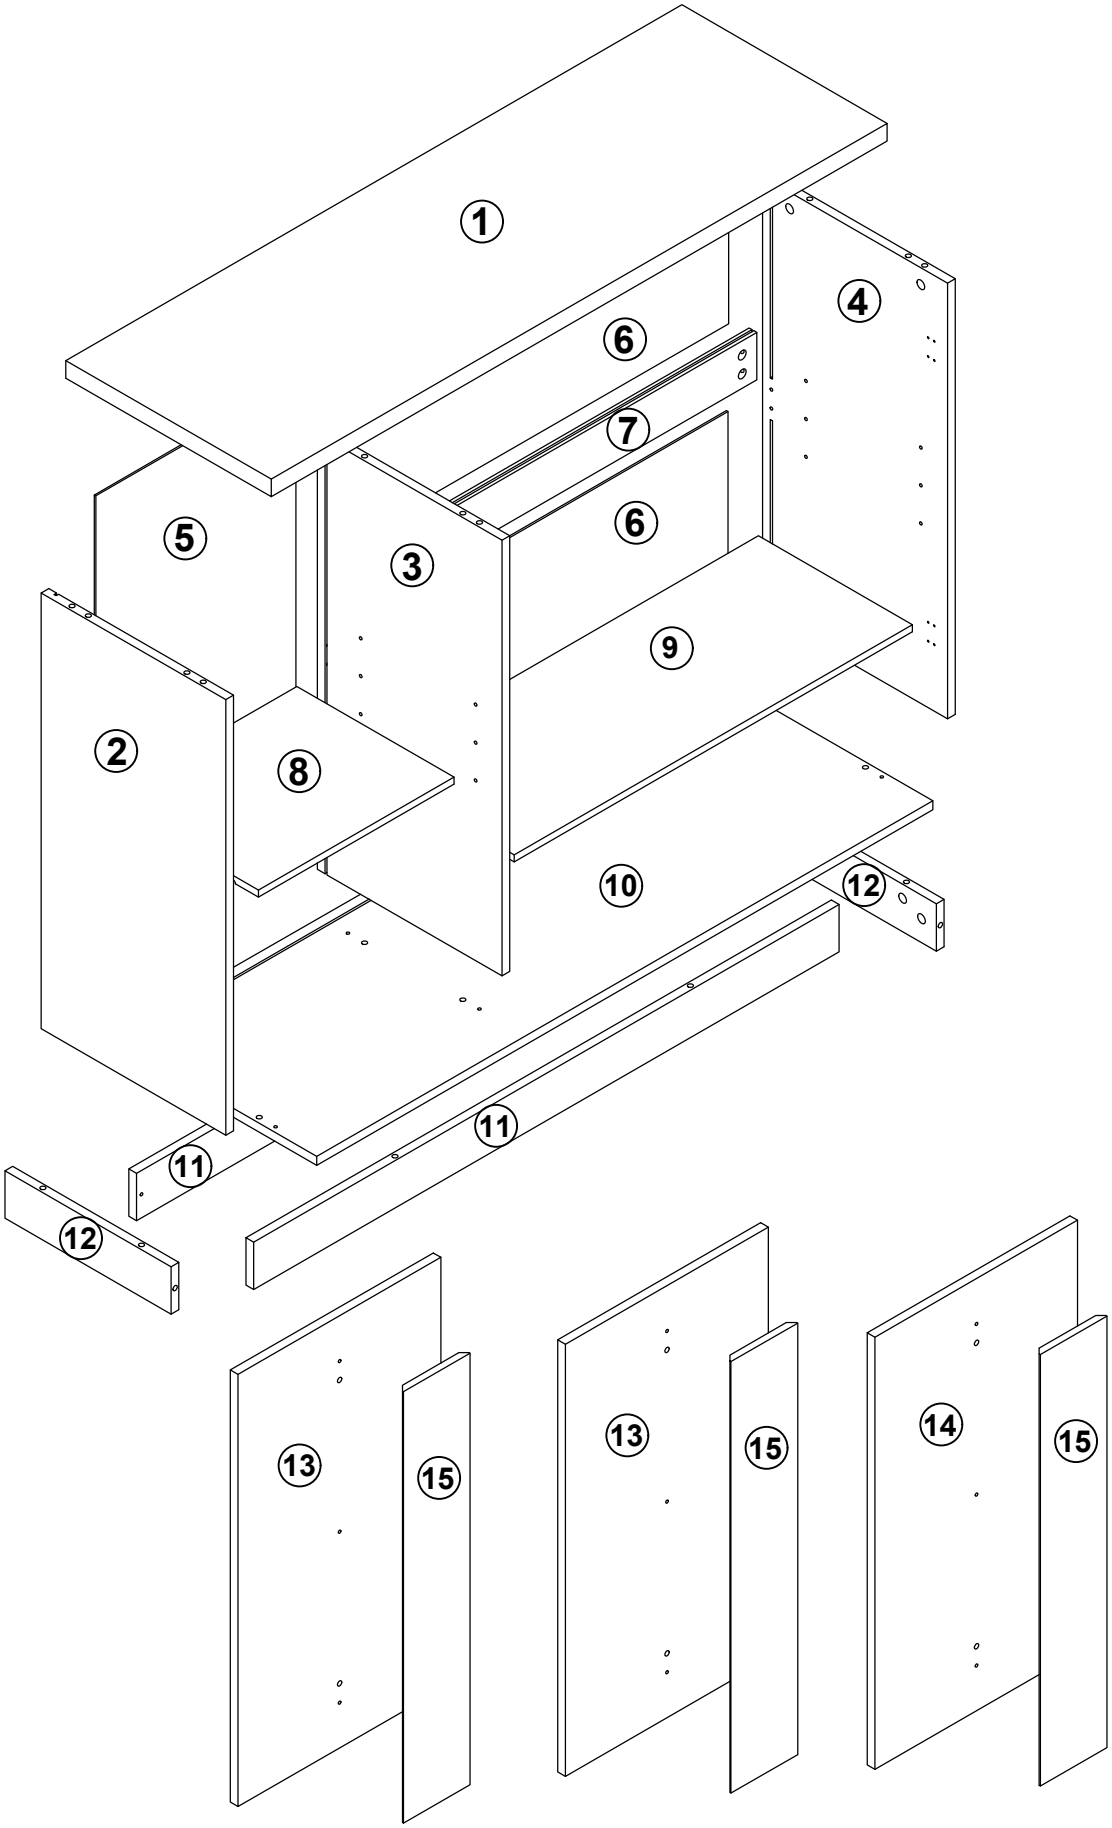

Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues


↓

Contact us with your problem,pic, number and qty to the "Contact seller" button in the detail page of your order


↓

Respond with 24 hours to solve issue


Parts List

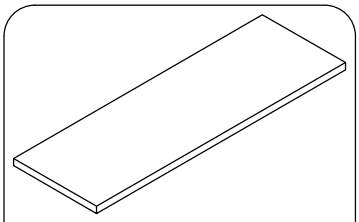


1	1PC

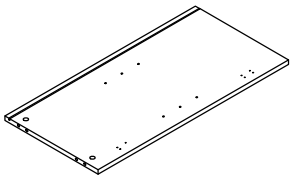


2	1PC

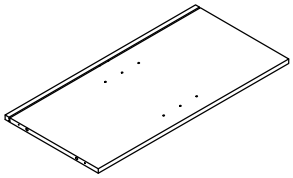


3	1PC

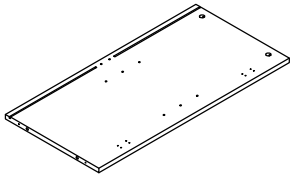


4	1PC

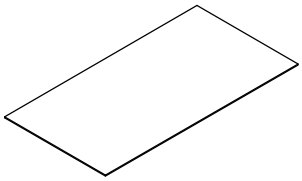


5	1PC

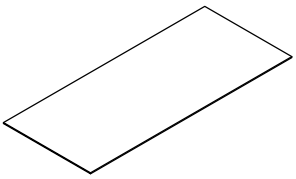


6	2PCS

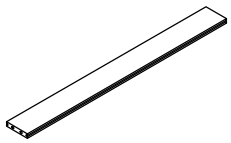


7	1PC

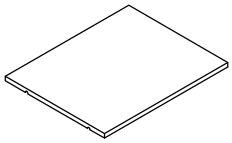


8	1PC

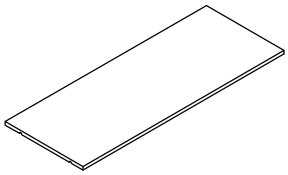


9	1PC

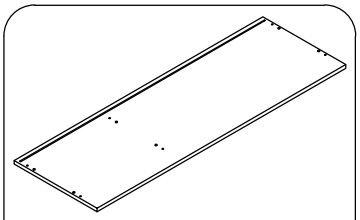


10	1PC

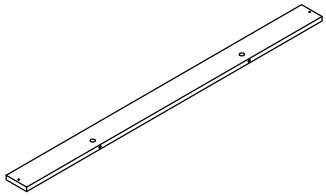


11	2PCS




12	2PCS

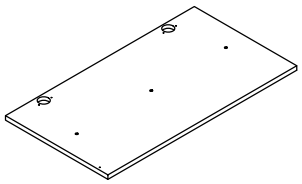

13	2PCS

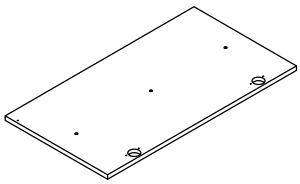


14	1PC

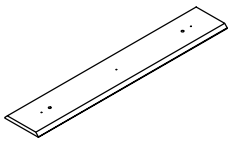

15	3PCS

Hardware List



M6*35mm

A	22PCS



φ15*9mm

B	22PCS




M8*30mm

C	12PCS




Ø4*40mm

D	6PCS



E	3PCS



F	6PCS



M3.5*14mm

G	42PCS



M8*20mm

H	6PCS



Ø4*25mm

I	9PCS




J	8PCS



M3*14mm

K	12PCS




L	12PCS





M	1PC


STEP 1

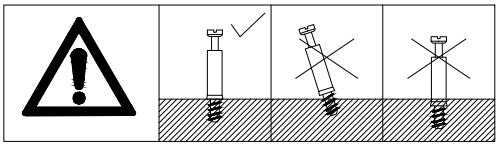



M6*35mm		E		M3.5*14mm	
A	x22	E	x3	G	x6

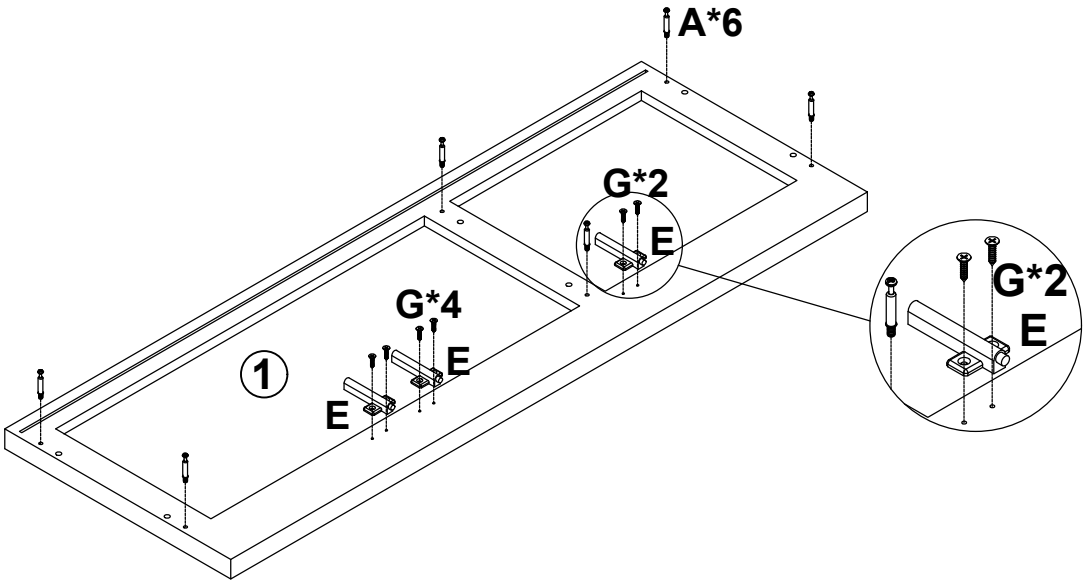

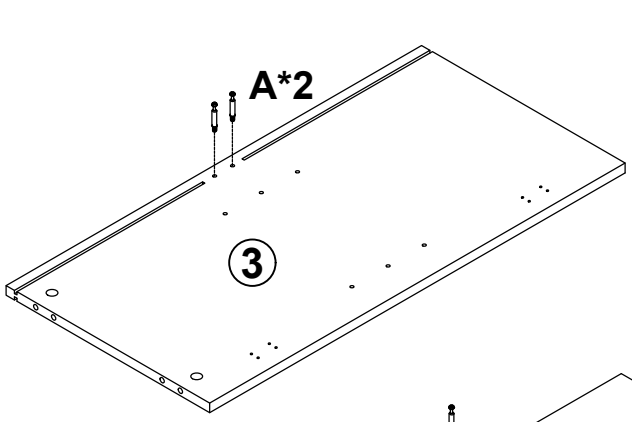

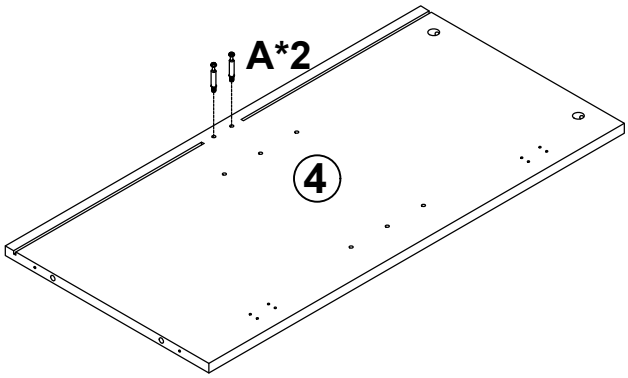


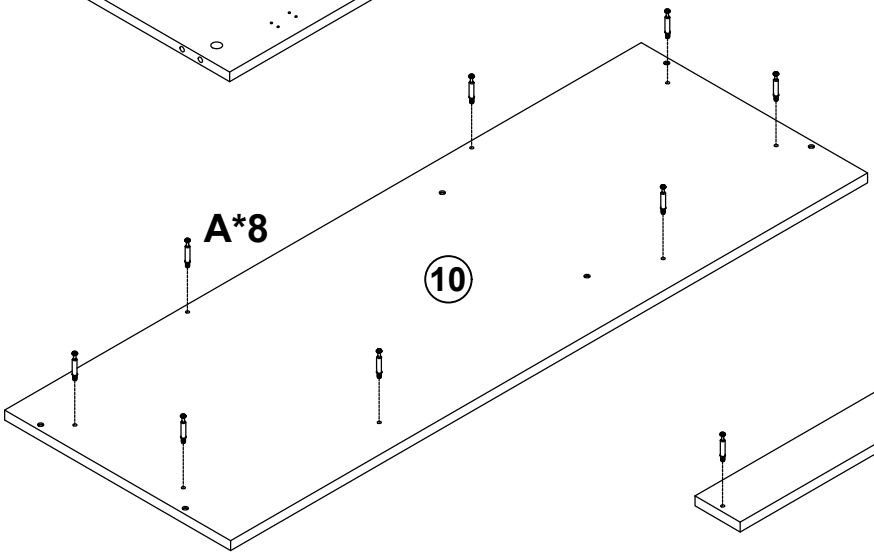


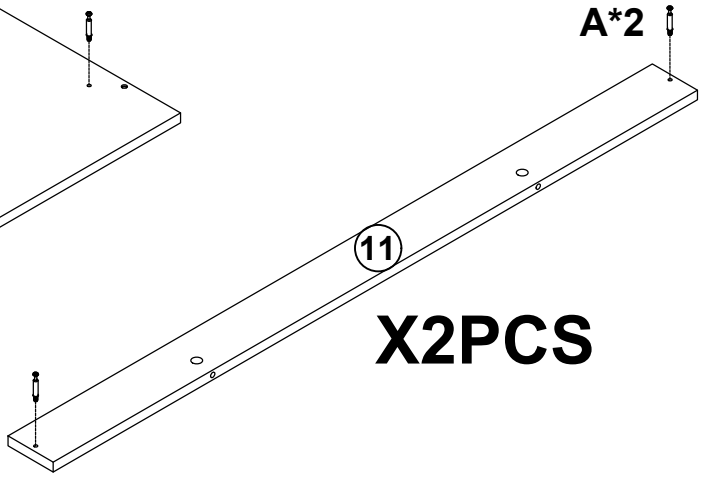


X2PCS


STEP 2

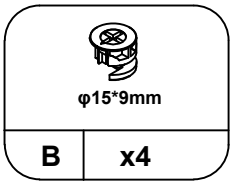


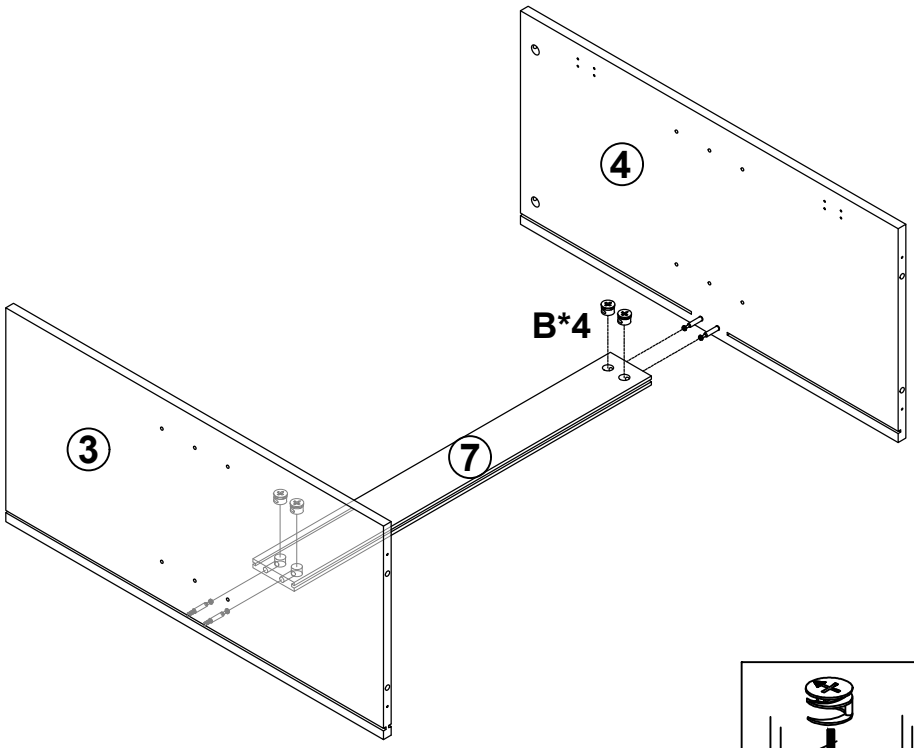


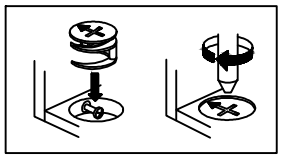


STEP 3

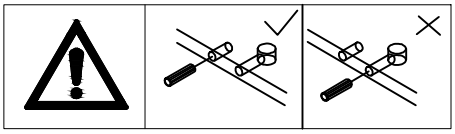

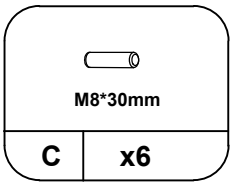


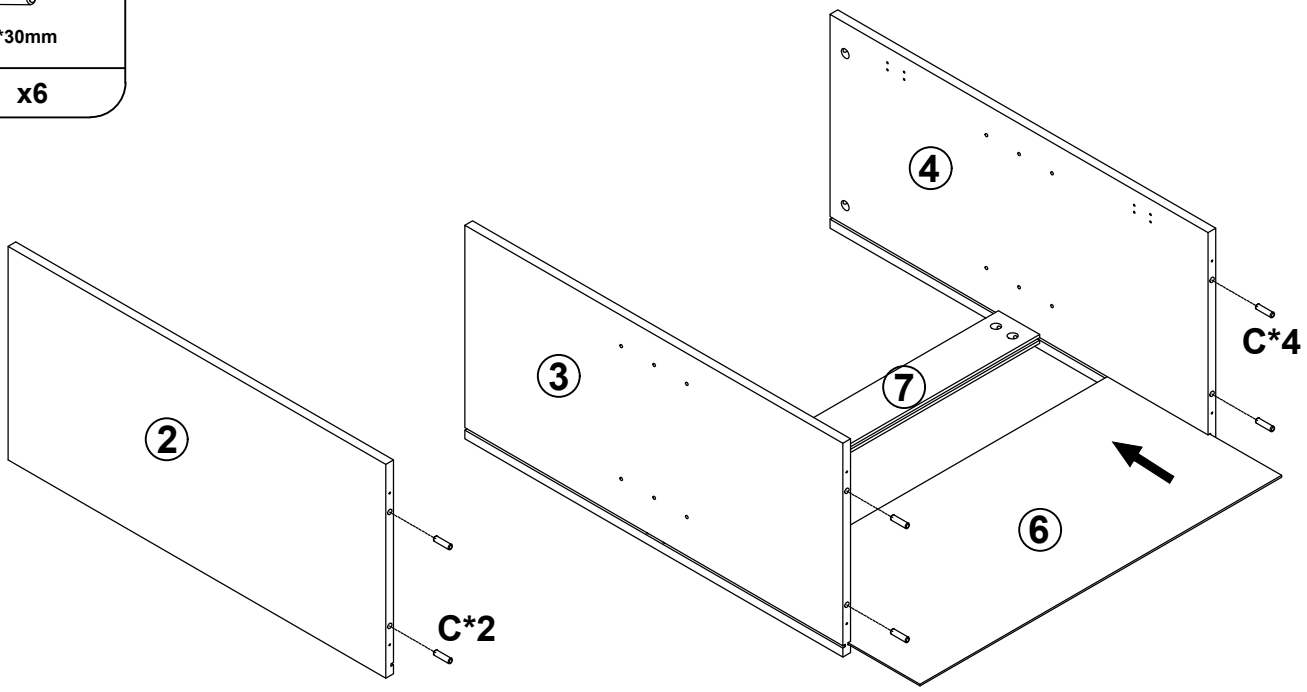

STEP 4

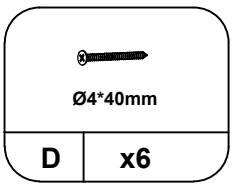

D	x6

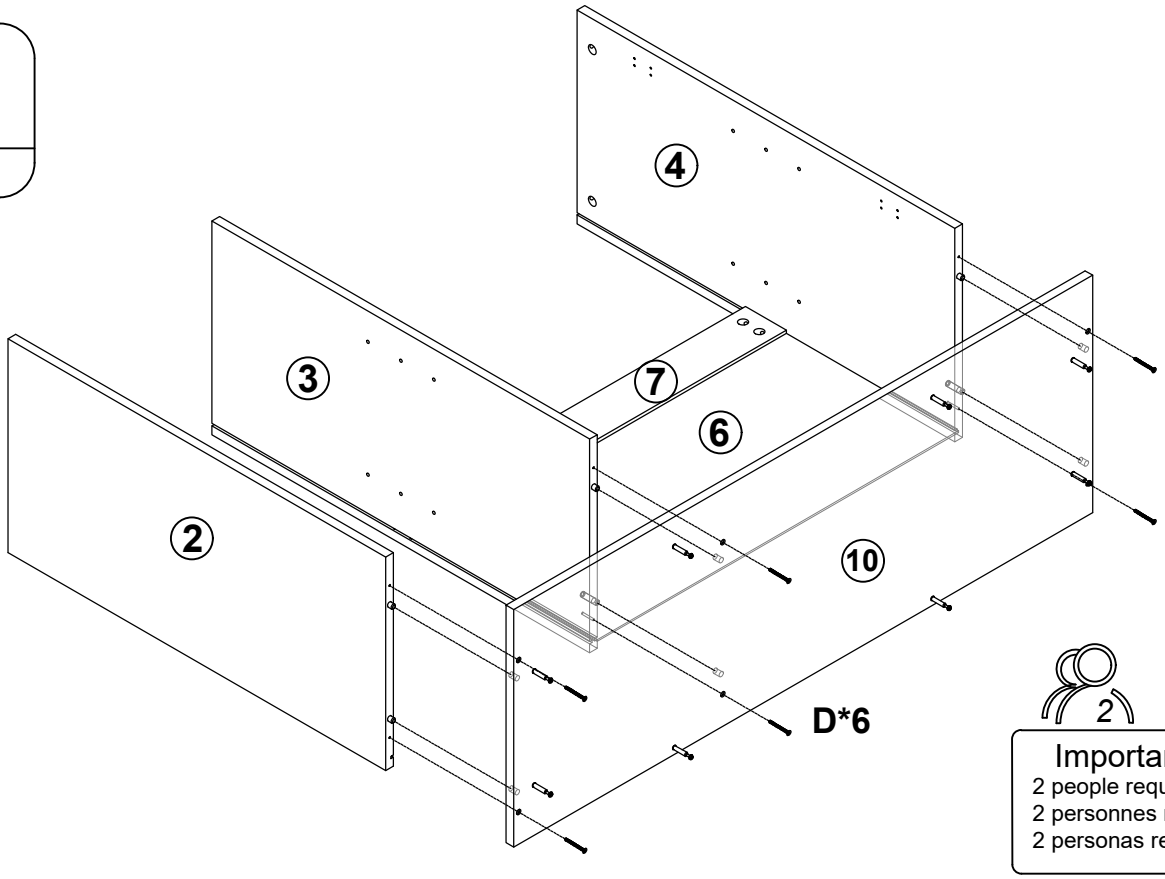



Important
2 people required
2 personnes requises
2 personas requeridas

STEP 5





B	x4

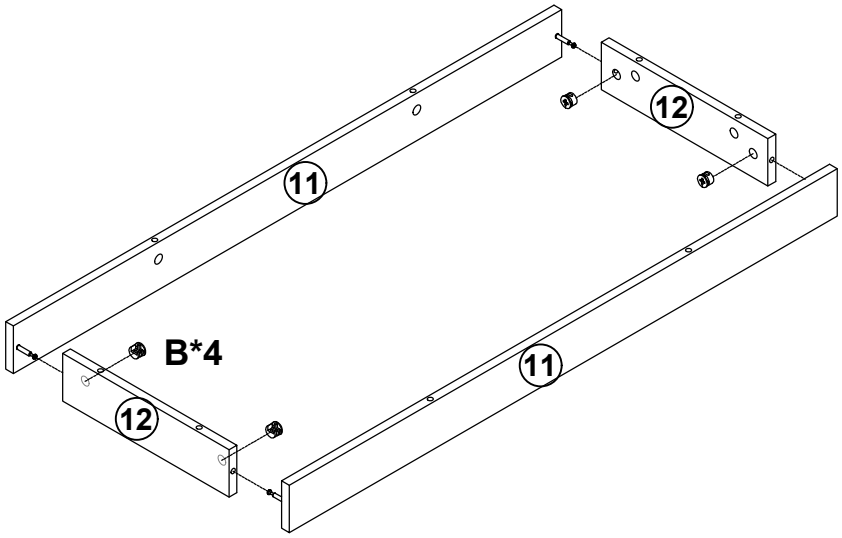


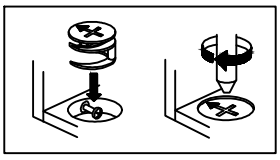


STEP 6

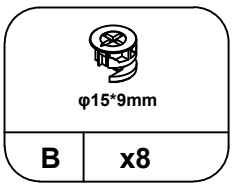
φ15*9mm
B
x8

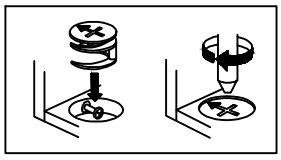


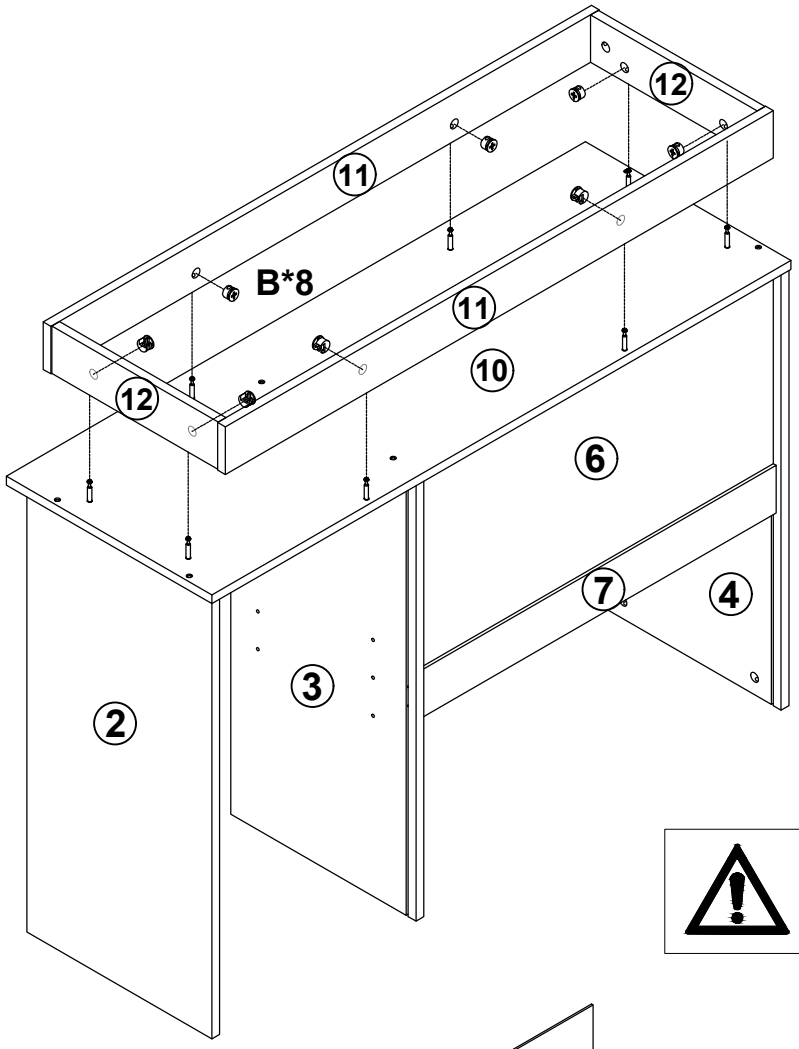

12
11
B*8
11
10
12
6
7
4
3
2




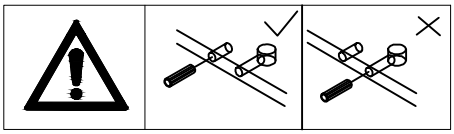

STEP 7

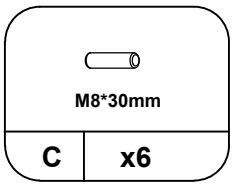
M8*30mm
C
x6

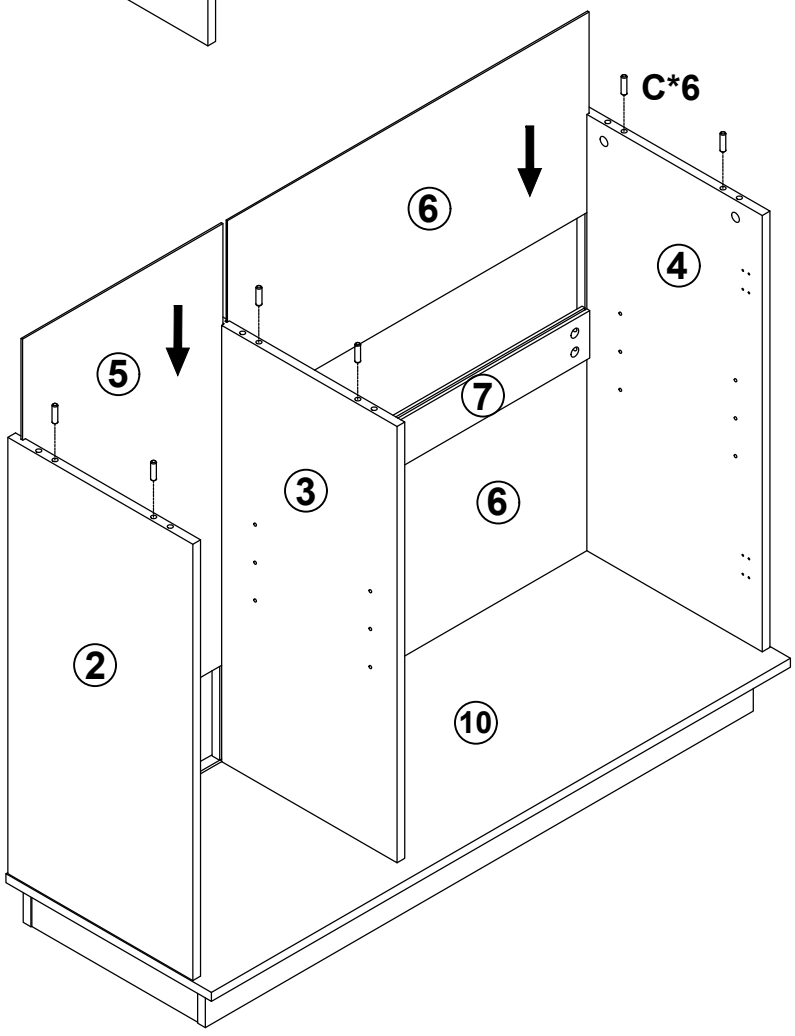
C*6
6
4
5
7
3
6
2
10

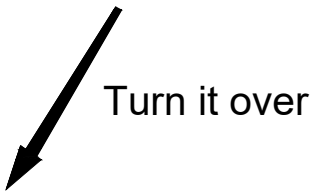

Turn it over


STEP 8



φ15*9mm

B	x6

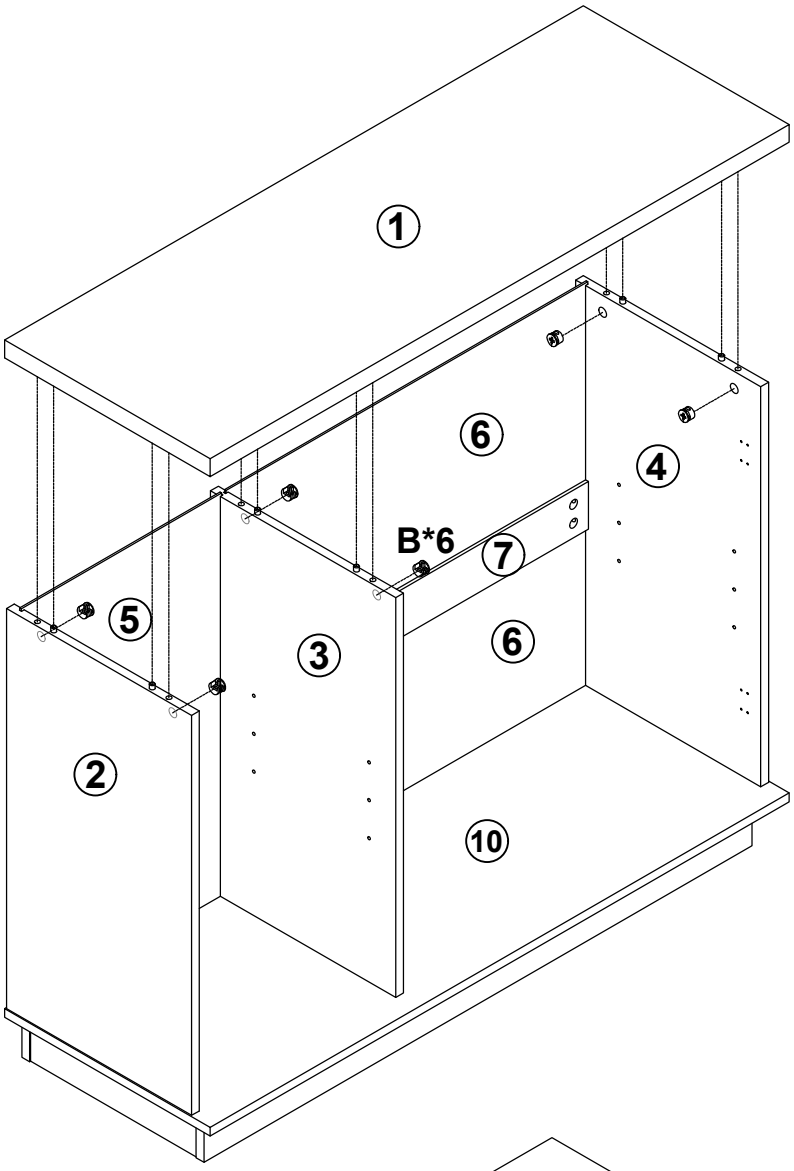

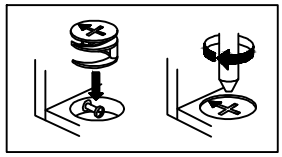



Important
2 people required
2 personnes requises
2 personas requeridas

STEP 9




M3*14mm

K	x12



L	x12

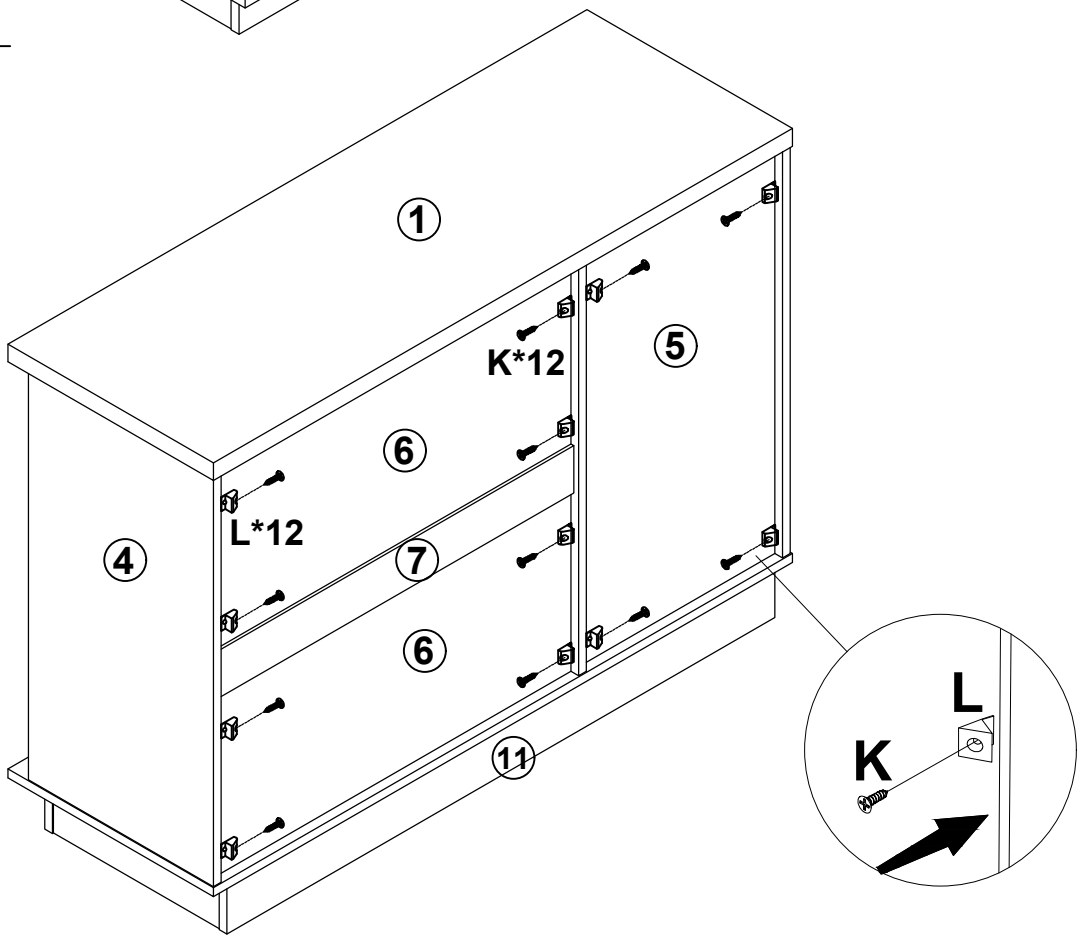


STEP 10


E	x3

F	x6

M3.5*14mm	
G	x12

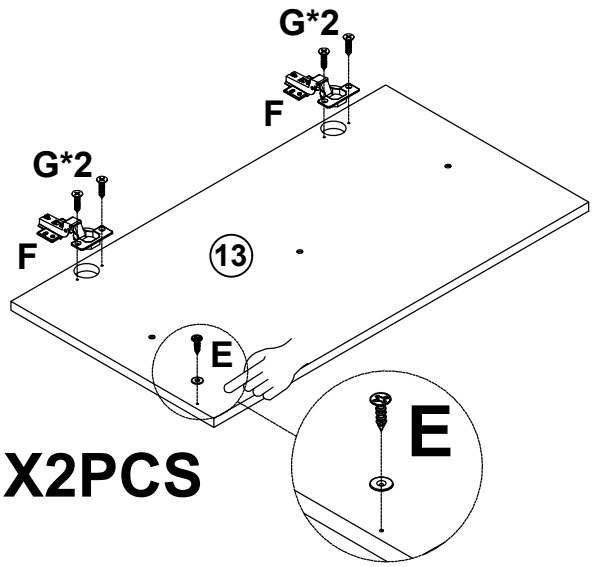


X2PCS

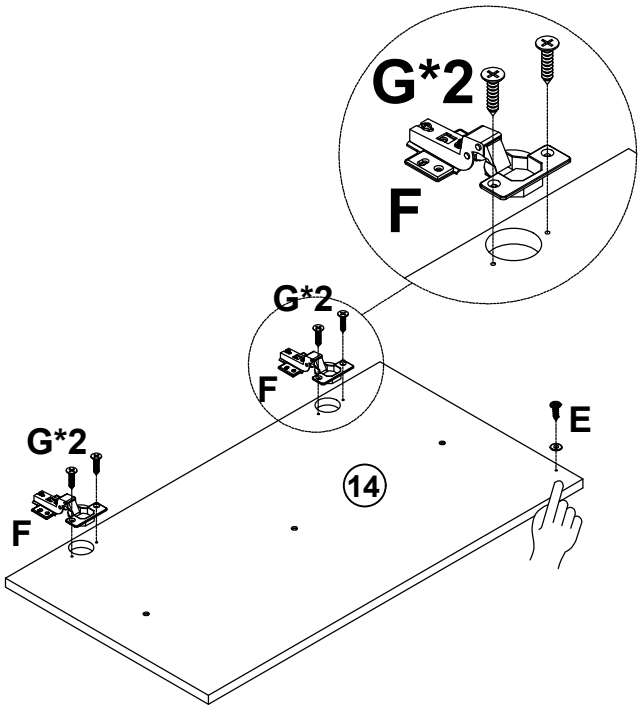


STEP 11

H	x6


I	x9

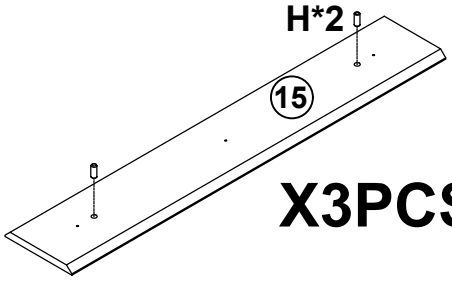


X3PCS

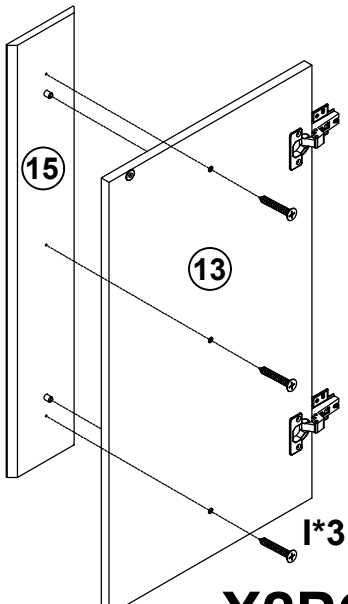


X2PCS

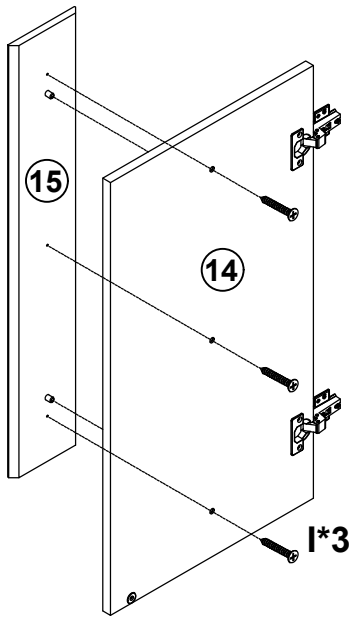


STEP 12

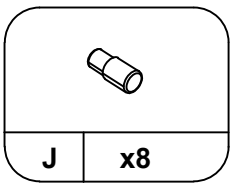


J	x8

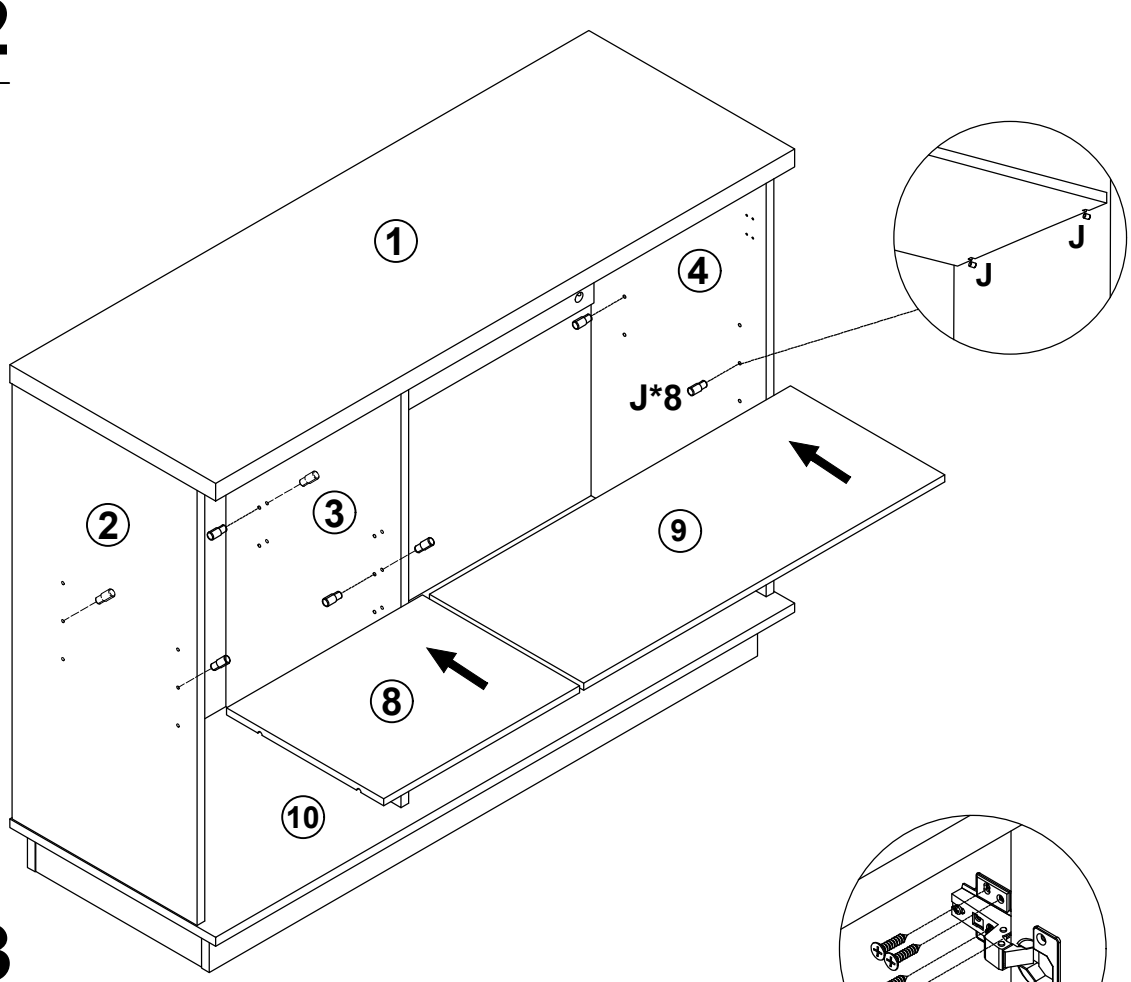

STEP 13

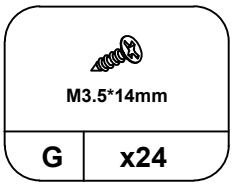


M3.5*14mm	
G	x24

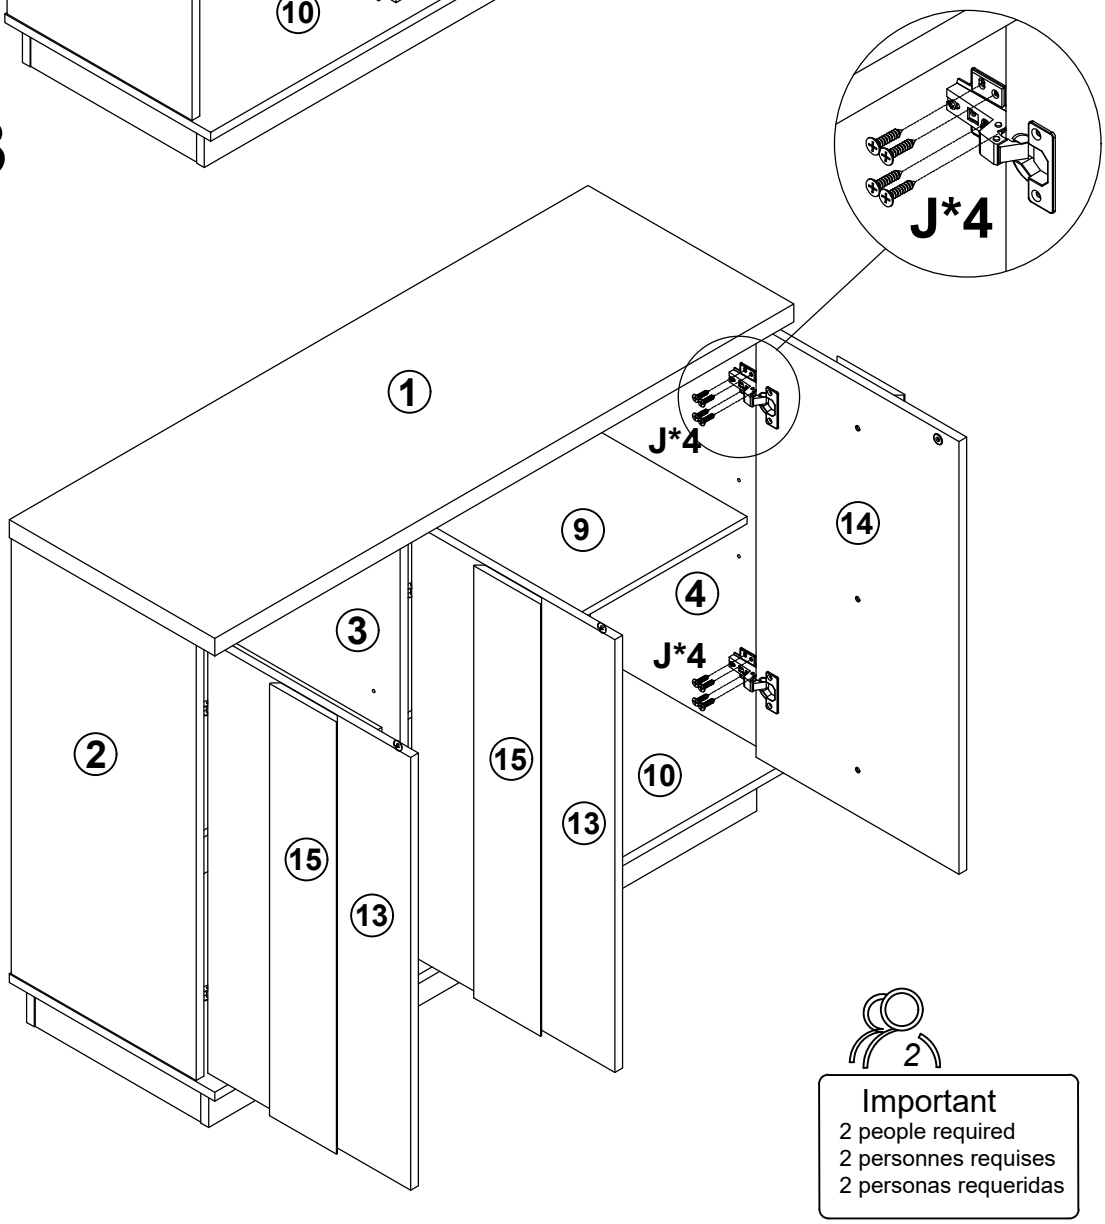


Important
2 people required
2 personnes requises
2 personas requeridas

STEP 14

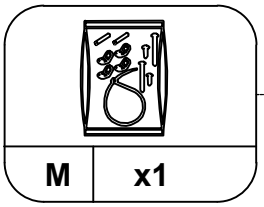

M	x1


PART LIST	FIGURE	QUANTITY	DESCRIPTION
1		2PC	Long Screw (Dia.4mmX38mmL)
2		2PC	Short Screw (Dia.4mmX19mmL)
3		4PC	Metal L Bracket
4		2PC	Plastic Anchor
5		2PC	Cable

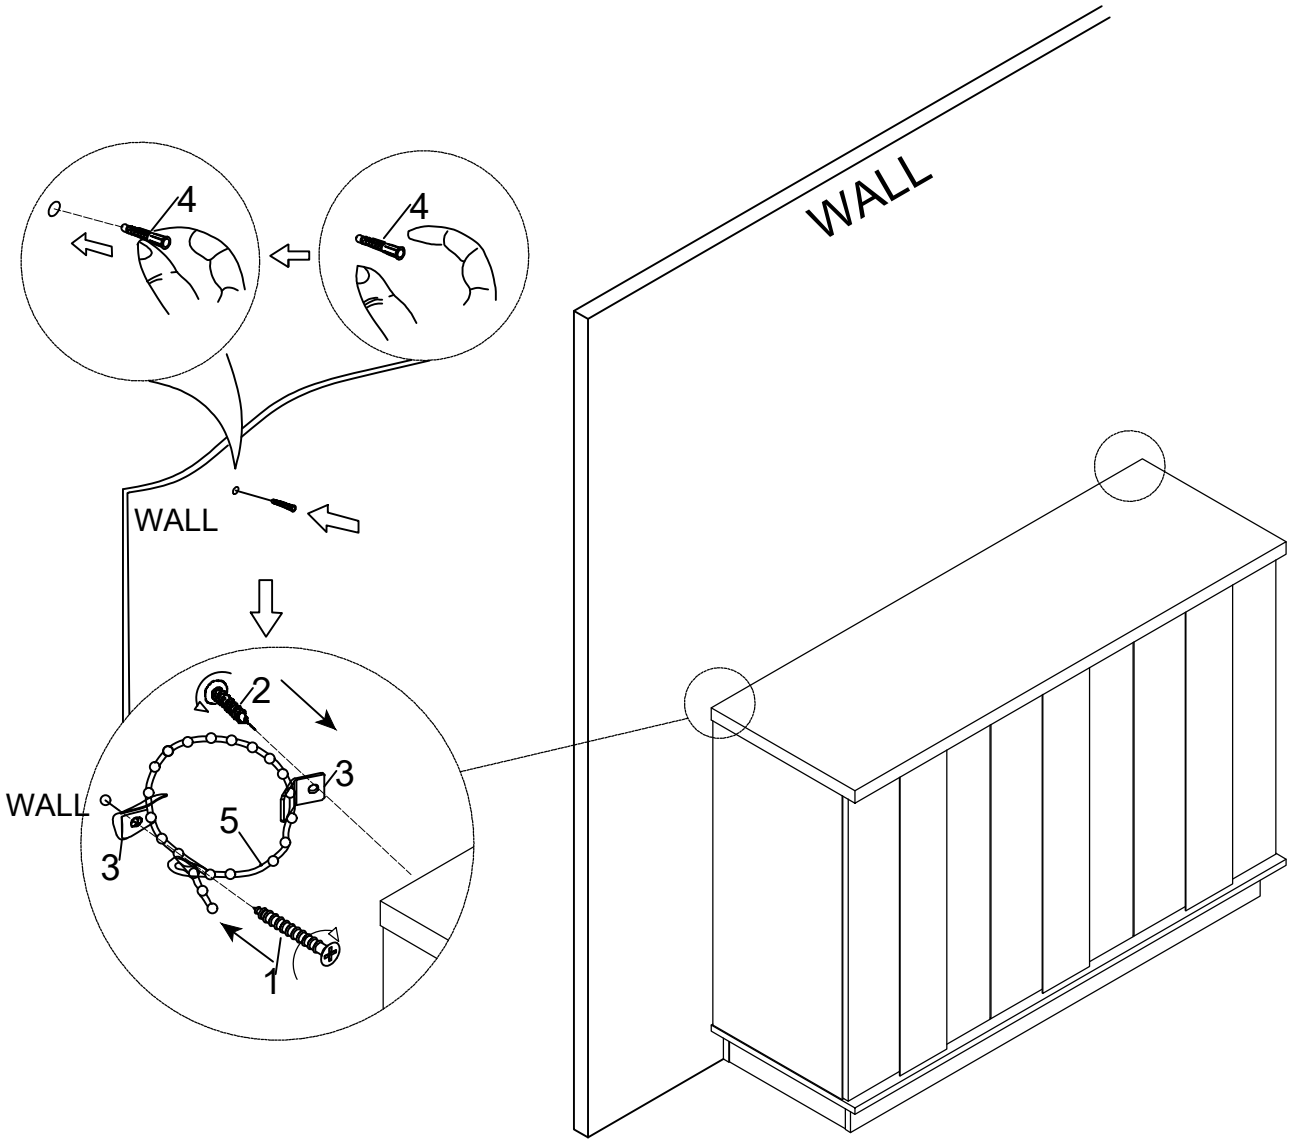


Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is designed for drywall construction. You will need to drill holes for the wall anchors. Depending on your wall type, different anchor hardware may be required. Please contact your local hardware store for assistance.


Door Hinge Adjustment Instructions

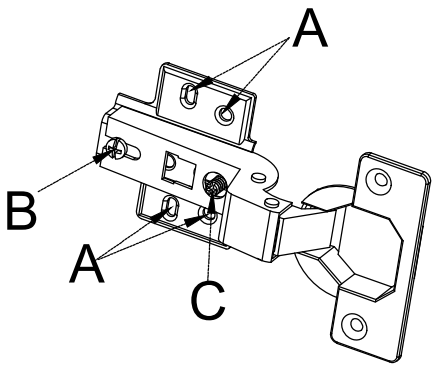

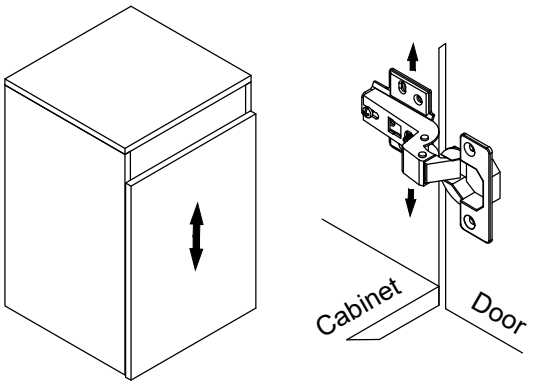


To adjust the height.

Loosen the two screws 'A' on the hinges, typically found in slotted holes, to allow for vertical adjustment by a few millimeters. After making the adjustment, tighten the screws back in place.

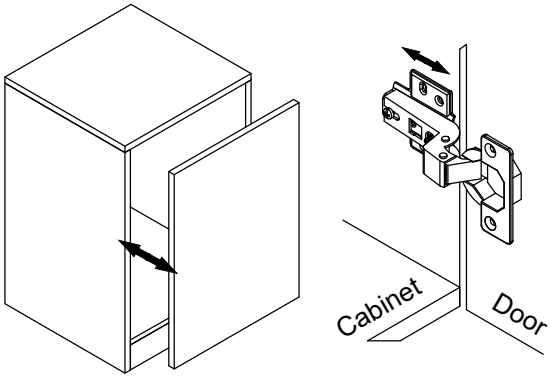

To adjust the depth.


Loosen screw 'B' and adjust the door. If the door cannot be adjusted, please loosen screw 'C' and try again. Once the adjustment is made, tighten both screws 'B' and 'C'

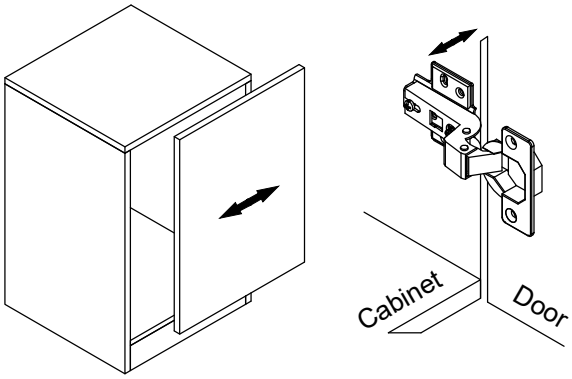


To adjust the side ways.

Turn screw 'C' on both hinges of each door.

HOW-TO OPEN DOORS

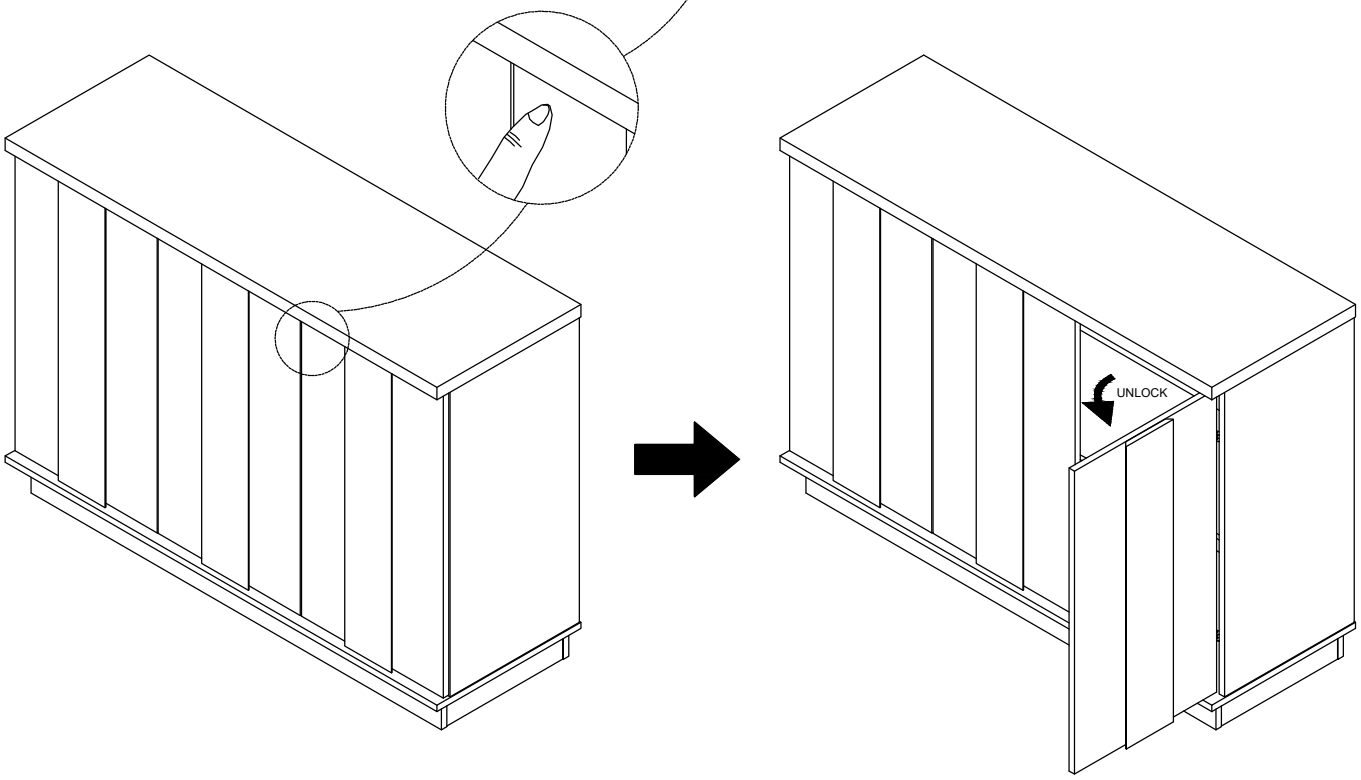

HOW-TO CLOSE DOORS

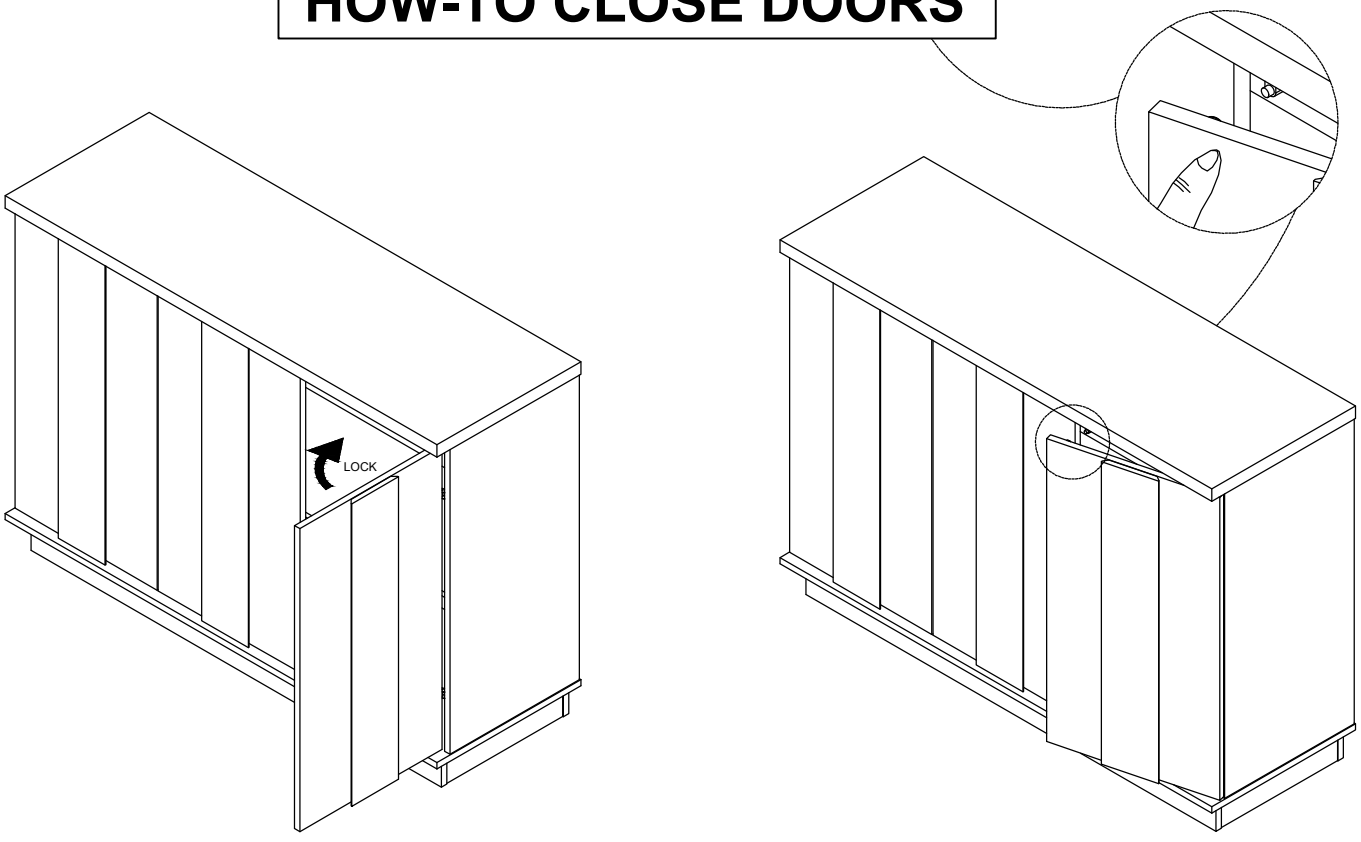

YOU CAN MAKE GAP ADJUSTMENT WHEN DOORS DOES NOT OPEN CORRECTLY OR SMOOTHLY BY POP OUT THE EJECTOR PIN AND ROATE IT OUT TO THE PROPER LENGTH.

