
Version: 09-Dec-2025

Instruction Manual

Cabinet	JF-MTJ2466B-WH-X-1-S

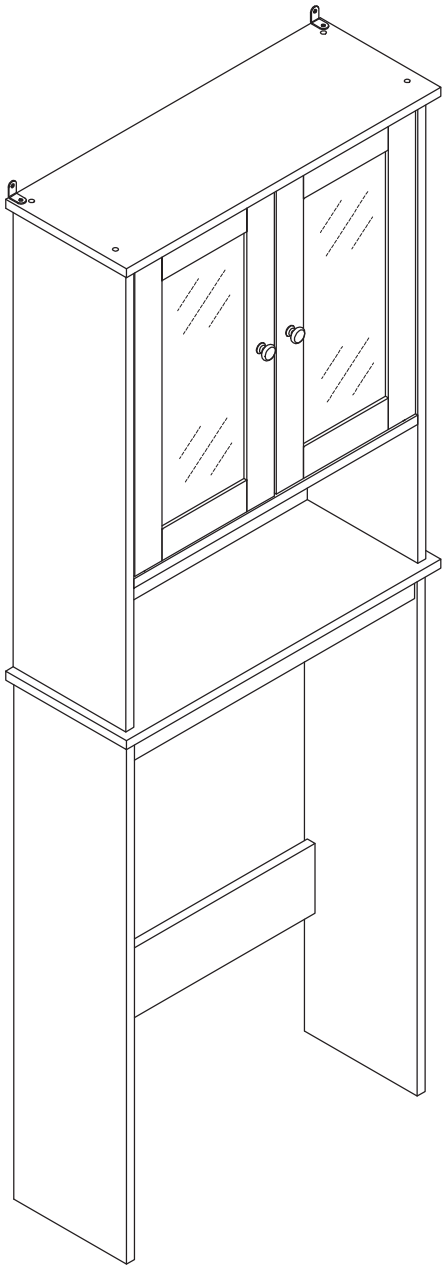

Scan the QR Code for assembly guide!

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.

For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our after-sales email:

CSsince1987@hotmail. com!

Power tool is recommended for the assembly.

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

1). Remove all packaging materials, staples and packing straps from the carton.
2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
4). Allow ample room for assembly and assemble the product near where the product will be placed.
5). During assembly, do not over-tighten any fittings as this may cause damage.
6). Always place the product on a flat, level surface.













2. CARE AND MAINTENANCE

1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.








3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
2). Use a protective pad when writing on the furniture surface.
3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

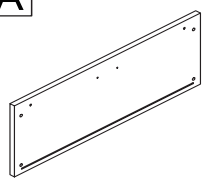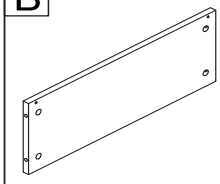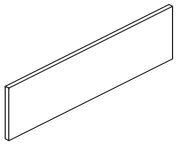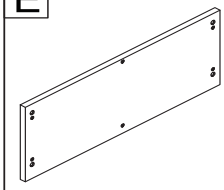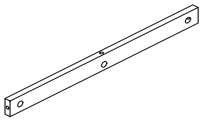A 	B 	C 	D 	E 
Top Panel 1 PC	Fixed Shelf Panel 1 PC	Adjustable Shelf 1 PC	Back Bottom Rail 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	N  766*12*6mm
Top Rail 2 PCS	Back Panel 2 PCS	Left Door 1 PC	Right Door 1 PC	Back Plasic Strip 1 PC
J 	K 	L 	M 	
Upper Left Panel 1 PC	Upper Right Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC	

HARDWARE LIST
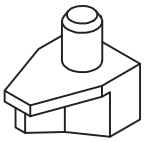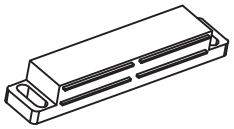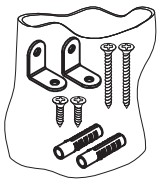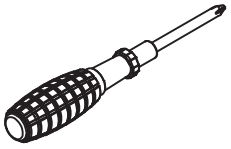
#1  Ø5*40mm	#2  30*22*1mm	#3  14*10mm	#4  Ø6*35mm	#5  Ø15*9mm
Screw 8 PCS (Extra 2)	Door Small Plate 2 PCS	Back Bracket 10 PCS(Extra 2)	Cam-bolt 18PCS (Extra 2)	Cam-lock 18PCS(Extra 2)
#6 	#7  M4*22mm	#8  16*11*Ø5mm	#9  Ø3.5*15mm	#10  70*17*13mm
Handle 2 PCS	Round Head Bolt 2 PCS	4 PCS (Extra 1)	Screw 12PCS (Extra 2)	Door Magnet 1 PC
#11  Ø3*12mm	#12 			
Screw 2 PCS(Extra 1)	Safety Strap Kit 1 SET	Center Axis (Extra) 2 PCS	Phillips Screwdriver 1 PC	

Instructions For Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

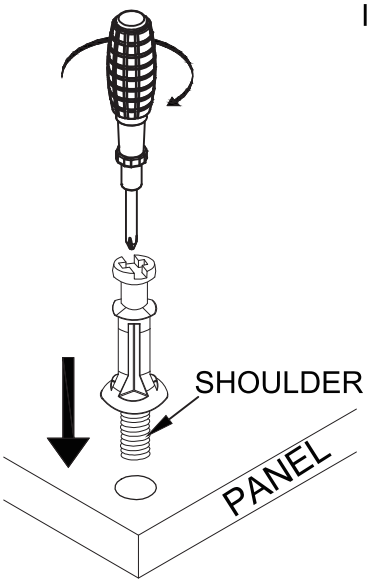

Place Cam-bolt on pre-drilled hole and screw in vertically

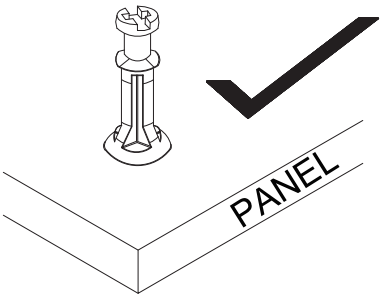


Shoulder is flushed (on the same level) with the panel.

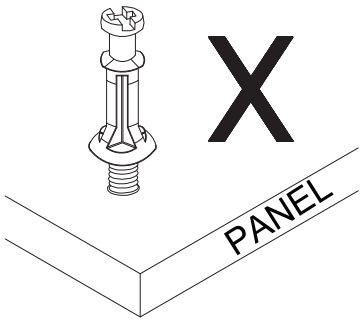


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

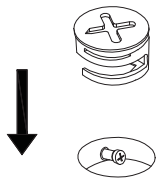


Insert Cam-lock with arrow align to Cam-bolt head

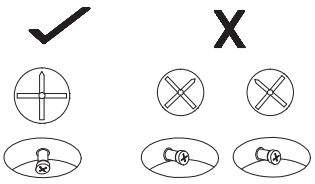

CORRECT WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


TIGHTENING CAM-LOCK

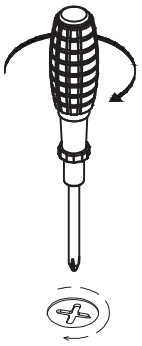


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.

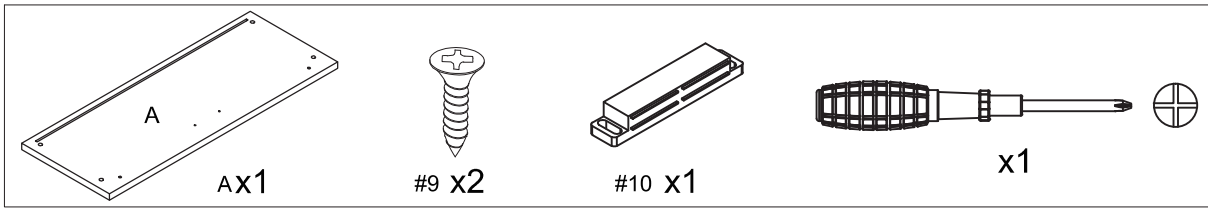

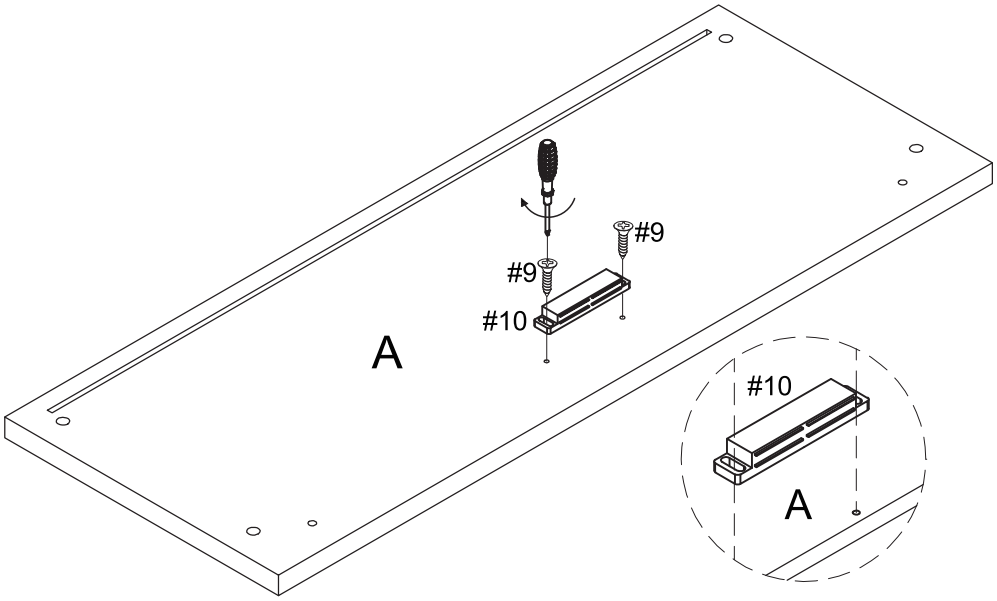



Step 2.

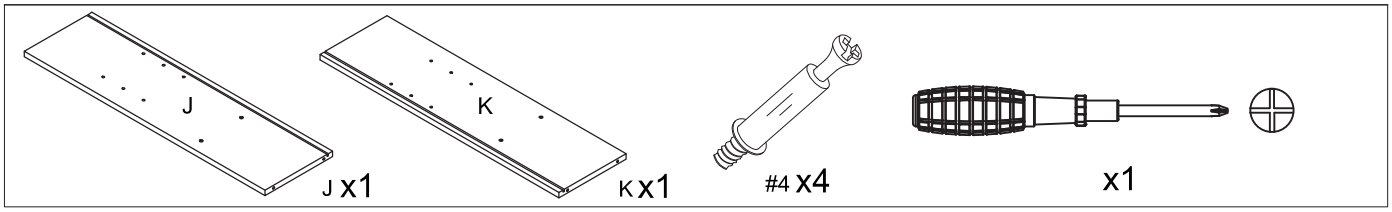

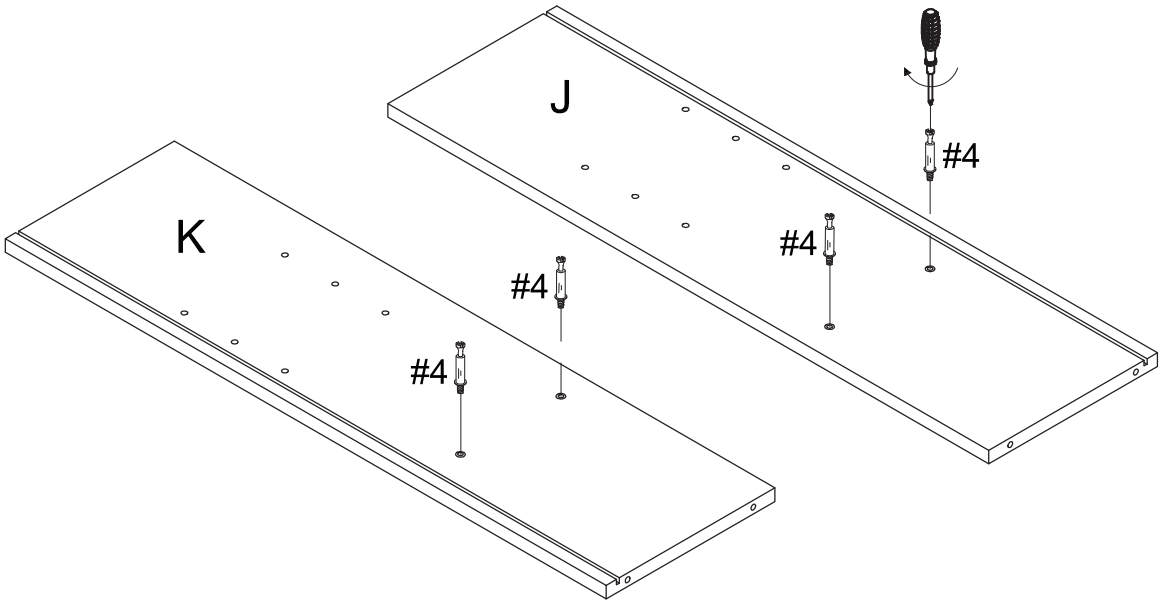



Step 3.

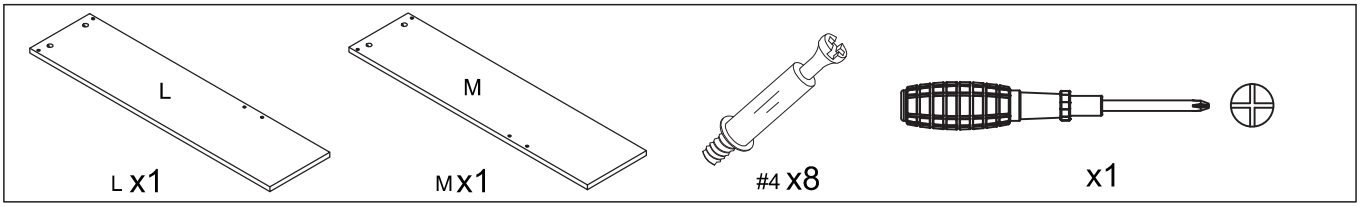

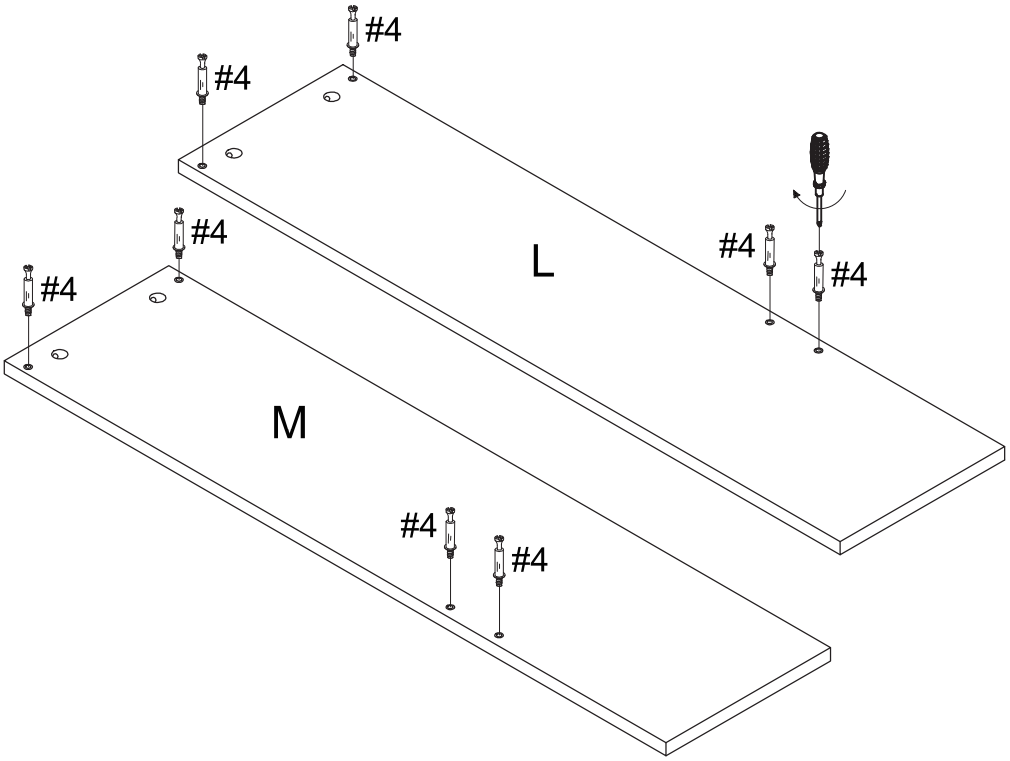



Step 4.

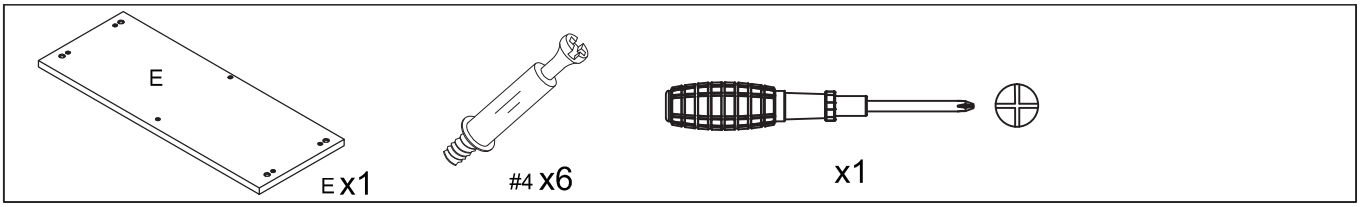

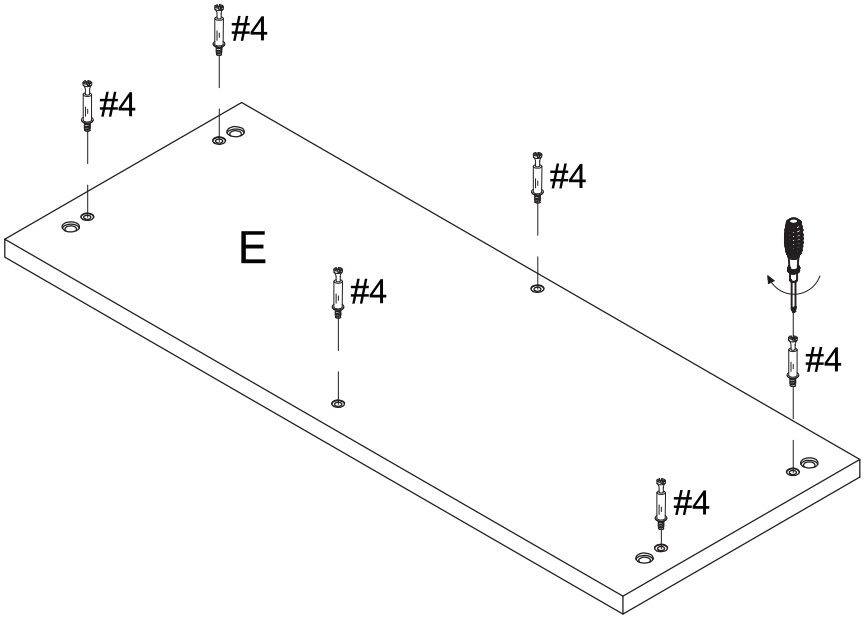



Step 5.

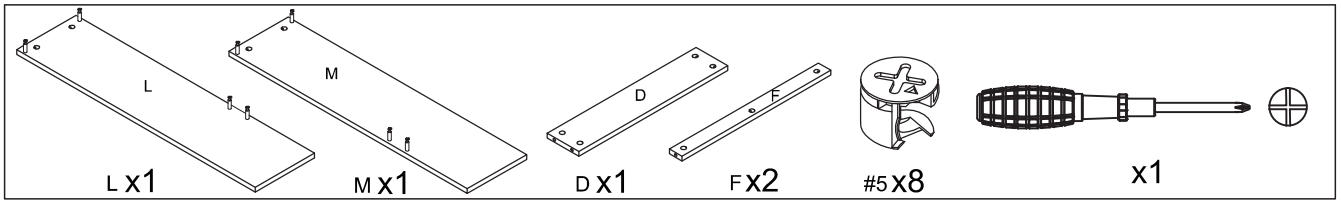
L
M
D
F
L x1
M x1
D x1
F x2
#5 x8
x1

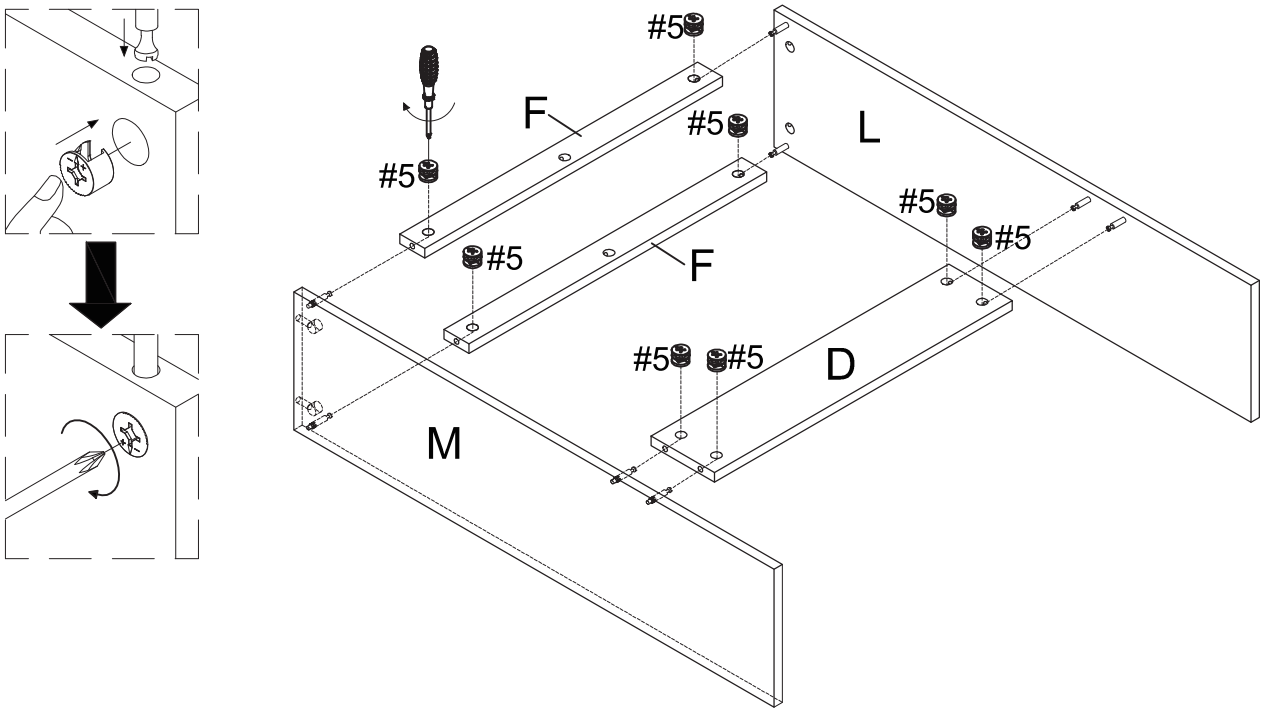

#5
F
#5
L
#5
#5
#5
#5
F
#5
#5
D
M

Step 6.

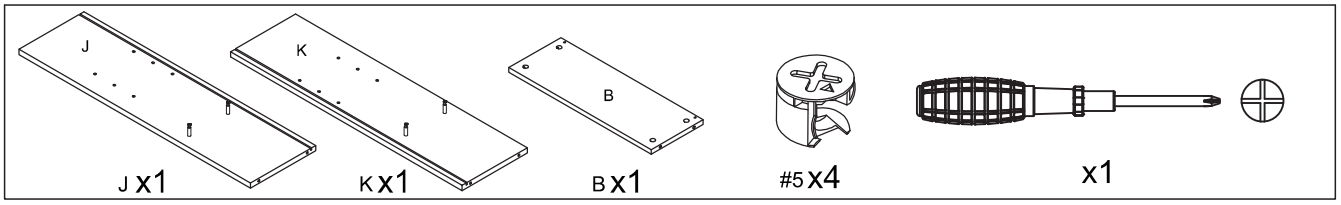
J
K
B
J x1
K x1
B x1
#5 x4
x1

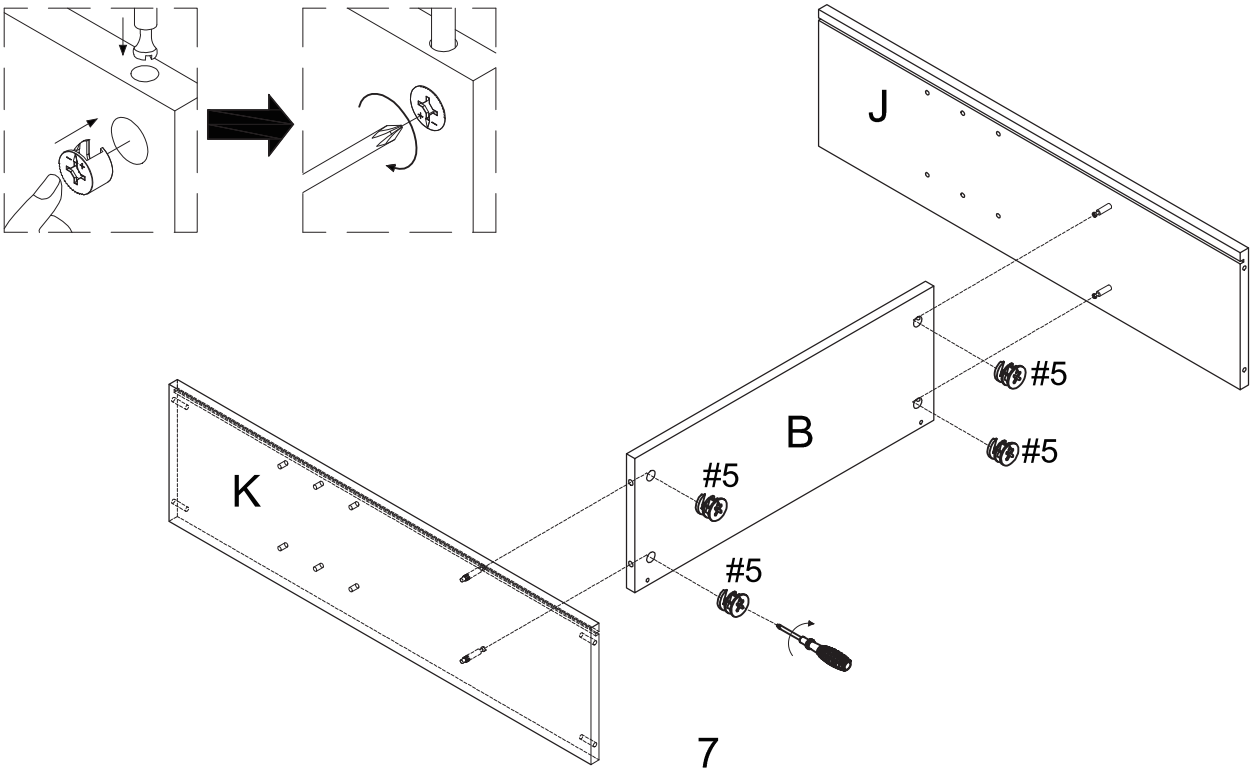
J
#5
B
#5
K
#5
#5

Step 7.

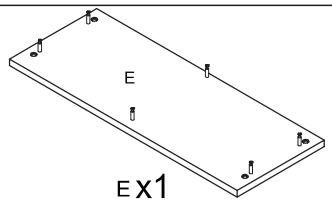


E x1




#1 x4




x1

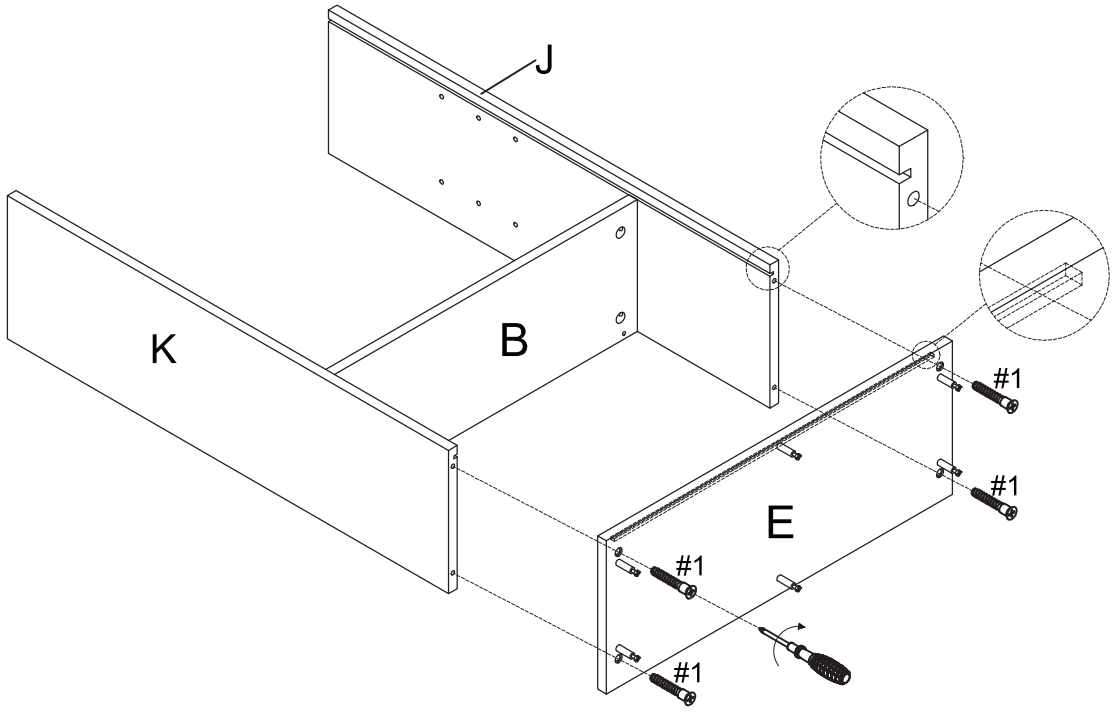


Step 8.

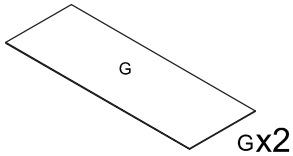


G x2

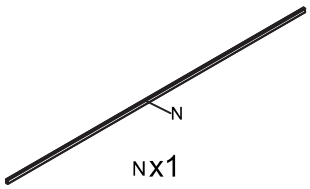


N x1

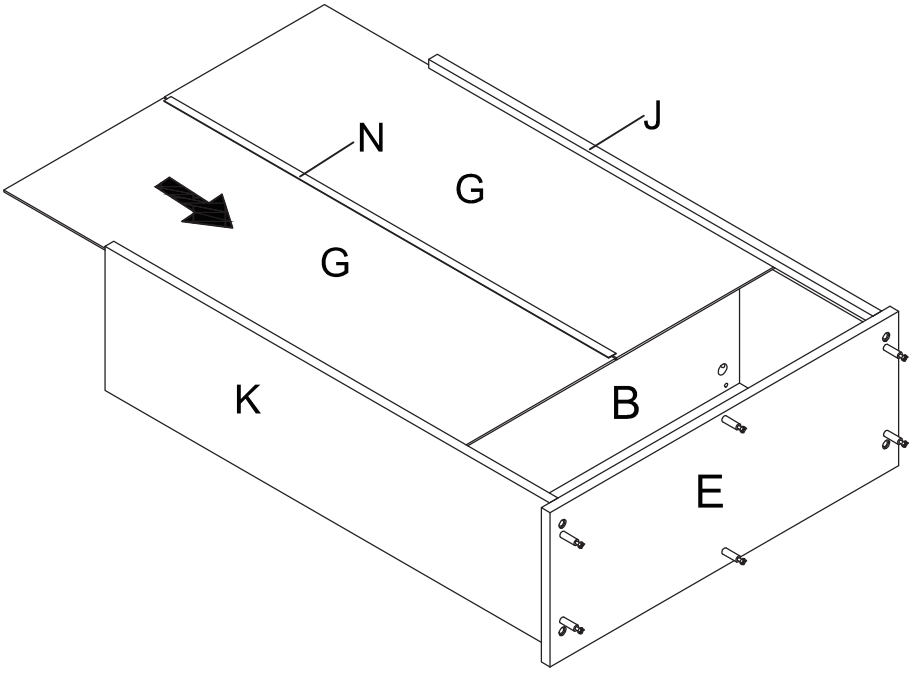

Step 9.

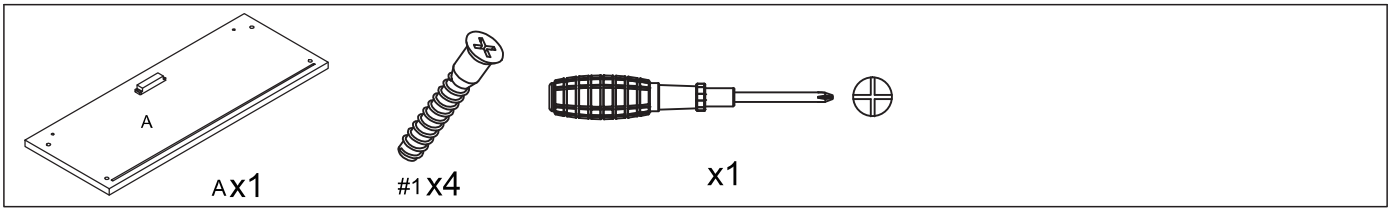


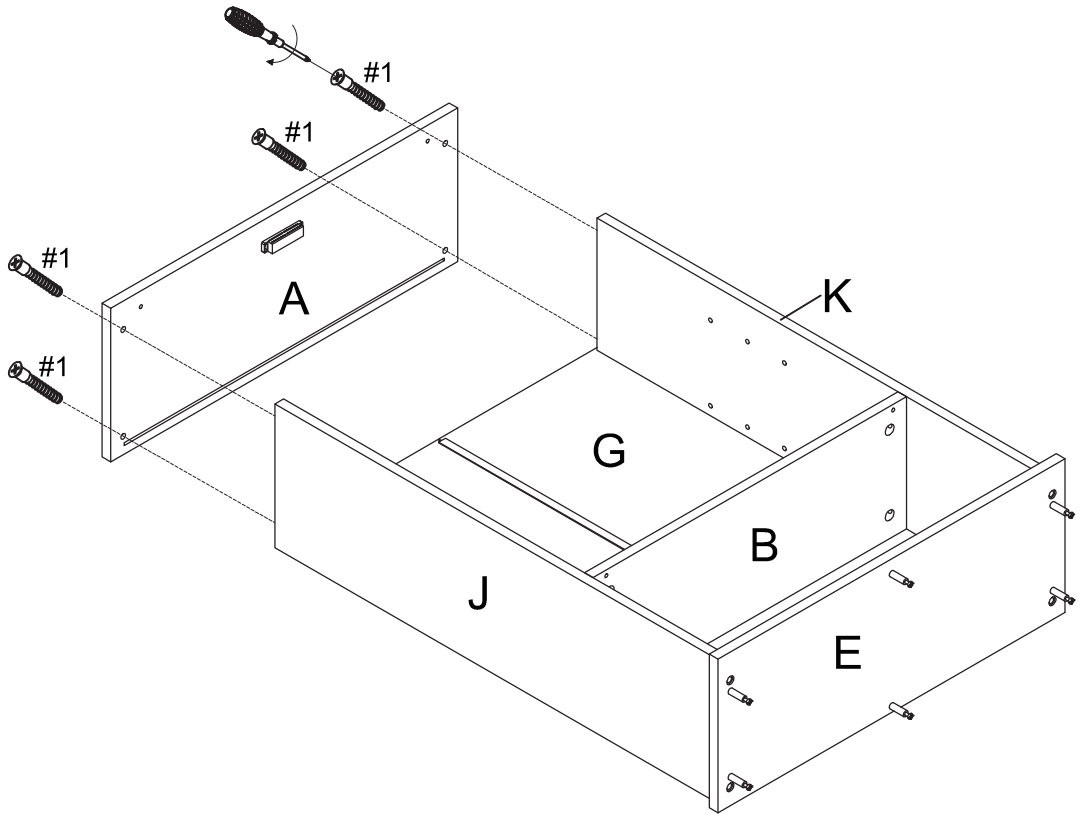


Step 10.




#5 x6




x1

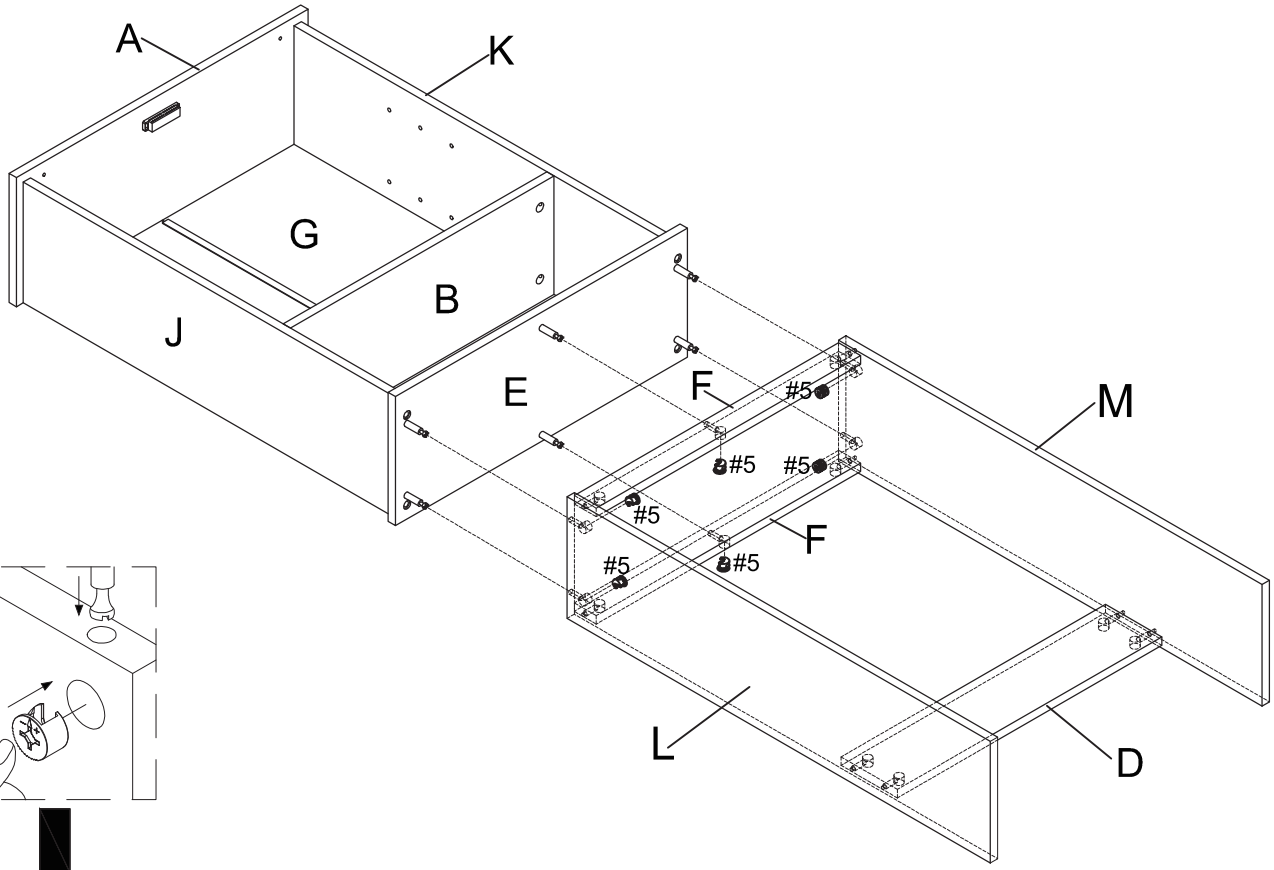

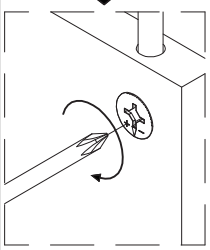



Step 11.




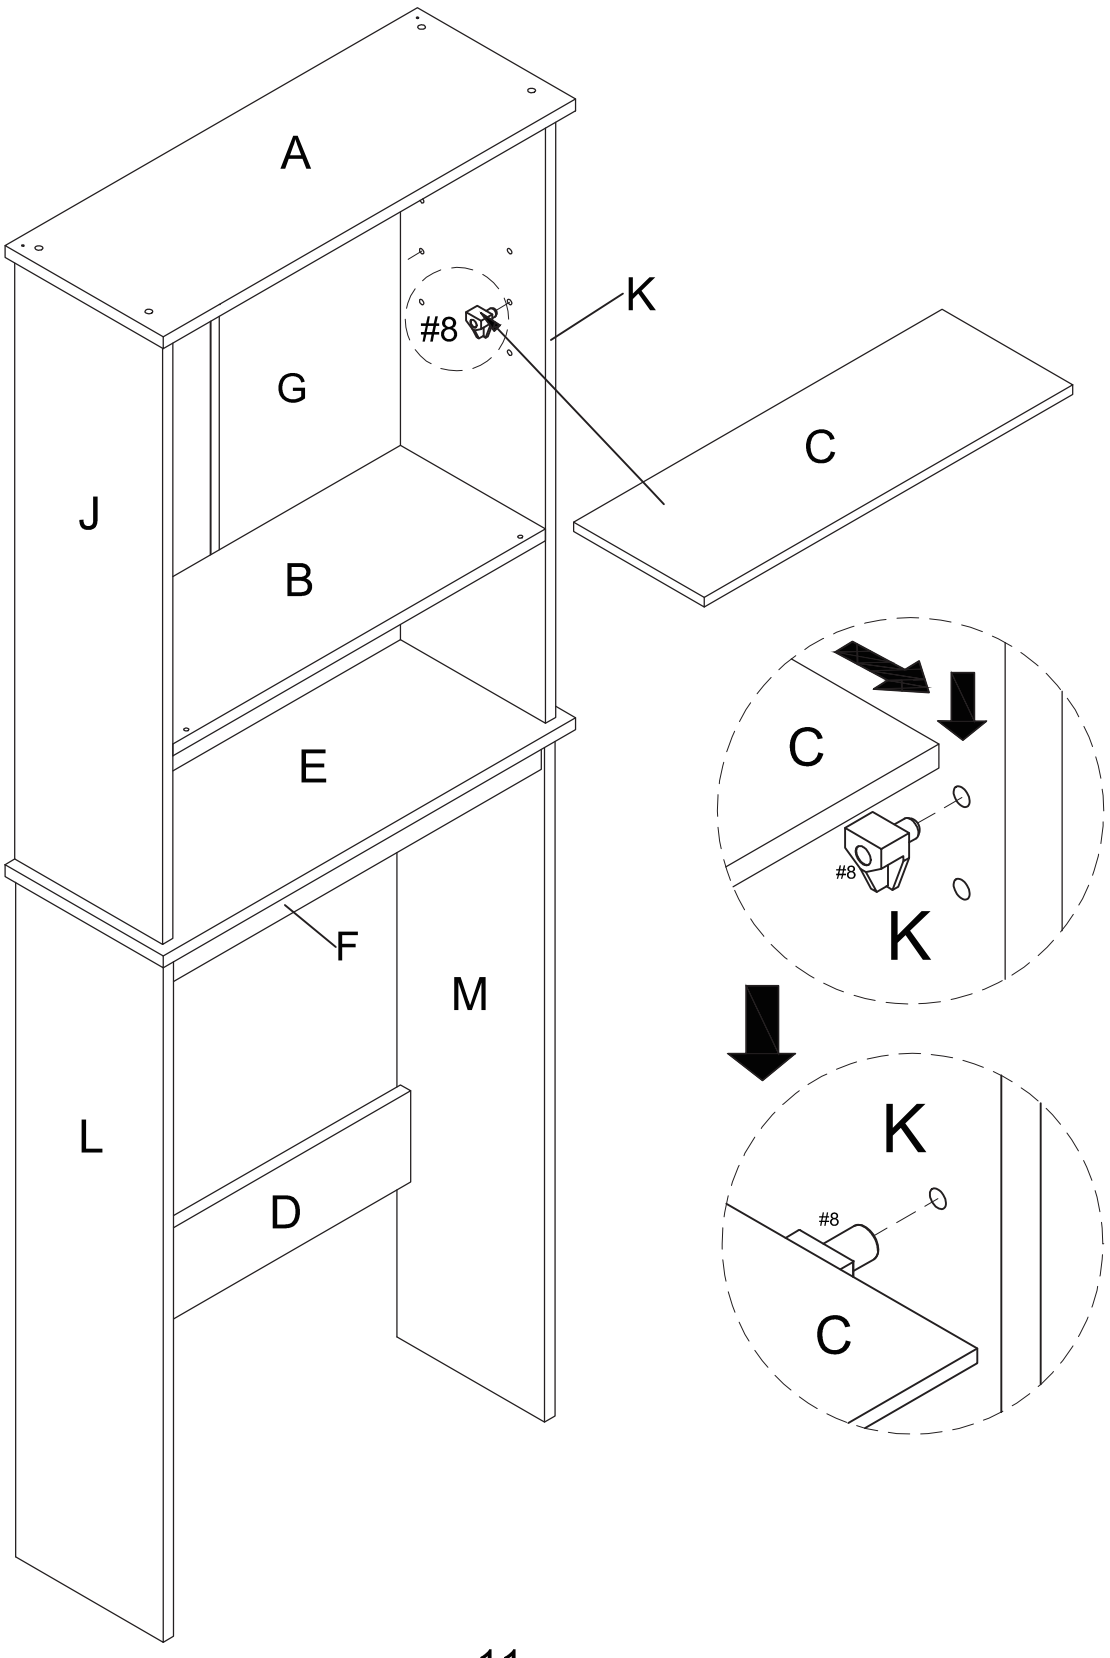


Step 12.

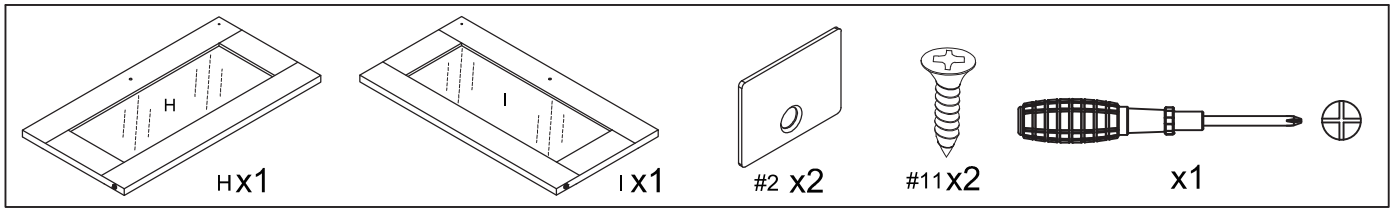

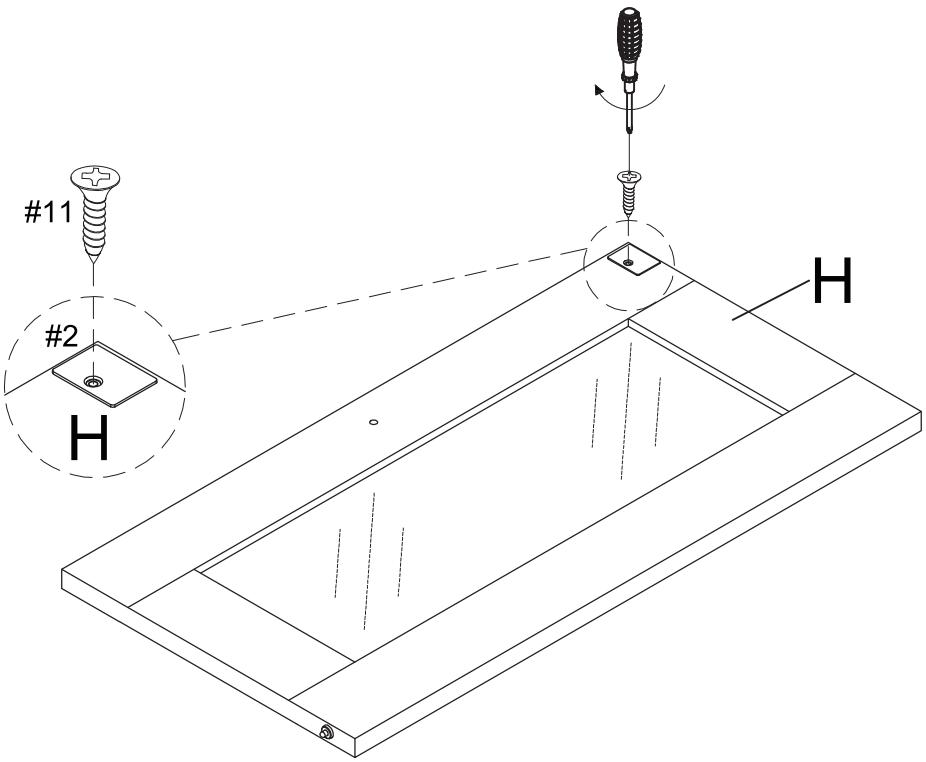


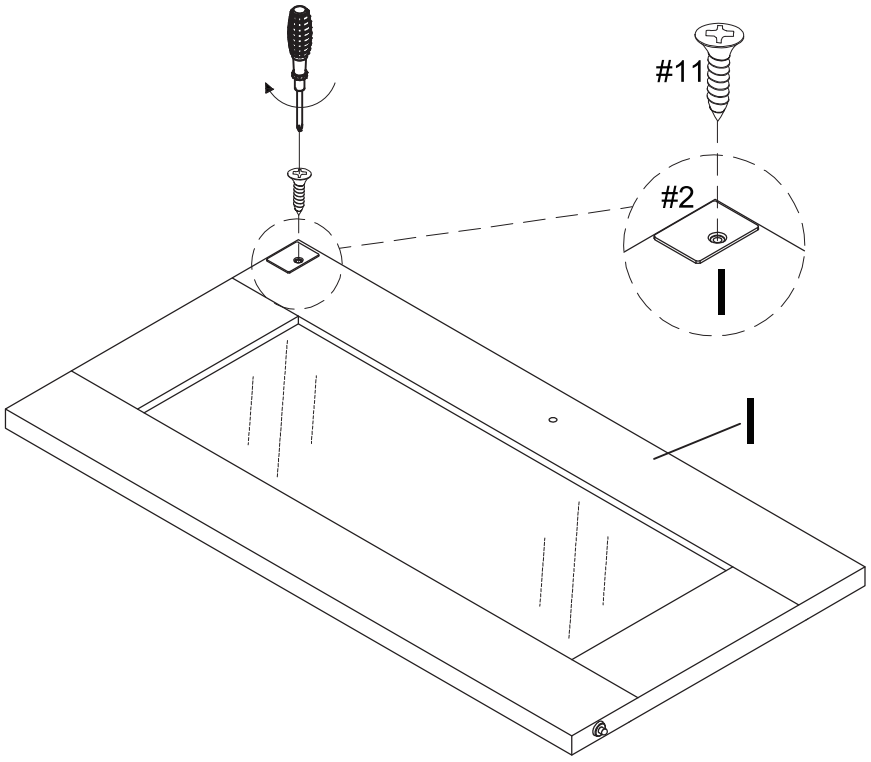


Step 13.

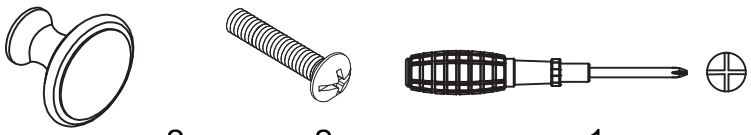


#6 x2 #7 x2 x1



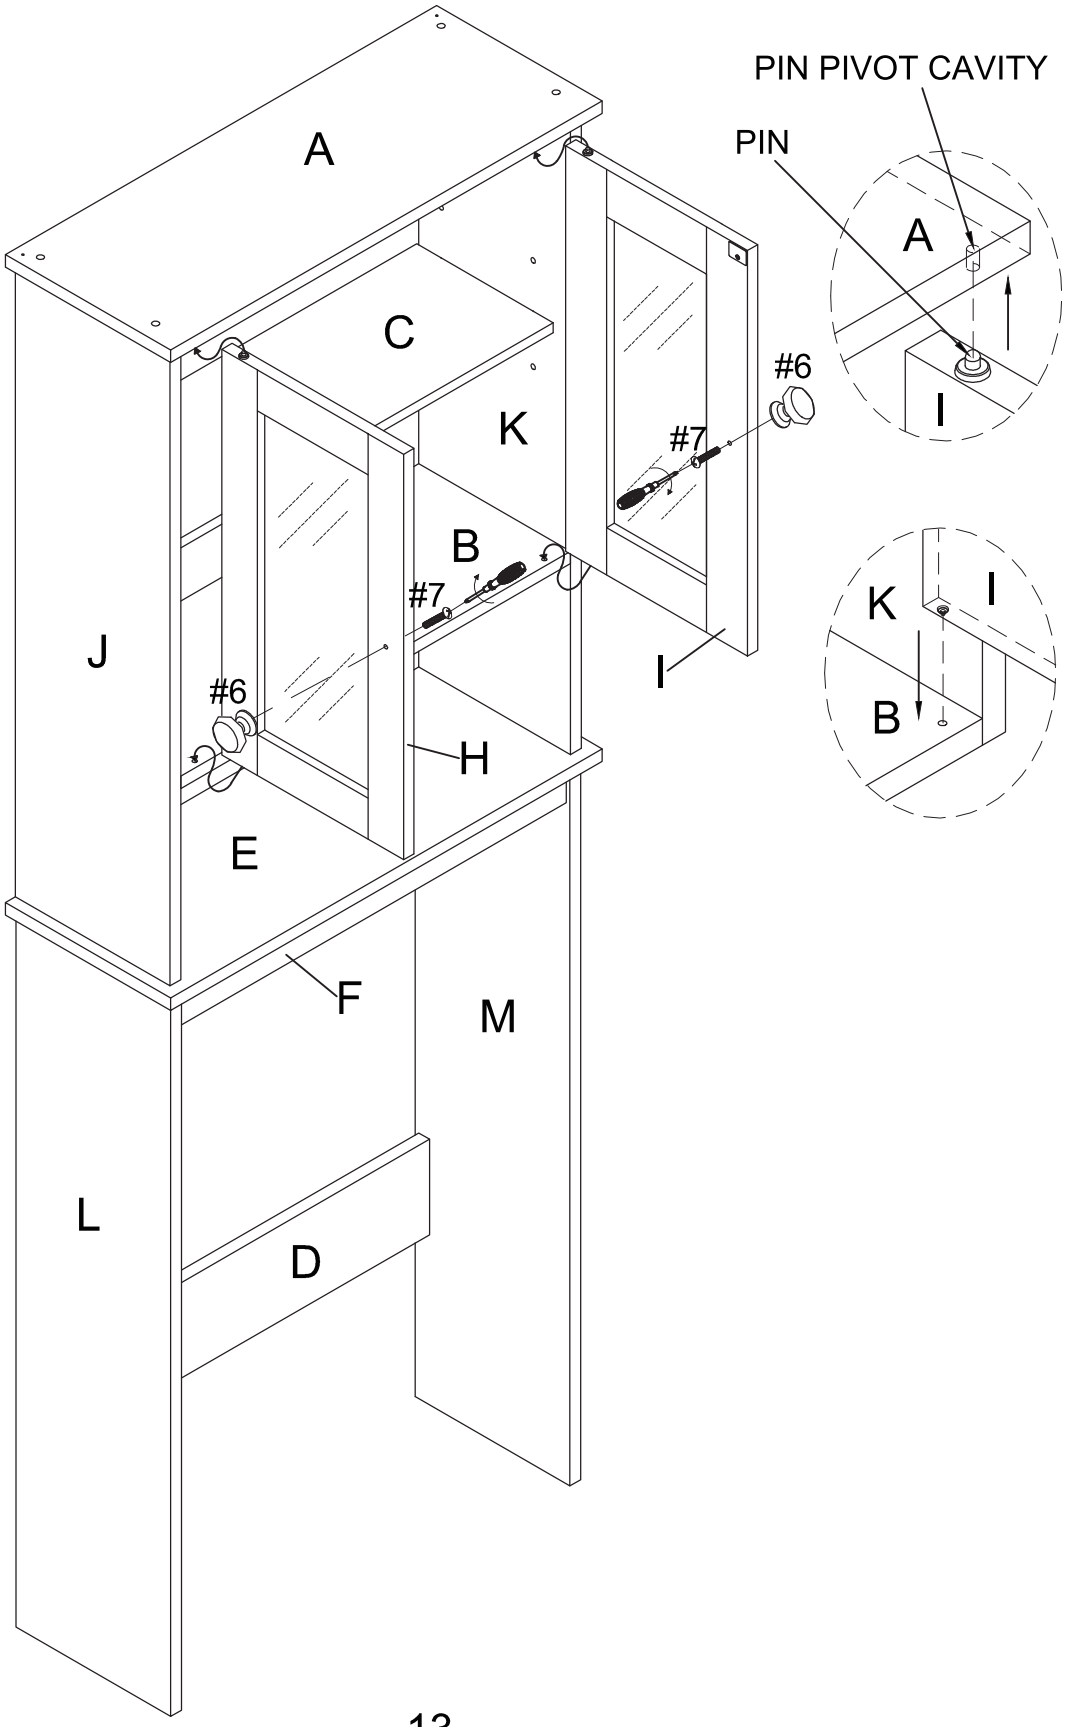


Step 14.

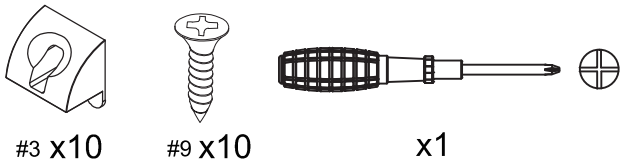


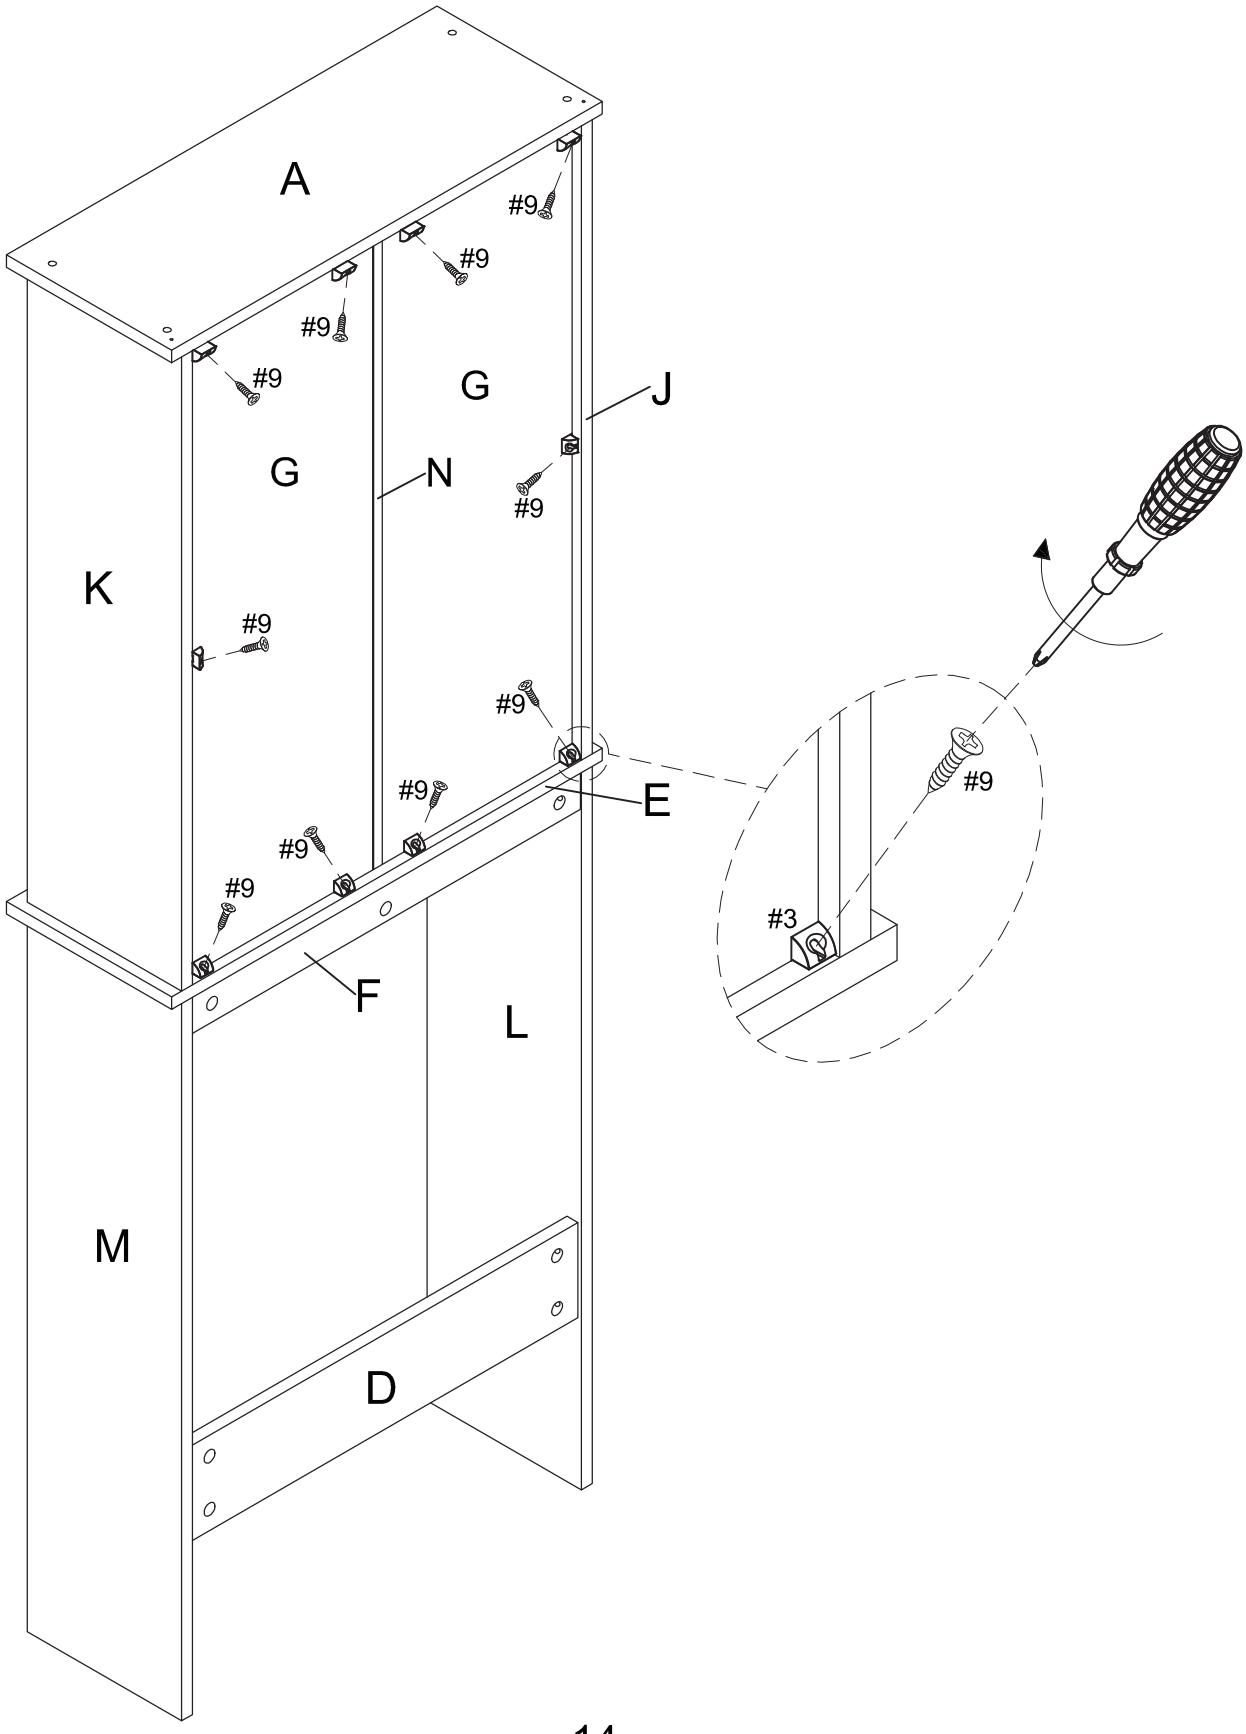

Step 15.
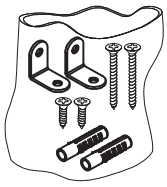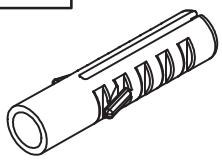
#12	#12-A	#12-B	#12-C	#12-D
	 30*30*2mm		 Ø3.5*15mm	 Ø4*40mm
Safety Strap Kit 1 SET	Angel Iron 2 PCS	Wall Anchor 2 PCS	Short Screw 2 PCS	Long Screw 2 PCS

Safety strap kit (#12) must be installed to prevent tipping, damage and/or injury.

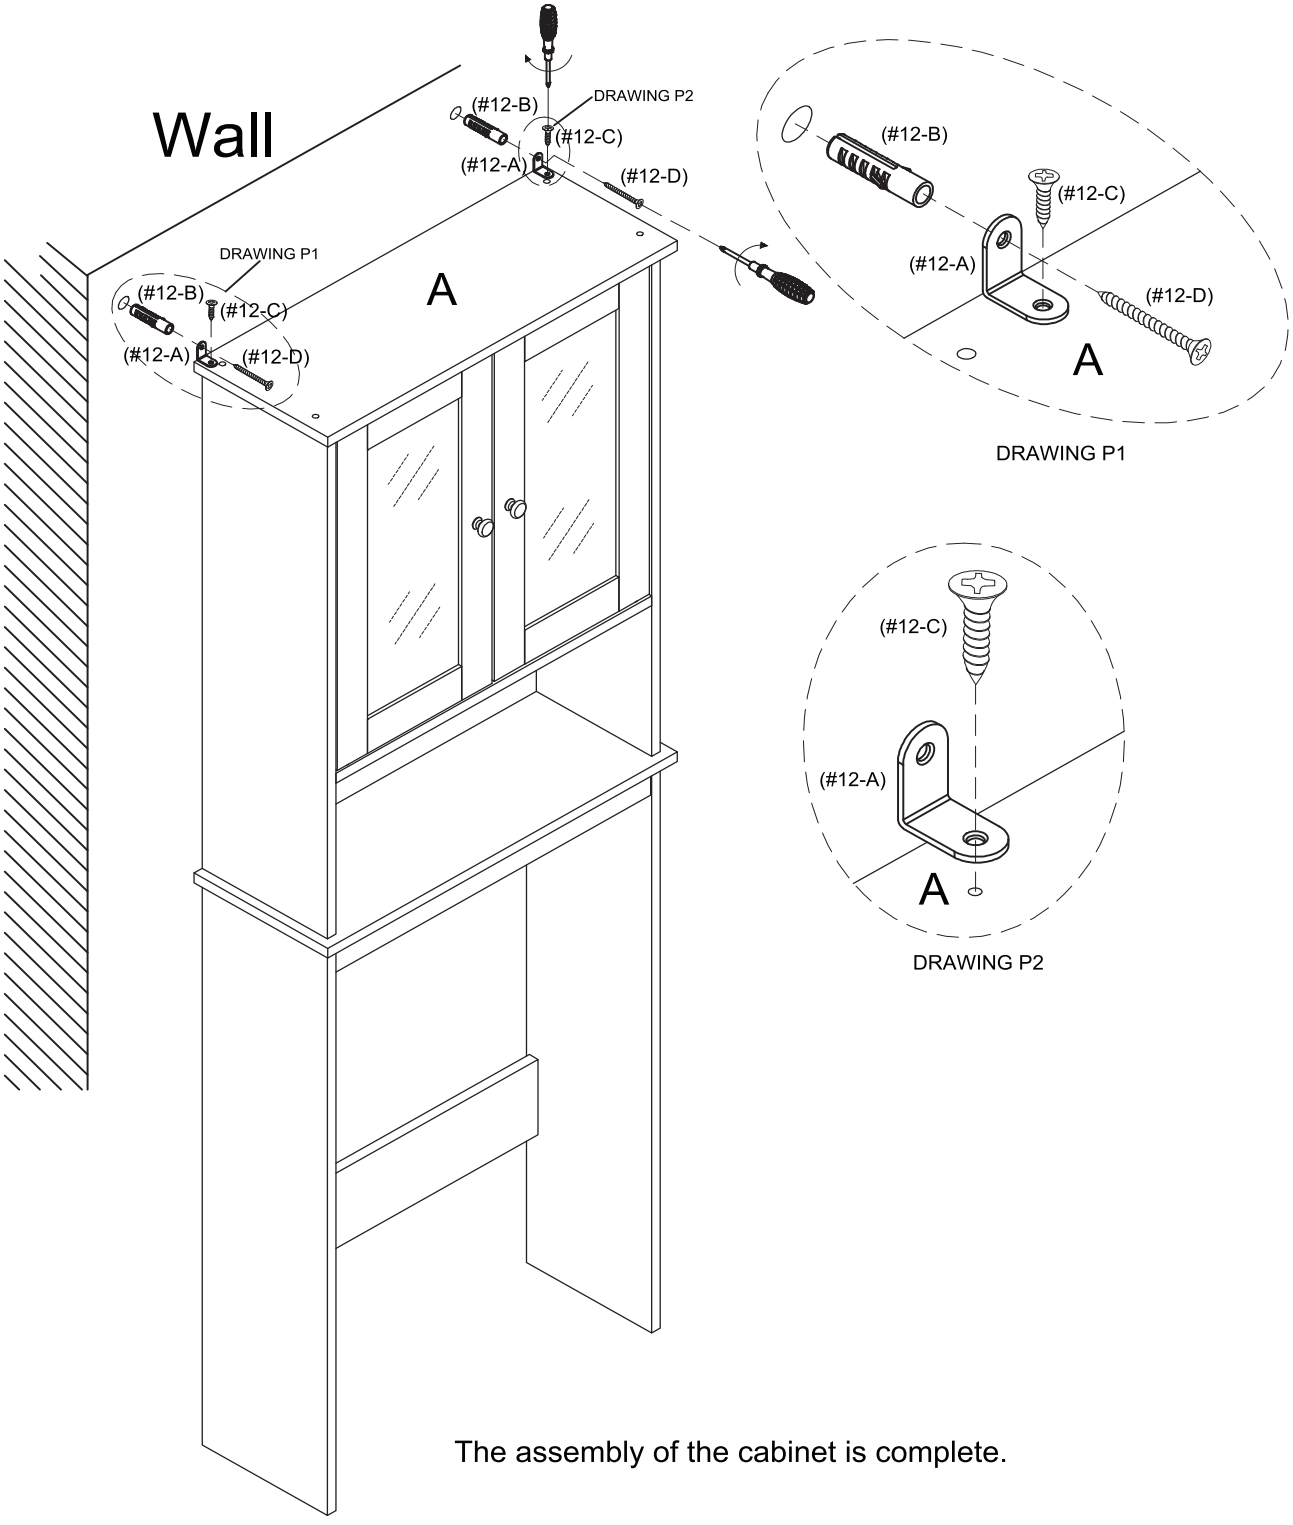

The assembly of the cabinet is complete.

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.