
Manual Book

Ceiling Fan With Lights

Model No.: QLF004G-6A

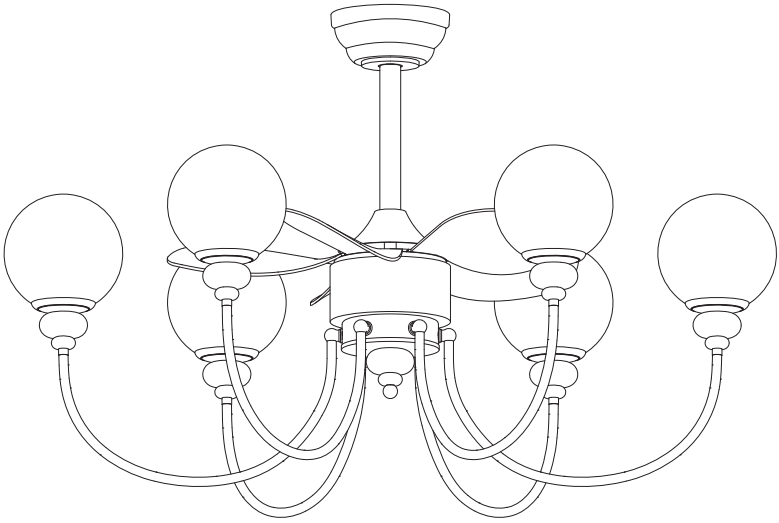

Scan for Installation Video

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably /supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). The fan must be turned off and the blades stopped before reversing the blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan lights may have different light shades and bulbs.
11. Use only our replacement parts. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.


Warning:
To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked "acceptable for fan support".

To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation


Tools Your Need

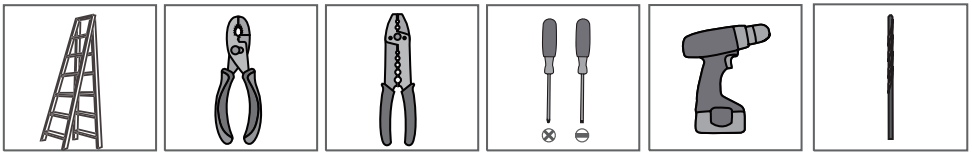

☑ Ladder ☑ Pliers ☑ Wire Strippers ☑ Screwdrivers ☐ Power Drill (optional) ☐ Drill Bit (optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

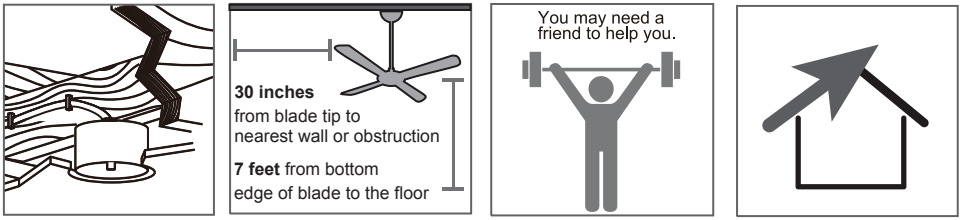

☑ Must be able to secure the fan to building structure or fan-rated outlet box

☑ Assess location

☑ Check the box to see the weight of the fan


☒ Not applicable for angled ceiling

Switch Selection

Note: Using a dimmer switch to control the fan may damage the fan. To reduce the risk of fire or electrical shock, do not use a dimmer switch to control the fan.


The recommended switches are as follows:

Recommended:




Single Pole Switch
(Not Included)


Not Recommended:




Dimmer Switch



Timer Switch




Fan Speed Control Switch



Motion Sensor Switch


Installation Recommended

Room Size:

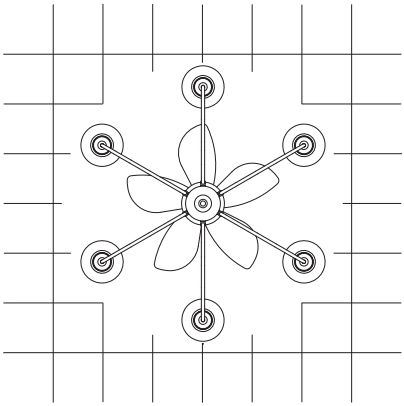


UP TO 8 ft × 10 ft

Room Height:

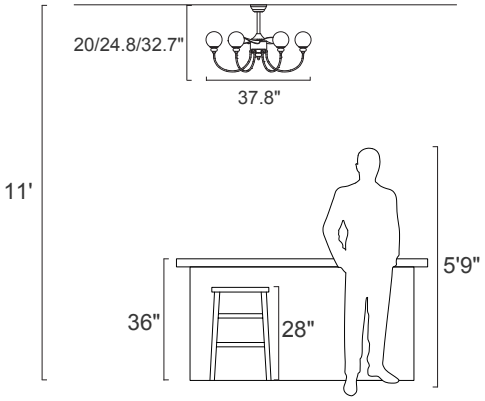

Recommended ceiling height: 8 to 12 ft

Packing List

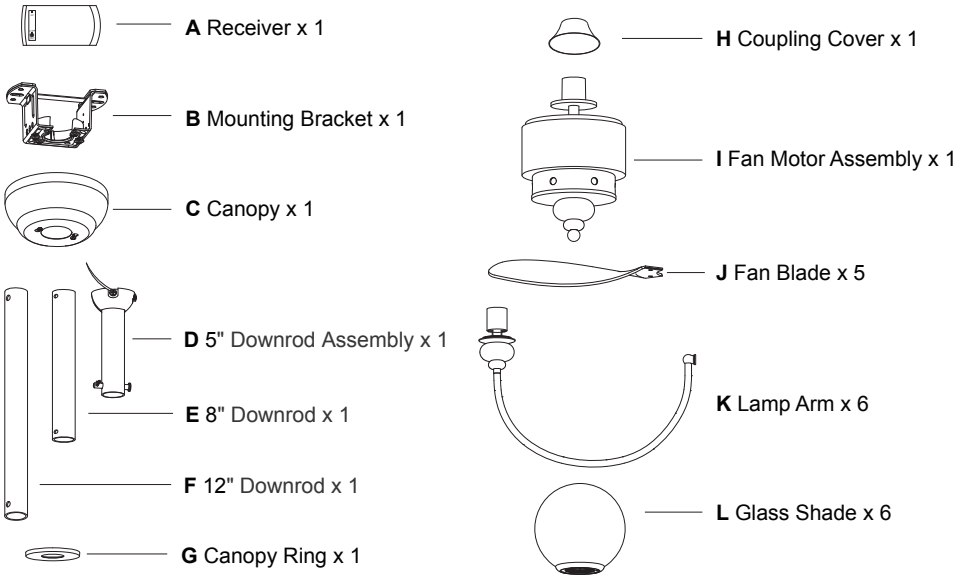

Installation Kit

AA ×5  Wire Nut	BB ×2  Outlet Box Screw	CC ×4  Wood Screw	DD ×4  Washer	EE ×2  Anchor Bolt
FF ×1  Remote Holder	GG ×1  Remote Control	HH ×2  Remote Holder Anchor	II ×2  Remote Holder Screw	JJ ×1  Gloves


NOTE: The listed quantity is for installation, extra hardware may be included.

Installation Instructions

1. Mount the Bracket (3 Options)


Option1. (For Outlet Box)


Secure the mounting bracket (B) to the outlet box with screws taken off from outlet box or screws (BB) and washers (DD) provided.

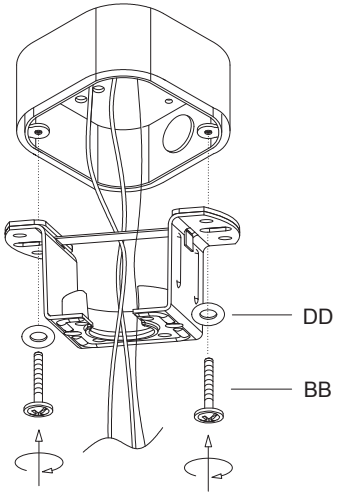


Option 2. (For Solid Wood Structure)

Mark and drill the screw holes on the solid wood structure. Mount the mounting bracket with wood screws (CC) and washers (DD).

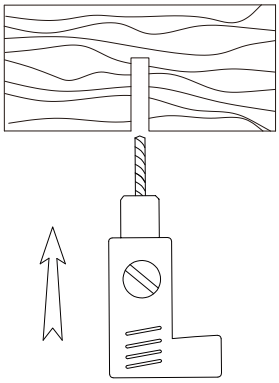


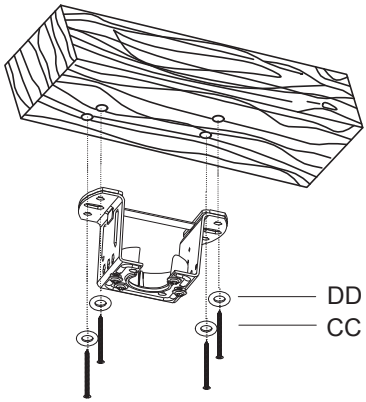


Option 3. Mount the mounting bracket to the cement structure with anchor bolt (EE).

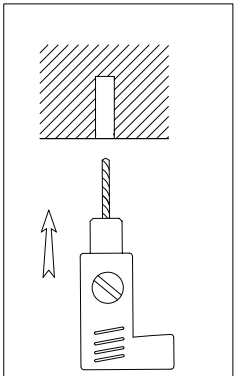


① Drill the holes.
(Use a 5/16" drill bit.)

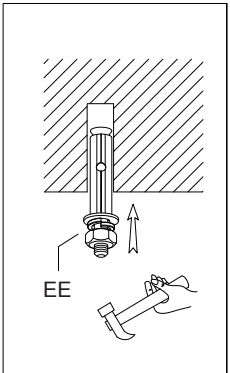


② Drive (EE) into the hole.

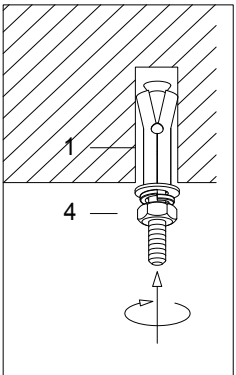

③ Tighten (4) until (1) is secure.

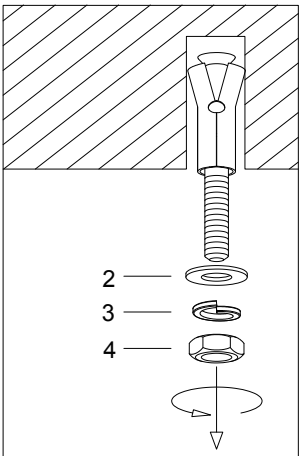


④ Remove (4), (3) and (2).

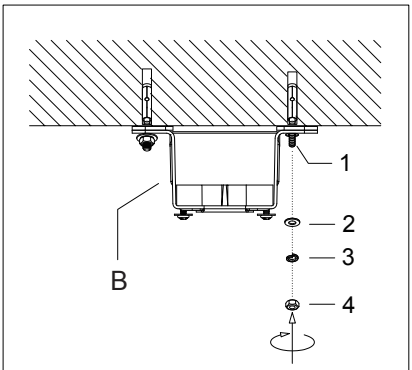


⑤ Attach (B) onto the (1), fit in (2), (3), and tighten with (4).

2. Assemble the Fan


Step 1. Loosen the decorative nut from the fan motor assembly (I) and remove the bottom cover.

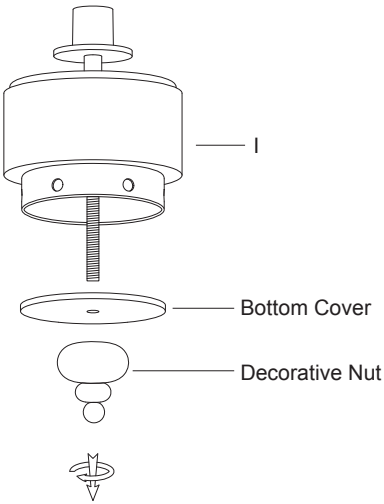


Step 2. Loosen the star washer and hex nut of the lamp arm (K).
Step 3. Fix the lamp arm (K) onto the fan motor assembly (I) with star washer and hex nut.

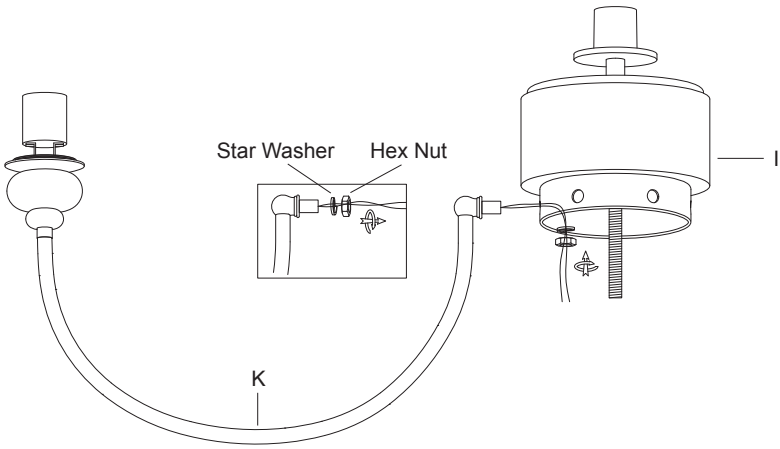


Step 4. Connect the wire of the lamp arm (K) to the lower end of the main power cord of the fan motor assembly (I) with wire nut (AA). (black to black, white to white)

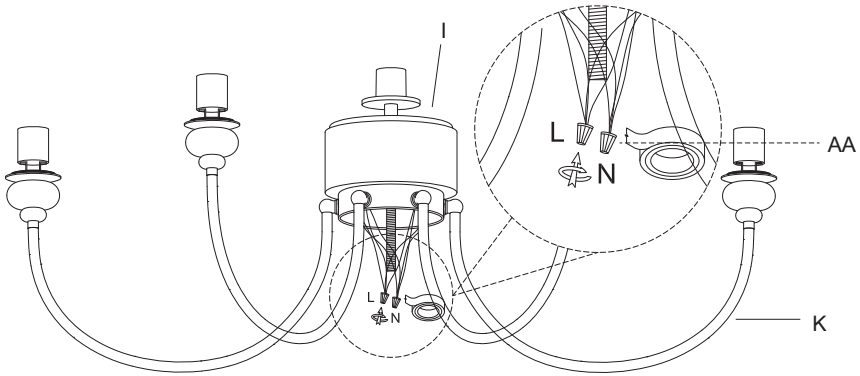


Step 5. Fix the bottom cover onto the fan motor assembly with decorative nut.

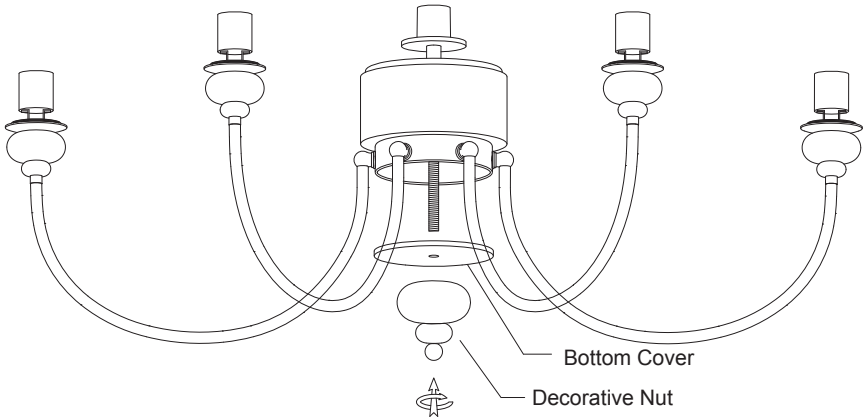



Step 6. Loosen the blade screw of the fan motor assembly (I).
Step 7. Align the fan blades (J) with the holes on the fan motor assembly (I), secure them with blade screws.
Note:
Make sure to assemble the blades in sequence and fasten the screws with equal force.

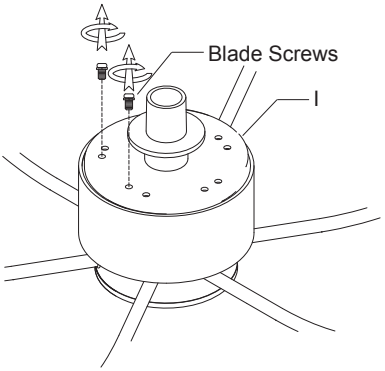

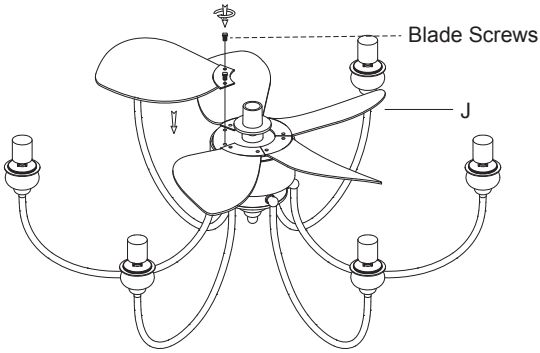


Step 8. Remove the "R" pin and clevis pin from the 5-inch downrod assembly (D).
Step 9. Pass the downrod (D/E/F) through the canopy (C), canopy ring (G) and coupling cover (H).
Step 10. Thread the power cord through downrod (D/E/F).

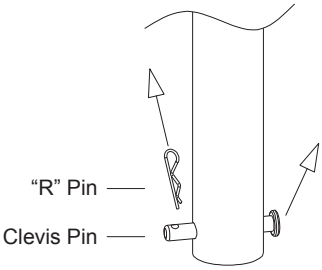


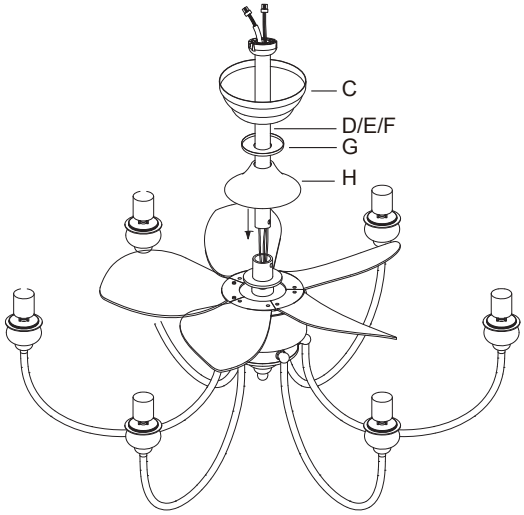

Step 11. Loosen the set screw of the fan motor assembly (I).
Step 12. Align the hole at the bottom of the downrod with the hole in the fan motor assembly (I). Carefully insert the clevis pin and "R" pin.
(Be careful not to jam the clevis pin against the wires inside the downrod).
Step 13. Tighten the set screws to secure the downrod.

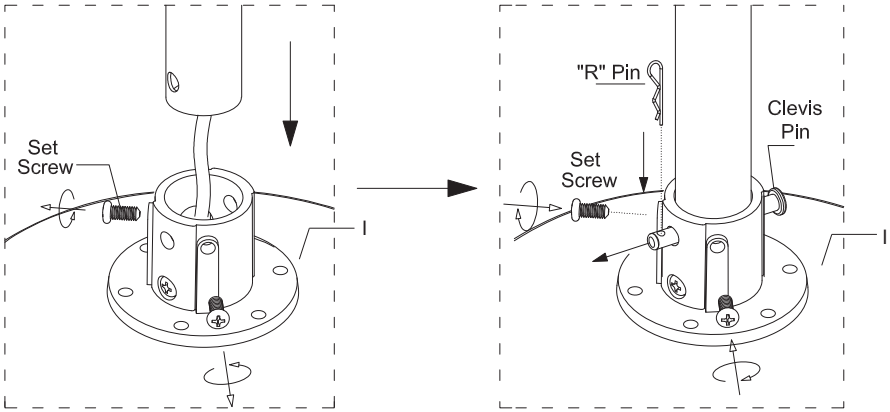


Step 14. Fit the coupling cover (H) onto the fan motor assembly (I).

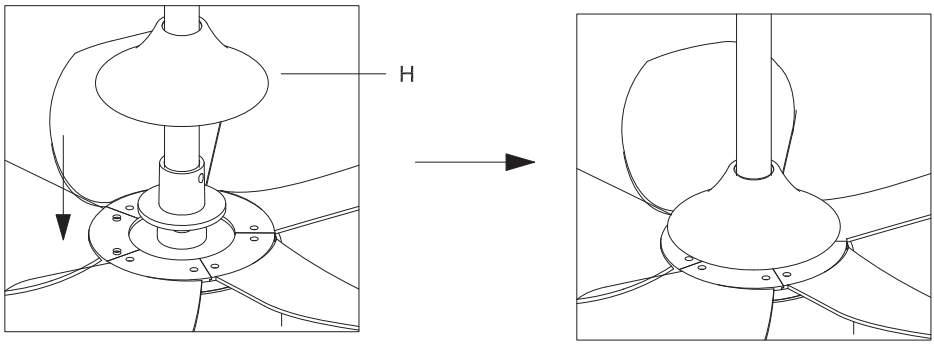


3. Hang the Fan


Step 1. Lift the downrod into the bracket. Rotate the downrod until the tab in the bracket is seated in the fixation slot in the downrod ball.

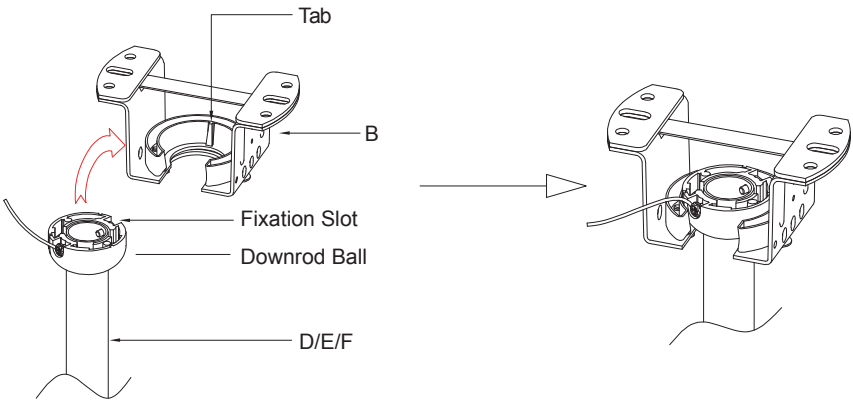

Step 2. Insert the receiver (A) into the gap of bracket (B).

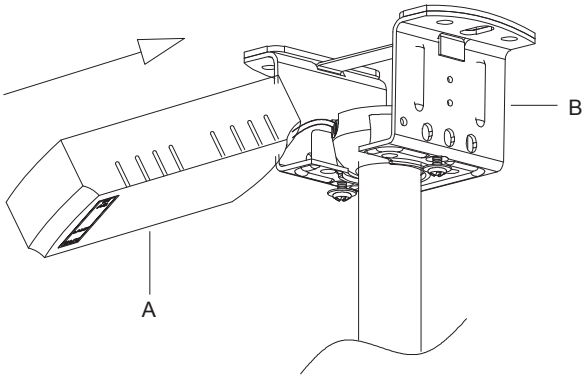


Step 3. Connect the wires on the fan and the receiver (A).
Step 4. Connect the ground wires from the fixture to the ground wire from the outlet box. Wrap the connection with electrical tape.
Step 5. Connect the wires from the receiver (A) to the house supply wires with wire nut (AA), neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

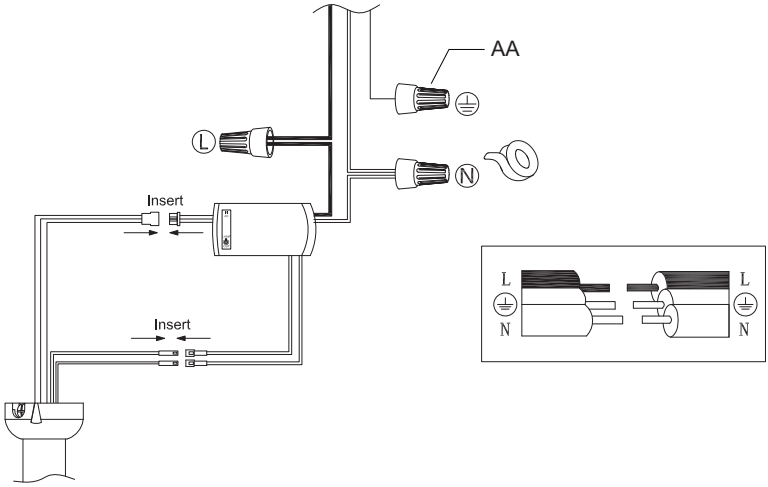


4. Fix the Canopy

Step 1. Push canopy (C) up to the ceiling, making canopy screws go through the screw holes on canopy, then rotate canopy to make it lock onto the canopy screws.
Step 2. Tighten the canopy screws to secure the canopy.
Step 3. Slide the canopy ring (G) up to the canopy (C).

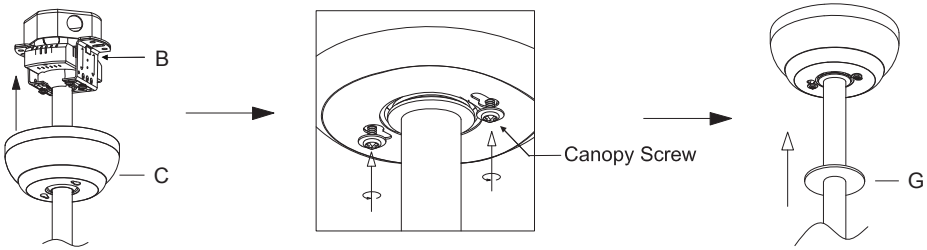


5. Install the Glass Shade and Bulbs

Step 1. Rotate the glass shade (L) to secure it onto the lamp arm (K).
Step 2. Install light bulbs (E26 x 6, max 25W each, not included).

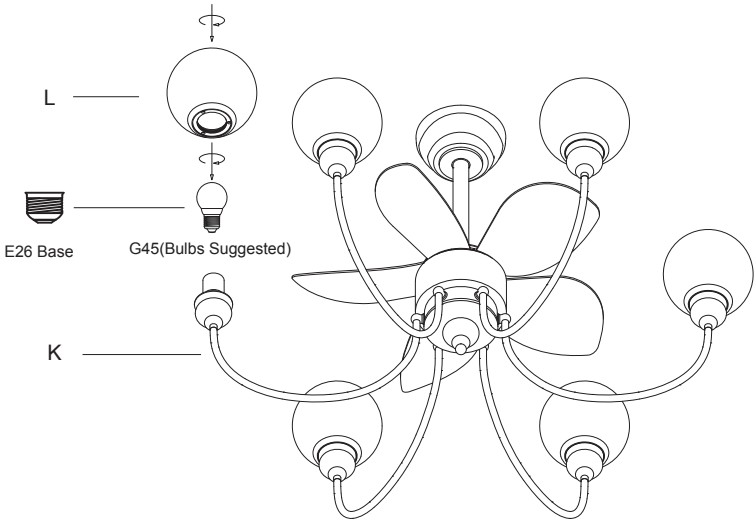


6. Install the Remote Holder

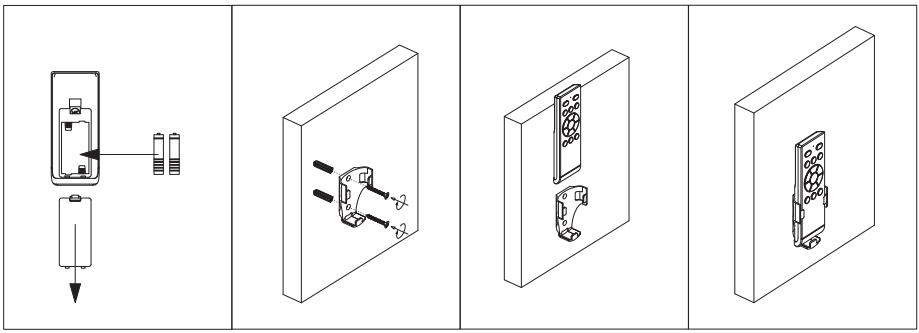

Step 1. Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included)
Step 2. Install the remote holder onto the wall with screws.

Remote Control Instructions

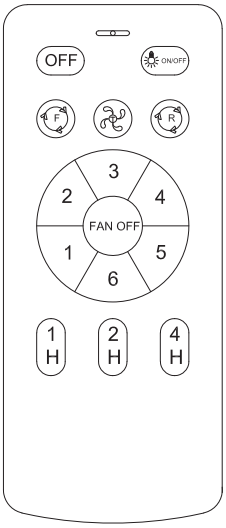

OFF	Turn off the fan and lights.
ON/OFF	Turn on/off the lights.
	Natural wind,fan speed will change automatically.
F	"F" refers the fan rotates forward.
R	"F" refers the fan rotates reverse.
3 2 4 1 5 6	1/2/3/4/5/6 for fan speeds.
FAN OFF	Turn off the fan.
1 H 2 H 4 H	1H/2H/4H for timing the fan.
FAN OFF	**Remote Signal Pairing:** If the remote control loses signal with the fan, turn off the power at the wall switch, then turn it back on. Immediately press and hold this button for about 3 seconds after the power is restored. When the fixture can be set, pairing is complete.

NOTE:
Please insert 2batteries before using. AAA 1.5V battery x 2pcs(not included).

Trouble Shooting

1. Fan doesn't work

• Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.

• Check the remote control battery (not included in this package).

• Check the circuit breaker to ensure the power is on.

• Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Lights Do Not Light Up / Flicker / Noisy Operation

• Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.

• Check your power and switch to make sure it's powered on.

3. Noisy Operation

• Tighten the light fitting and blade bottom cover.

• Re-tighten all screws on the bracket, downrod, and fan blades (do not over tighten)

• Check to see if any of the blades are cracked. If so, replace all of the blades.

4. Remote does not work

• Make sure the battery is installed correctly.

• Pair the remote control again. (See "Remote Control Instructions")

• Install 2 new batteries.

Clean And Care

To clean, wipe fixture with soft cloth. Spray from chemical cleaners can discolor the finish of fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from place of purchase. Use exact wording from diagrams when ordering parts.