Assembly Instructions


Caution : You must read this before you proceed

Care & Maintenance







-  Not for commercial use. For residential use only.
-  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-  Do not put hot items directly on furniture surface.
-  Do not clean furniture with harsh cleansers or polish.
-  Do not place furniture under direct sunlight.
-  Do not place furniture near heating or cooling vents.
-  Do not write on furniture without a padded barrier to protect the surface.
-  Do not place furniture outside . For indoor use only.
-  Stains may be removed with mild soap solution and damp cloth.
-  Children should not climb or jump on the furniture.
-  Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.


ACCENT CHAIR
N767P512586

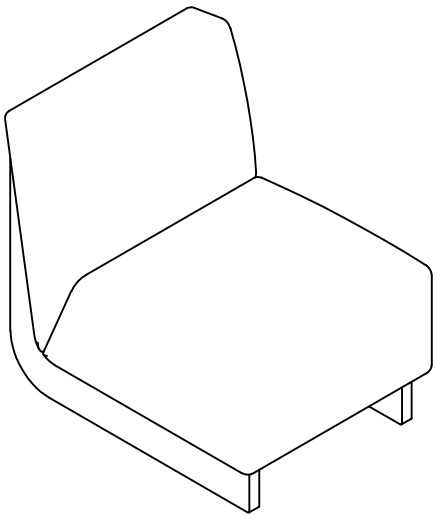

Parts List

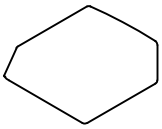
Label	Picture	Description	QTY
A		Backrest	1
B		Seat	1
C		Left Leg	1
D		Right Leg	1
E		Bottom rail	2
F		Back rail	1

Hardware:

Label	Picture	Description	QTY
1		Allen Wrench 4mm	1
2		Bolt Ø5/16" x 45mm	13
3		Spring Washer Ø5/16"	9
4		Flat Washer Ø5/16"	9
5		Cap	5

Assembly Preparation


Before Bebinning Assembly:

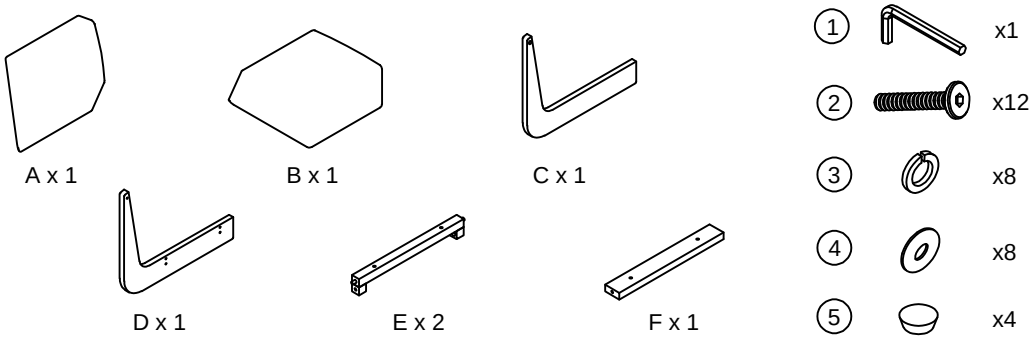

- Read instructions, cover to cover.
- Have 2 adults on hand for assembly.
- Do not assemble on flooring or carpet.
- Assemble on a clean non-marring surface (packing foam).
- Save all packaging until finished.


Assembly Steps

Overview

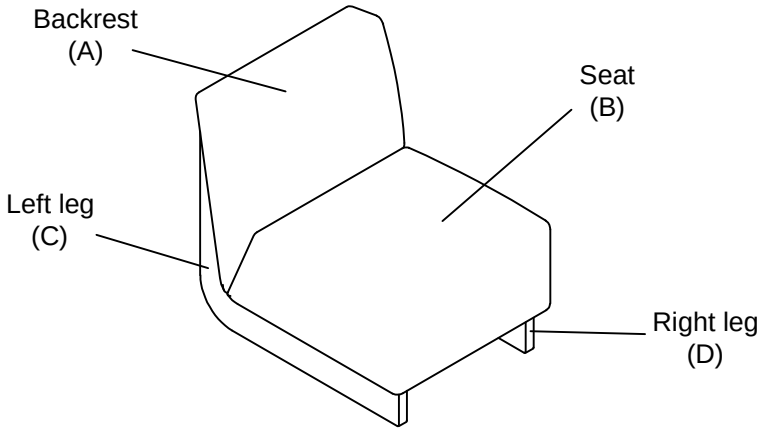


This Accent Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Accent Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

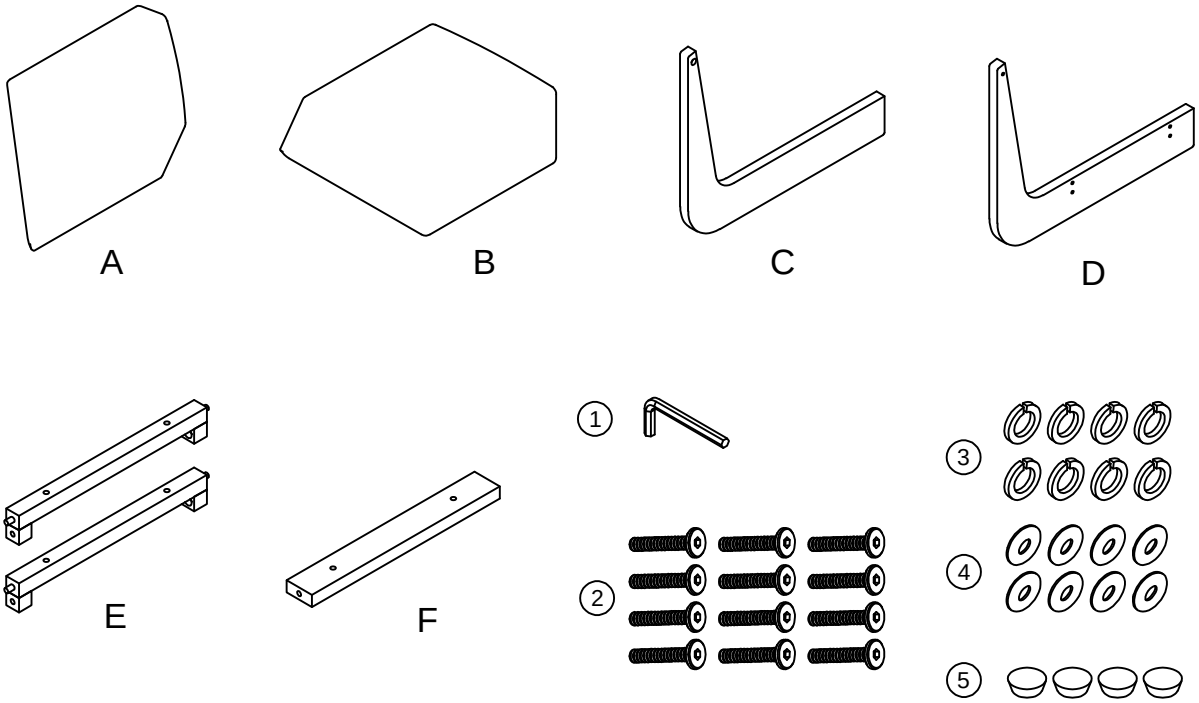


Unpack and place all the Parts and Hardware on a clean, non-marring surface.

Step 2

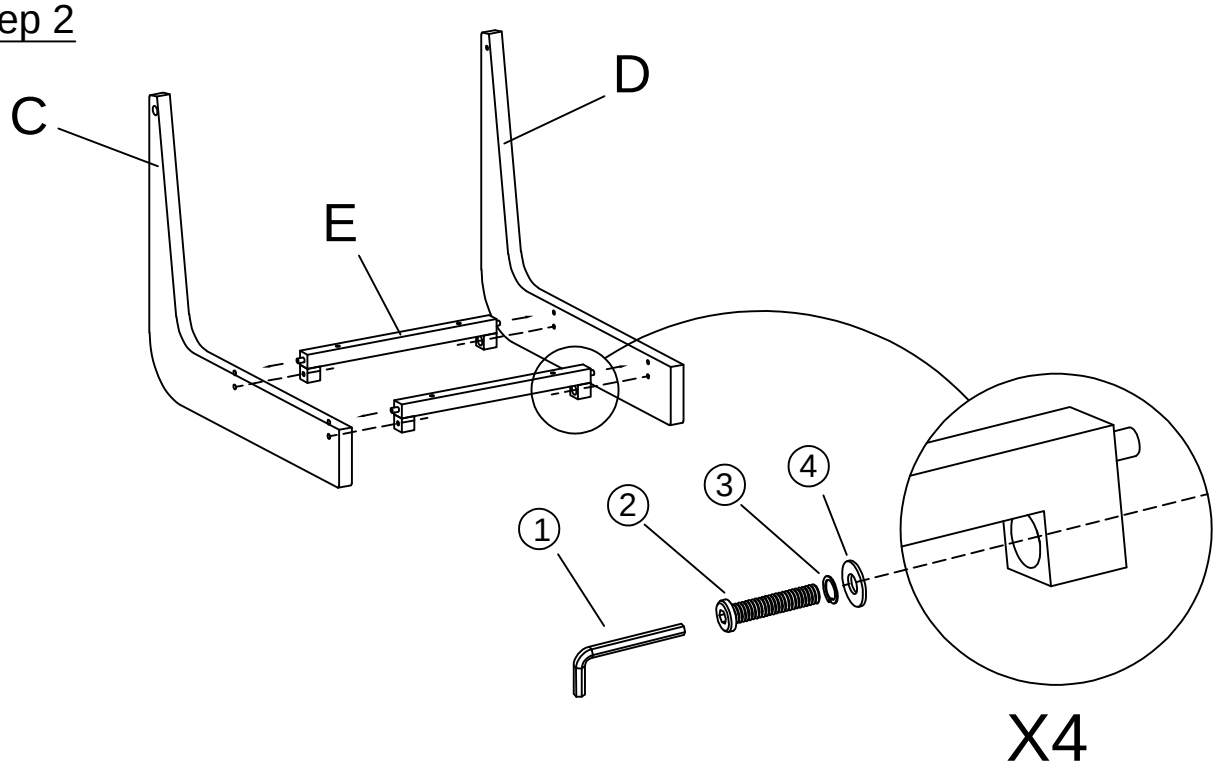


Attach Bottom rail (E) to Left leg (C) and Right leg (D) by using Bolt (②), Spring Washer (③), Flat Washer (④) and Allen Wrench (①).

Step 2

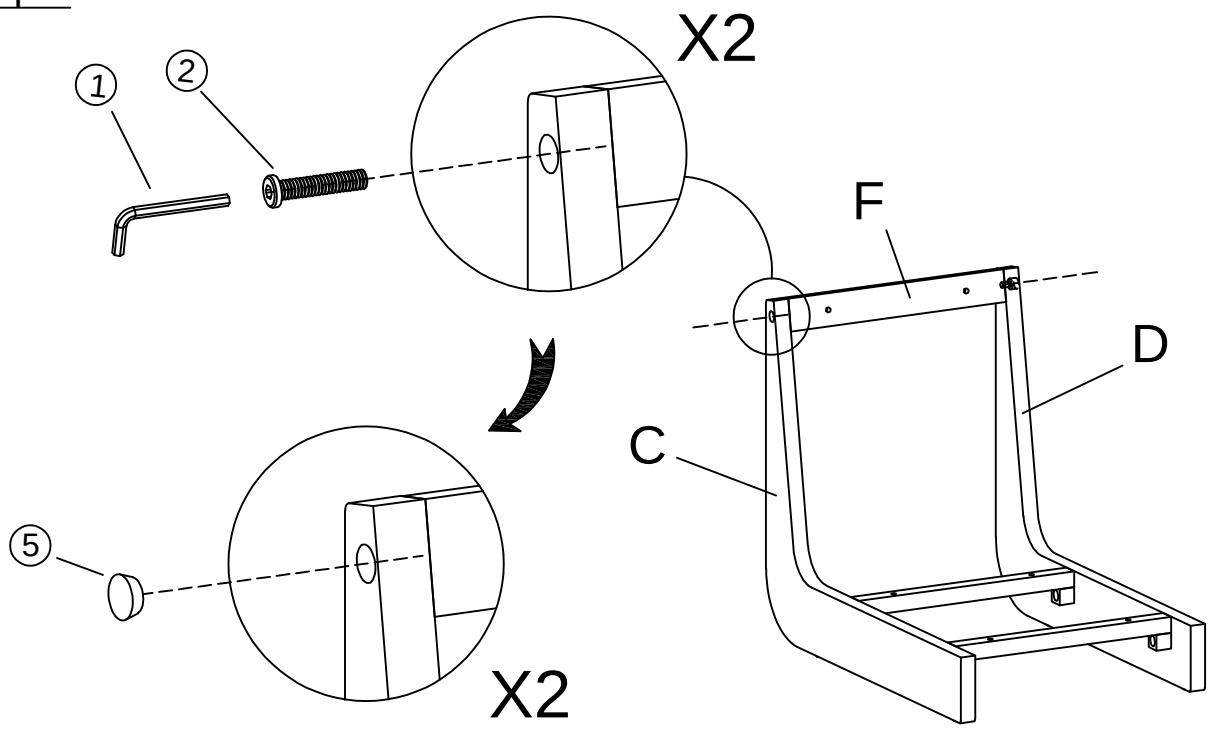


Attach Back rail (F) to Left leg (C) and Right leg (D) by using Bolt (②) and Allen Wrench (①), then insert cap (⑤).

Step 3

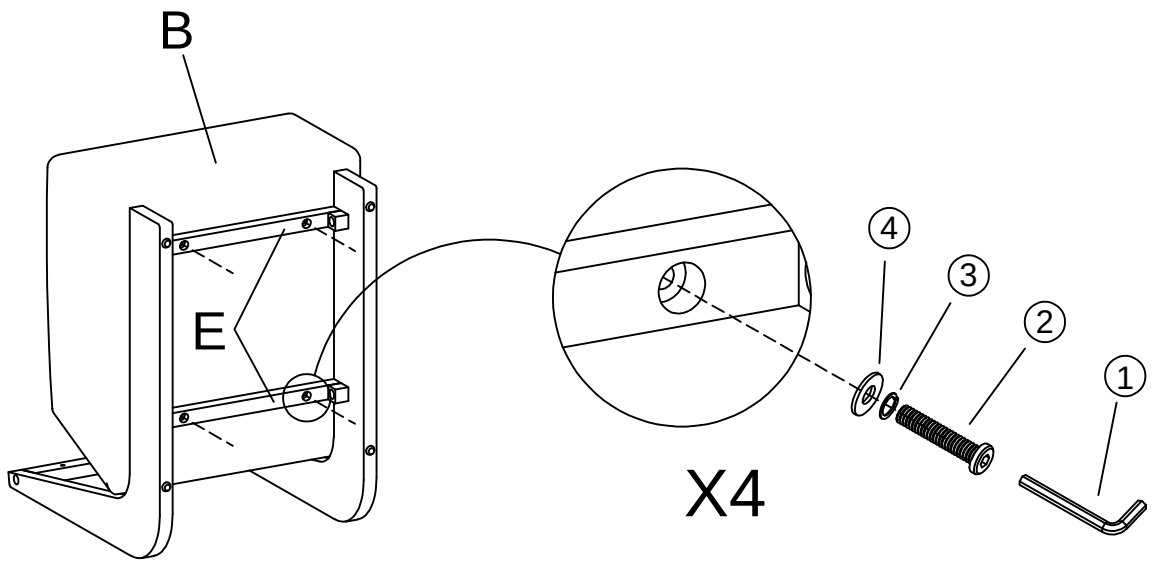


Attach Bottom rail (E) to Seat (B) by using Bolt (②), Spring Washer (③), Flat Washer (④) and Allen Wrench (①).

Step 4

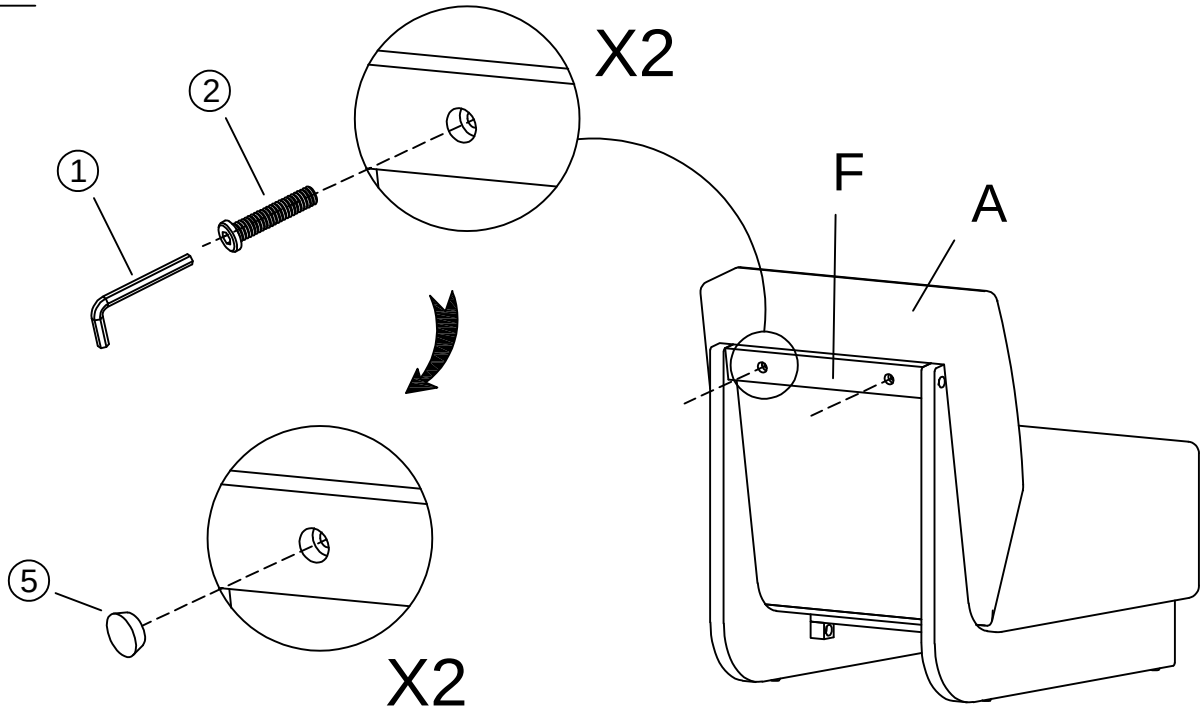

Attach Back rail (F) to Backrest (A) by using Bolt (②) and Allen Wrench (①), then insert cap (⑤).

Finish

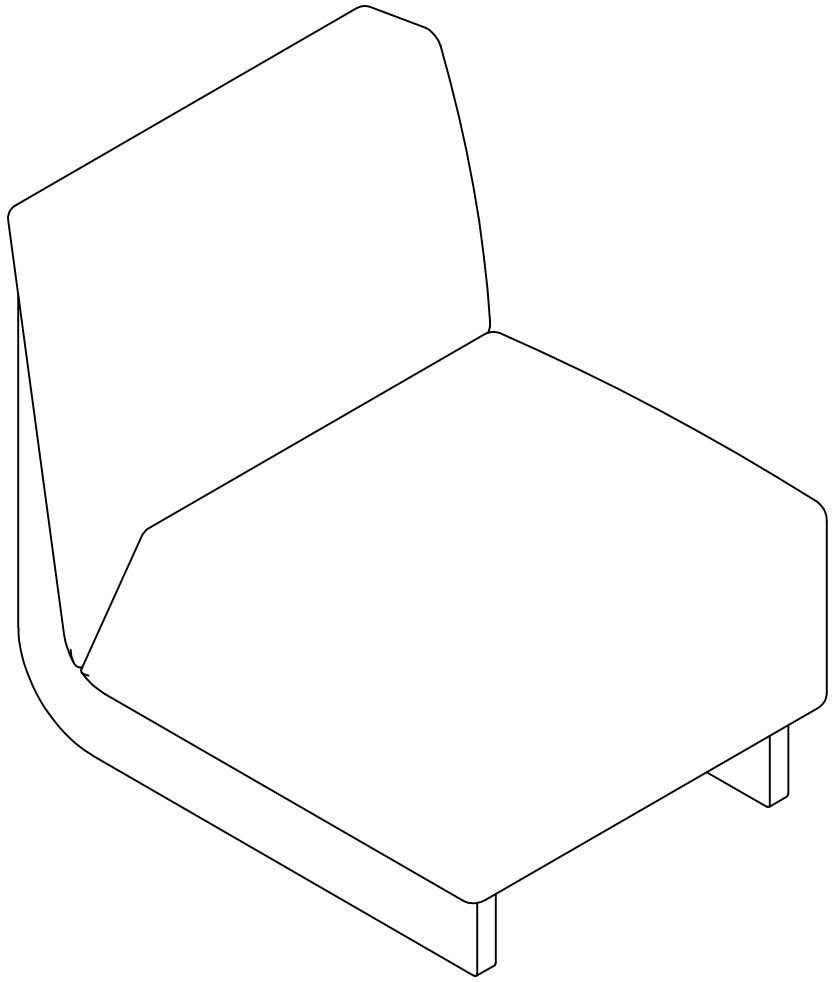

This Accent Chair is ready for use.
This Accent Chair can only be used on a flat, level surface.