
INSTALLATION & ASSEMBLY

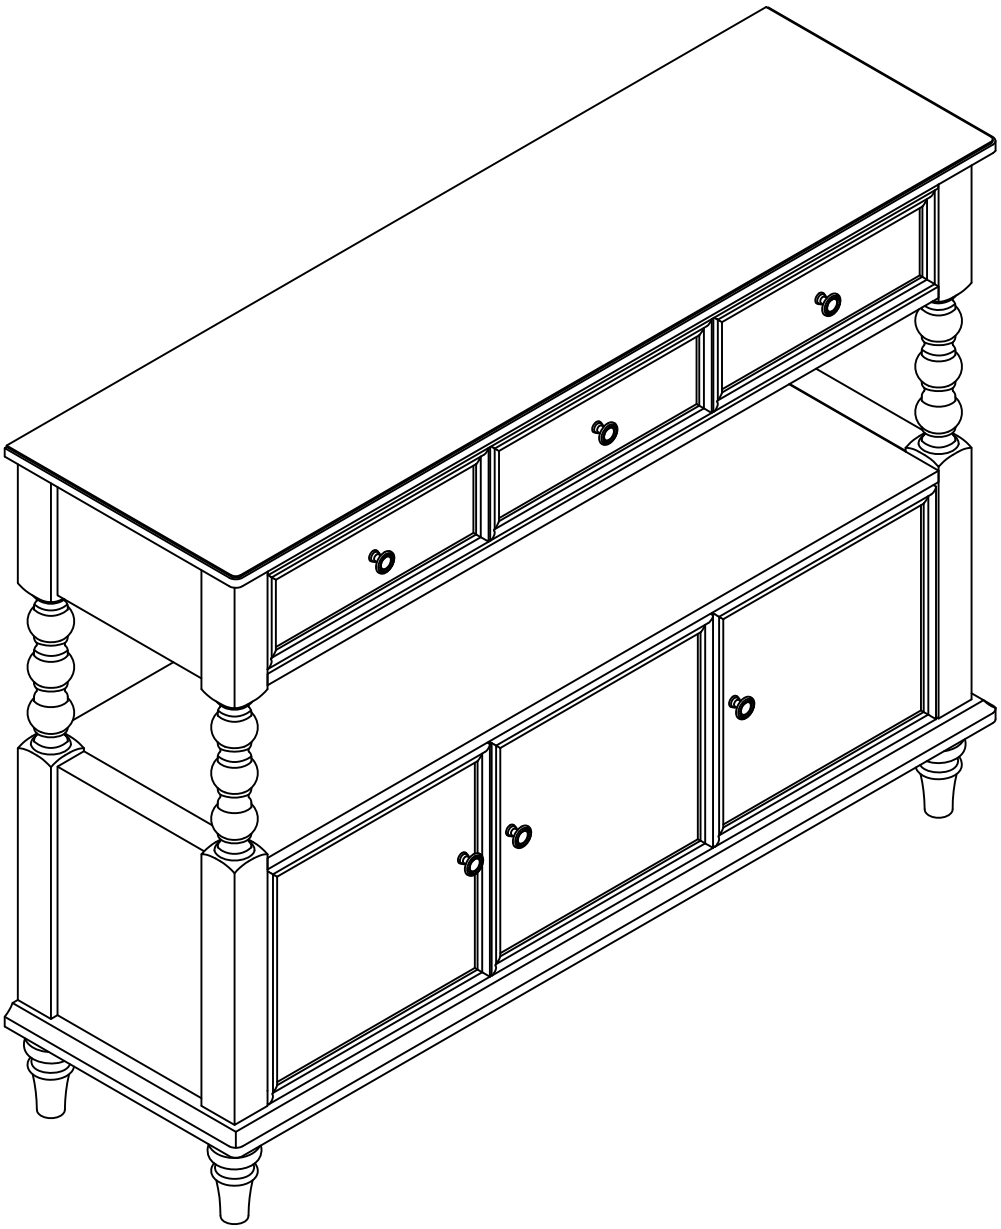

MAINTENANCE AND WARNING

1.Keep furniture away from heat sources.


2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).


3.Do not place furniture under direct sunlight,material will possibly fade over time.


4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.


5.Do not write on furniture that is not protectedby a padded barrier.


6.Not for commercial use,only for residential use.

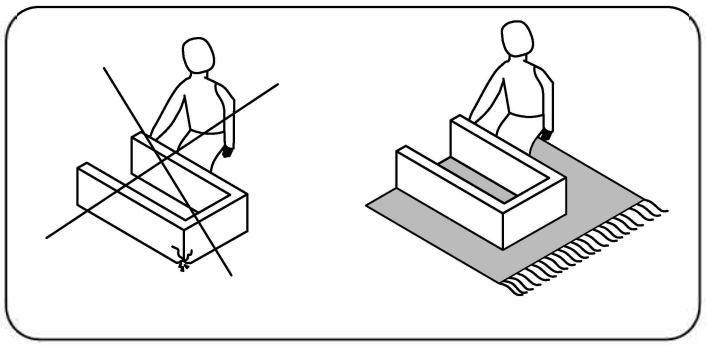

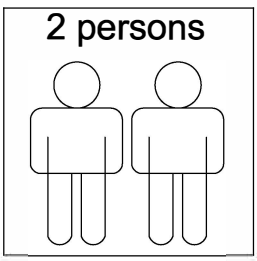

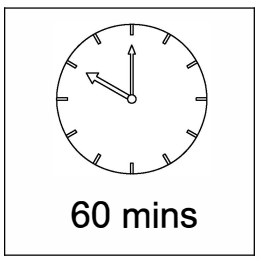


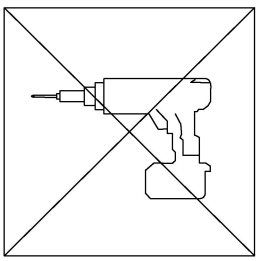

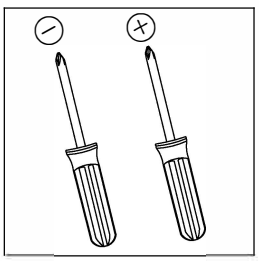


INSTALLING THE CAM LOCKS

1

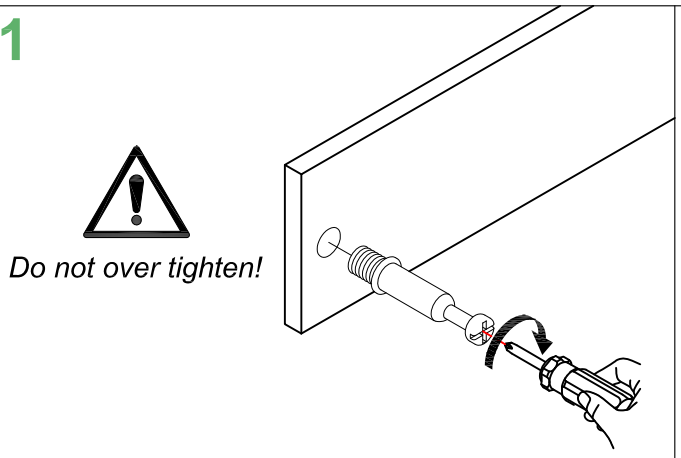


The base of the Cam Screw should be flush with the panel

2

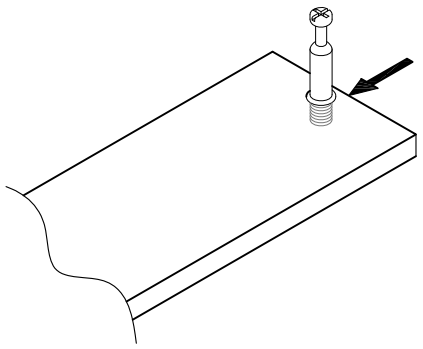


Screw the Cam Screw into the prethreaded hole. Tighten with a screwdriver until snug.

3

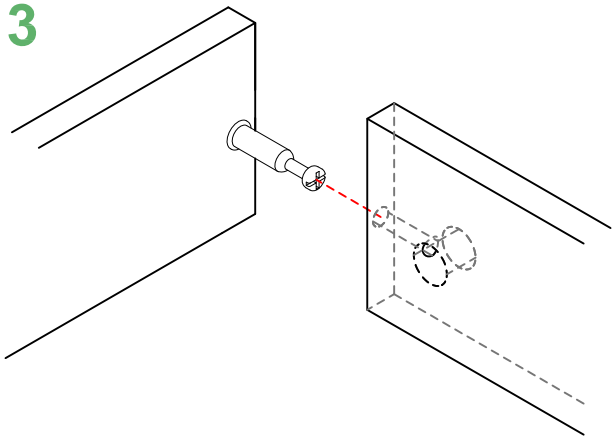


Connect the panels.Insert the Cam Screw into the small hole in the adjoining panel.

4

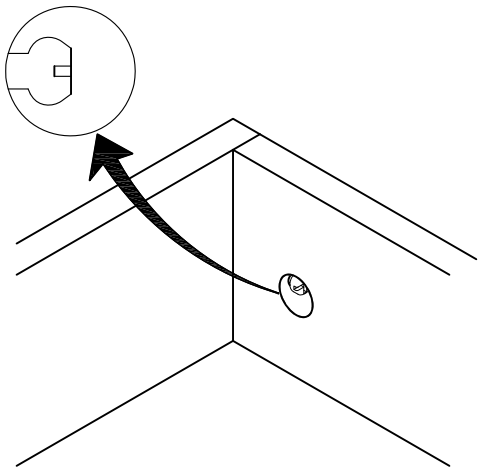


The head of the Cam Screw should be visible through the large hole.

5

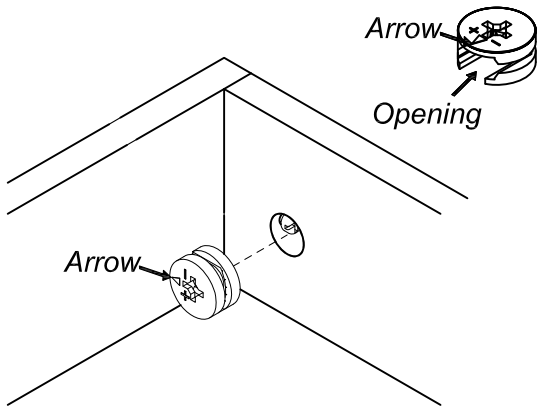


Insert the Cam Lock into the hole.Make sure the arrow and the opening in the Cam Lock are facing the Cam Screw.

6

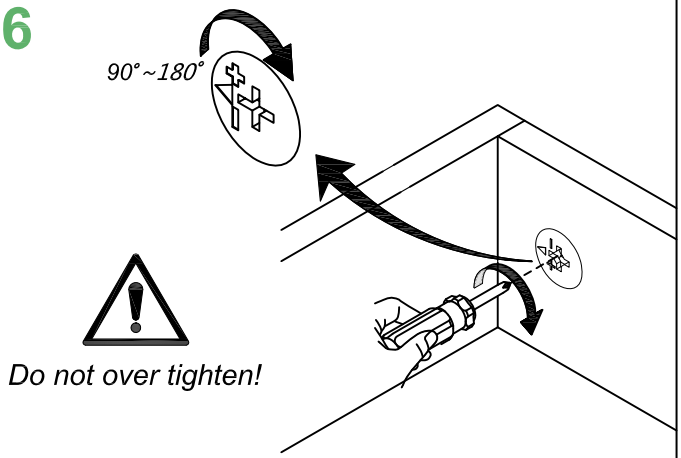


Using a screwdriver, turn the Cam Lock at least 90° clock-wise to lock the two panels firmly togethe.

EXPLOSIVE VIEW

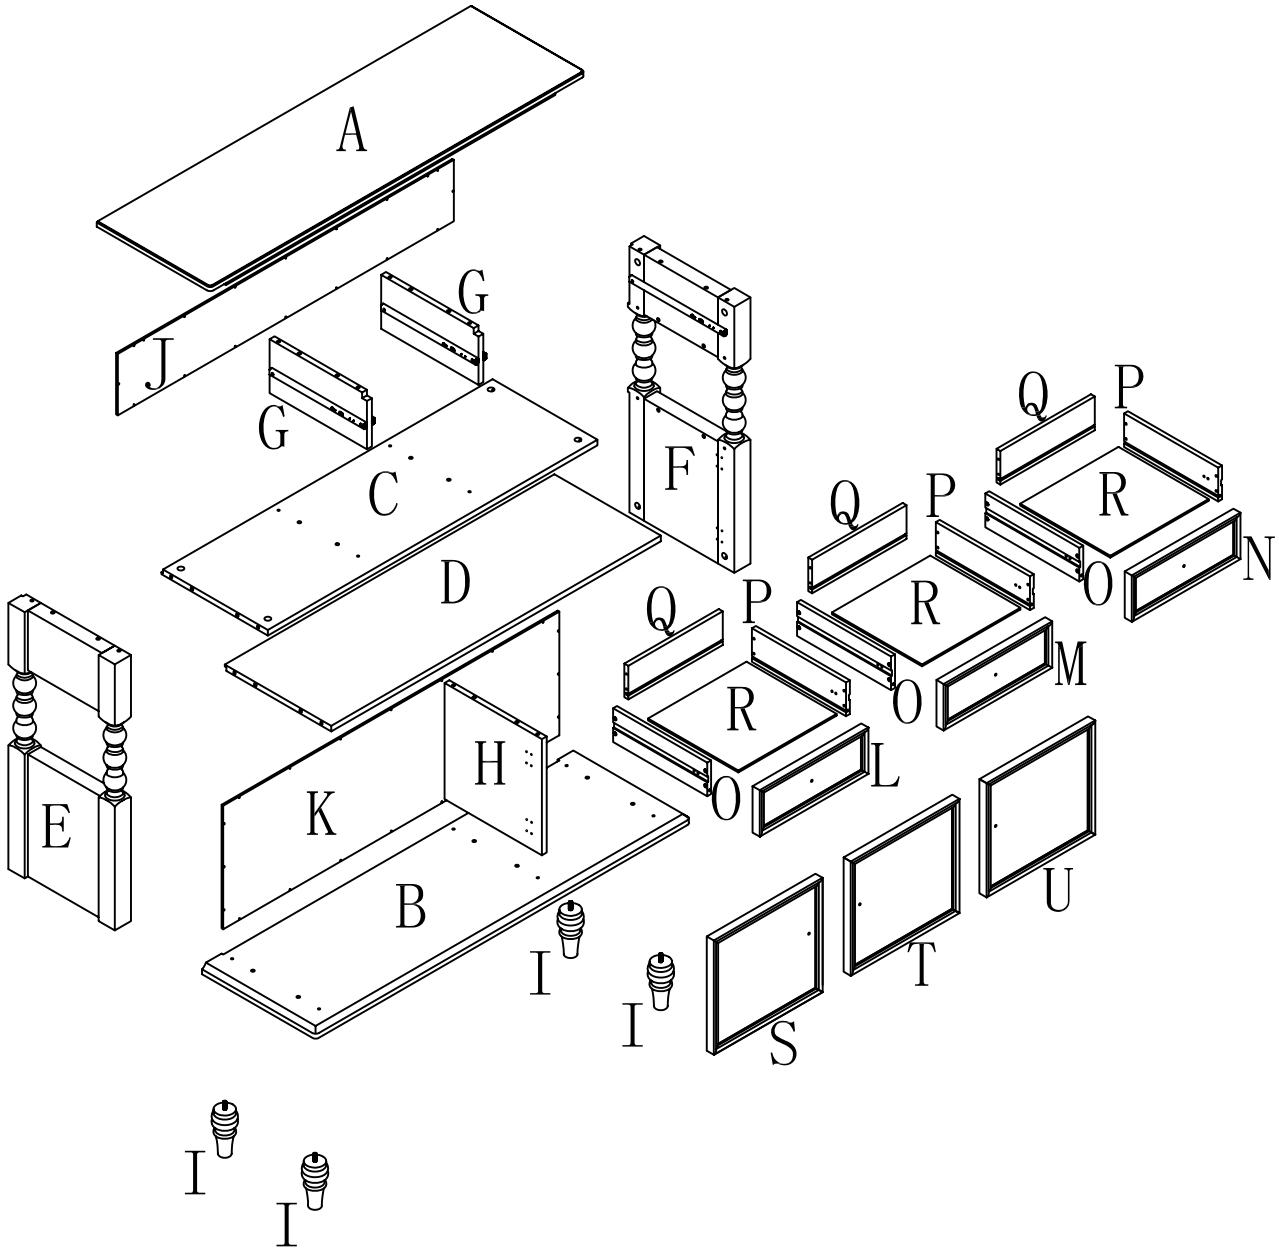


PARTS LIST


A	x1

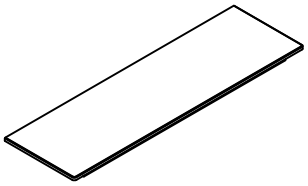


B	x1

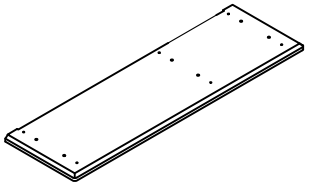


C	x1

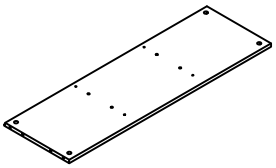


D	x1

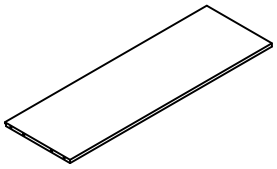

E	x1




F	x1



G	x2




H	x1




I	x4



J	x1

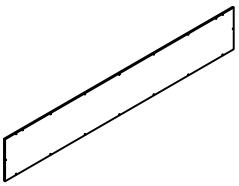

K	x1

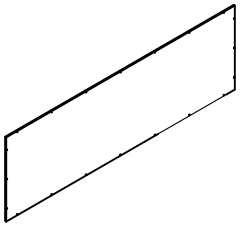

L	x1



M	x1



N	x1



O	x3



P	x3




PARTS LIST


Q	x3




R	x3




S	x1




T	x1





U	x1





HARDWARE LIST

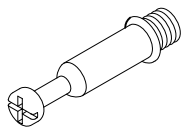
1	x28+2
	

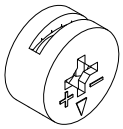
2	x28+2
	

3	x28+2
	ϕ8*30mm

4	x34+2
	ϕ3*14mm

5	x4
	


6	x4
	ϕ3*16mm


7	x24+1
	ϕ4*25mm


8	x6
	


9	x6
	ϕ4*25mm

10	x12
	ϕ4*13mm

11	x4
	


12	x2
	

13	x36+2
	ϕ3.5*14mm

14	x4
	


15	x4
	ϕ3.5*35mm

16	x2
	

17	x1
	

ASSEMBLY INSTRUCTIONS

STEP-1

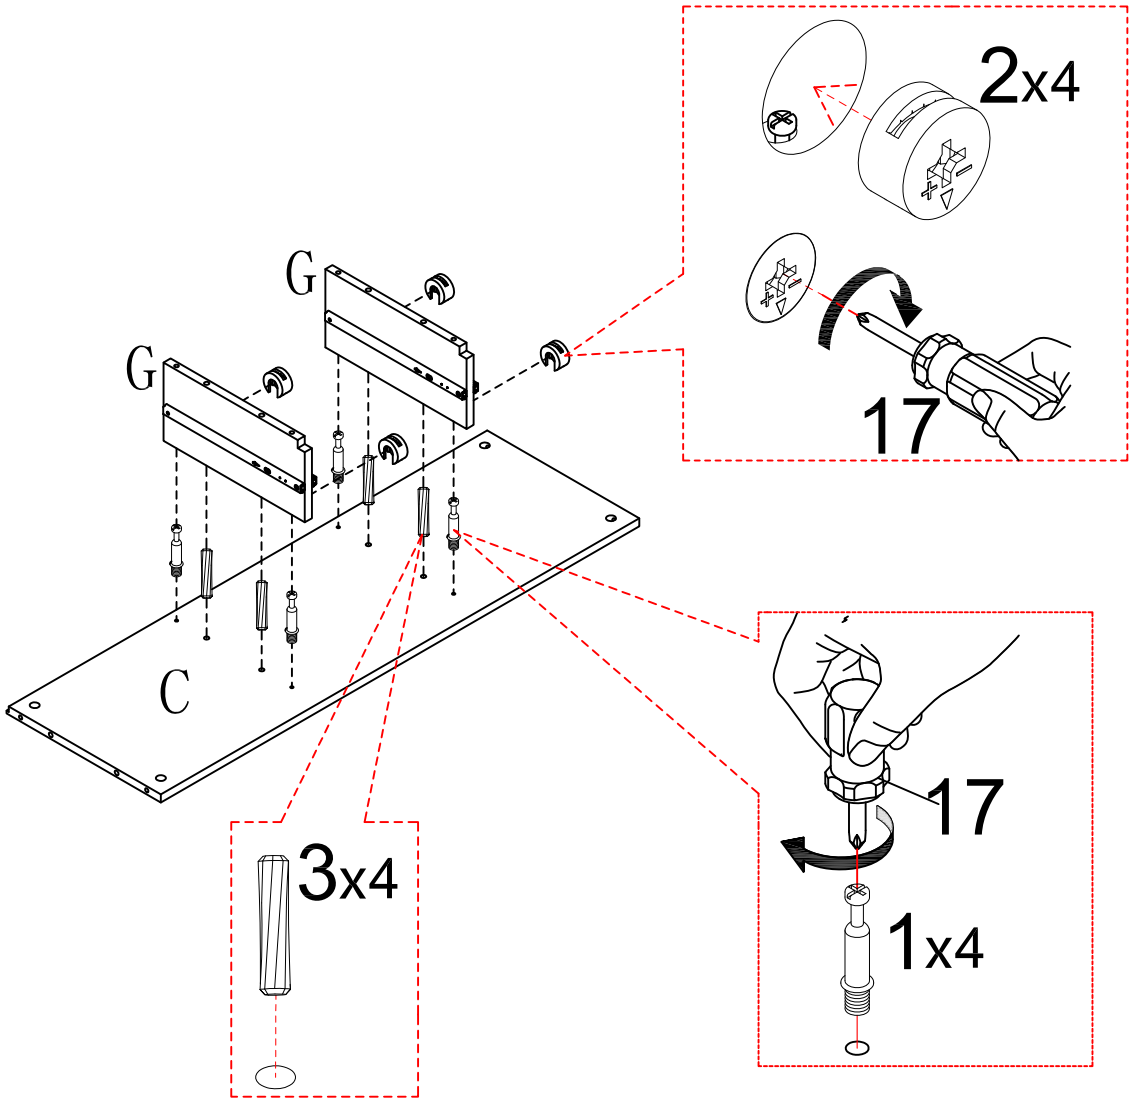

1	x4

2	x4


3	x4
ø8*30mm	

17	x1

08/27

ASSEMBLY INSTRUCTIONS

STEP-2

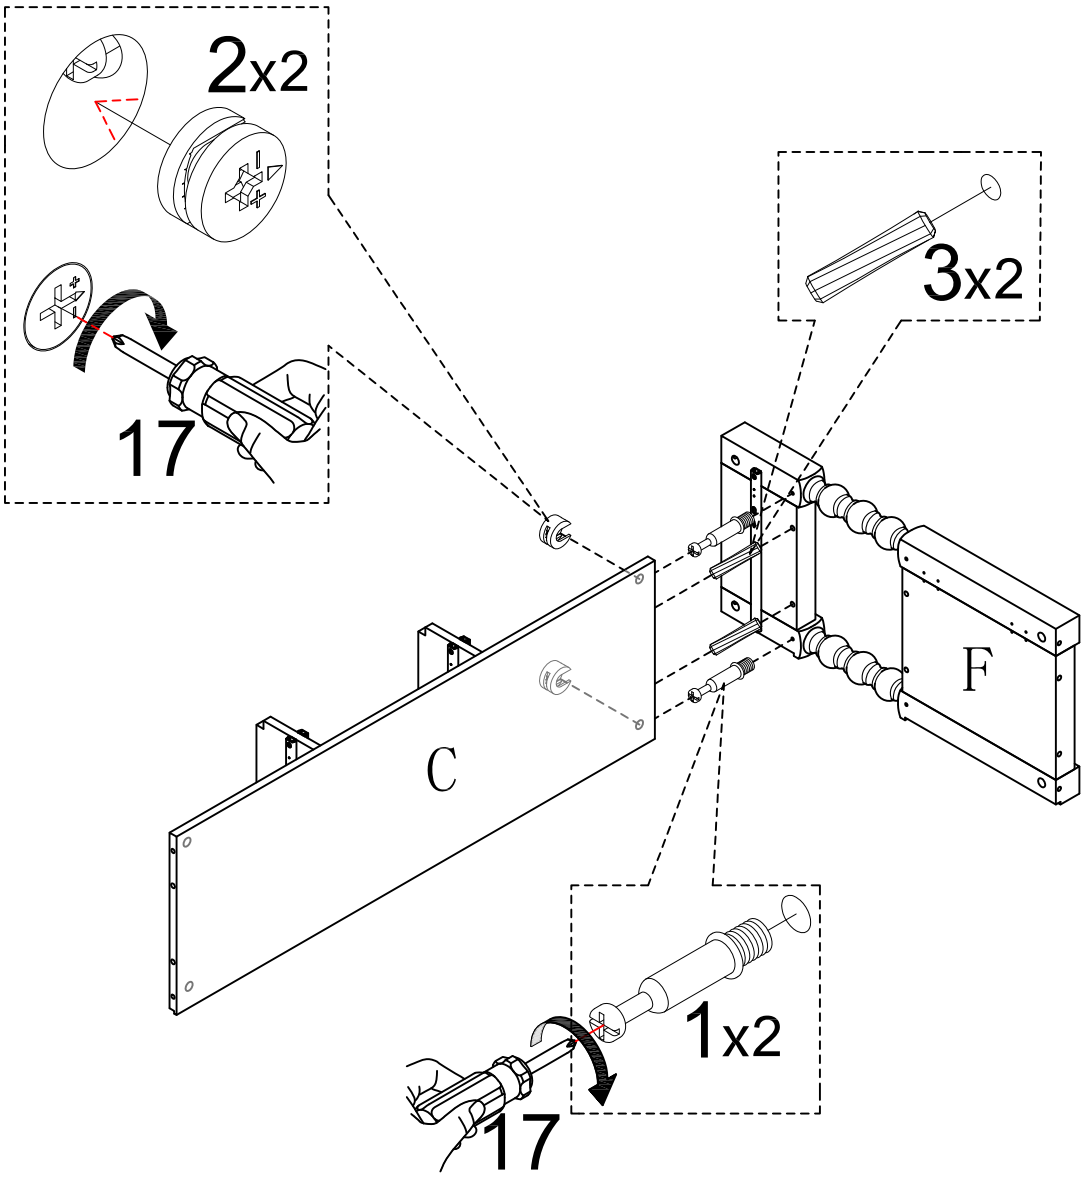

1	x2

2	x2


3	x2
	ø8*30mm


17	x1


09/27


ASSEMBLY INSTRUCTIONS


STEP-3

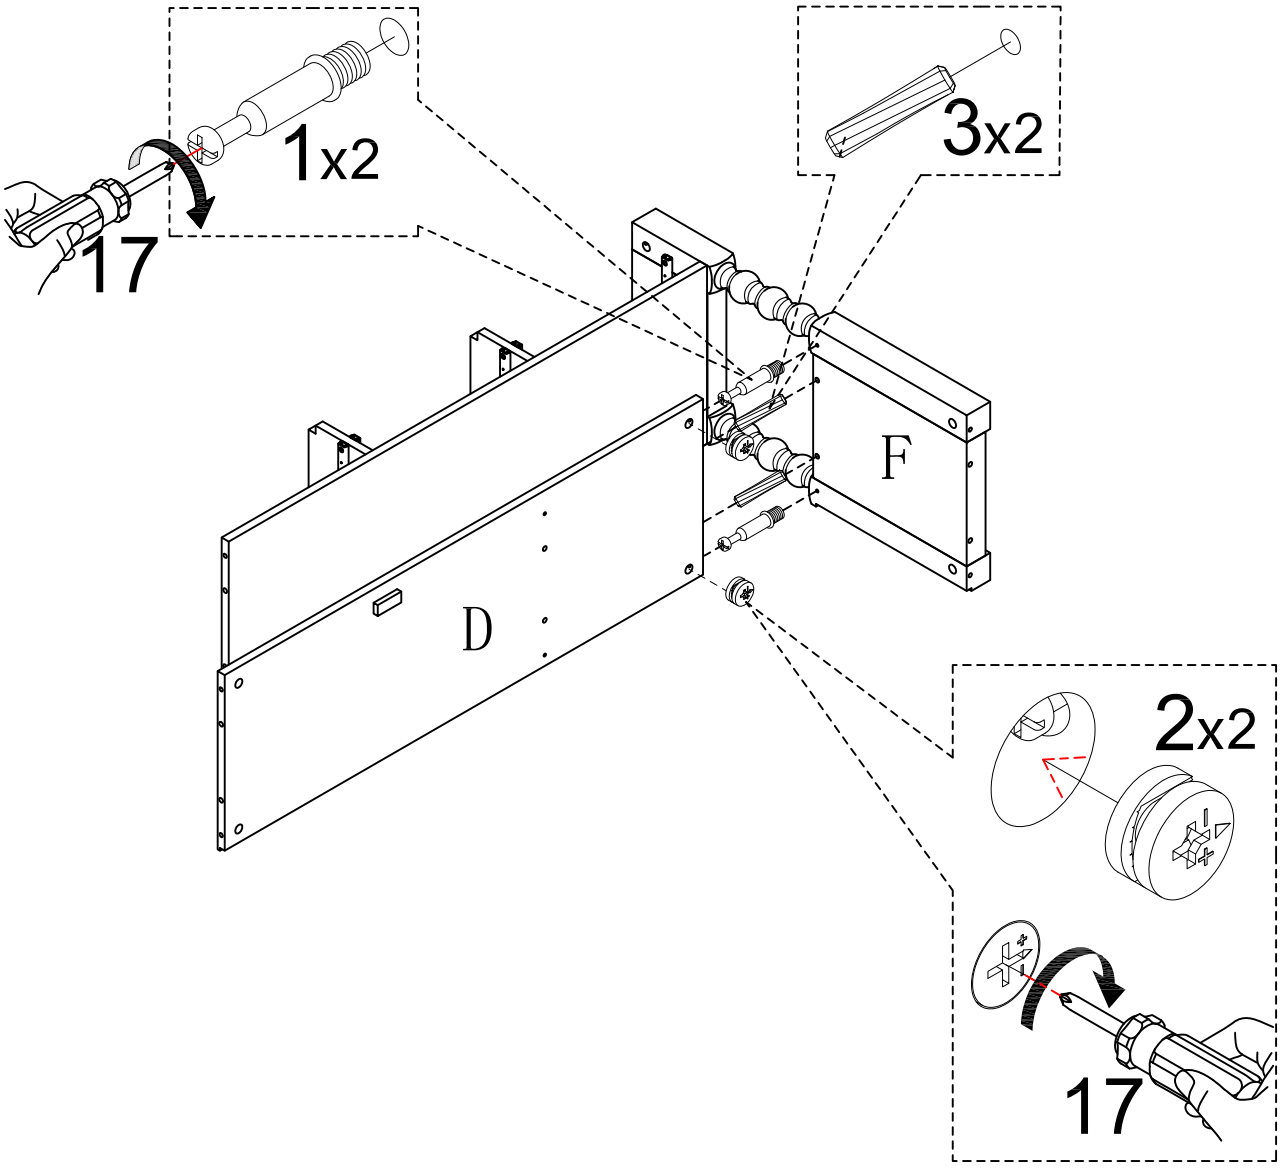

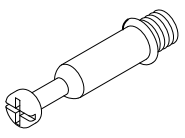1	x2
	

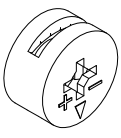
2	x2
	

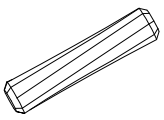
3	x2
	ø8*30mm


17	x1
	


ASSEMBLY INSTRUCTIONS


STEP-4

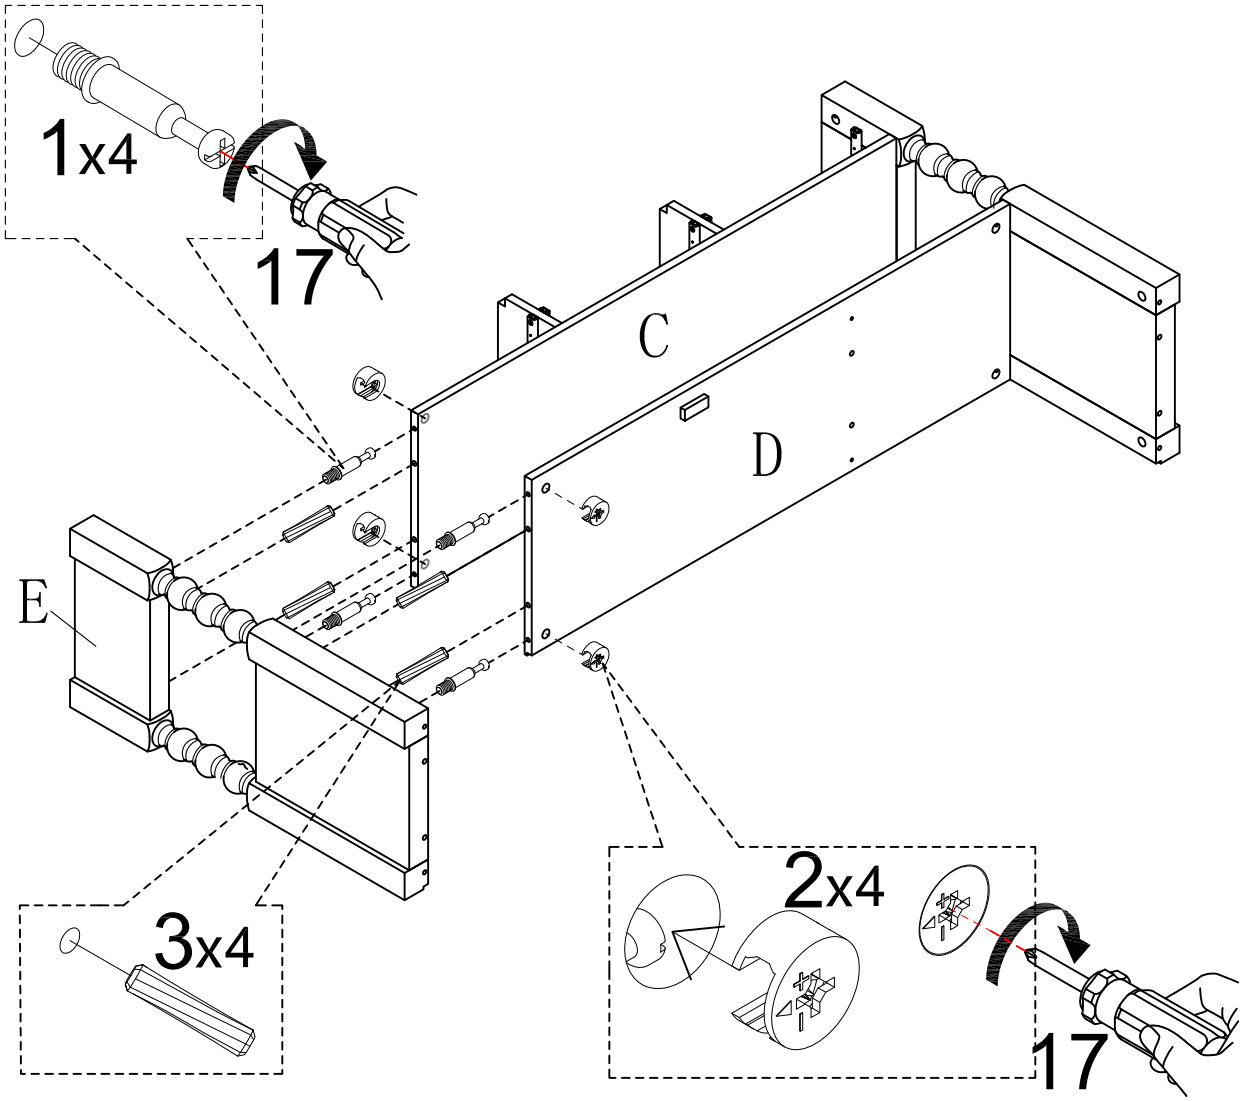

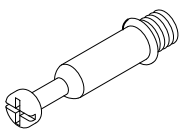1	x4
	

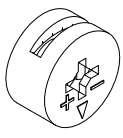
2	x4
	

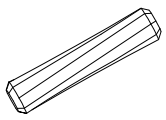3	x4
	ø8*30mm

17	x1
	

ASSEMBLY INSTRUCTIONS

STEP-5

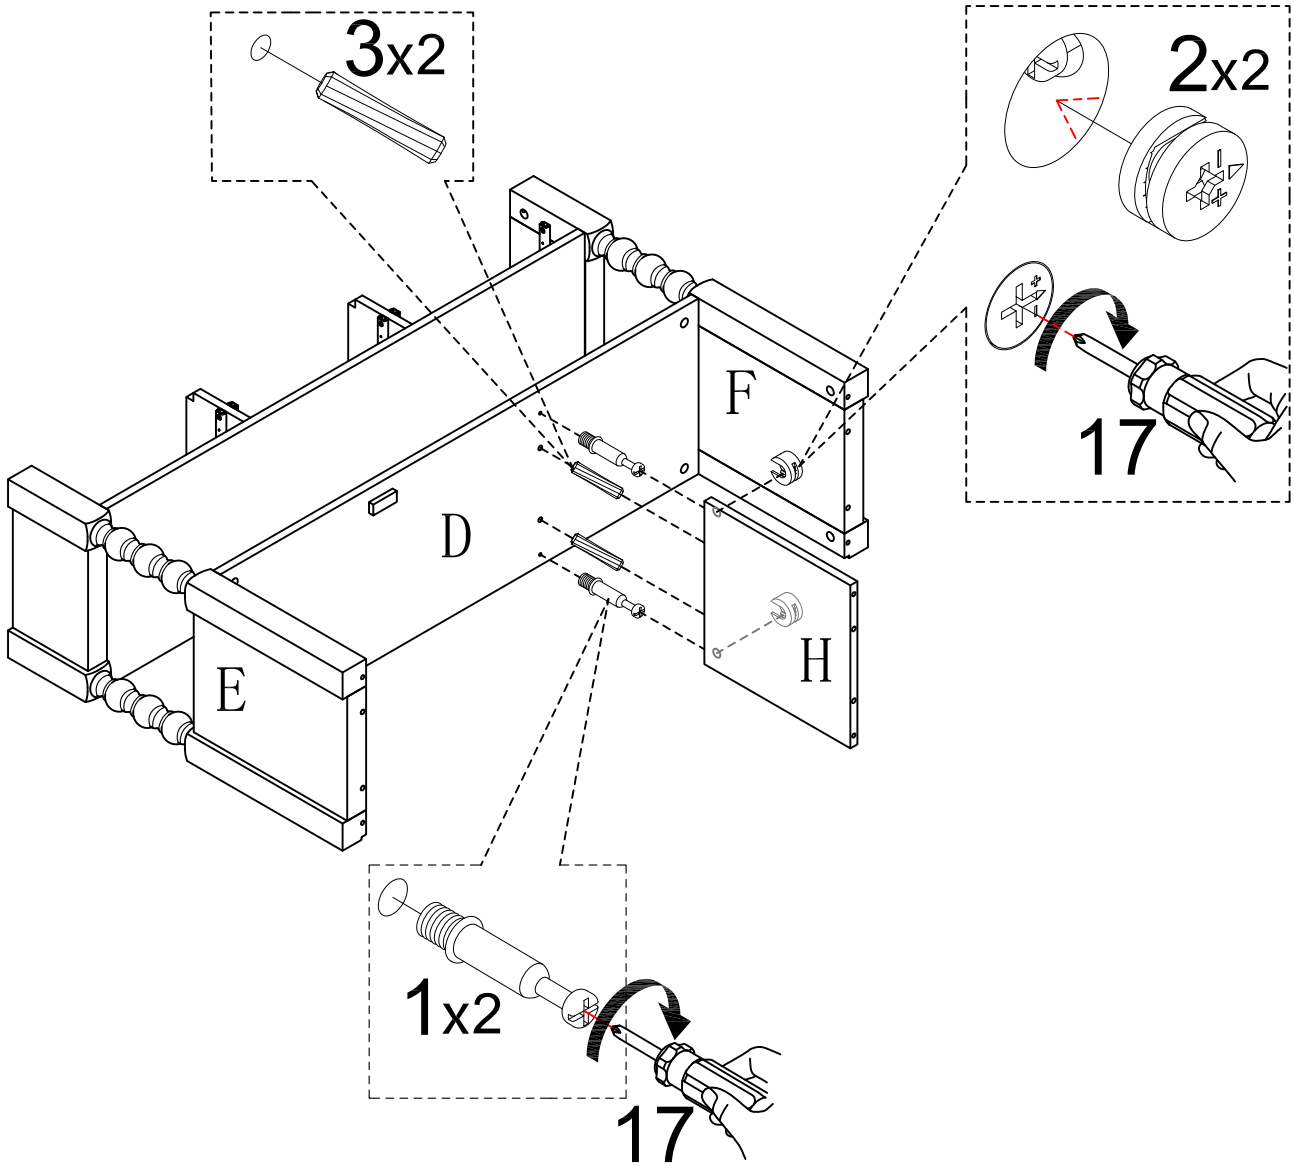

1	x2


2	x2

3	x2
	ø8*30mm

17	x1

ASSEMBLY INSTRUCTIONS

STEP-6

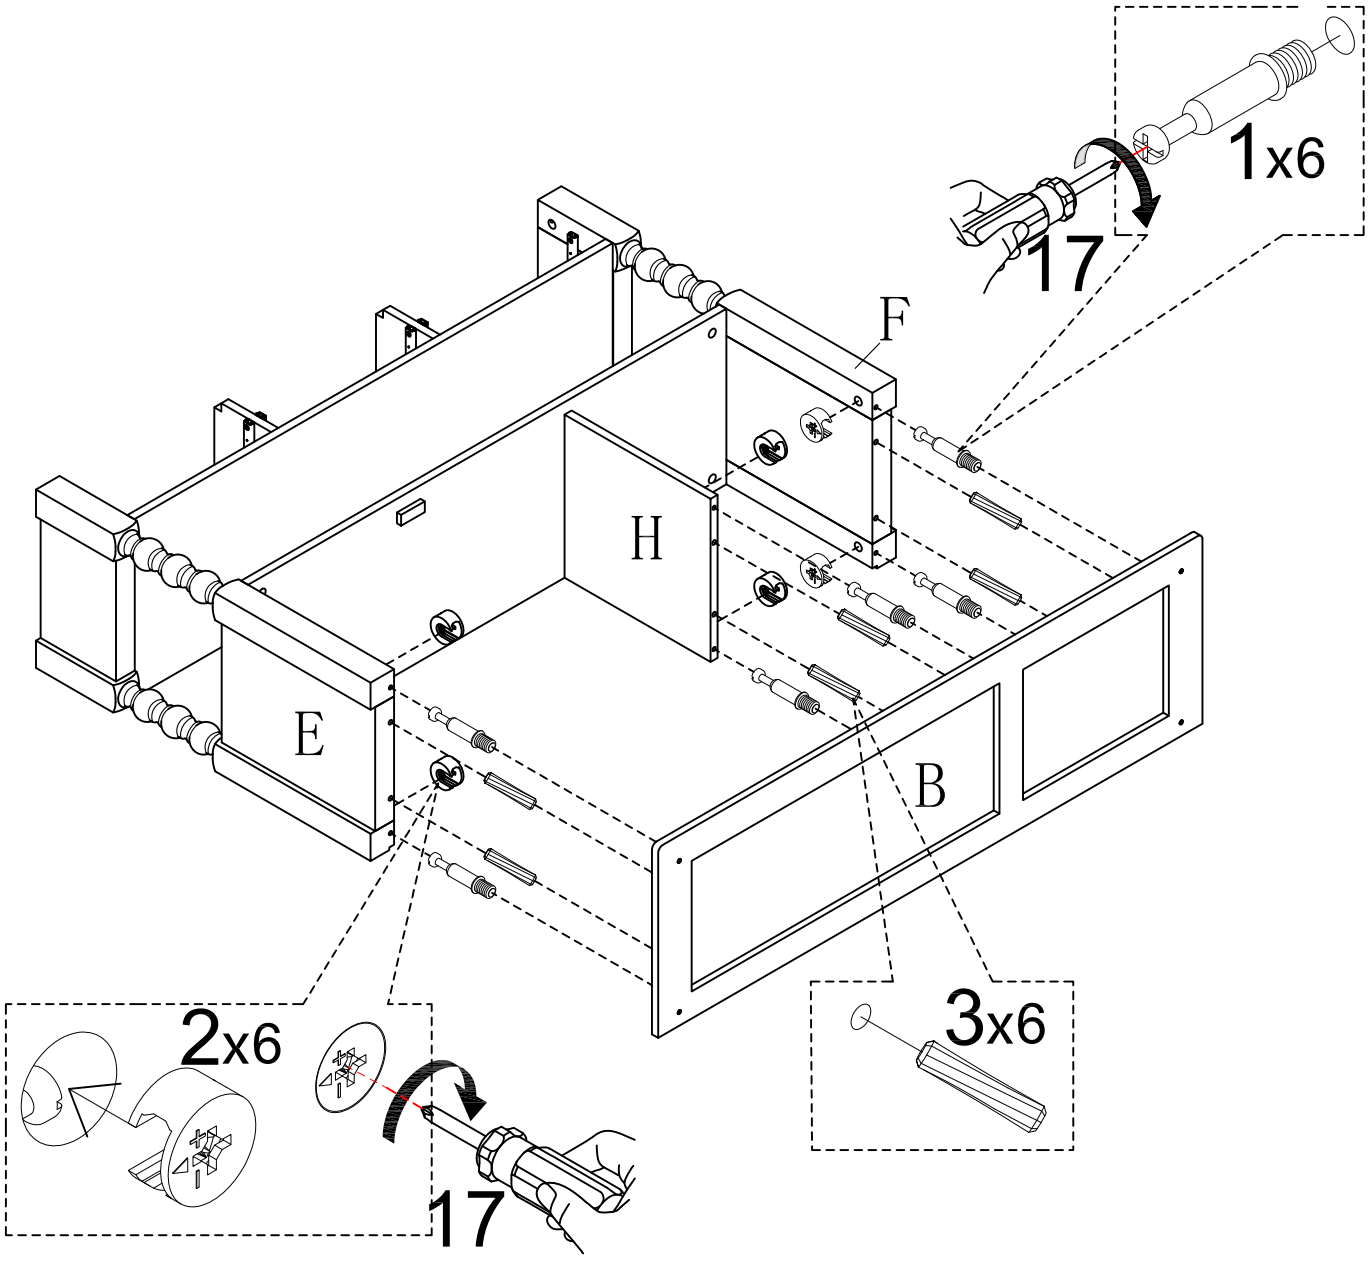

1	x6


2	x6

3	x6
	ϕ8*30mm

17	x1

ASSEMBLY INSTRUCTIONS

STEP-7

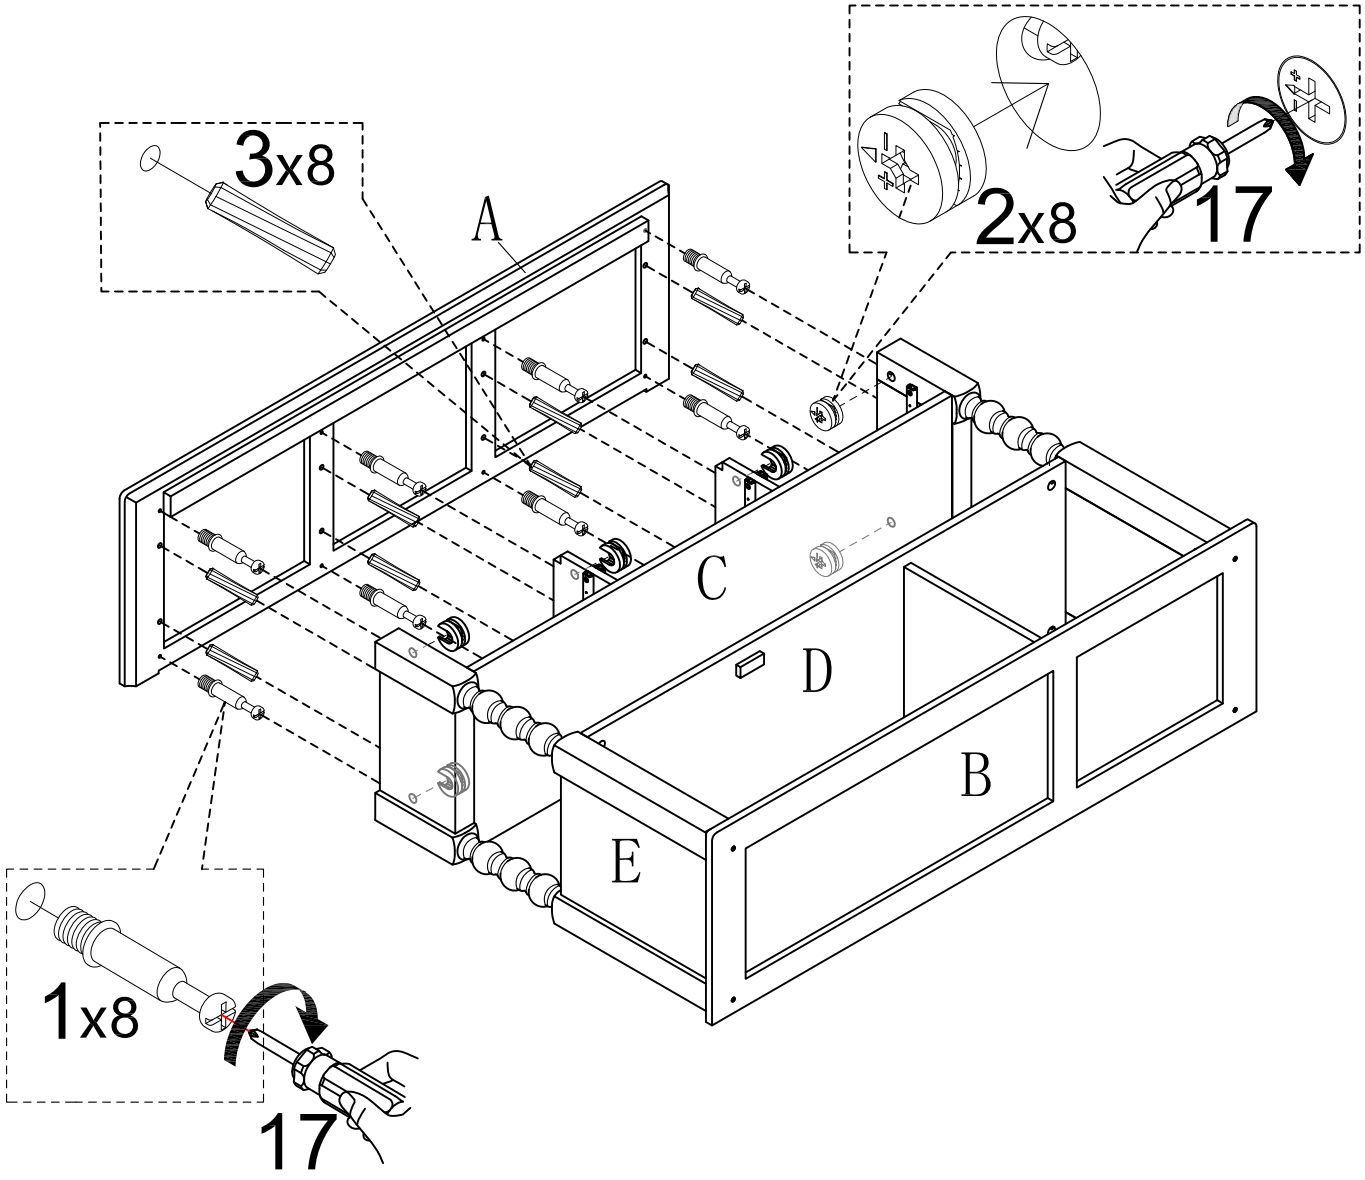

1	x8


2	x8

3	x8
	ø8*30mm

17	x1


ASSEMBLY INSTRUCTIONS

STEP-8

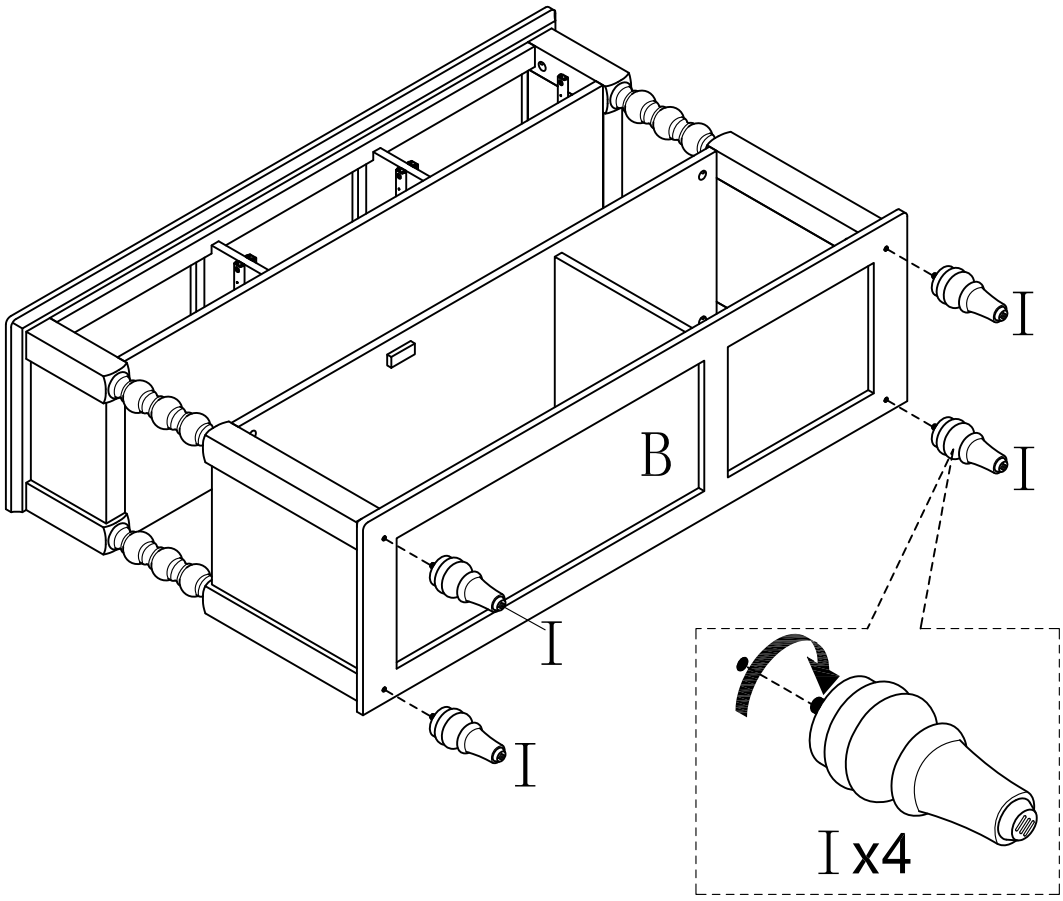

ASSEMBLY INSTRUCTIONS

STEP-9

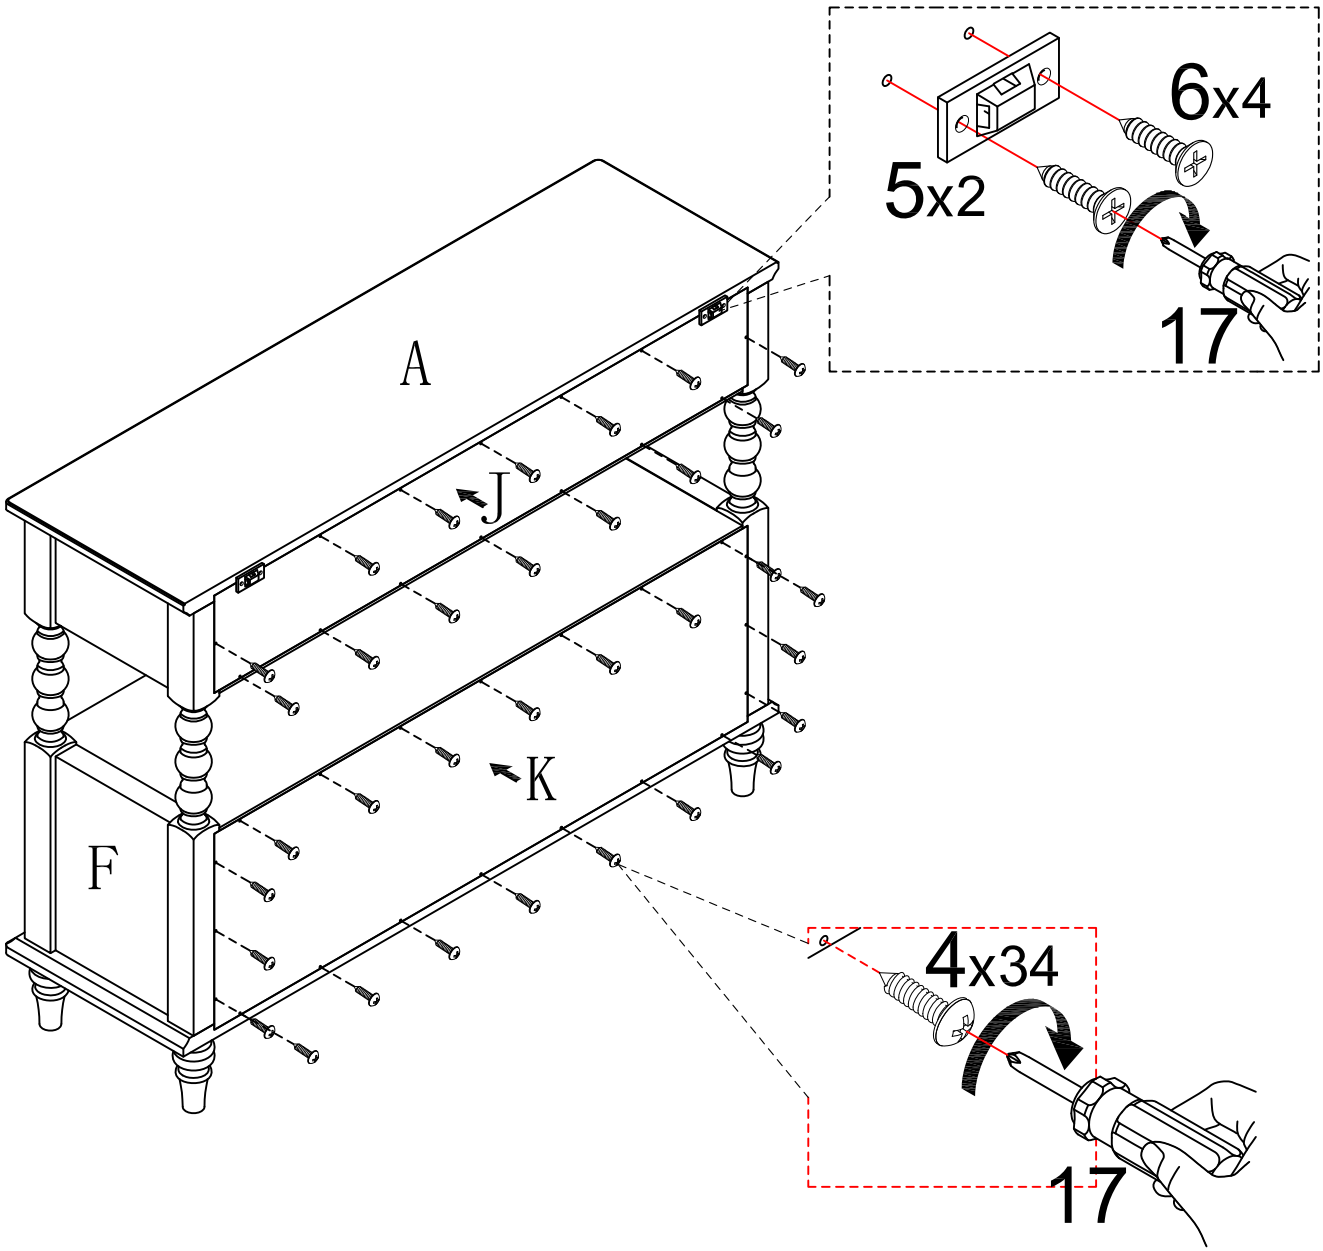

4	x34
ø3*14mm	


5	x2


6	x4
ø3*16mm	


17	x1

ASSEMBLY INSTRUCTIONS

STEP-10

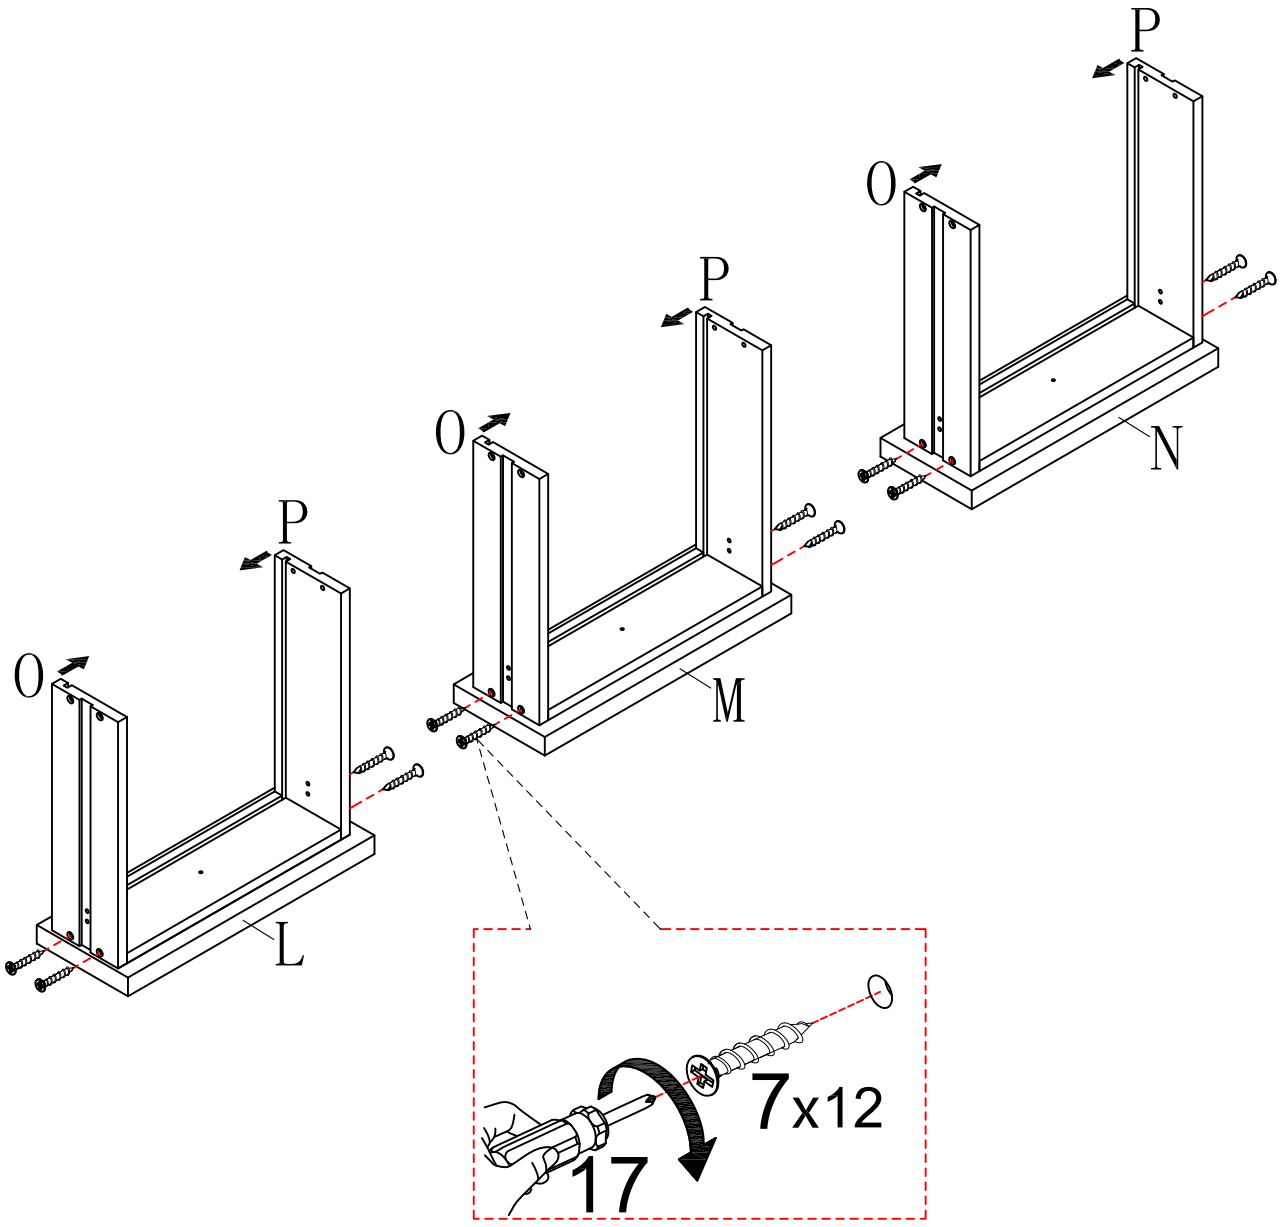


7	x12
	
ϕ4*25mm	

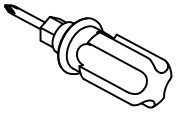17	x1
	


ASSEMBLY INSTRUCTIONS

STEP-11

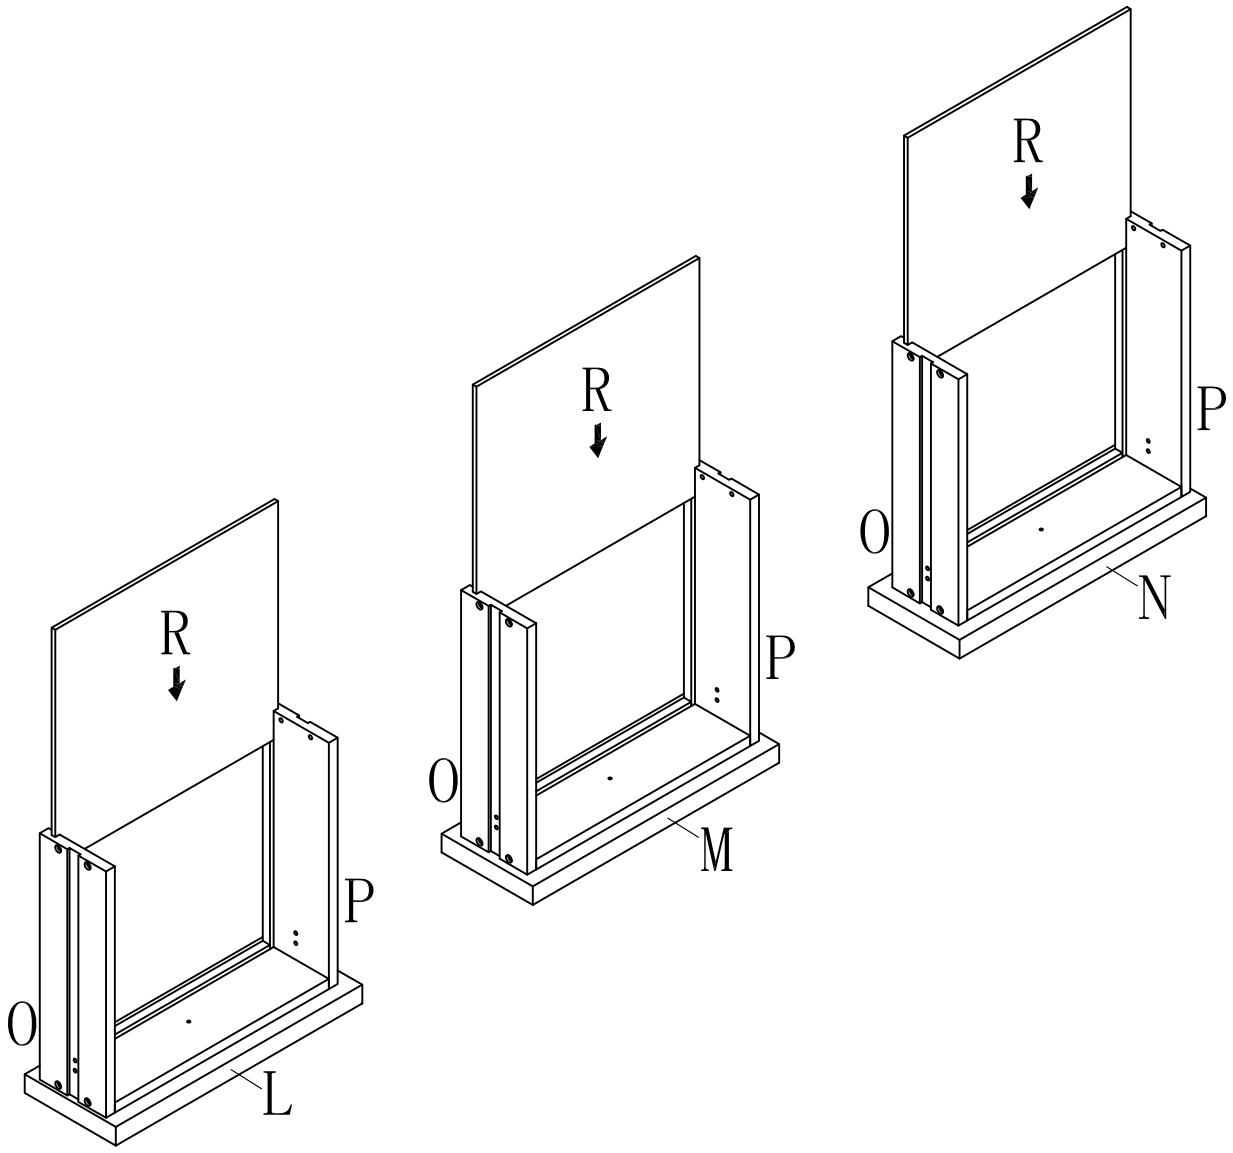

ASSEMBLY INSTRUCTIONS

STEP-12

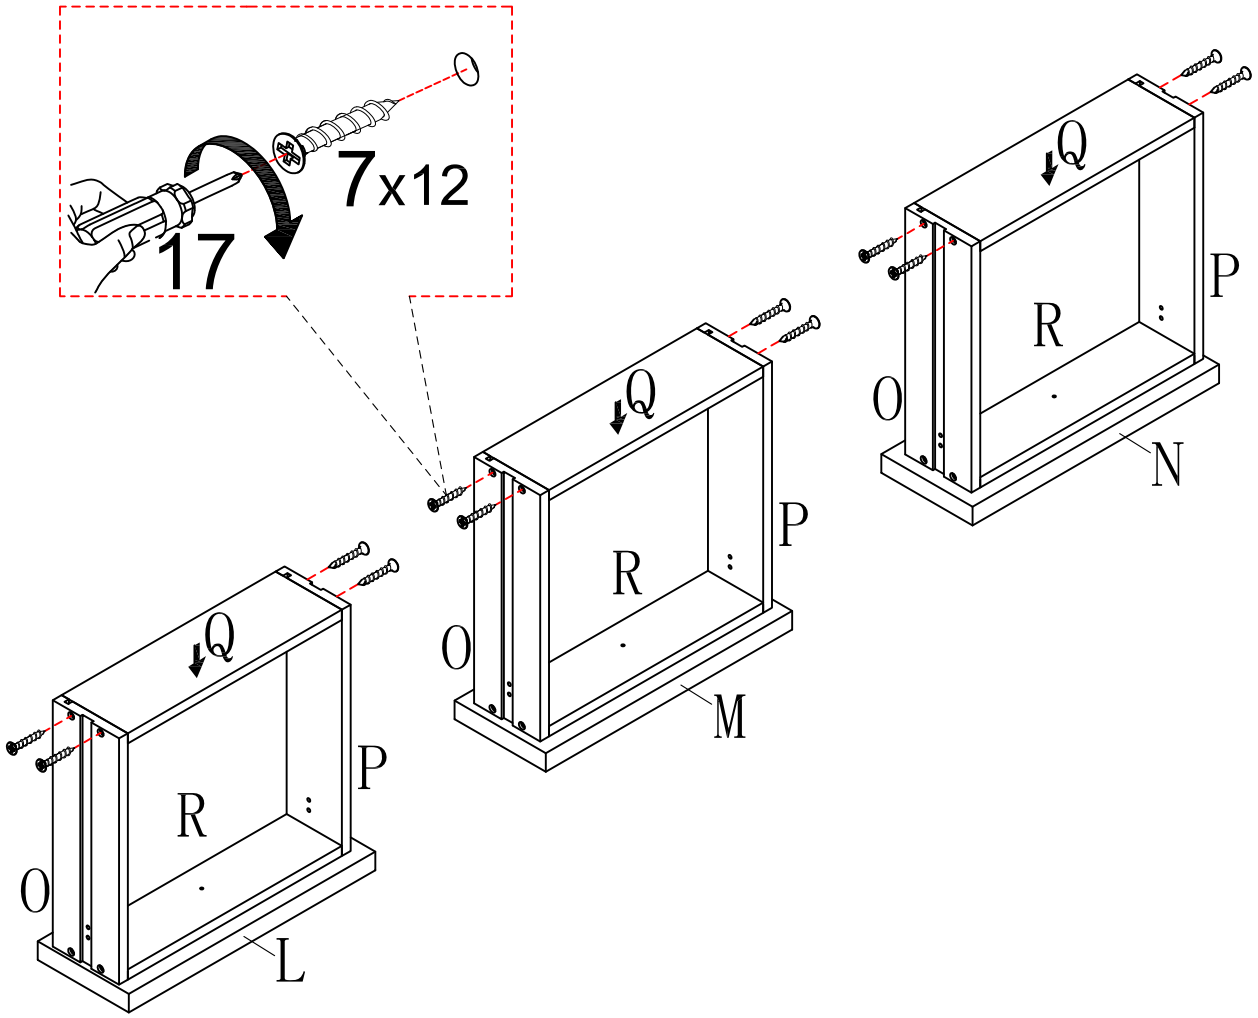


7	x12
ϕ4*25mm	

17	x1


ASSEMBLY INSTRUCTIONS

STEP-13

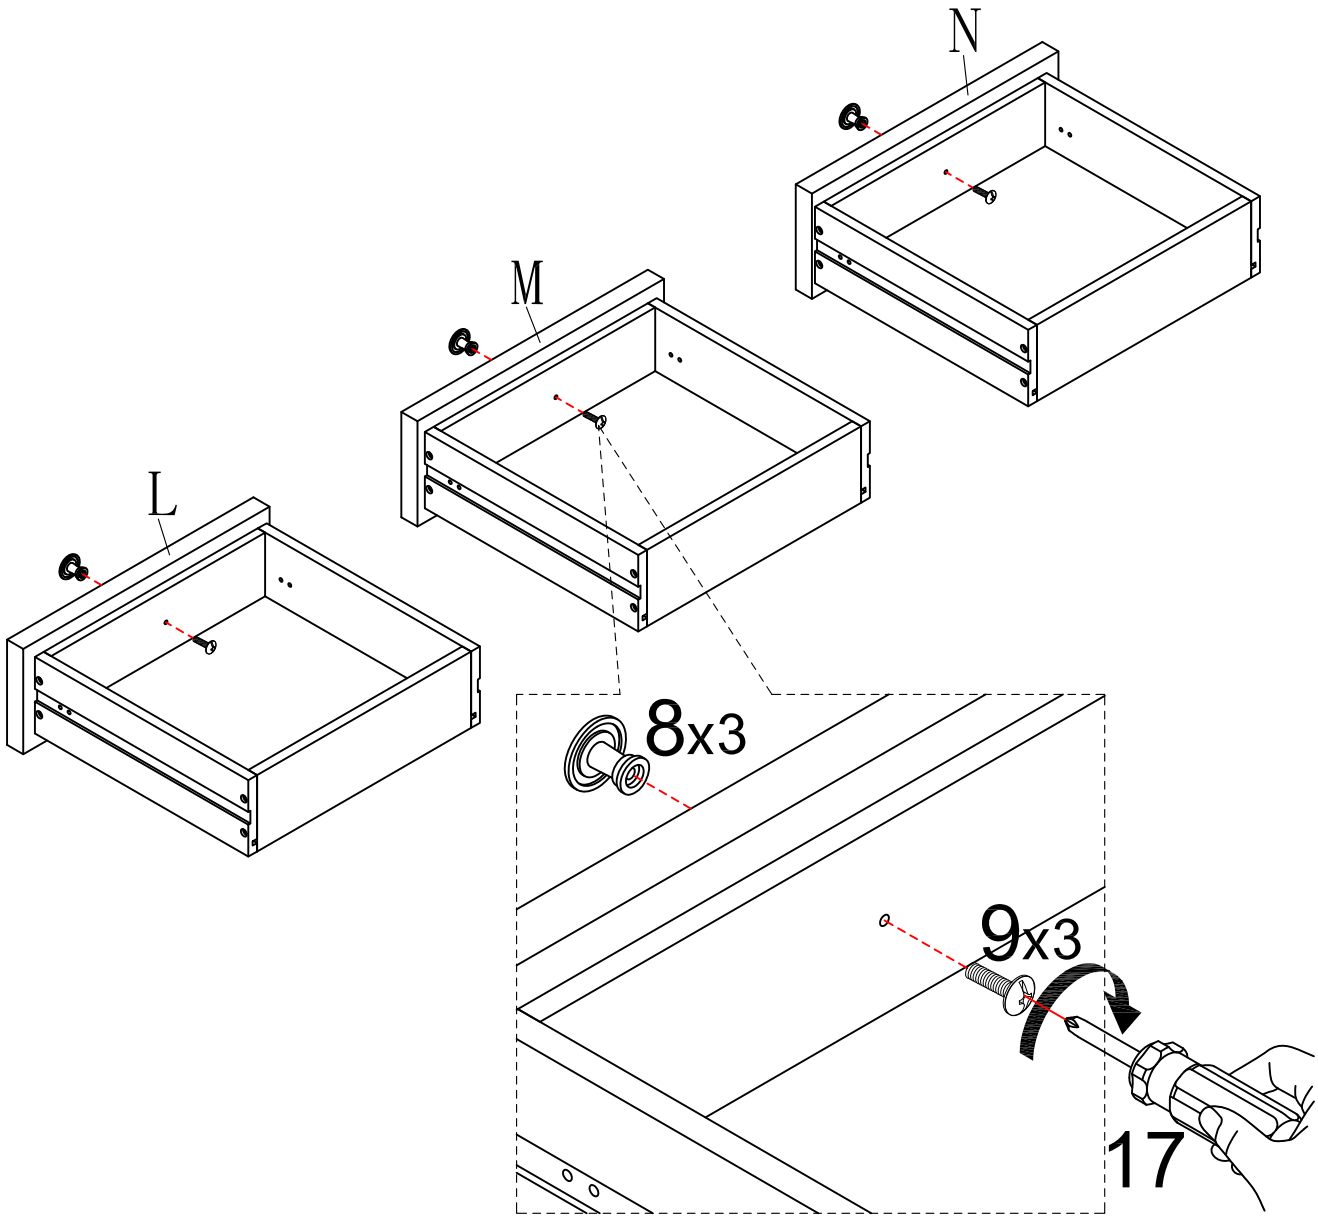


8	x3
	

9	x3
	
ϕ4*25mm	


17	x1
	

ASSEMBLY INSTRUCTIONS

STEP-14

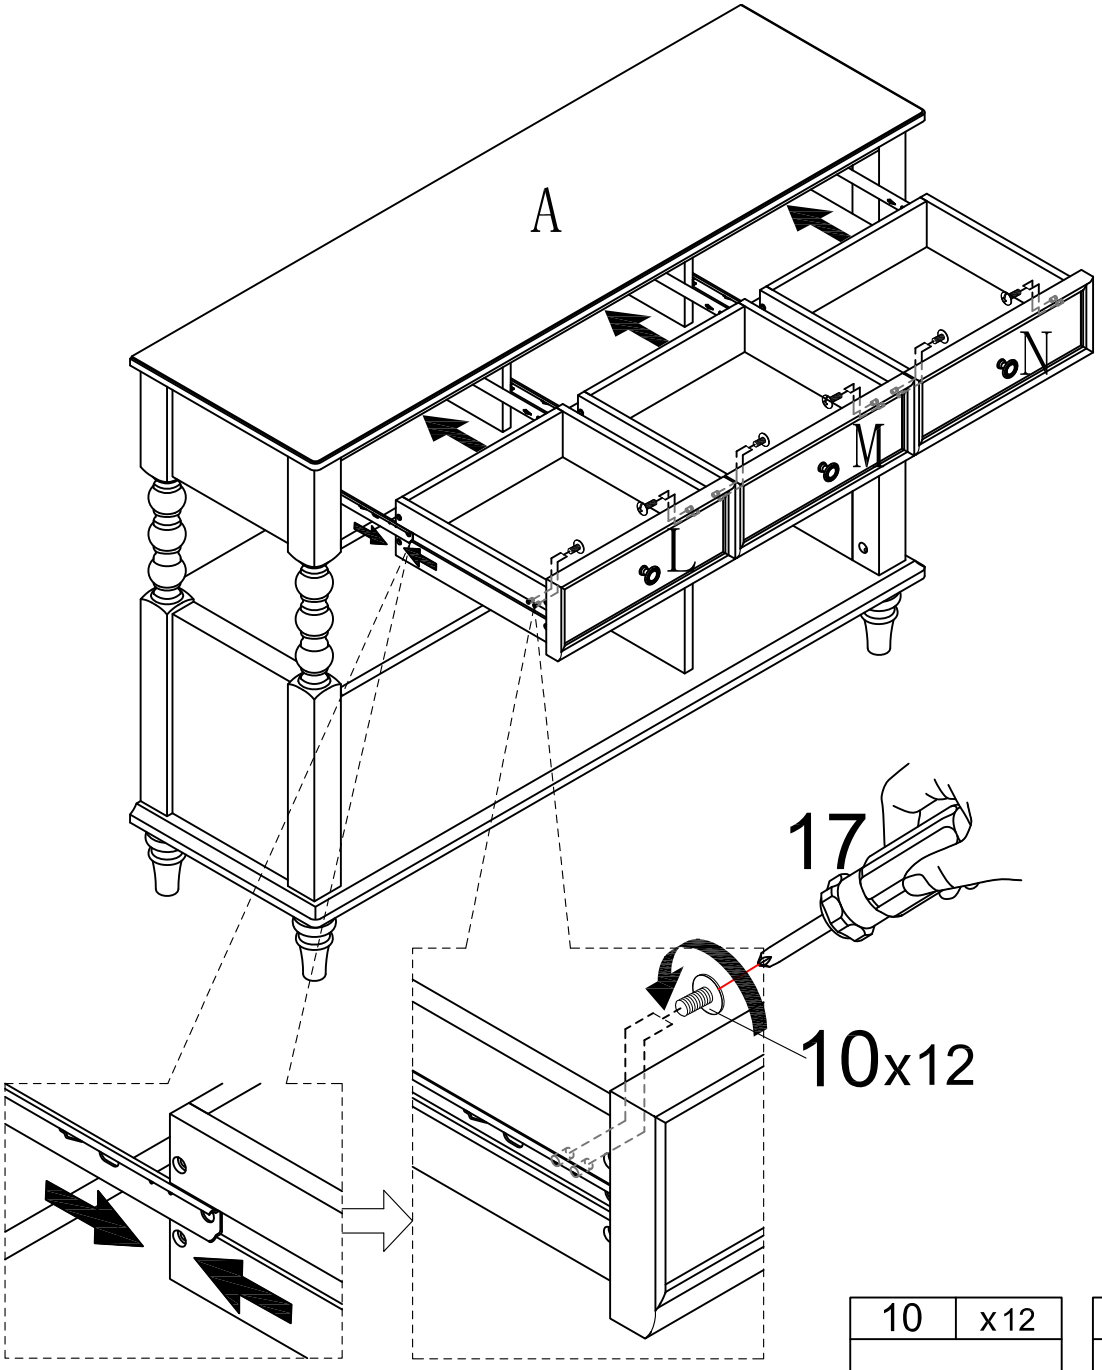


10	x12
	
ϕ4*13mm	

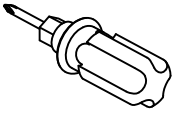17	x1
	

ASSEMBLY INSTRUCTIONS


STEP-15

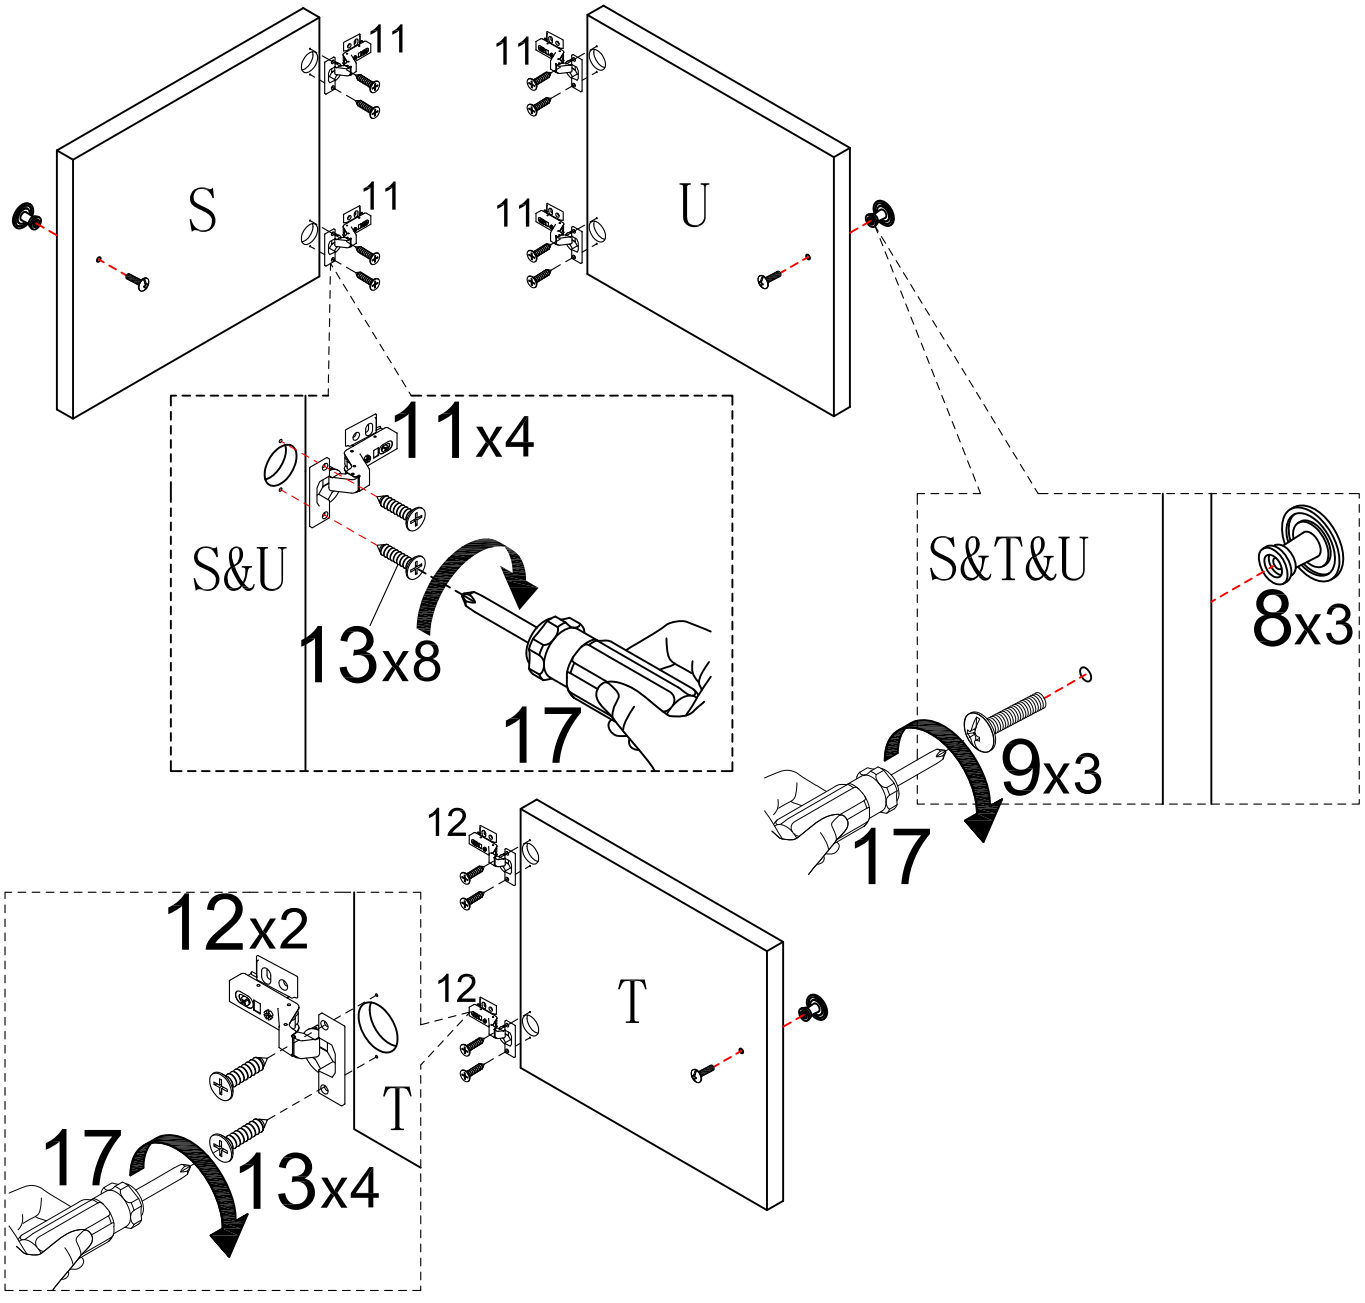

8	x3	9	x3	11	x4	12	x2	13	x12	17	x1
		ϕ4*25mm						ϕ3.5*14mm			

ASSEMBLY INSTRUCTIONS

STEP-16

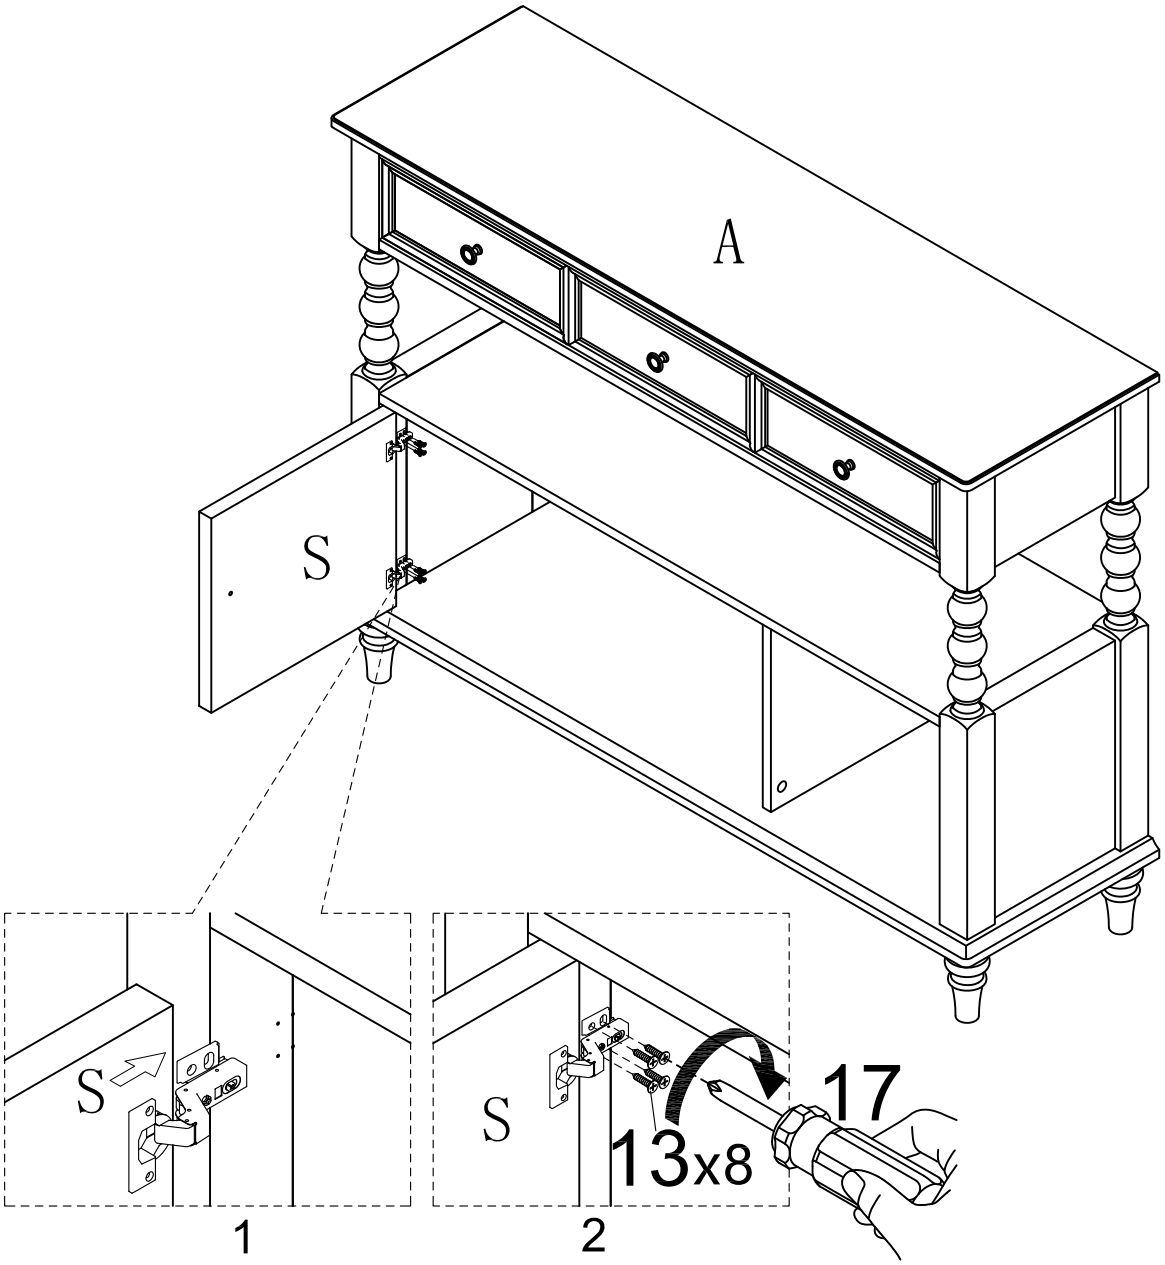


13	x8
ϕ3.5*14mm	

17	x1

ASSEMBLY INSTRUCTIONS


STEP-17

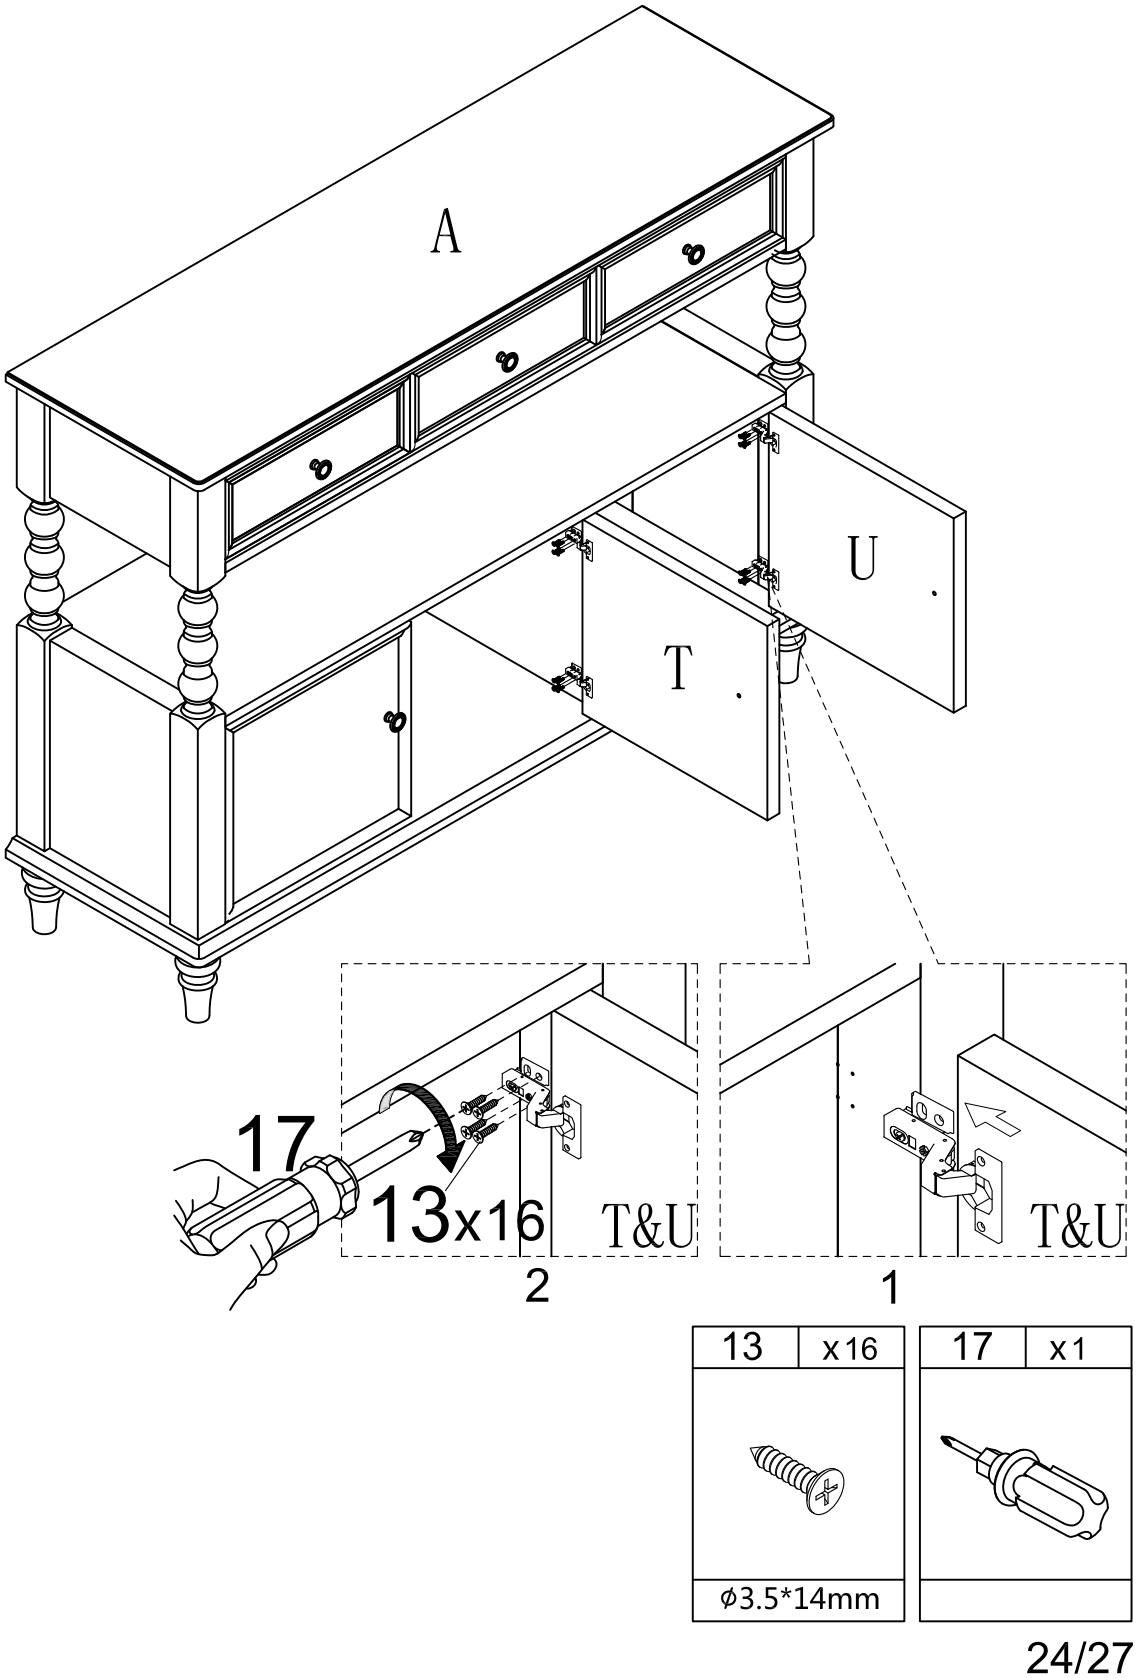



13	x16	17	x1
ϕ3.5*14mm			

ASSEMBLY INSTRUCTIONS

STEP-18

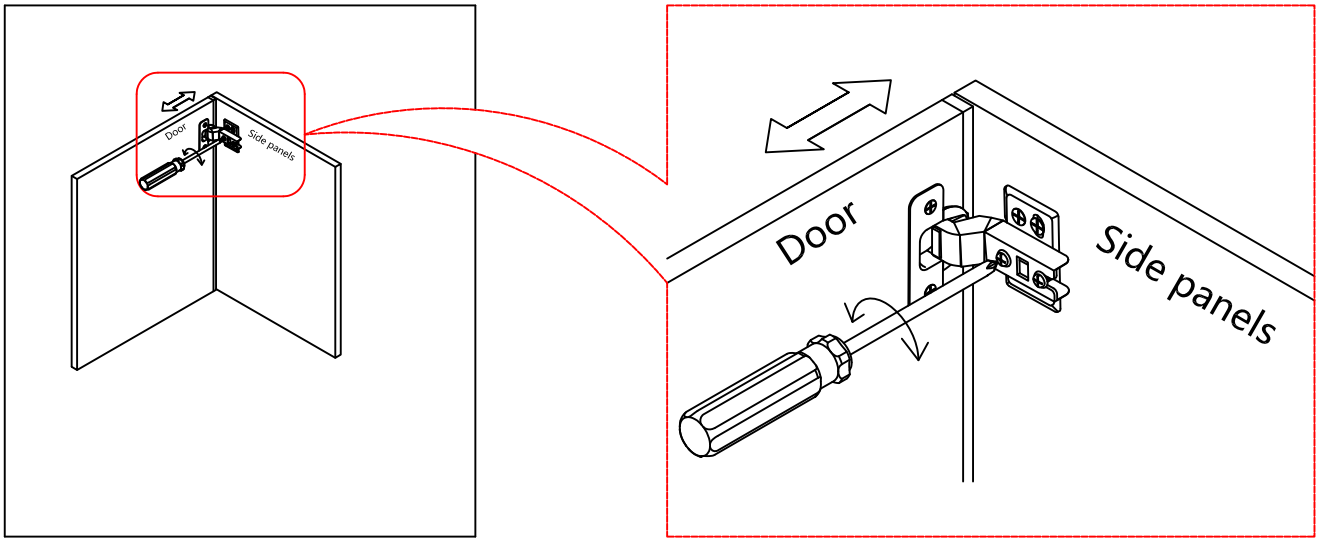


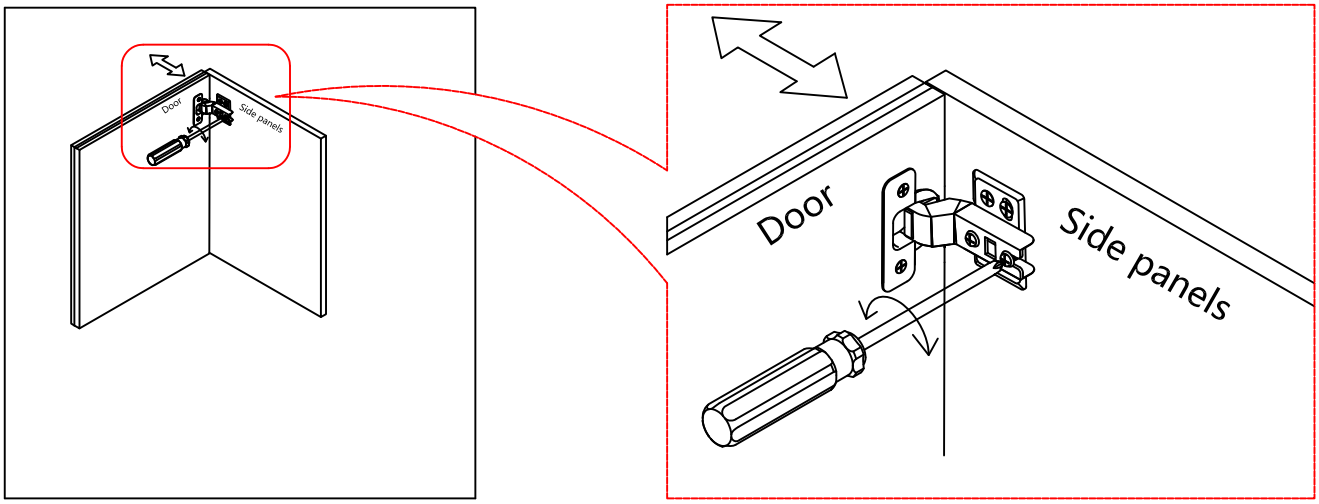


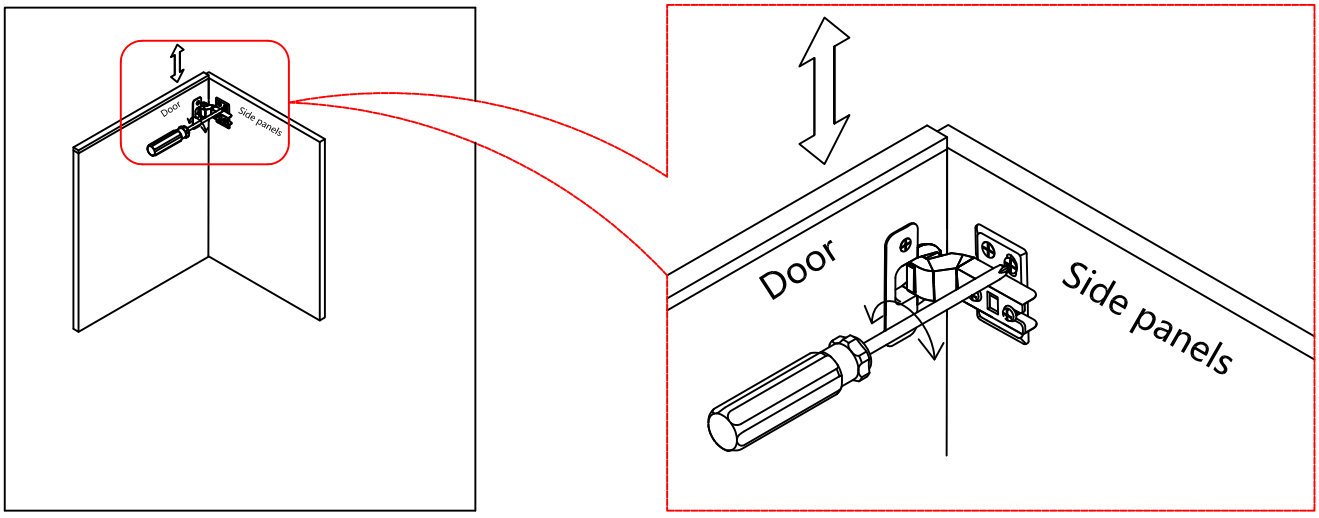


ASSEMBLY INSTRUCTIONS

STEP-19

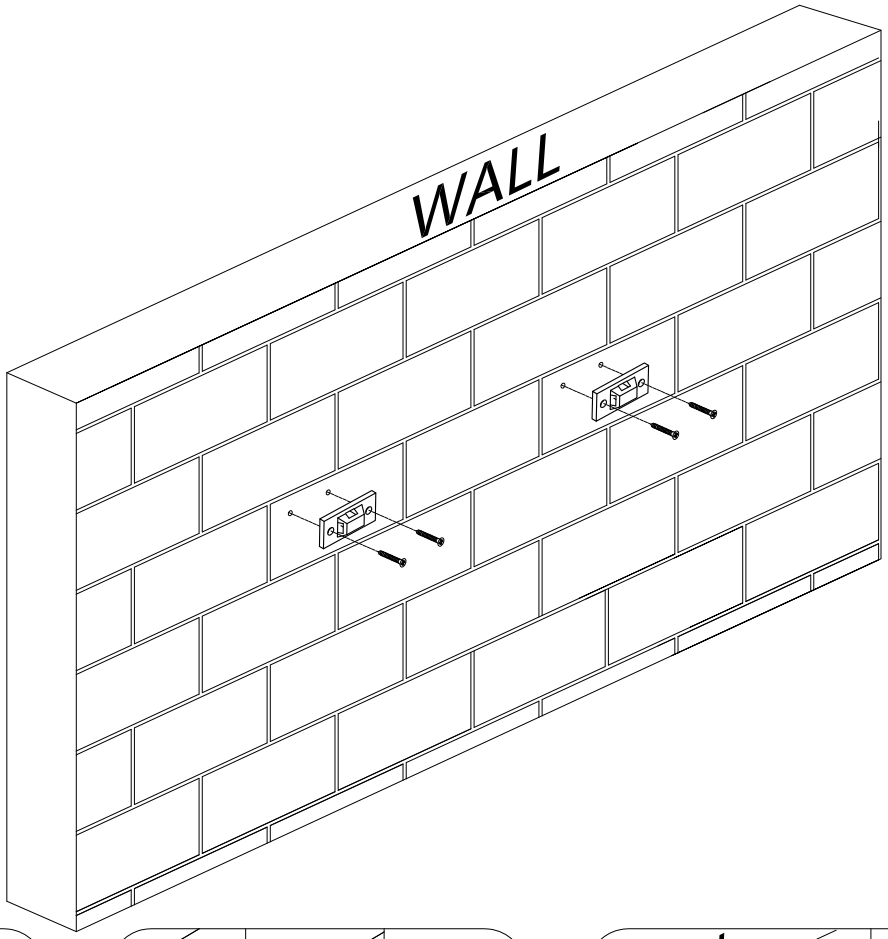


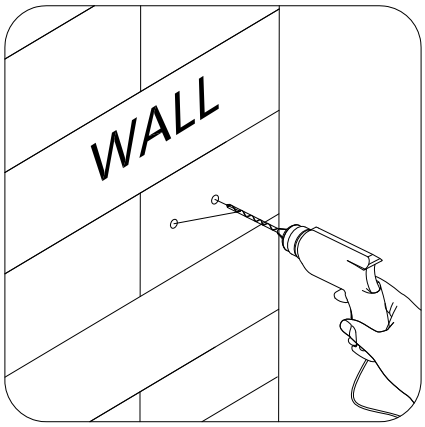


1.Drill a hole in the wall with an electric drill.

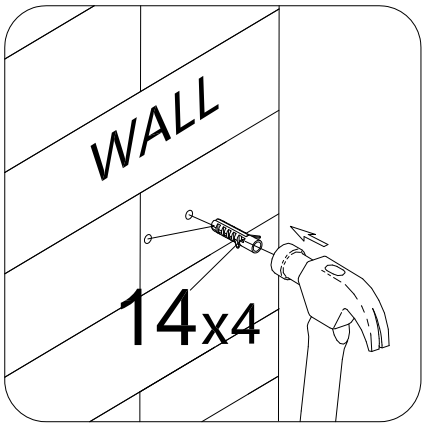


2.Tap the plastic wall anchor into the hole with a hammer.

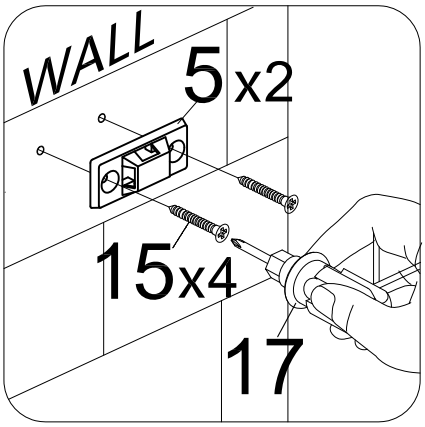


3.Secure the Anti-tip device ⑤ to the wall with screws ⑮.

5	x2
	

14	x4
	

15	x4
	ø3.5*35mm

17	x1
	

ASSEMBLY INSTRUCTIONS

STEP-20

WARNING

Children have died from furniture tipover.
To reduce the risk of furniture tipover:
-ALWAYS install Anti-tip device provided.
-For use with televisions weighing 35 lb or less.Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
-NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
-NEVER open more than one drawer at a time.
-Place heaviest items in the lowest drawers.



16	x2