

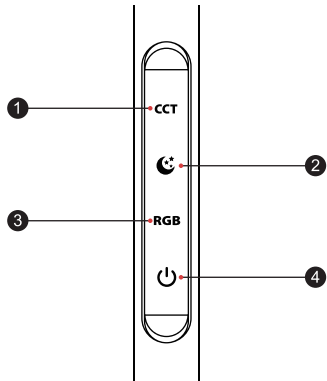


RGB LED FLOOR LAMP

TOUCH CONTROL

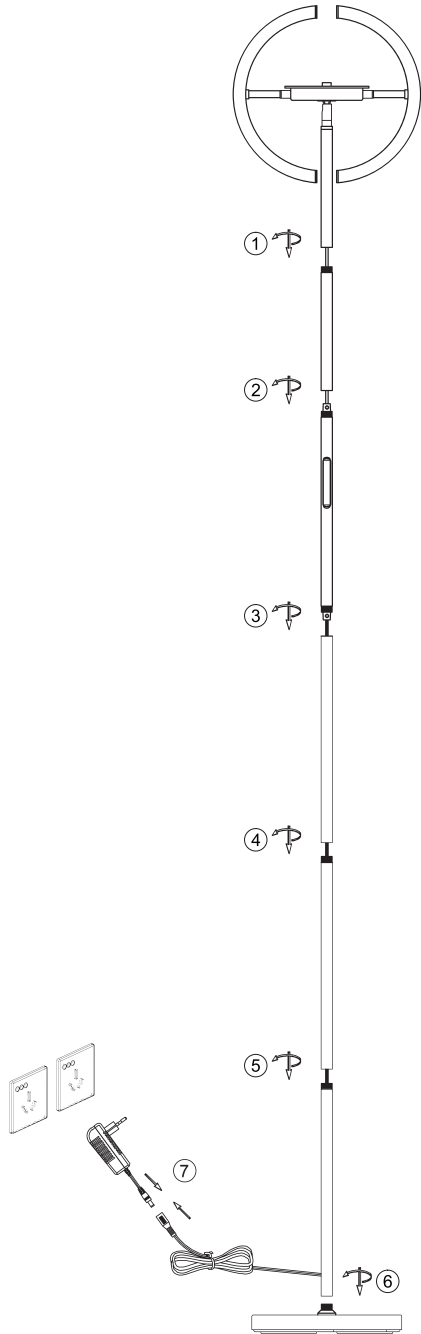

REMOTE CONTROL

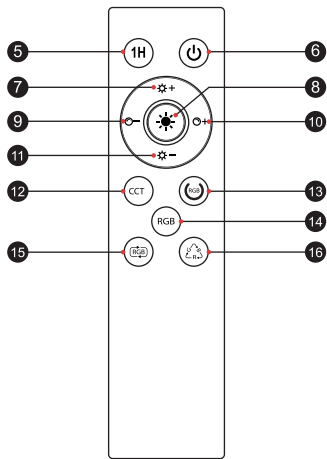

English Ver.

TOUCH CONTROL

1	CCT	Short Press: Warm-warm white-cool white-daylight change in sequence Long Press: Brightness stepless dimmable
2		Night light mode
3	RGB	RGB ON: RGB Chasing Mode/Flash/ Fade/ Rotate/Jump
4		All ON/OFF

REMOTE CONTROL

5	1H	1 hour timing function
6		ON/OFF and Remote control pairing
7	⬆+	Brightness +
8	☀	Max brightness
9	⬇-	Color temperature -
10	⬆+	Color temperature +
11	⬇-	Brightness -
12	CCT	3000K-6000K change in sequence
13		RGB ON/OFF
14		Rgb Color Change Mode Red/Green/Blue/Purple/Orange/Light Blue/White
15		Chasing Mode
16		Four Modes: Flash/ Fade/ Rotate/Jump

• NOTICE:

- Batteries are not included, please install 2x 1.5V AAA batteries before use.
- The remote control needs to be paired before use.
- The remote distance is within 33ft (10 m).
- It is magnetic so that you can stick it on the lamp pole and other metal surfaces.

• CLEAR CODE / MATCH CODE

If the remote control does not work, or if the lights turn on/off automatically, it is possible that there is interference from your home or your neighbor's remote control.

• WE SUGGEST YOU USE THE FOLLOWING METHODS:

Step 1: Clear the code:

Turn on the power switch and reconnect the power cord after unplugging it 5 times in a row, the floor lamp will flash quickly which means the code has been cleared successfully.

Step 2: Match the code:

Power off the product and keep pressing the on/off button of the remote. And plug the power into the socket when pressing, Until the light flashes quicklv to indicate successful re-pairing.

French Ver.

COMMANDE TACTILE

1	CCT	Appui court : Changement séquentiel chaud-blanc chaud-blanc froid-lumière du jour Appui long : Luminosité réglable en continu.
2		Mode éclairage nocturne
3	RGB	RGB ON : Mode de poursuite RVB/Flash/ Fade/ Rotate/Jump
4		Tous ON/OFF

TÉLÉCOMMANDE

5	1H	Fonction de minutage de 1 heure
6		Appairage ON/OFF et télécommande
7	⬆+	Luminosité +
8	☀	Luminosité maximale
9	⬇-	Température de couleur -
10	⬆+	Température de couleur +
11	⬇-	Luminosité -
12	CCT	3000K-6000K changement dans l'ordre
13		RVB ON/OFF
14		Mode de changement de couleur RGB Rouge/vert/bleu/violet/orange/bleu clair/blanc
15		Mode poursuite
16		Quatre modes : Flash/ Fondu/ Rotation/Saut

• AVIS :

- les piles ne sont pas incluses, veuillez installer 2 piles AAA de 1,5 V avant l'utilisation.
- la télécommande doit être appariée avant d'être utilisée.
- la distance de la télécommande est de 10 m.
- Il est magnétique, vous pouvez donc le coller sur le poteau de la lampe et sur d'autres surfaces métalliques.

• EFFACEMENT DU CODE / APPARIEMENT DU CODE

Si la télécommande ne fonctionne pas, ou si les lumières s'allument ou s'éteignent automatiquement, il est possible qu'il y ait des interférences avec la télécommande de votre maison ou de votre voisin.

• NOUS VOUS SUGGÉRONS D'UTILISER LES MÉTHODES SUIVANTES :

Étape 1 : Effacer le code:

Allumez l'interrupteur et rebranchez le cordon d'alimentation après l'avoir débranché 5 fois de suite.

Le lampadaire clignote rapidement, ce qui signifie que le code a été effacé avec succès.

Étape 2 : Faire correspondre le code:

Eteignez le produit et continuez à appuyer sur le bouton marche/arrêt de la télécommande. Branchez l'appareil dans la prise de courant lorsque vous appuyez sur le bouton, jusqu'à ce que le voyant lumineux clignote pour indiquer que l'appairage a été effectué avec succès.