
INSTALLATION NOTE MANUAL

Model No. TF1404 TF1404OAK

Series No. SH-2504A

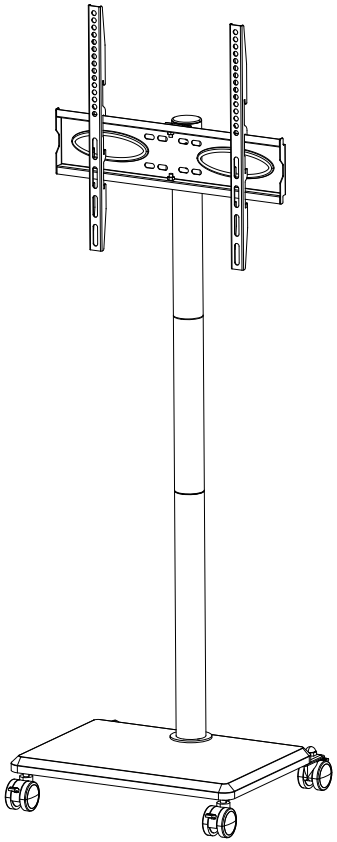

CUSTOMER SERVICE SUPPORTS

CONTINENTS	CONTACT DETAILS	MAILBOX
North America US CA MX	1 626 400 2997 (CST 8AM - 5PM Mon.-Fri.)	cs@rfiver.com
Europe UK DE FR IT ES		eucs@rfiver.com
Asia JP CN IN		jpcs@rfiver.com

TV Weight Limit: DO NOT EXCEED

Max

88lbs/40kgs

THANK YOU FOR PUCHASING

SERVICE CARD

We strive to make sure each piece of furniture you receive is perfect and that all parts and hardware in the parts list are included in your package.
However, if there are any missing or damaged parts, please do not return your product to the place of purchase. Instead, please contact us. We will do our best to solve your problem and send the replacement parts to you as soon as possible from our local customer service center.

- **Please have the following information ready when you contact us. Your detailed information will help us to bring you much more effective service. Thank you for understanding.**

1. **Order ID.** -Found in your order details of the online shopping platform you used when purchasing
2. **Model No.** - Found in the upper right corner of the manual cover, or use the SKU no. in the order details
3. **Series No.** - Found in the upper right corner of the manual cover
4. **Place of Purchase/Shipping Platform**:Amazon, Walmart, Ebay, etc.
5. **Statement of the Problem**:Please advise us specifically of the problem you are encountering so that we can offer correct solutions.

NOTICE



Please read this assembly manual carefully and make sure you have all the parts in the list before you begin to install.
Meanwhile, please keep this assembly manual for future reference.



Please move the furniture gently with **2** persons.



Please protect the furniture by placing all parts on a soft surface during assembly.



Please don't place very warm/cold objects on top of any surface, clean immediately with microfiber cleaning cloths/towels if any liquids are left on the surface.
Never use multi-surface furniture polish spray or cleaner.
Do not touch the surface with a hard/sharp object that may cause scrathes or broken.




Adult supervision required.
Keep little parts of furniture far away from the children.

Do not allow children to climb onto the furniture.
Improper use or incorrect assembly may cause death or serious injury.
Use extra safety straps to ensure the best tip-over protection.


Do not use this product for any purpose or in any configuration not explicitly specified in this instruction.
We hereby disclaim any liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.

PARTS LIST


1 x1

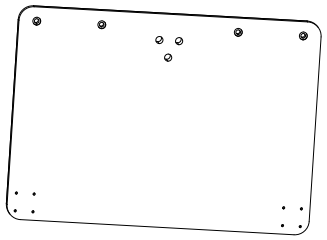


2 x1

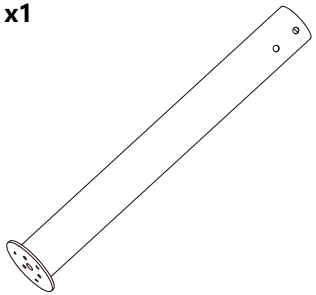


3 x1

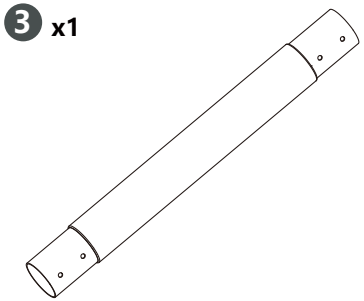


4 x1

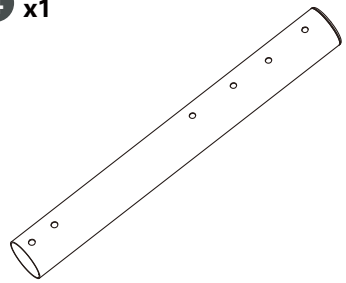


5 x1

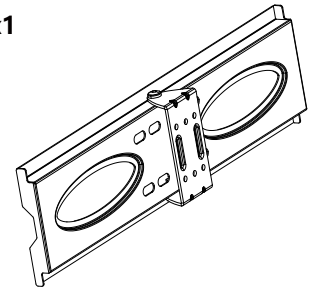


6 x2

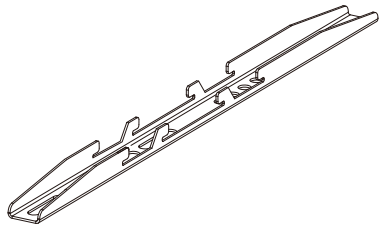


7 x1

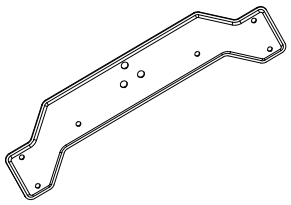

8 x1

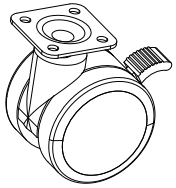

9 x1

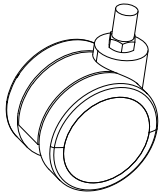

PARTS LIST

A1 x4



A2 x8



B1 x2



(#13)

B2 x2




C x2



(#14)


D x3



E1 x4



E2 x2

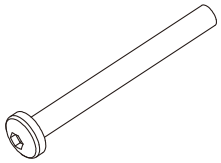


F1 x1




(4mm)

F2 x1



(#13)

G x1



(#14)

H x4




(M5)

I x4




(M4)


J x2

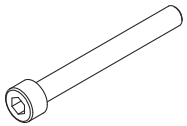


L1 x2



L2 x2



L3 x2



Cable management ties

S




Screws for TV



Tools Requried (Not included)


1

7 x1 | 9 x2 | B2 x2 | B1 x2 | F2 x1 | C x2 | G x1

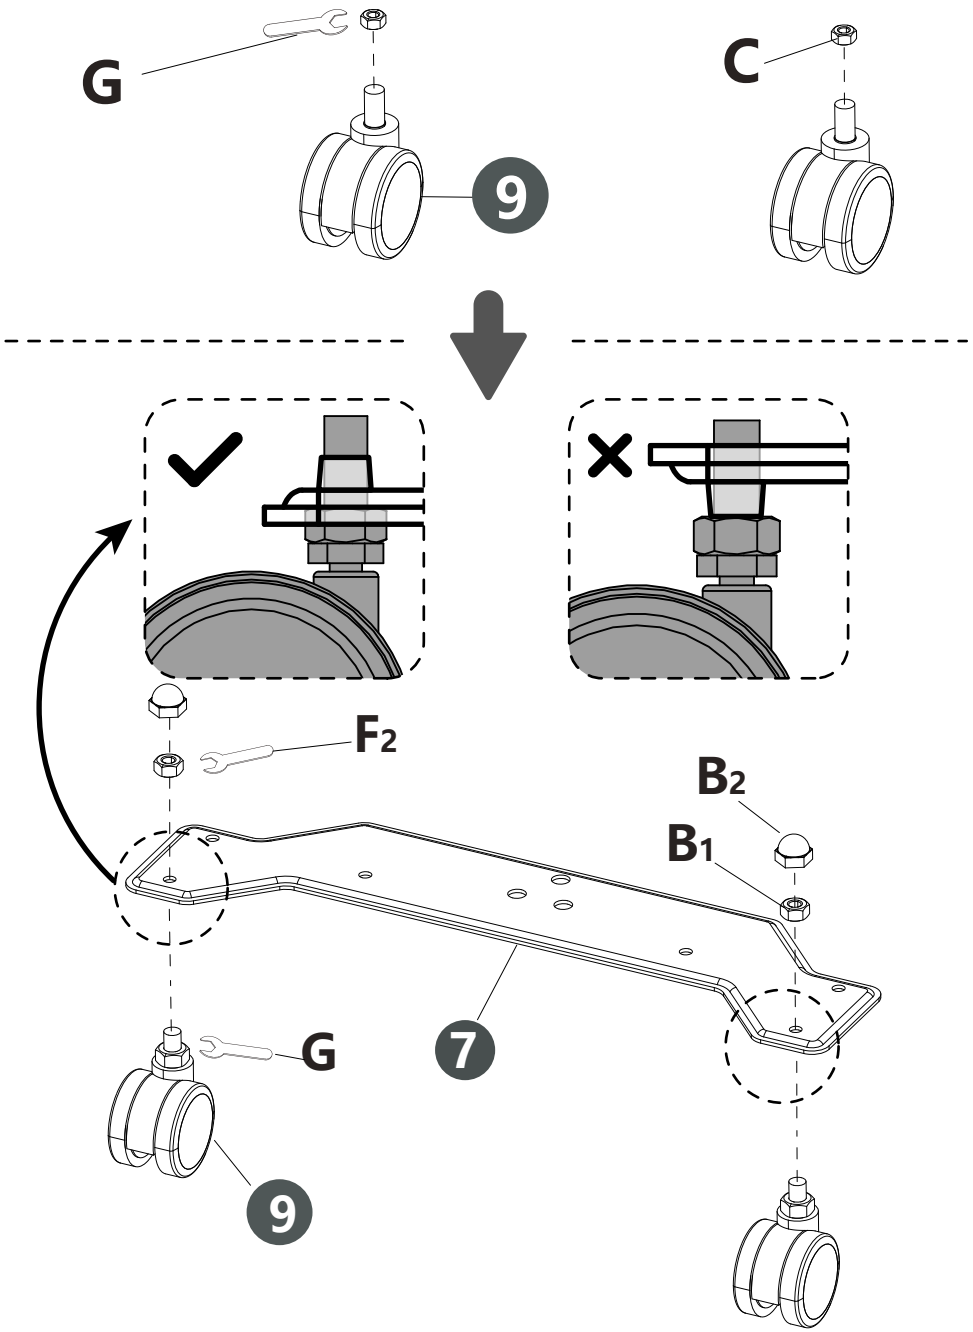

2

1 x1 | 8 x2 | A2 x8 | A1 x4

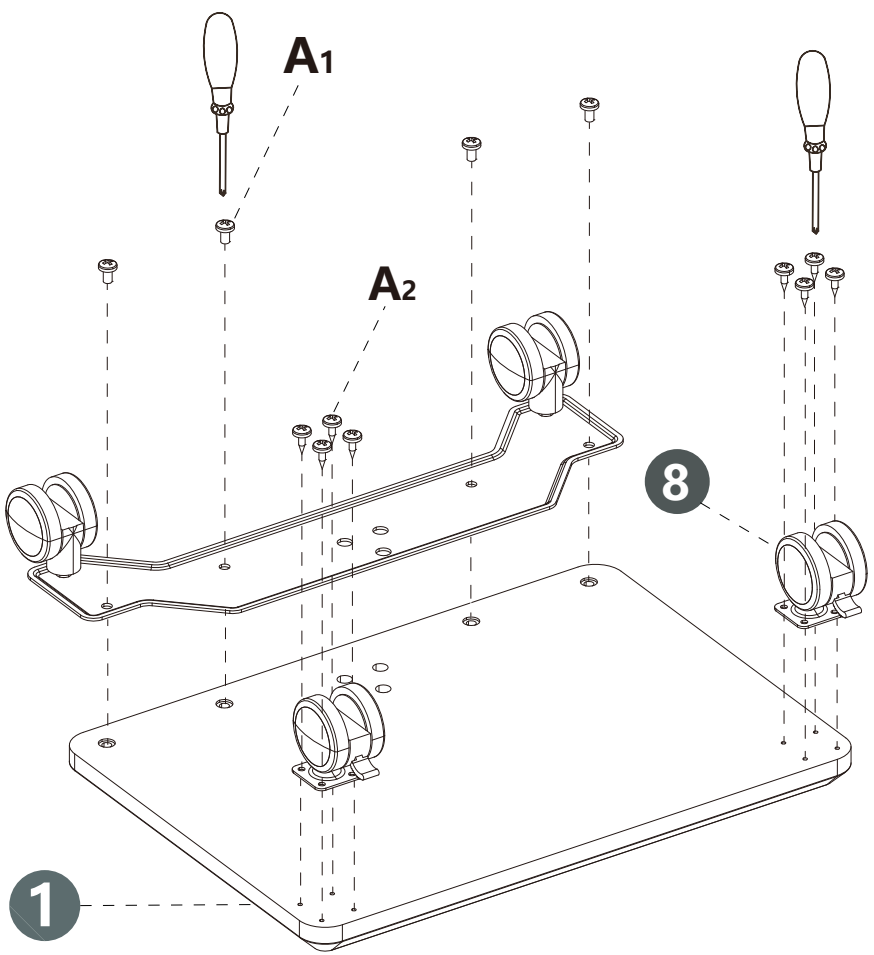


3

2 x1

D x3


F1 x1

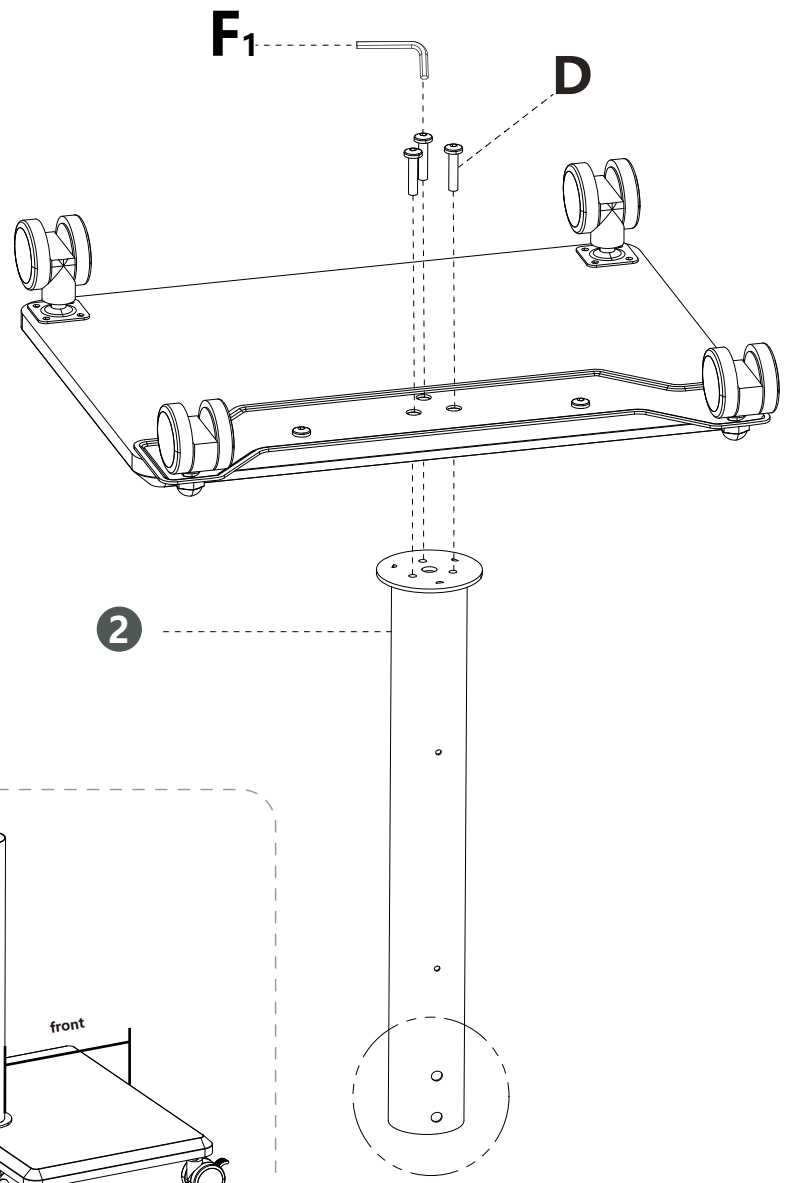

4

3 x1


4 x1

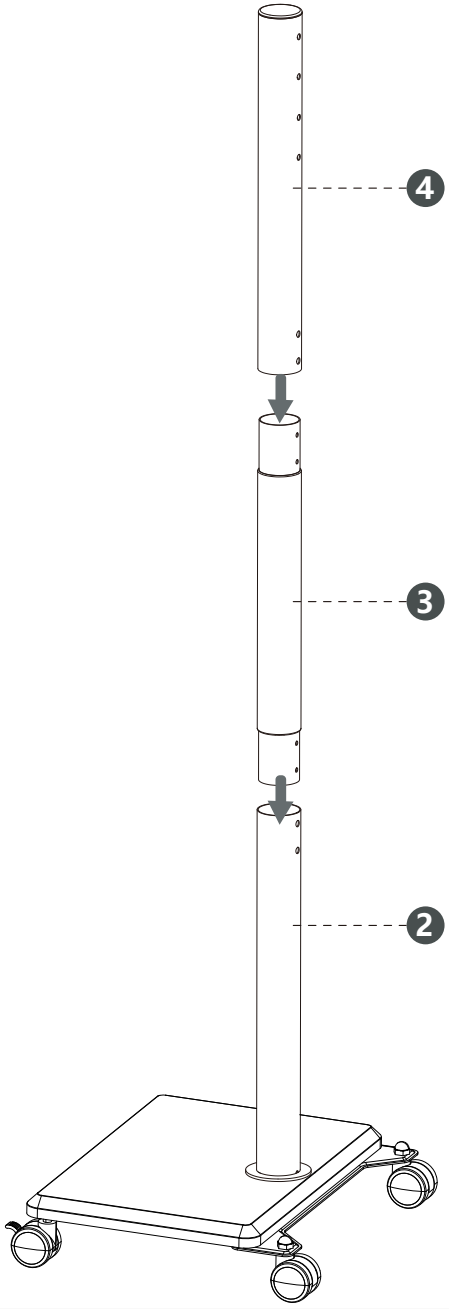

5

E_1 x4

F_1 x1

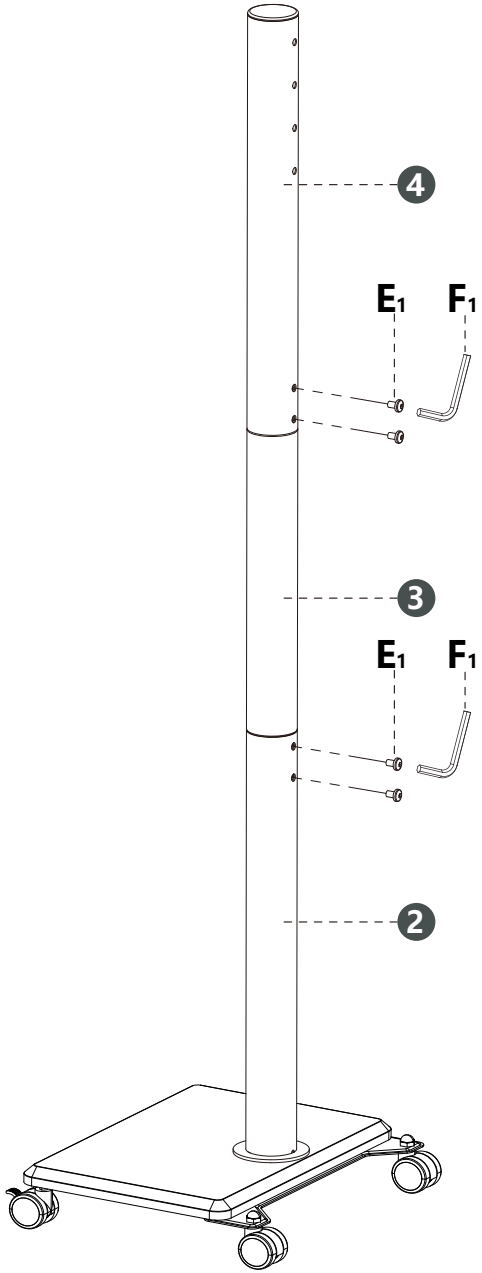


6


5 x1

E_{2x2}

F_{1x1}

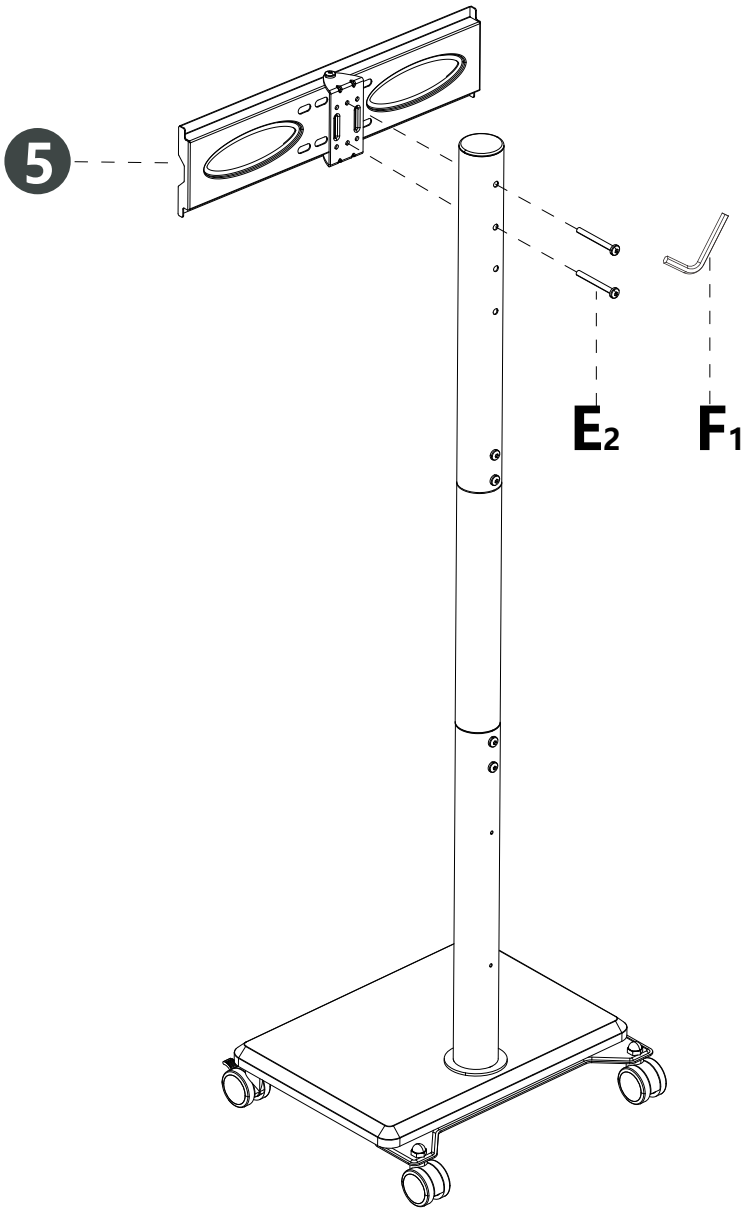



7

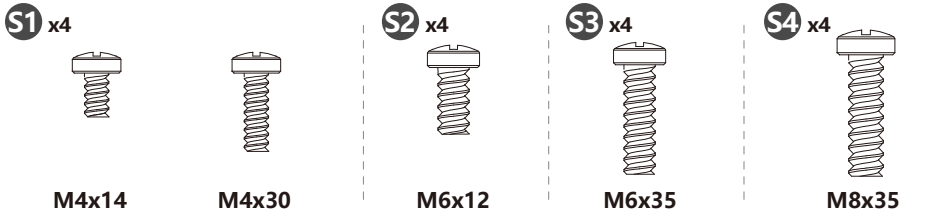


STEP 1 Select TV Screw Diameter

Please make sure the diameter of the screw **S1-S4** are suitable for your TV.

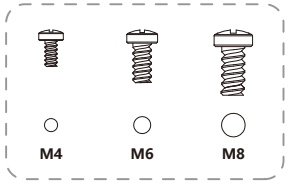

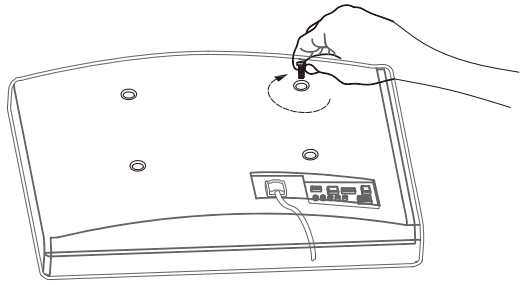

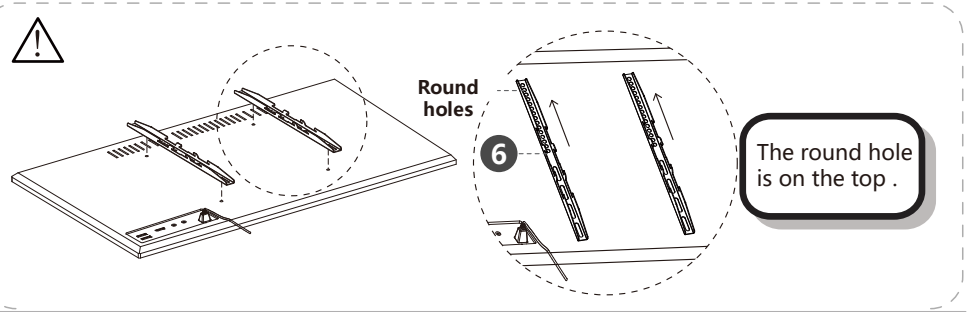


STEP 2 Measure VESA For Your TV

1、**What does the VESA standard mean?**
The VESA standard is a standard for attaching flat screens / LCD / monitors / televisions to monitor mounts or TV mounts.
Prerequisite is that both the monitor / TV and the monitor mount have the same VESA standard.

2、Look at the back of your TV/monitor for threaded holes.
Measure the horizontal distance **W** and vertical distance **H** of the screw holes (center to center).
W x **H** should comply with the VESA standard of TV stand listed in below sheet.

Notice: If the TV/monitor is not compatible with VESA, it can still be attached to the desired bracket by using VESA Adapters(not included and should be purchased separately).

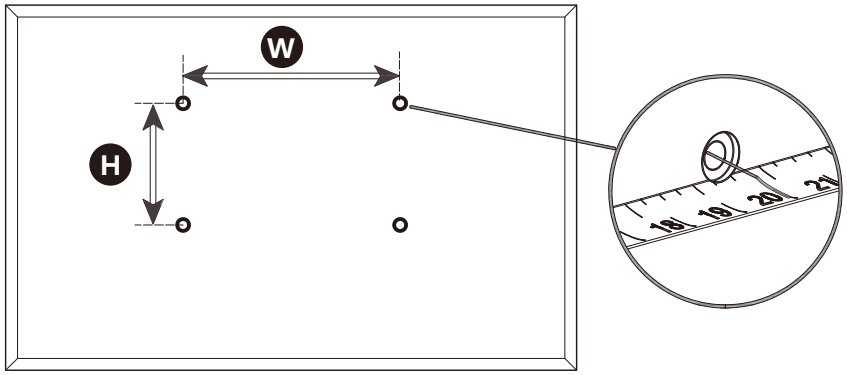

TV

Units: mm

W	x	H	
100	x	100	√
200	x	100	√
200	x	200	√
300	x	200	√
300	x	300	√
400	x	300	√
400	x	200	√
400	x	400	√

Units: inch


W	x	H	
4.0	x	4.0	√
7.9	x	4.0	√
7.9	x	7.9	√
11.8	x	7.9	√
11.8	x	11.8	√
15.7	x	11.8	√
15.7	x	7.9	√
15.7	x	15.7	√

VESA standard of TV STAND

STEP 3 Holes Selection of Brackets


When Ⓗ is shorter than 400mm, different TV heights can be set based on bracket hole positions, as shown in the following figure.

Choose the lower holes to lower the TV height

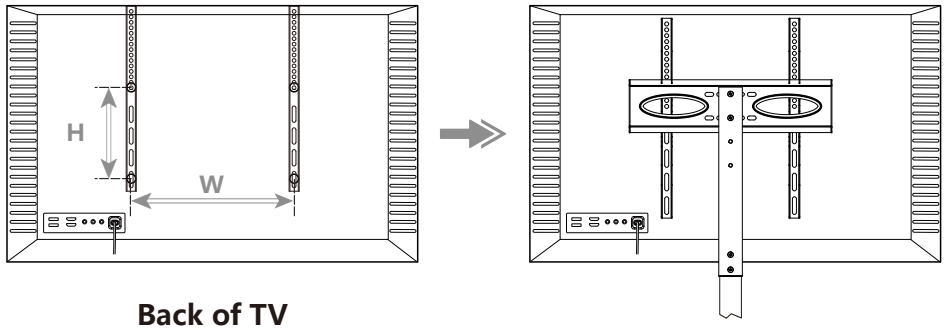


Back of TV

Choose the upper holes to higher the TV height

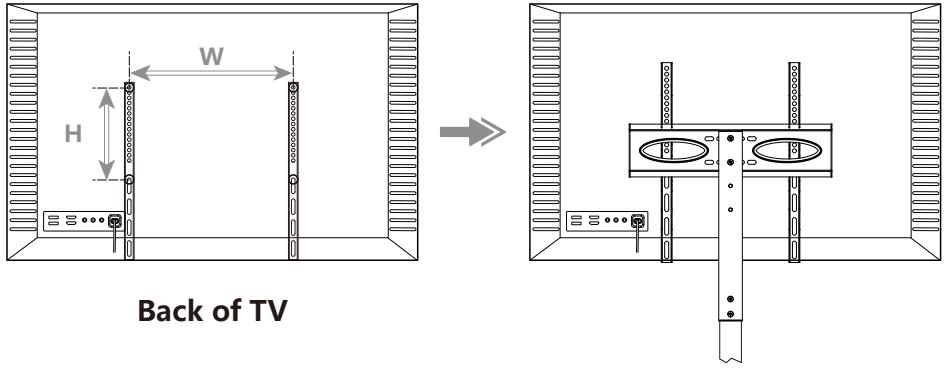



Back of TV


Option ❶ (For Flat Back TV)

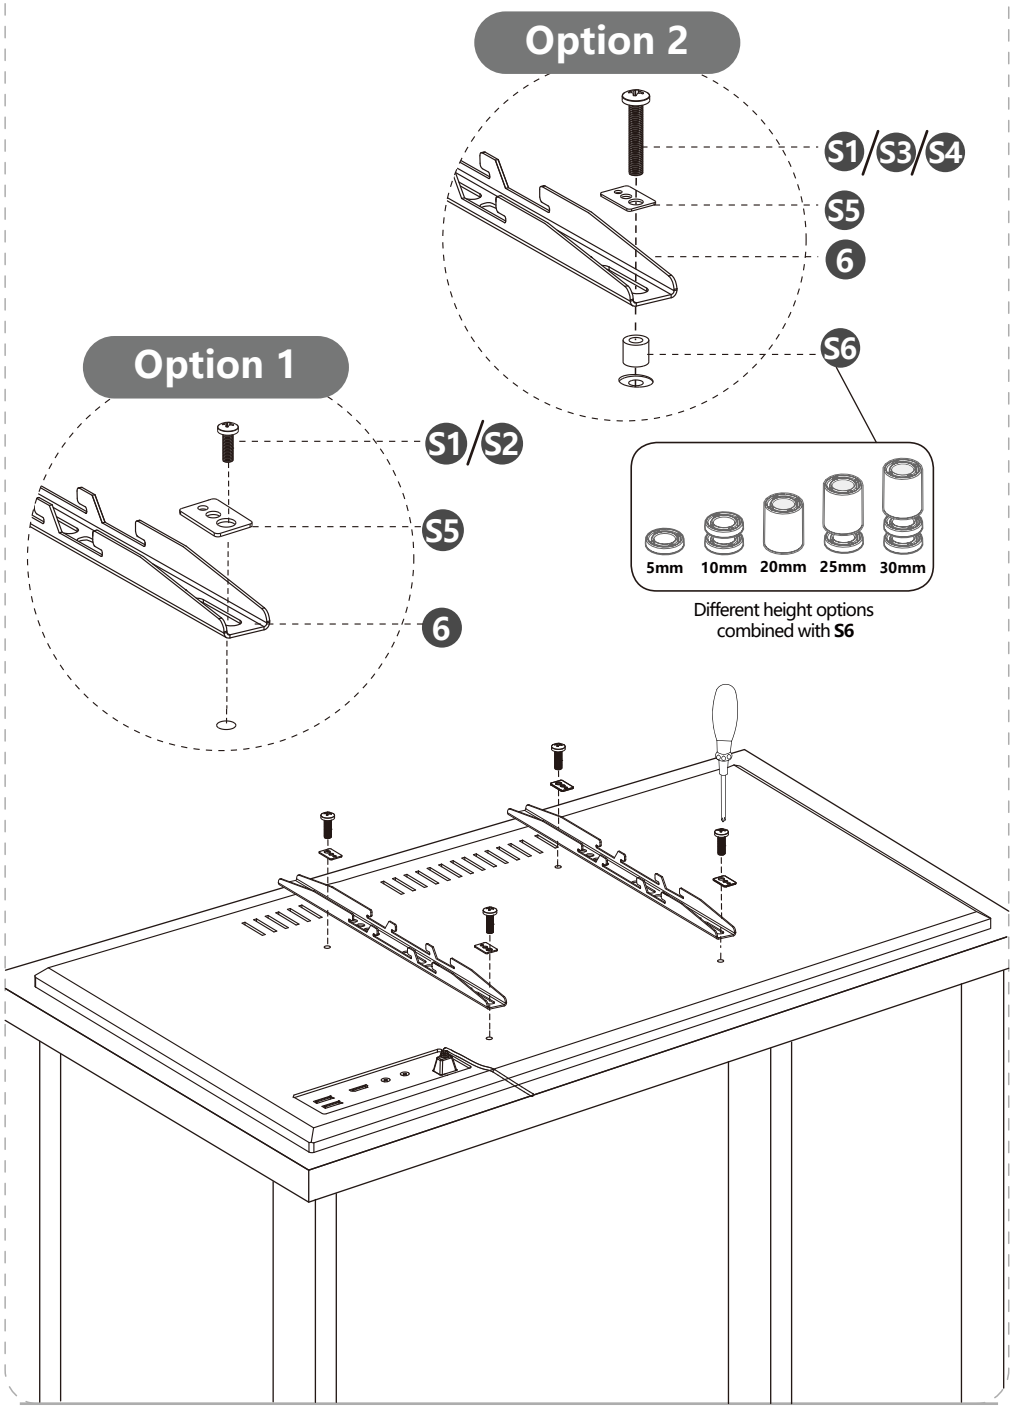

Option 2 (For Round Back TV or Curved TV)

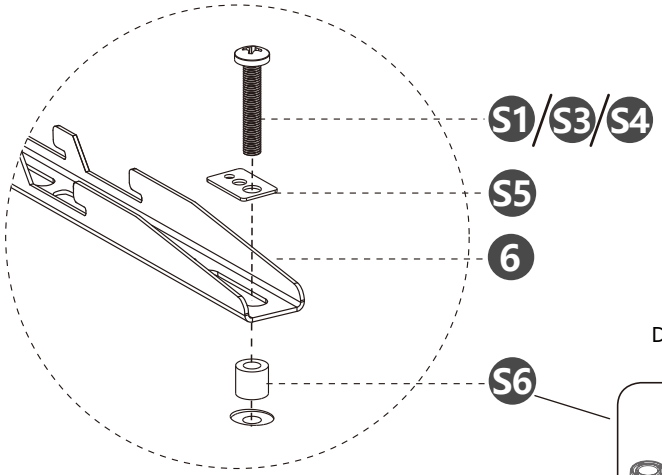


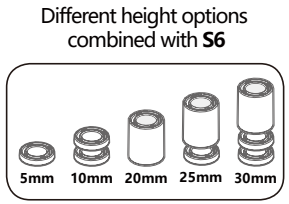


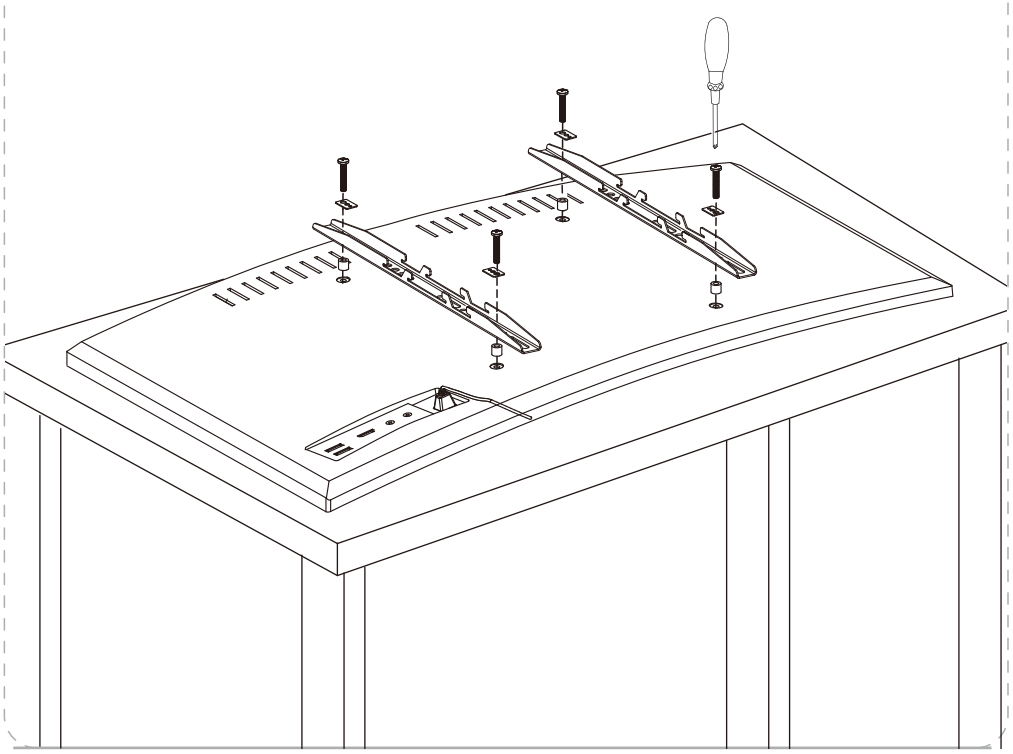



Option 3 (For TV with A "Bump")

Spacers may be necessary for 2 holes ONLY.

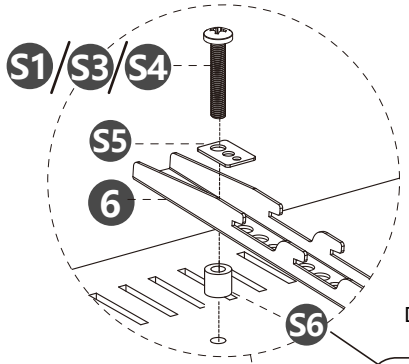

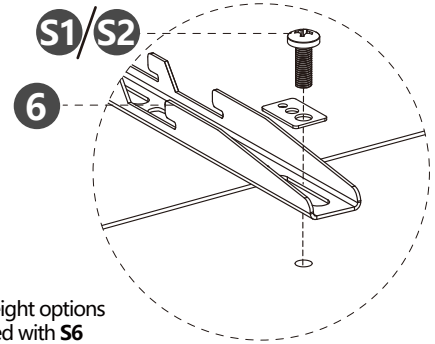


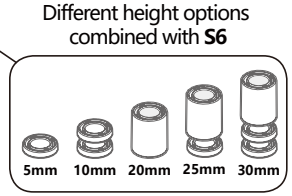

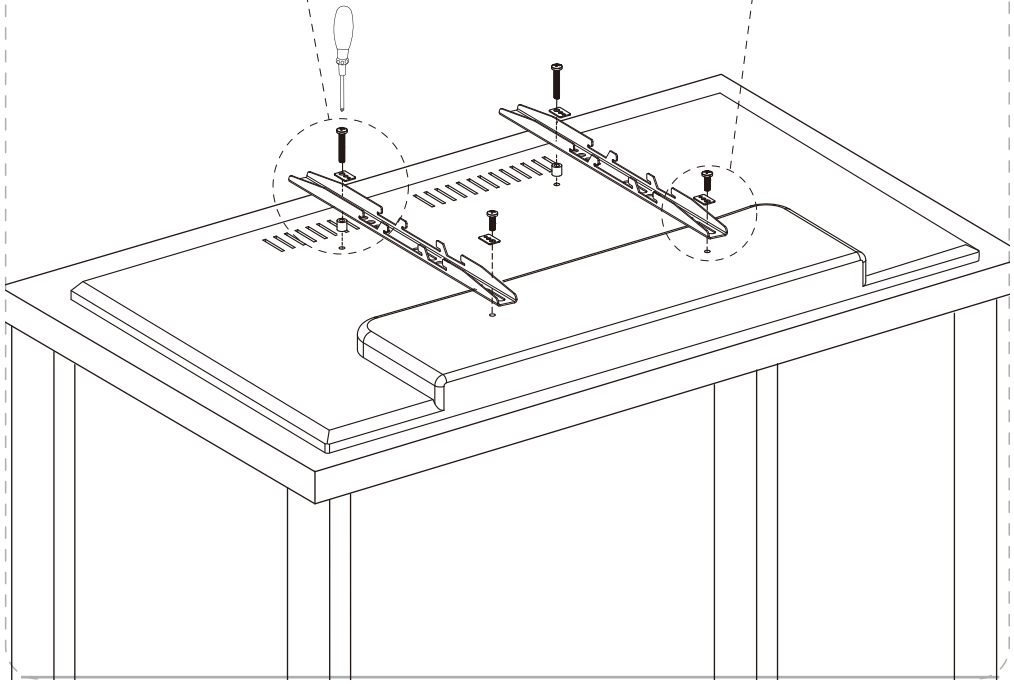



Option 4 (Potential Cable Blockage)

Spacers may be necessary when cables or plug/outlets are blocked by brackets.

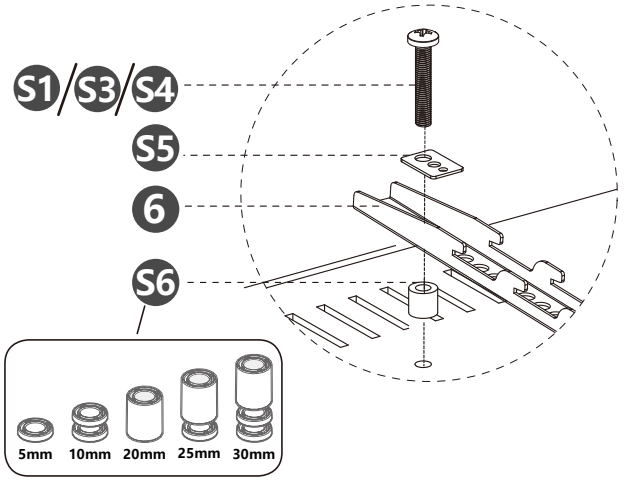


Different height options combined with **S6**

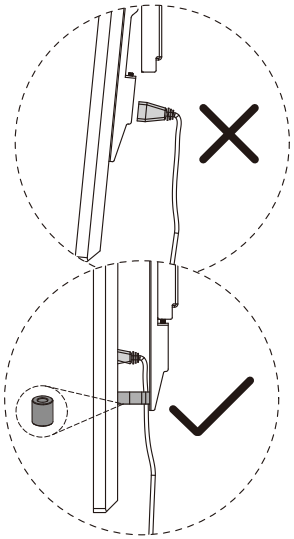

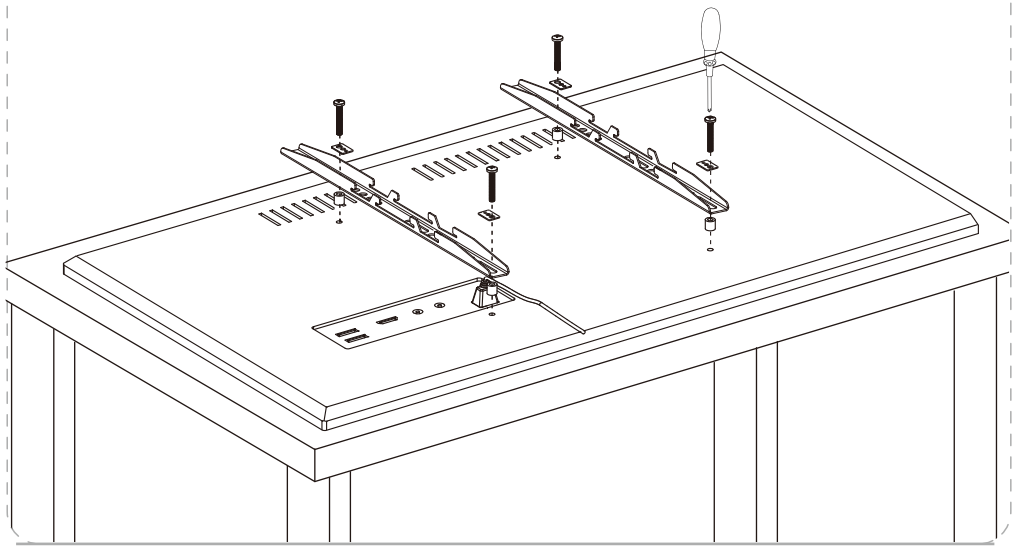

8

Attach your TV to TV plate 5, select the best height by yourself.

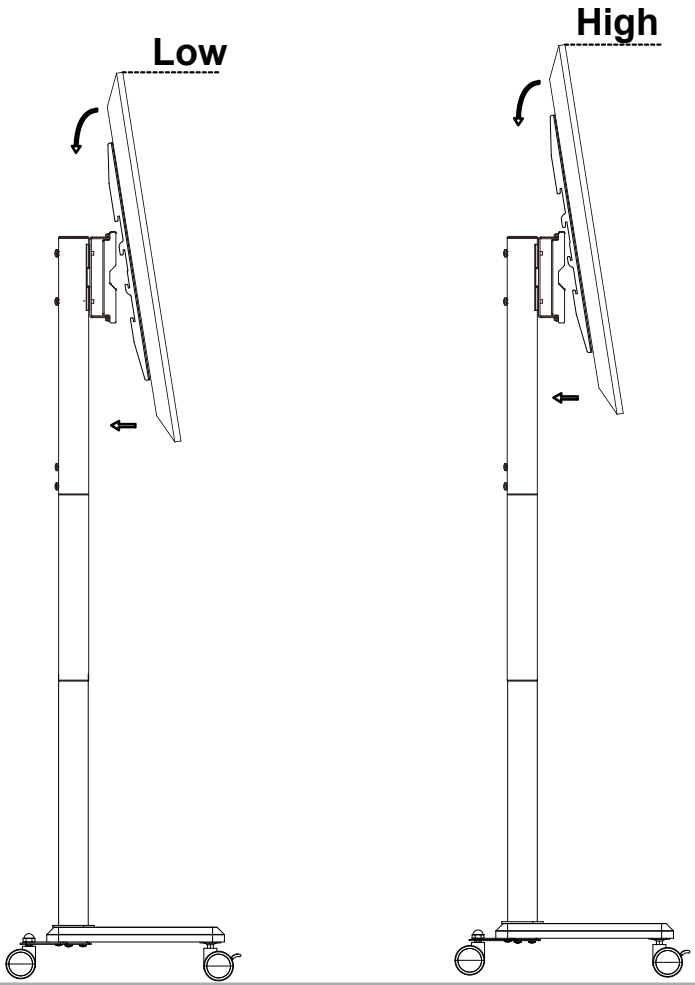


9

L_1 x2

L_2 x2

Insert Safety lock L_1 and L_2 in the bottom of brackets ❻ and tighten the screws L_2 , Please lock your TV before using.


Notice: Please don't over tighten the screw L_2 , overtighten may cause L_1 broken.

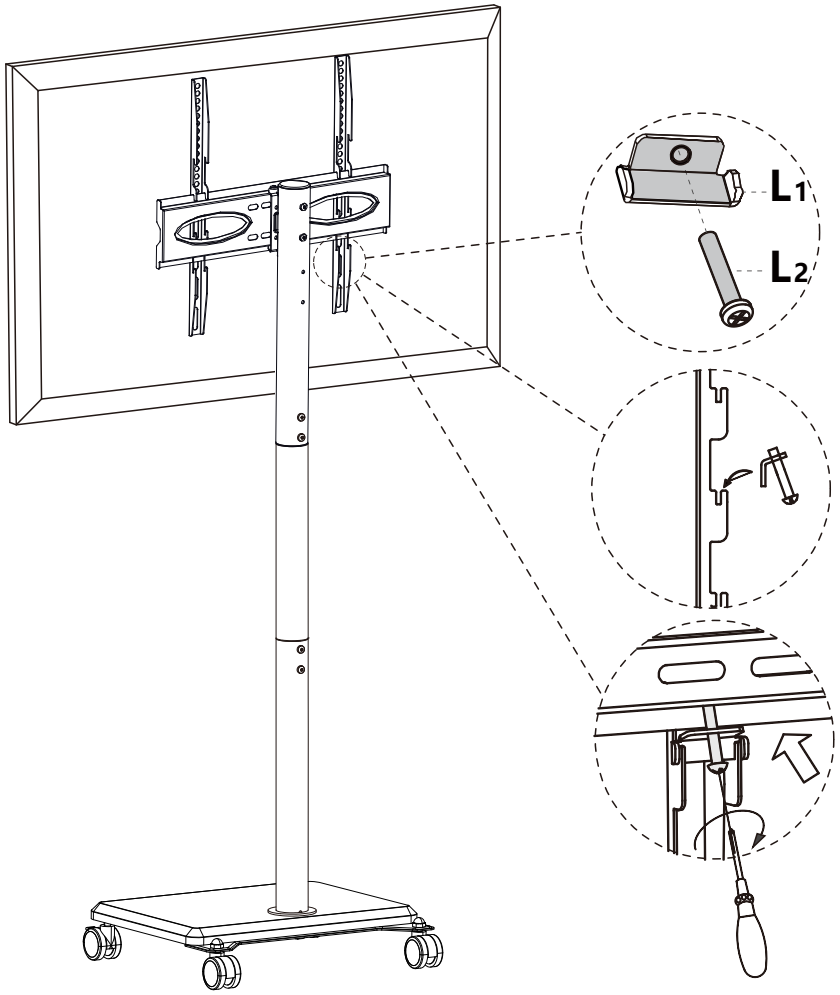

USERS GUIDELINE

Stand Height Adjustment - Brackets / TV plate


1、Please take off the TV from the stand then select the proper height you need.
2、Brackets ❻ height adjustment is 60mm(2.3 inch) per level ;TV plate ❺ height adjustment is 50mm(2 inch) per level .
3、Attach the TV to the TV plate ❺ again and tighten the safety screws L_2 on the bottom of brackets to secure the TV to the stand.

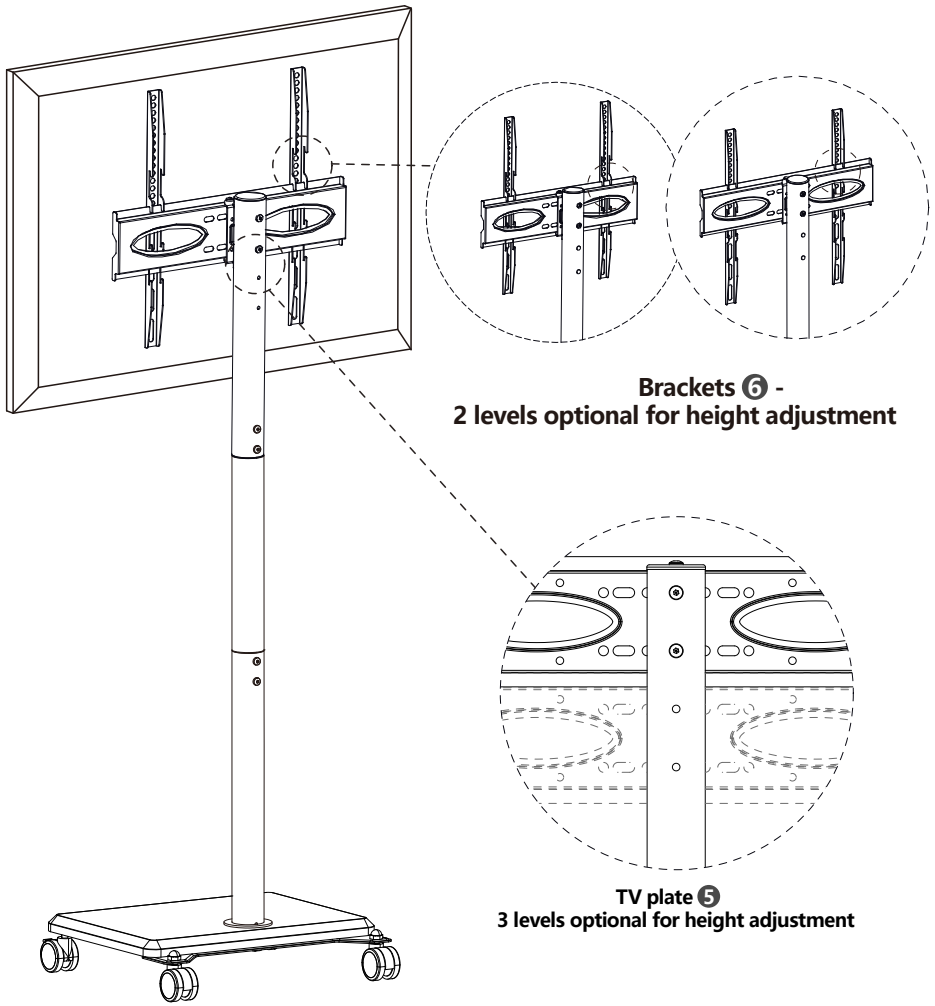

Brackets ❻ -
2 levels optional for height adjustment

TV plate ❺
3 levels optional for height adjustment


Cable management ties **L3** let you easily organization for power and AV cords to keep neat.

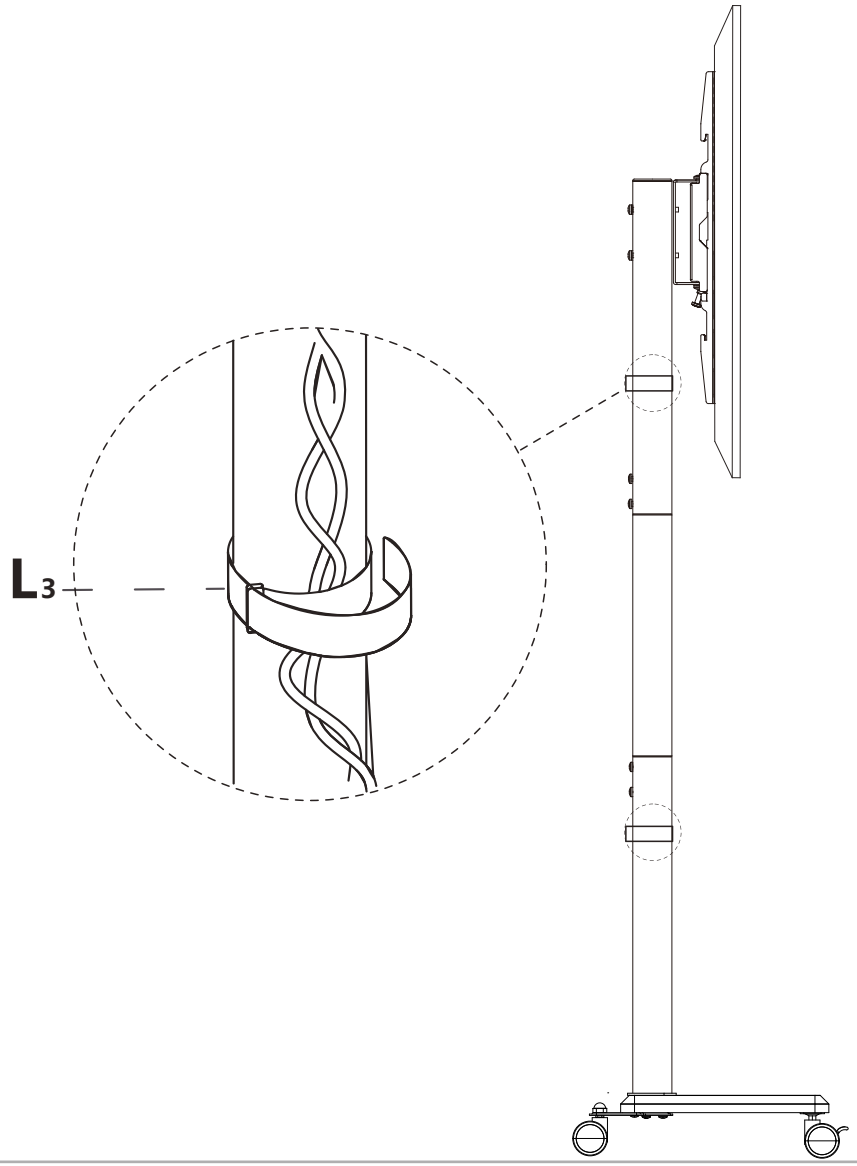

View Angle Adjustment

TV plate ❺ can swivel left and right 35 degrees in each side to provide you a wide-range viewing angles when watch the TV.

Notice - Swivel function is manual not automatic.
Base is not turntable.

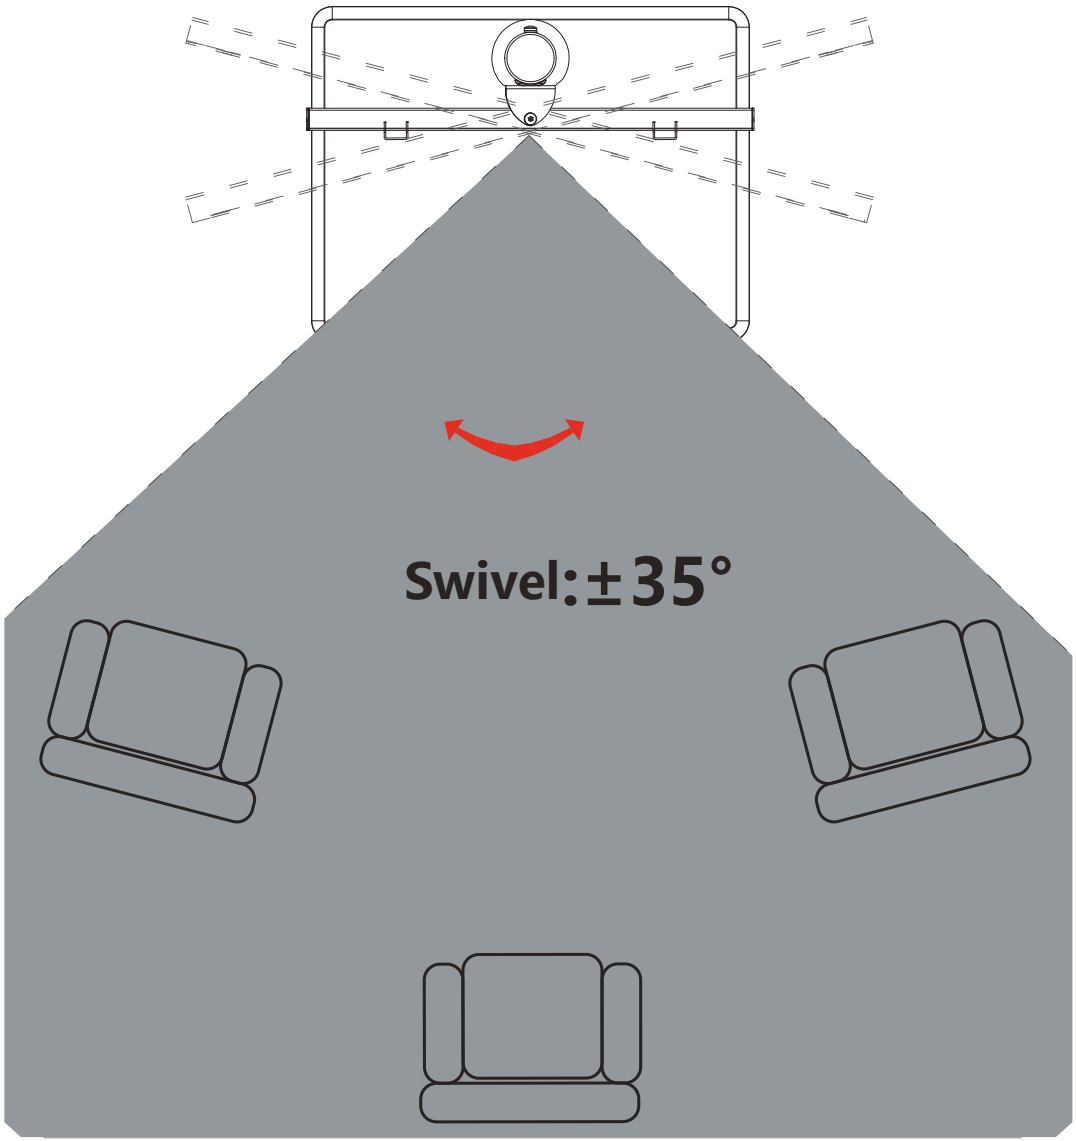

EASILY MOVE

You can move the stand around easily, please make sure all wheels are unlocked during the movement, and make sure your hand is on reasonable position as below shown to avoid wrong operation that result the stand falling over.

Please take off the TV and devices If you need to move the stand for long distances.

Please don't move this stand on the carpet or unlevel ground.

