
TV STAND

USER MANUAL

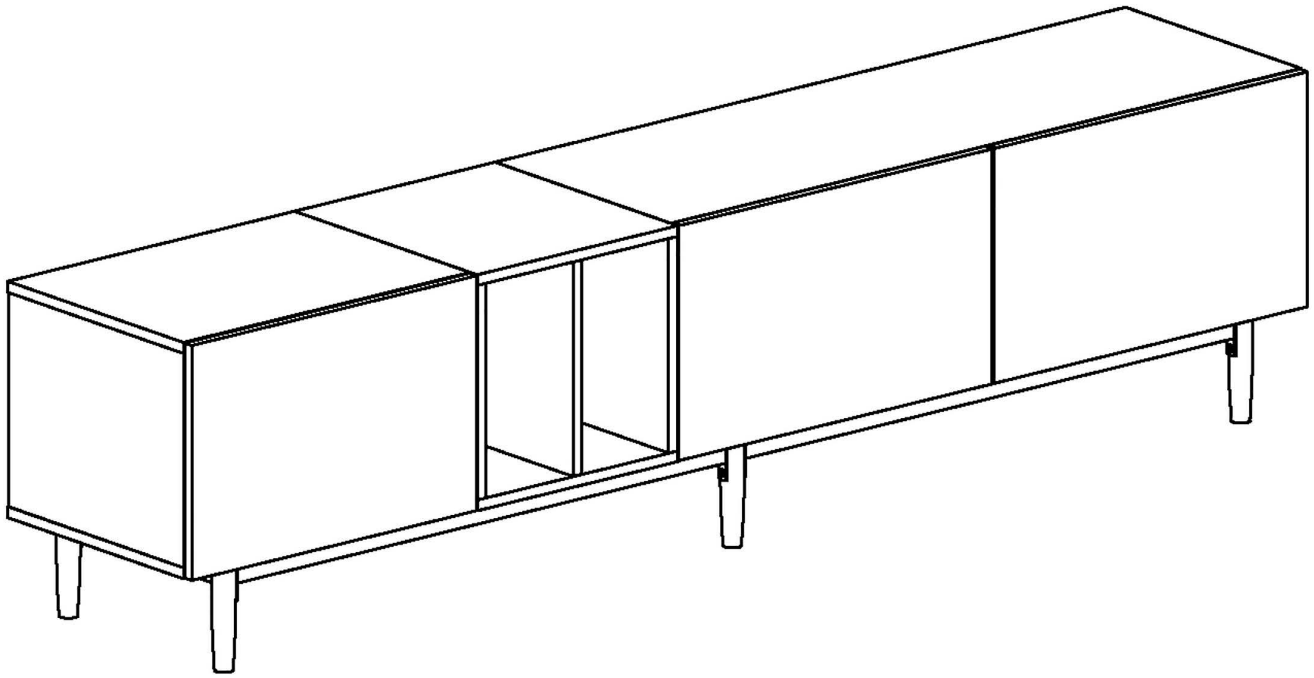

SAVE THESE INSTRUCTIONS FOR FUTURE USE

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below.Check you have all th components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

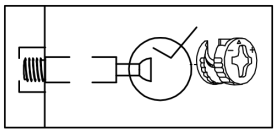

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

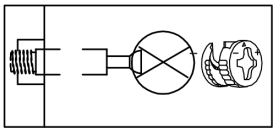

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

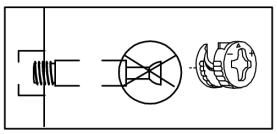


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

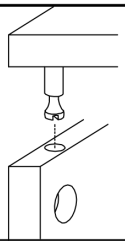


Connect the panels together.




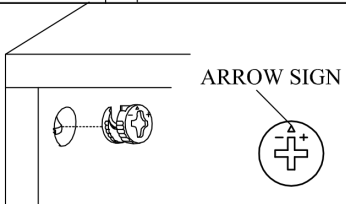






Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

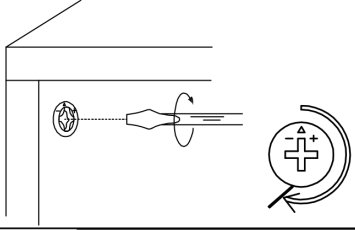


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

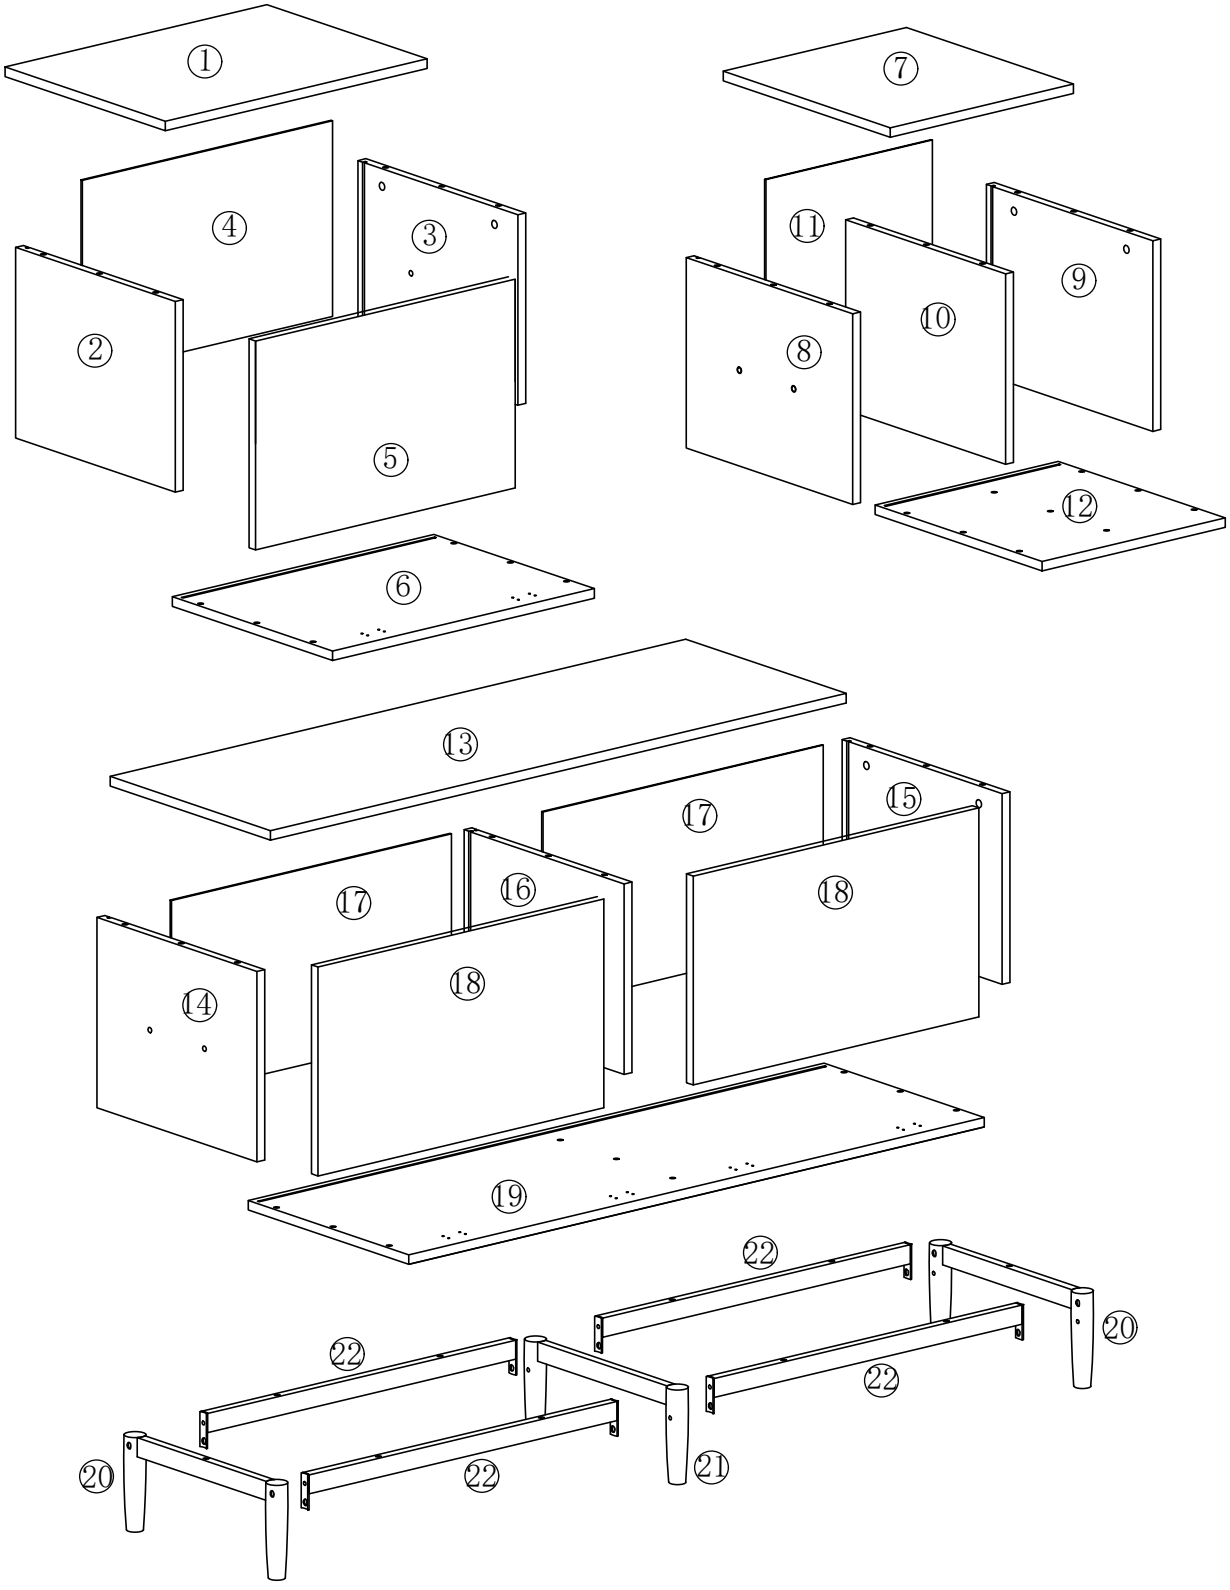


A	X16	B	X16	C	X16	D	X16	E	X1
									
Φ6X35		Φ15X12		Φ8X30		Φ7X47		M4X55	


F	X36	G	X8	H	X4	I	X14	J	X6
									
⌀3.5*14mm		M6*12mm		M6*25mm		M6*40mm			

STEP 1

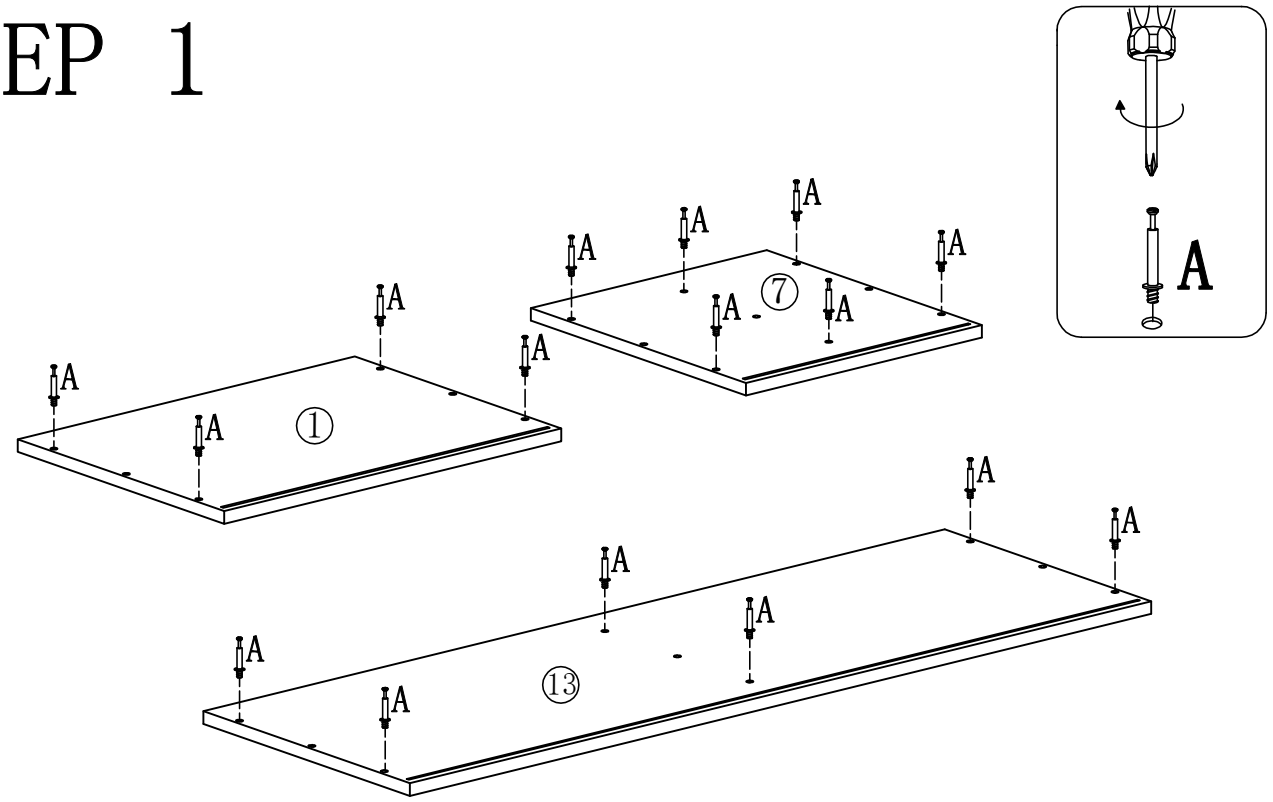


A	X16
	
ϕ6X35	

STEP 2

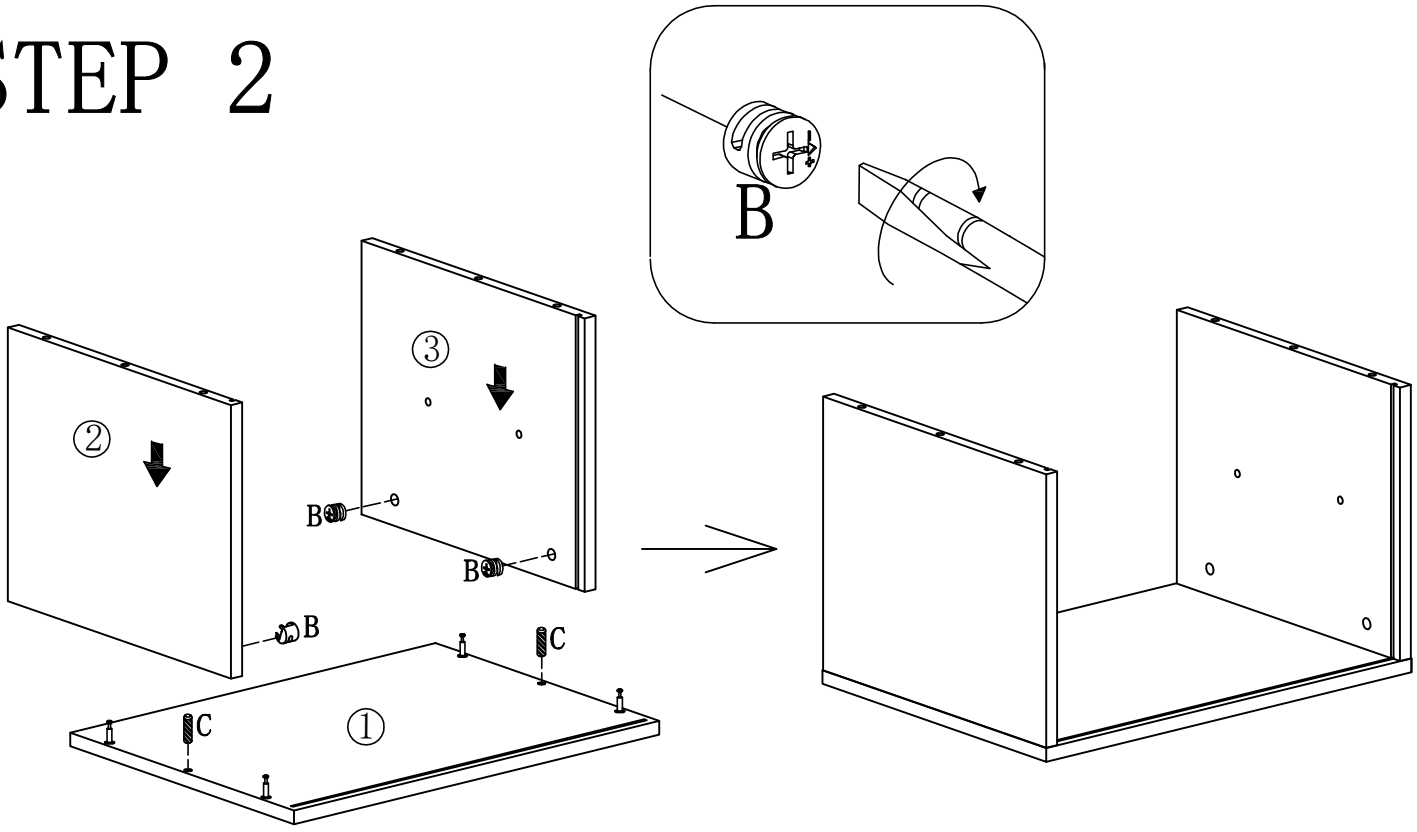



B	X4	C	X2
			
ϕ15X12		ϕ8X30	


STEP 3

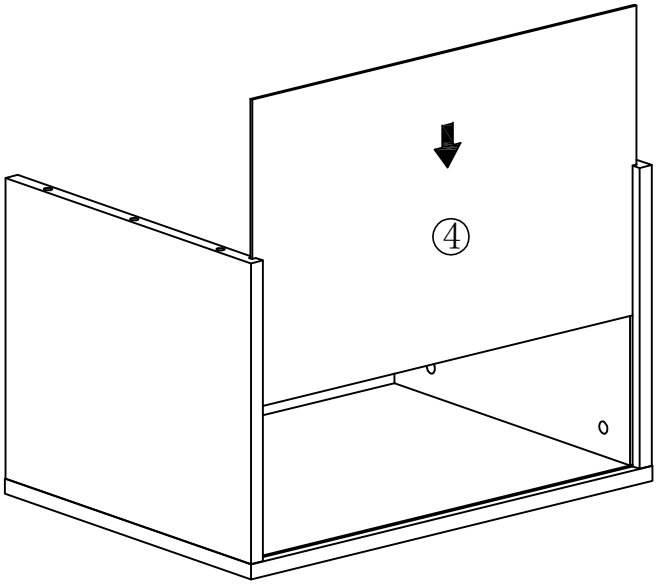


STEP 4

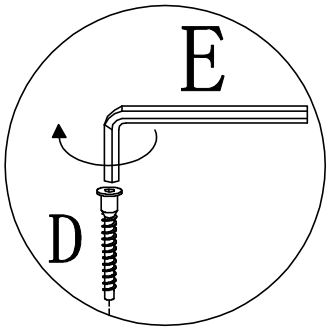

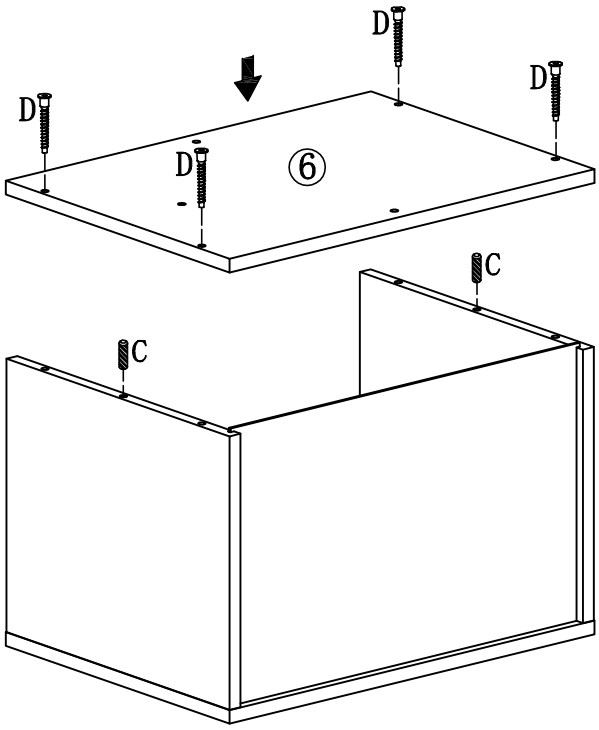


C	X2	D	X4	E	X1
					
Φ 8X30		Φ 7X47		M4X55	

STEP 5

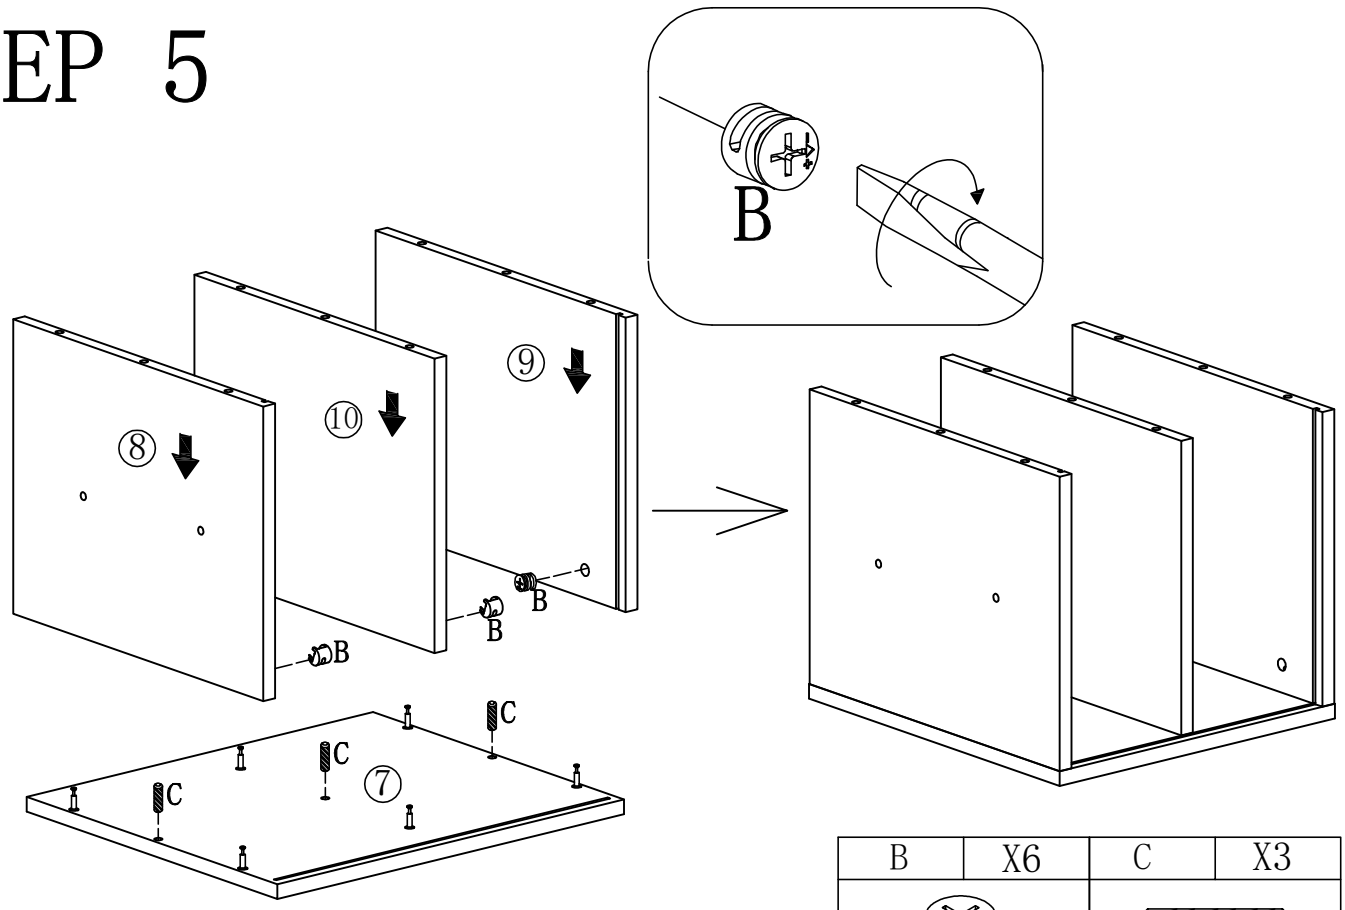



B	X6	C	X3
ϕ 15X12		ϕ 8X30	

STEP 6

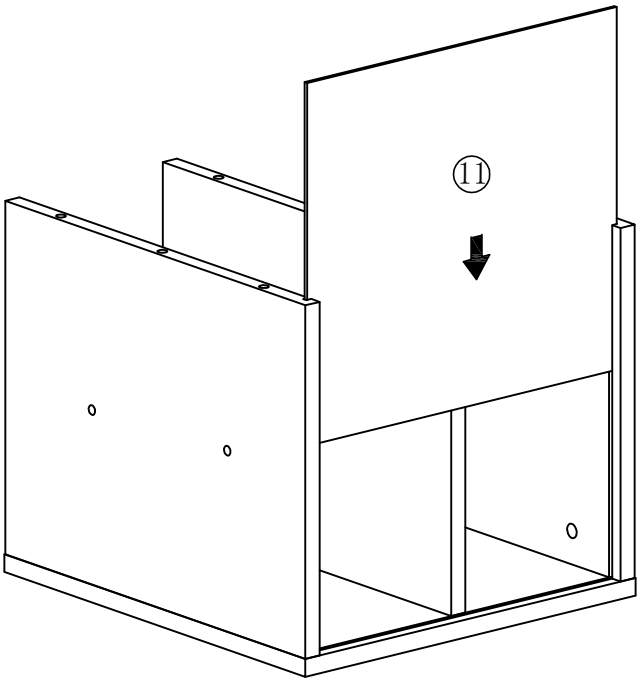


STEP 7

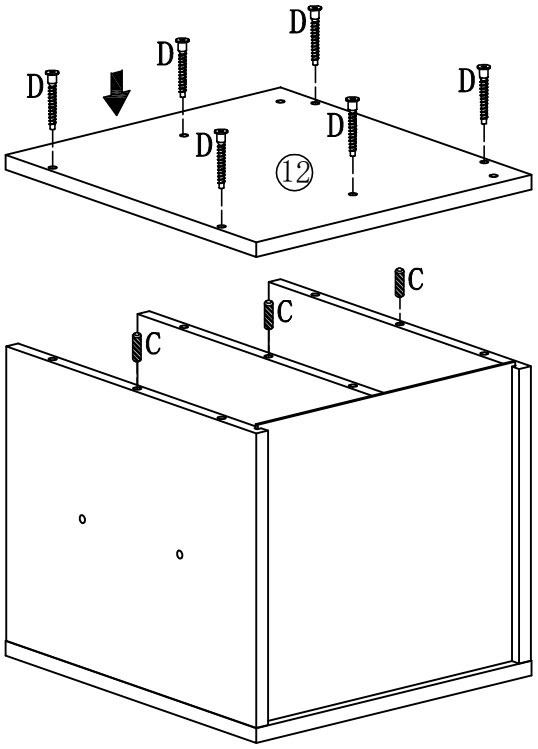


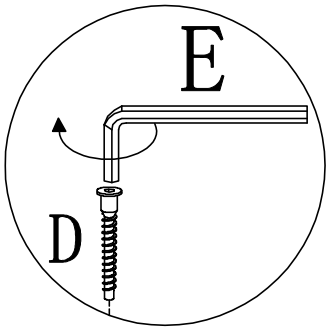


C	X3	D	X6
ϕ 8X30		ϕ 7X47	

STEP 8

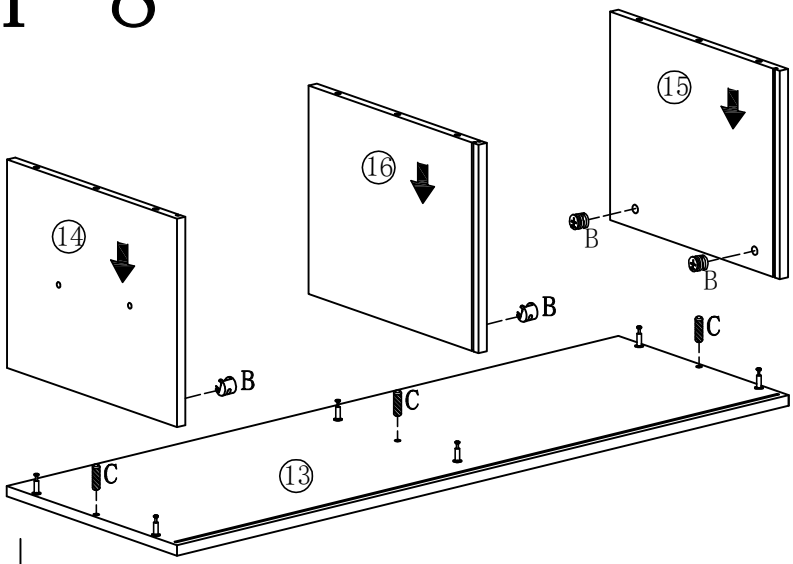


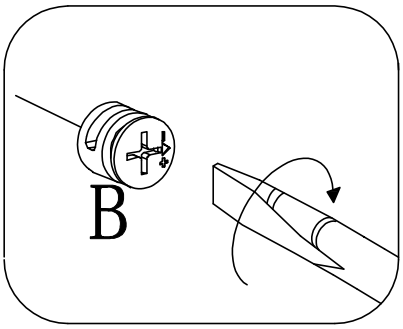

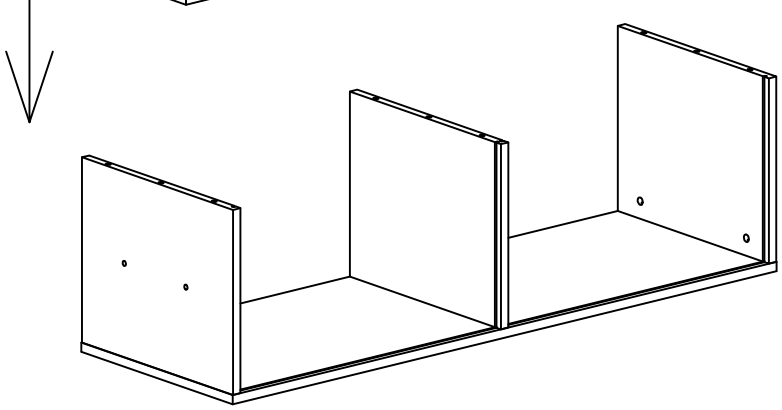



B	X6	C	X3
ϕ 15X12		ϕ 8X30	


STEP 9

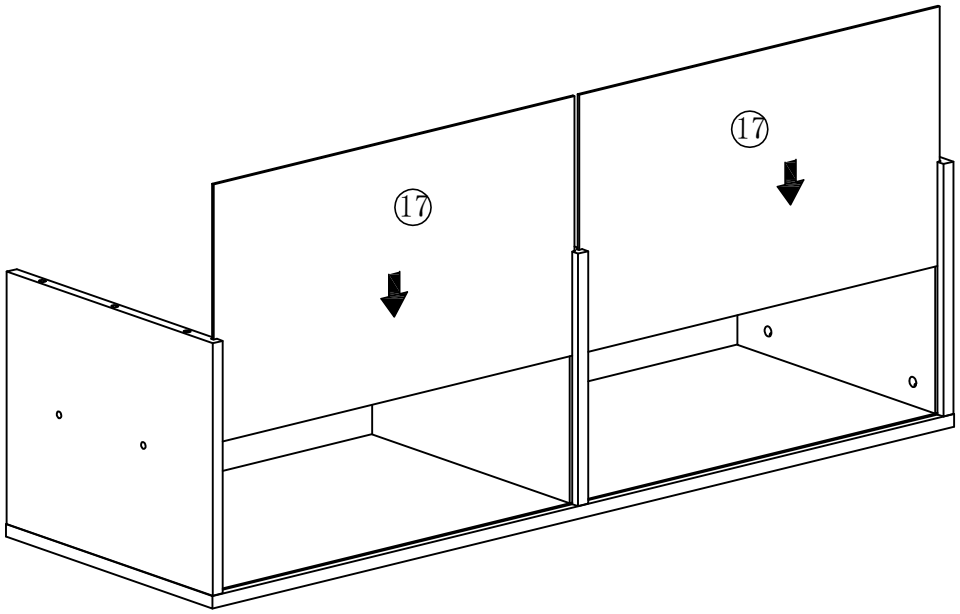


STEP 10

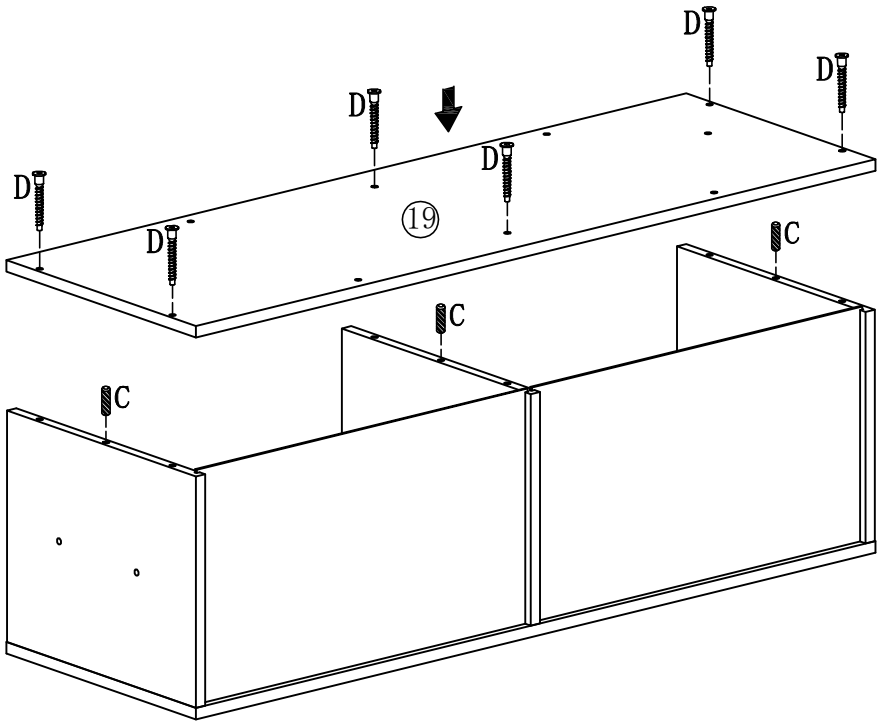


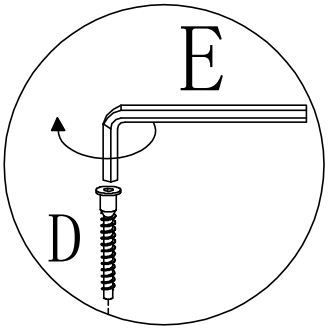


C	X3	D	X6
			
Φ 8X30		Φ 7X47	



STEP 11

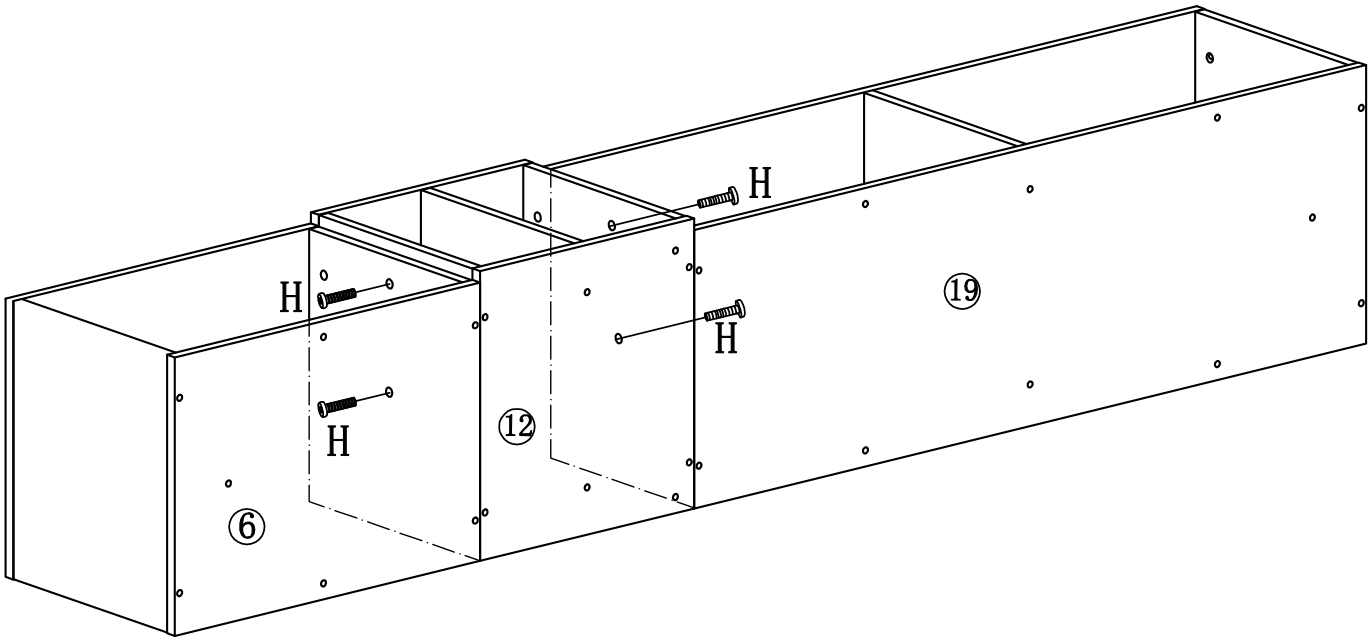


H	X4
	
M6*25mm	


STEP 12

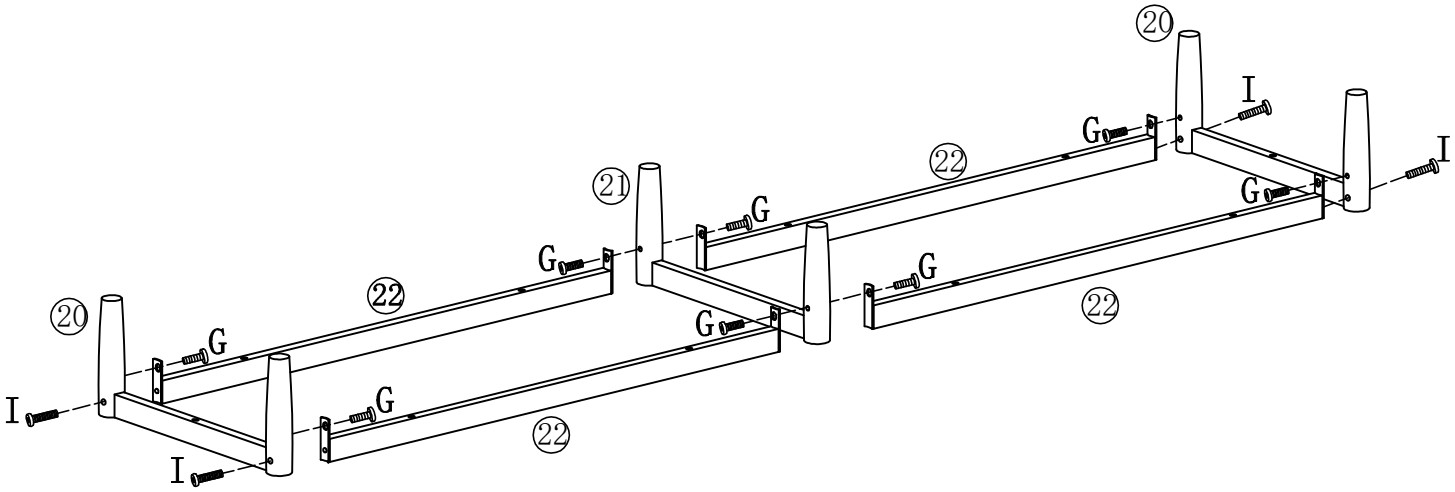


G	X8	I	X4
			
M6*12mm		M6*40mm	


STEP 13

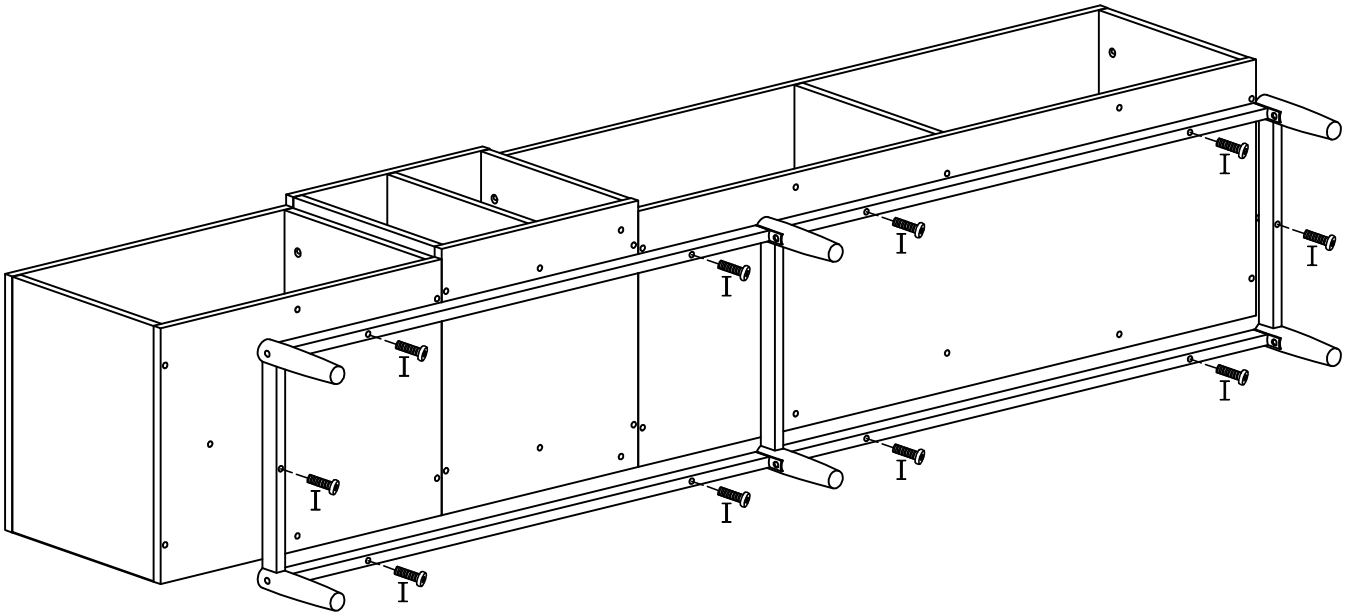


I	X10
	
M6*40mm	

STEP 14

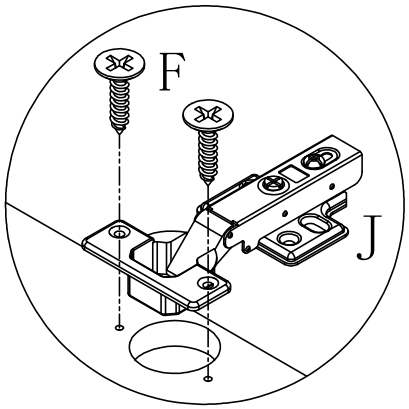

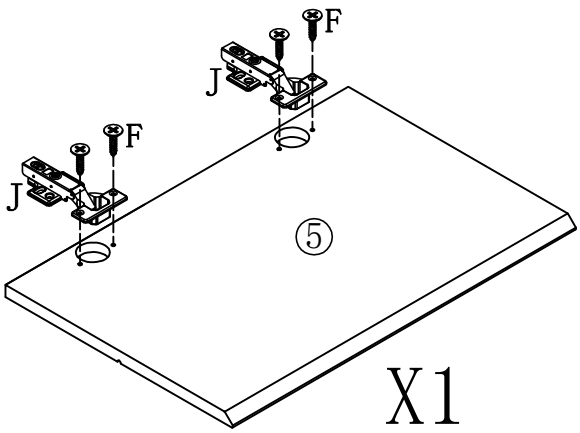


X1

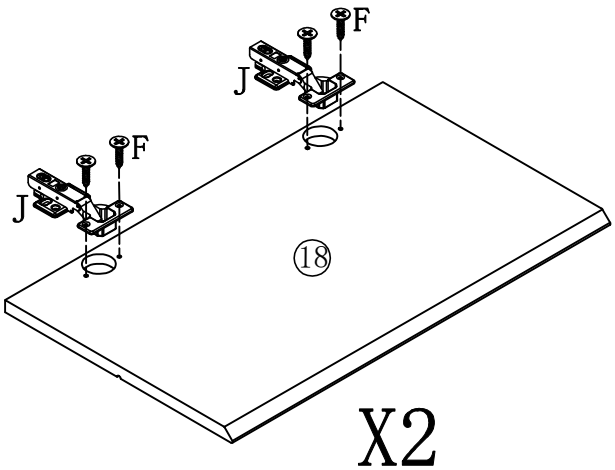



X2


F	X12	J	X6
			
3.5*14mm			

STEP 15

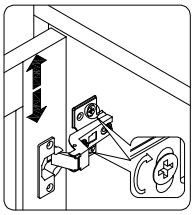


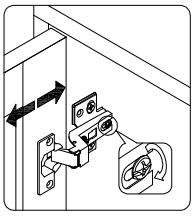

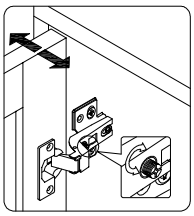

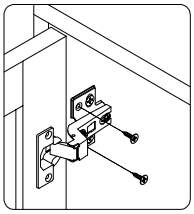


(For detailed hinge adjustment instructions, please refer to next page.)

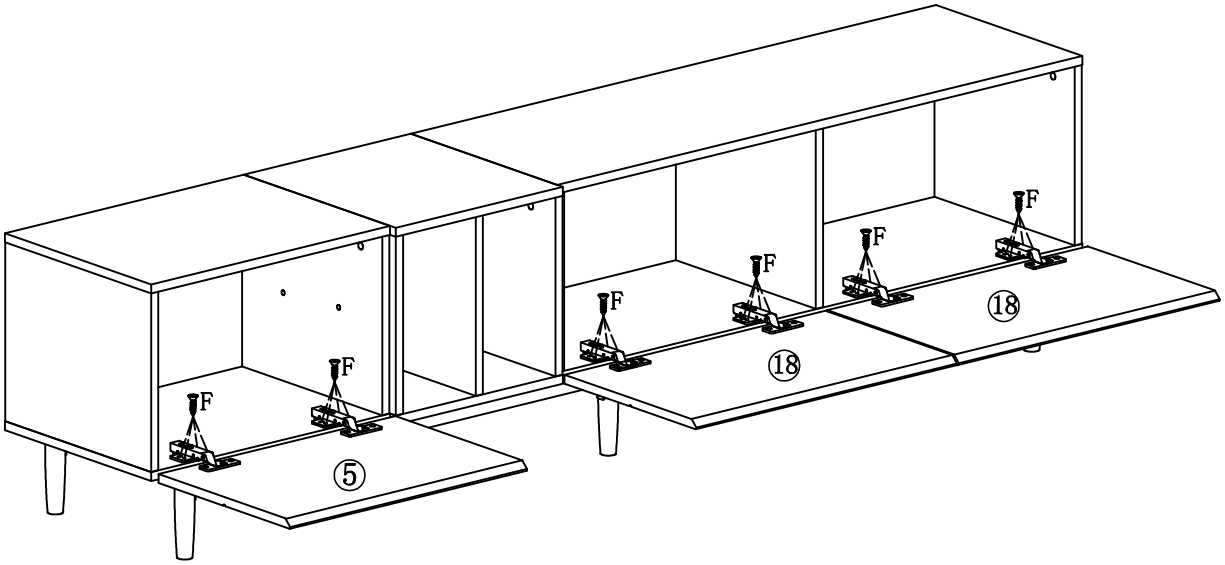


F	X24
	
⌀3.5*14mm	

STEP 16

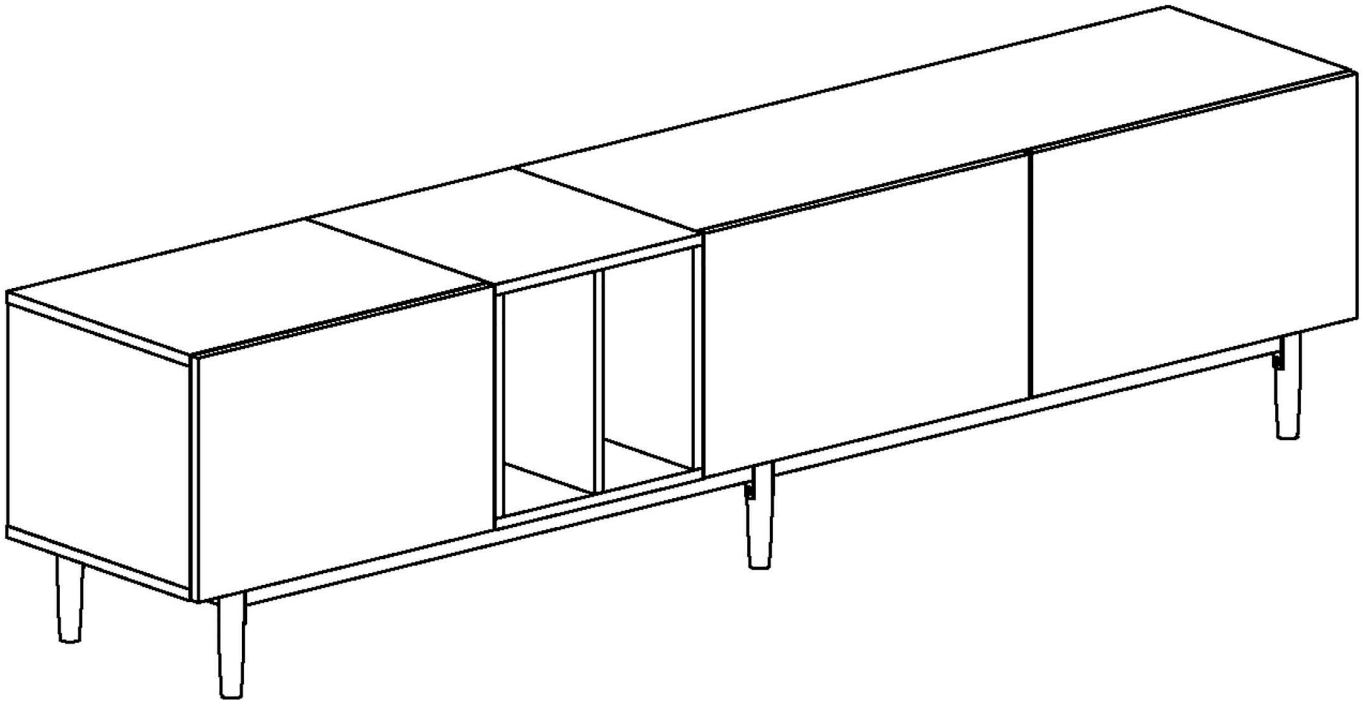


HINGE ADJUSTMENTS

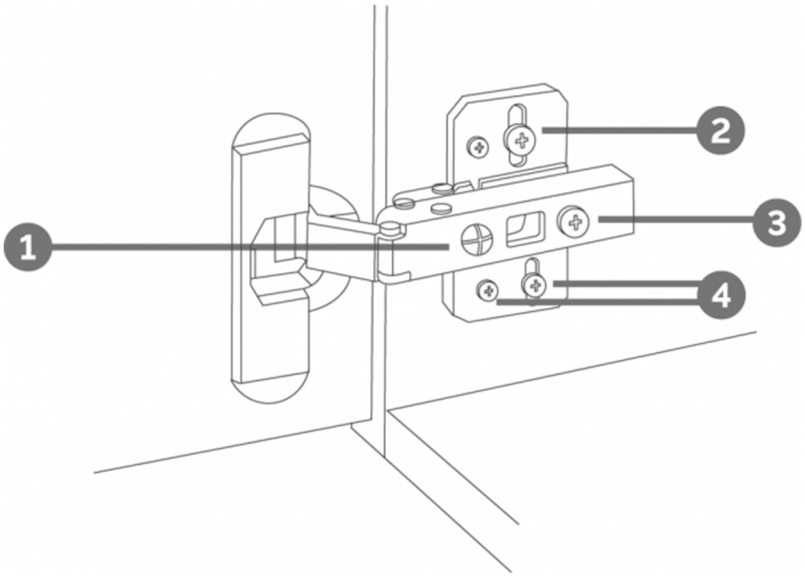


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

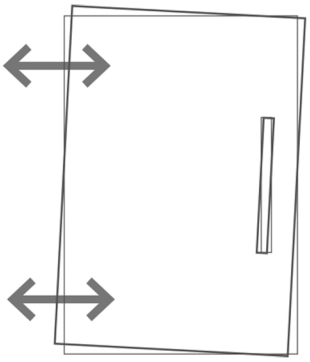

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

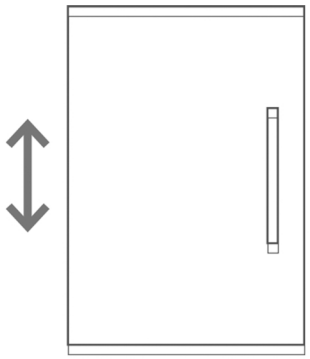

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

