
USER MANUAL


Recliner Chair with Vibrafion Massage and Heat

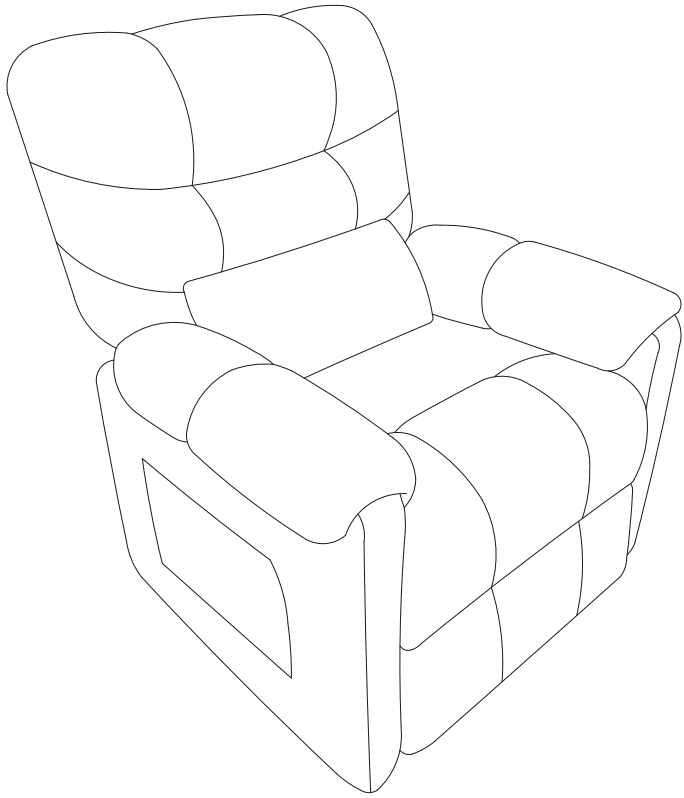

Power Input
110V-240V












RATED
Load Capability
300lbs / 136 kg

Caution: Do Not Exceed Maximum Listed Weight Capacity.
Serious Injury Or Property Damage May Occur!

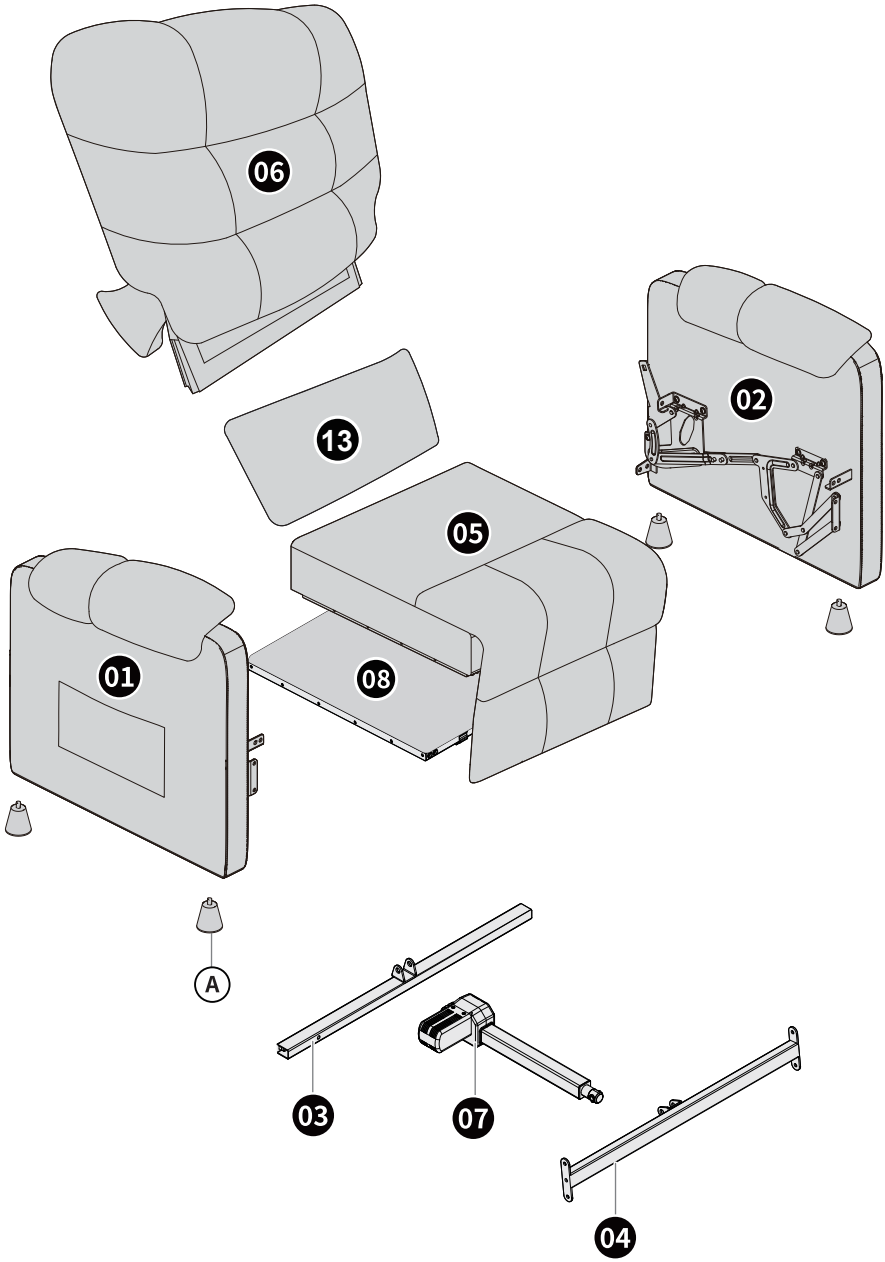
06
13
02
05
01
08
A
03
07
04







INSTALLATION

Component

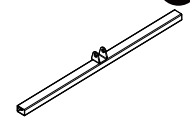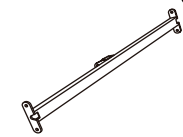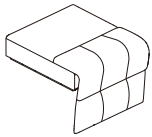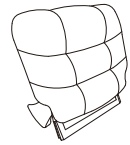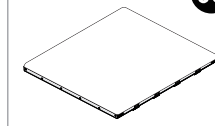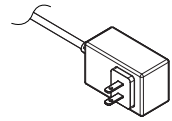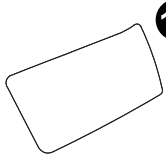01 	02 	03 	04 
Right Armrest	Left Armrest	Rear crossbar	Front crossbar
05 	06 	07 	08 
Seat cushion	Backrest	Actuator	seat metal frame
09 	10 	11 	12 
Recliner Controller	Recliner Power Adapter	Massage Controller	Massage Power Adapter
13 			
Lumbar Pillow			


INSTALLATION


Hard ware


				
A: *4	B: 5mm*1	C: M8*20mm*10	D: M6*15mm*4	E: M6*11mm*4
				
F: *2	G: *2			
Spare Parts				
	C: M8*20mm*2	D: M6*15mm*1	E: M6*11mm*1	

Assembly


Step 1

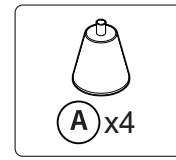


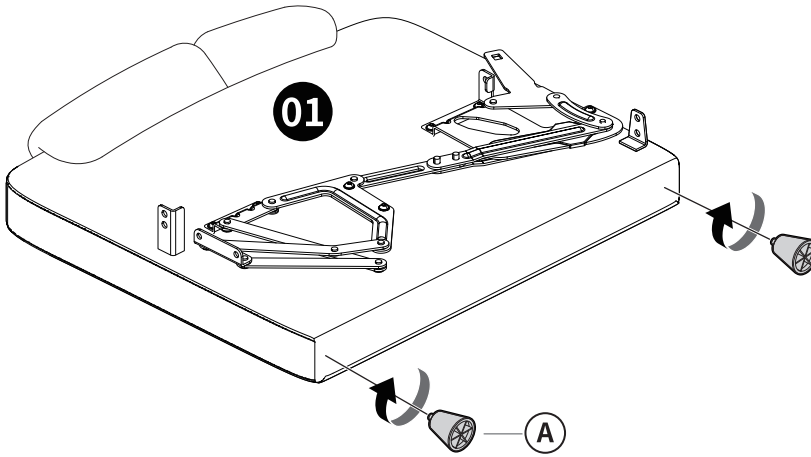

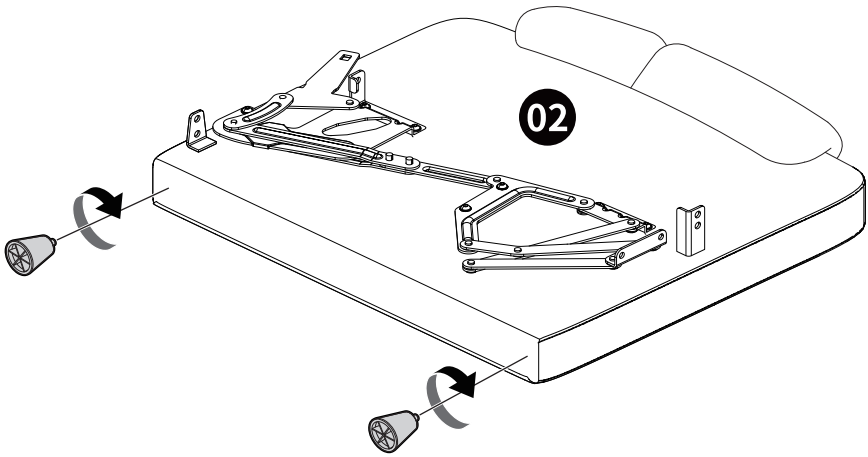


Step 2

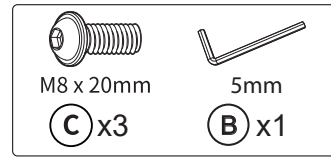

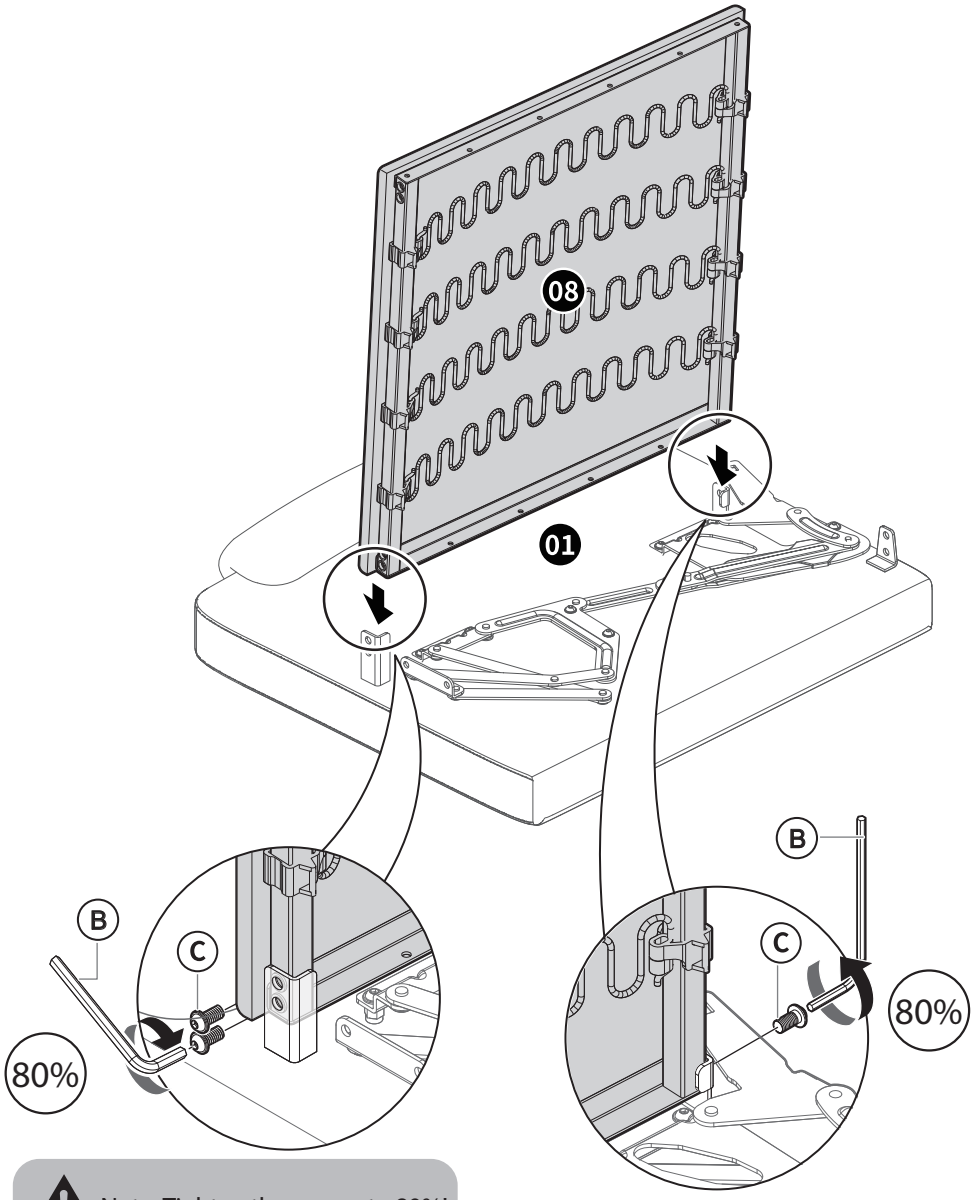



Note: Tighten the screws to 80%!


Step 3

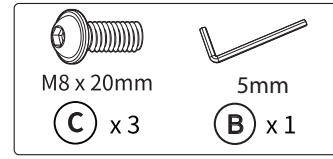

Step 4

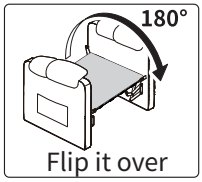
180°
Flip it over

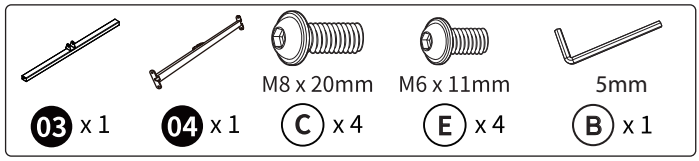

M8 x 20mm
M6 x 11mm
5mm
03 x 1
04 x 1
C x 4
E x 4
B x 1

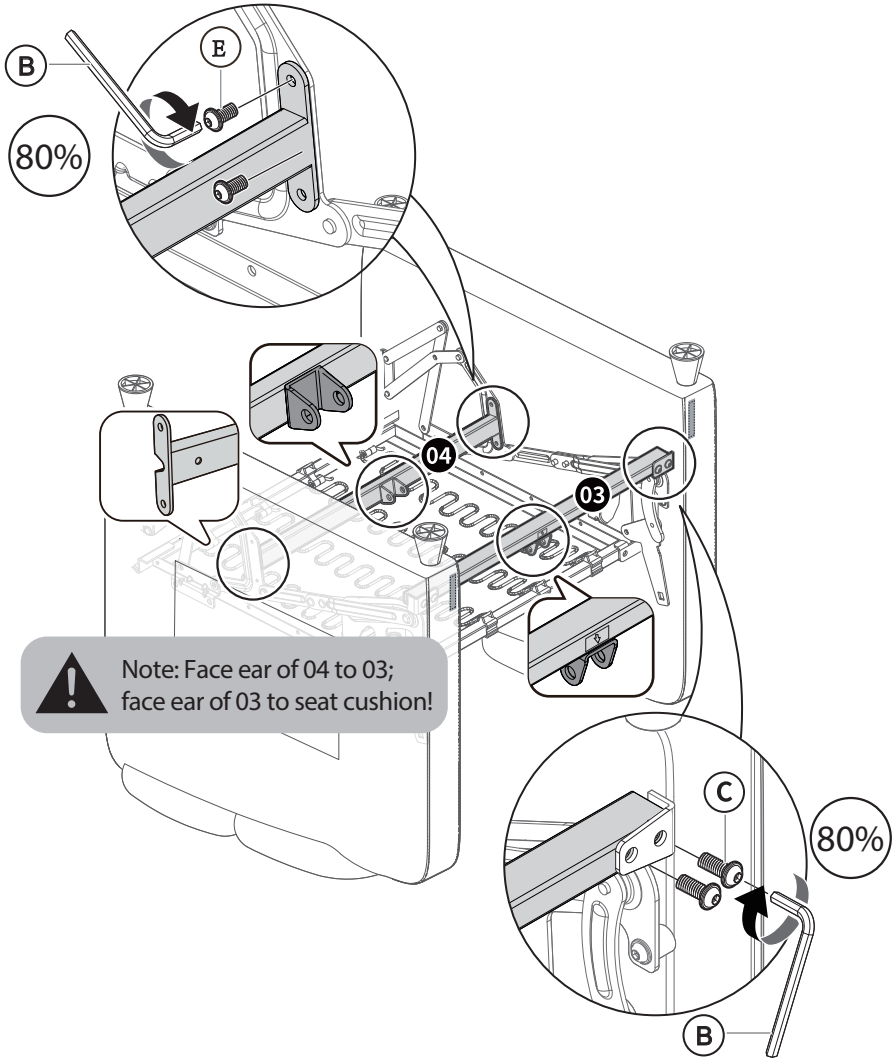

B
E
80%
04
03
Note: Face ear of 04 to 03;
face ear of 03 to seat cushion!
C
80%
B

Step 5

Tighten the screws on Step 2, 3, 4 to 100%!


Step 6

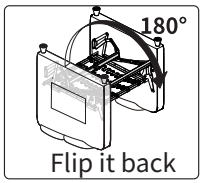


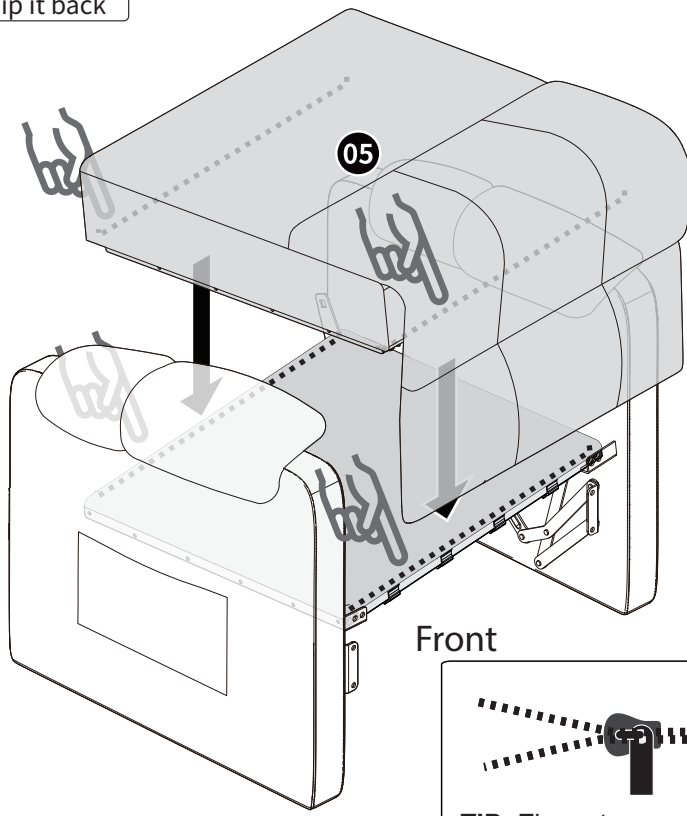

TIP: Zip up to connect the two parts.

Step 7

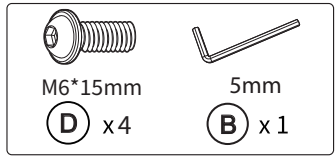


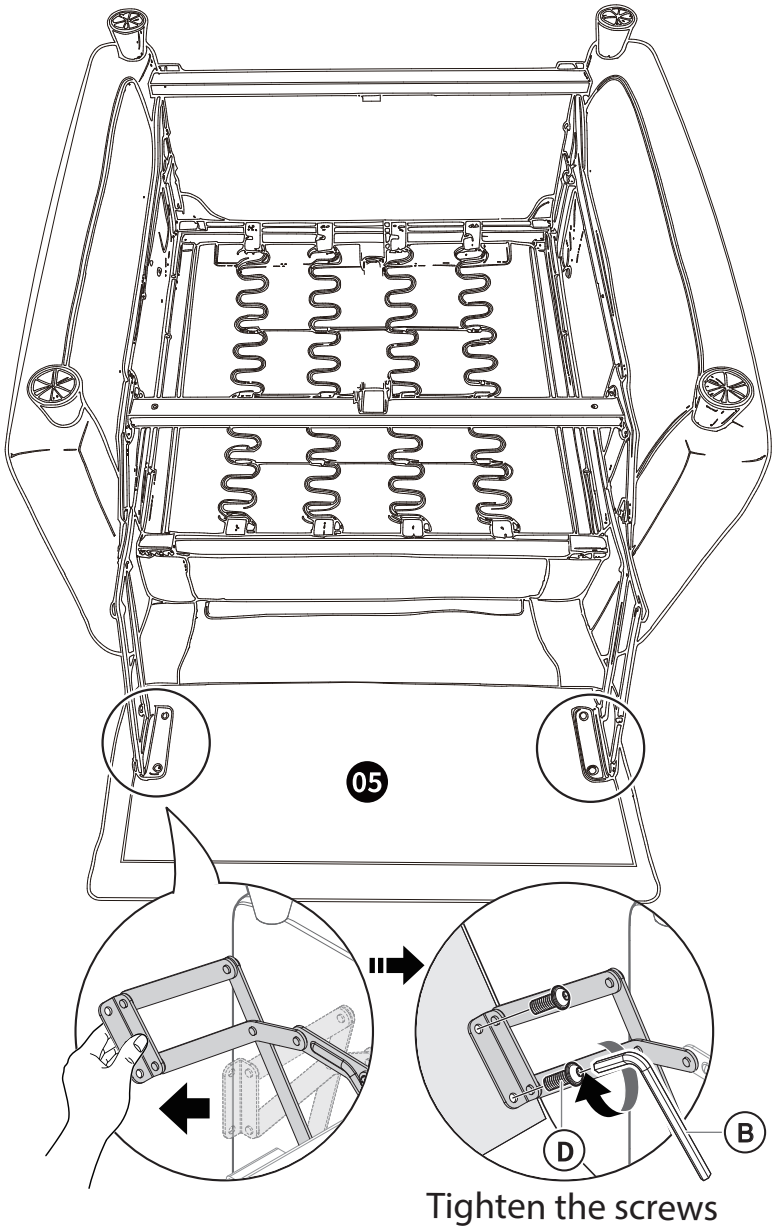


Tighten the screws

Step 8

Note: When installing the actuator, you will need to adjust the footrest to align the holes.

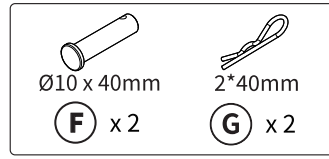


Note: Pay attention on the direction of actuator!

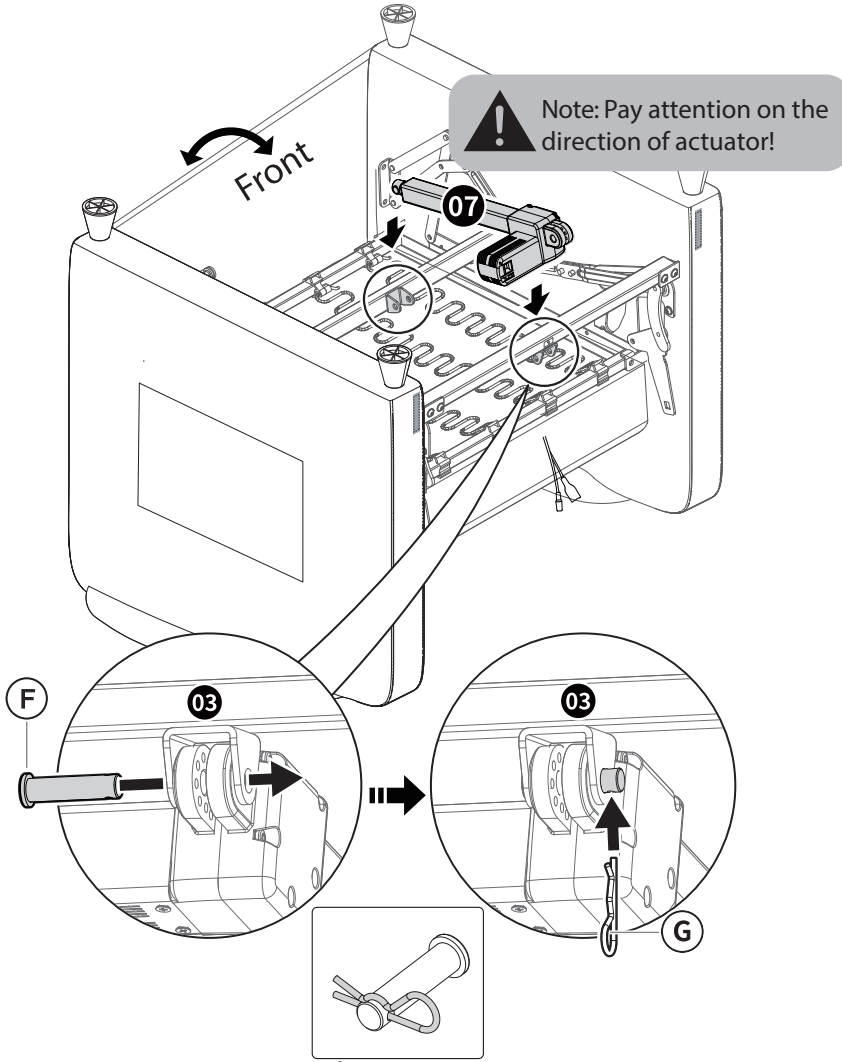


correctly installed state

Step 9

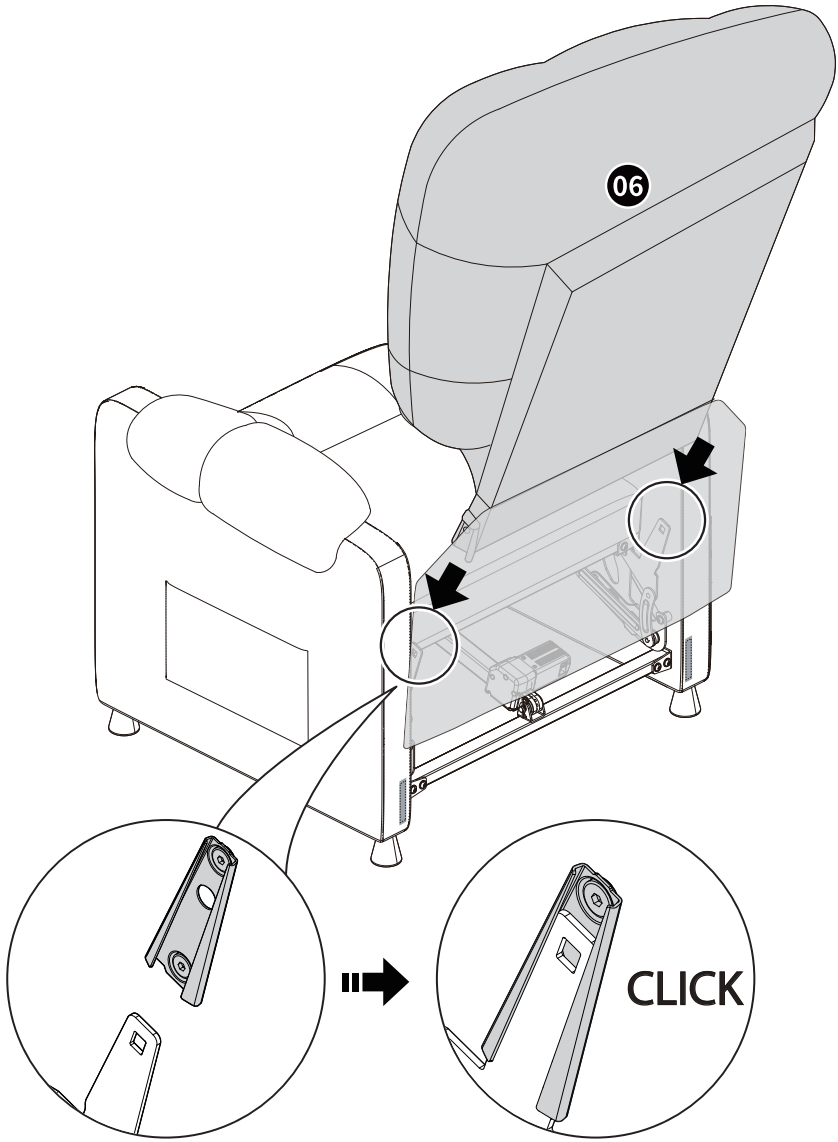


Step 10

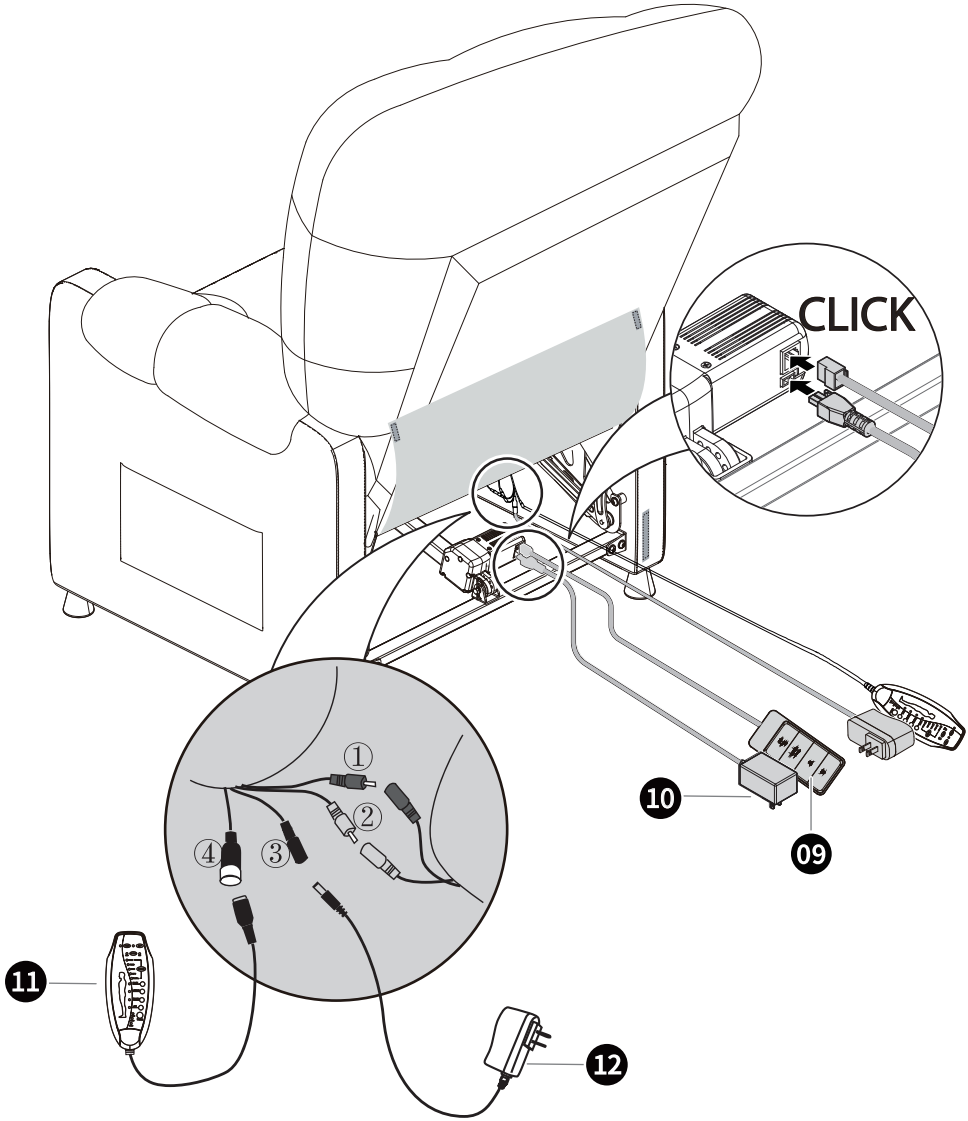


Connect①②with wires of same color from the seat cushion.
Connect③ with Massage Power Adapter 12 and④with Massage Controller 11

Step 11

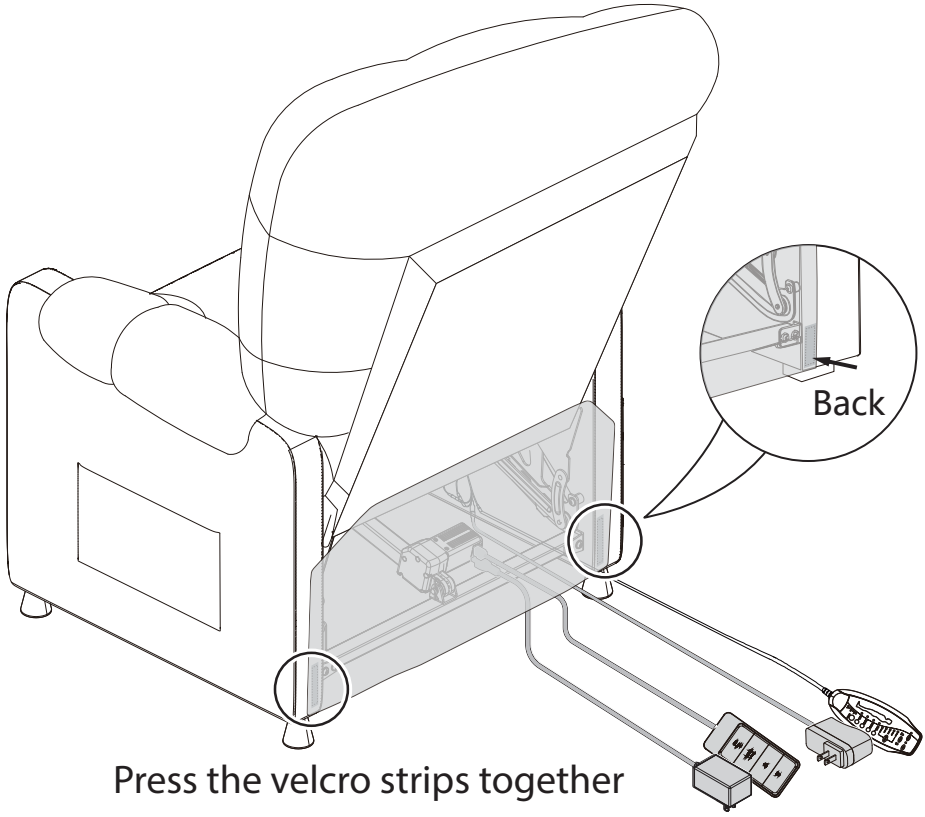


Step 12

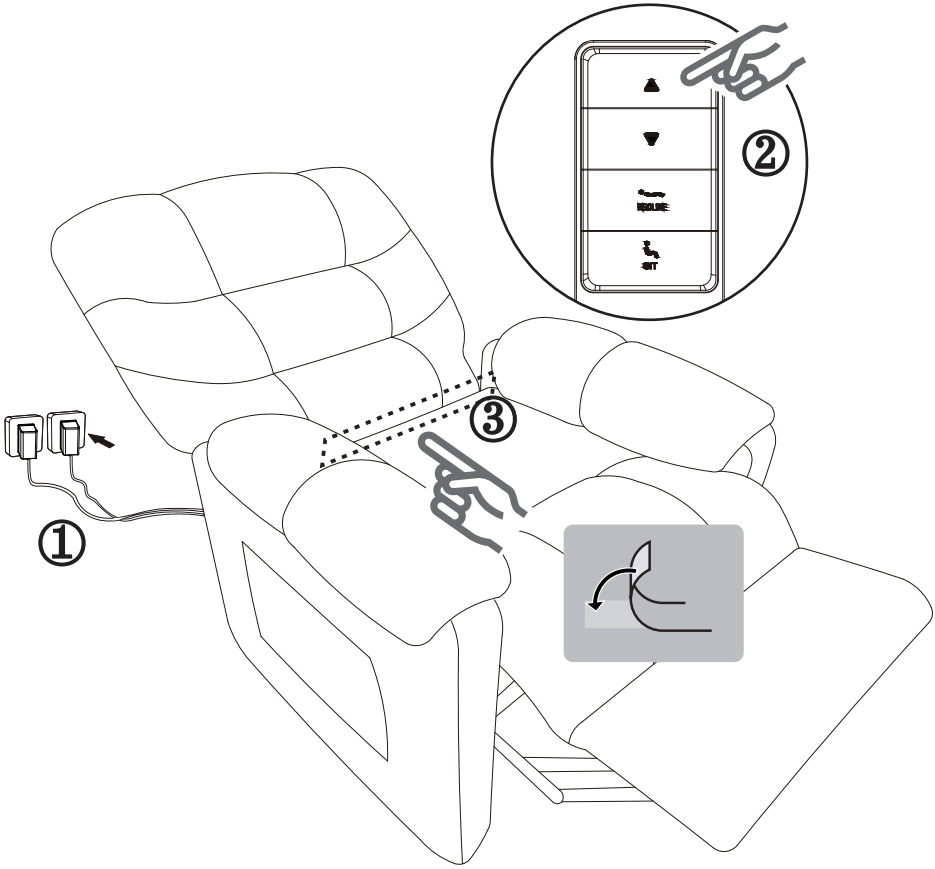


Step1: Connect to power
Step2: Press the button "△" to recline the chair
Step3: Align and attach the hook and loop fastener for a secure connection

Step 13

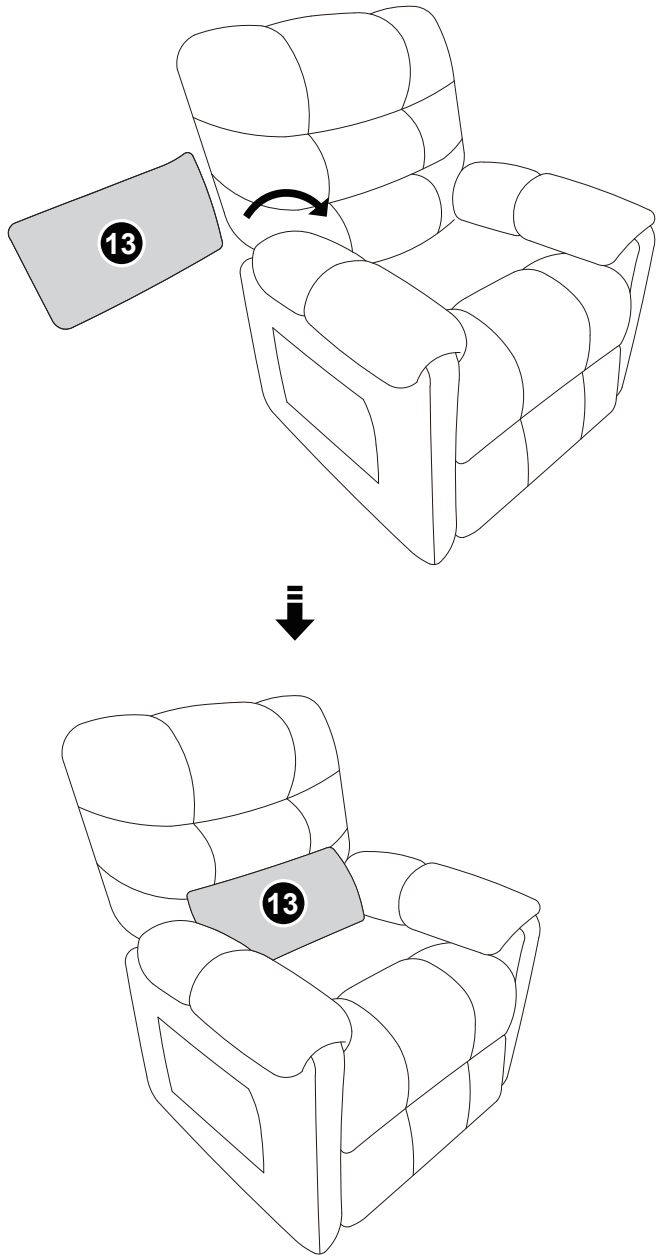

Reclining Controller Instructions

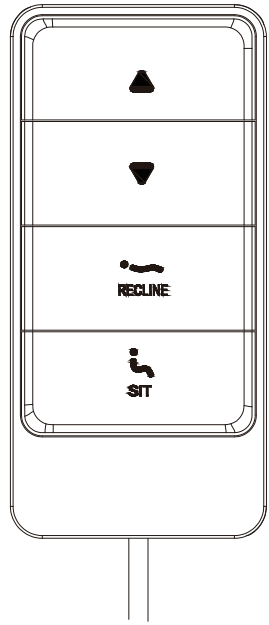

Press and hold the [△]button -Recliner slowly unfolds.


Press and hold the [▽]button -Recliner slowly retracts.

Tap the [RECLINE] button - Recliner reclines.

Tap the [SIT] button - Recliner returns to seated position.

Reset: Press and hold the [RECLINE + SIT]buttons together until recliner starts to retract and reset. Once reset is complete, recliner will return to seated position.

Massager User Manual

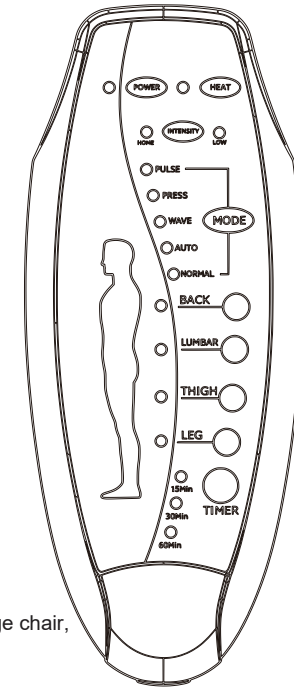

PRODUCT FEATURE

1.HEATING massage
2.8 Vibration Motors
3.5 Massaging modes
4.Adjustable intensity
5.Four massage zones, each zone can ᵇe operated individually
6.The default timing is 15-30-60 min selection

HOW TO USE

1、Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet(see Figure A)

Figure A



2、Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on.

3、Turn on the massage in each zone by pressing the BACK, LUMBAR, THINGS or LEGS buttons. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.

4、To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates

PULSE---for deep tapping massage
PRESS---provides rapid tapping massage
WAVE----for a gradual, side-to-side vibrating massage
AUTO---provides a random pulsing massage to all zones
NORMAL---for a firm, vibrating massage

5、To change the massage intensity press the INTENSITY button. The LED for HIGH or LOW intensities will illuminate when chosen.

NOTE：Discontinue use immediately if you feel any discomfort or pain.

6、NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that .

7、DO NOT use for more than 60 minutes of continuous use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, always follow basic safety precautions, including the following:

1. Use this product on a 12V circuit. Make sure the product is connected to an outlet that has the same configuration as the plug.
2. After use and before cleaning, unplug the product from the power source.
3. Do not reach for the product if it has fallen into water. Unplug immediately.
4. Never leave the product unattended when plugged in. When not in use and before adding or removing parts, unplug the product.
5. Do not use outdoors.
6. Do not carry the product by its power cord.
7. Keep the cord away from heated surfaces.
8. Supervise small children when using the product near them.
9. Ensure children do not play with this product.
10. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
11. To disconnect, push the 'POWER' button to the 'OFF' position, make sure all functions have stopped and remove the plug from the outlet.
12. Only use this appliance for its intended purpose as described in this manual. Do not use attachments which are not provided with the unit.

HEALTH CAUTION

1. If you have any concerns regarding your health, consult your doctor before using this product.
2. Individuals with pacemakers should not use this product.
3. If you experience muscle or joint pain for long periods, stop using the product and consult your doctor.

MAINTENANCE INSTRUCTIONS


TO STORE:

1. Place the product in its original box or a dry and cool place. Keep the product away from sharp or pointed objects that could cut or puncture the fabric.
2. Do not wrap the power cord around the unit. Do not hang the unit by its power cord.

TO CLEAN:

1. Before cleaning, unplug the appliance from the power source and wait for it to cool.
2. Do not clean with water or other liquids. Wipe the fabric with a damp sponge or cloth, using a mild detergent. Pat dry with a clean, dry cloth.
3. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120 ℃ to clean the unit.

Restore to Optimal Condition before use

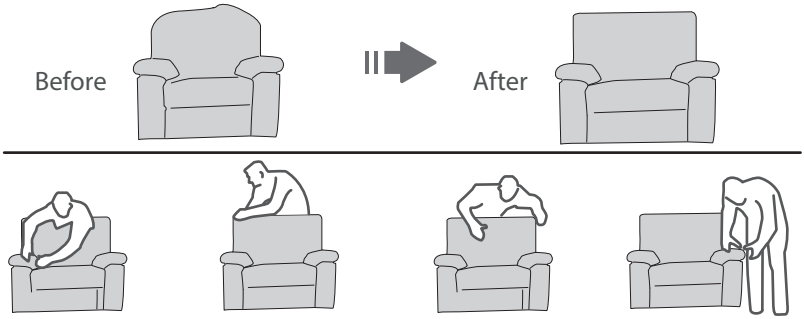



Only the occupant or a responsible adult should operate the chair.



Keep hands and body parts away from the recliner mechanism while it is in motion.



After use, always return the chair to the upright position.



Do not allow children to play with or operate the chair. Children must be supervised at all times.



Do not place objects under the chair. Ensure it is clear of obstructions before operation.



Do not suddenly drop into the chair when sitting.



Do not allow anyone to sit on your lap, the chair arms, or the recliner mechanism while in use, as this may cause tipping and injury.



Make sure there is enough space for the chair to fully recline.