







Dining Chair

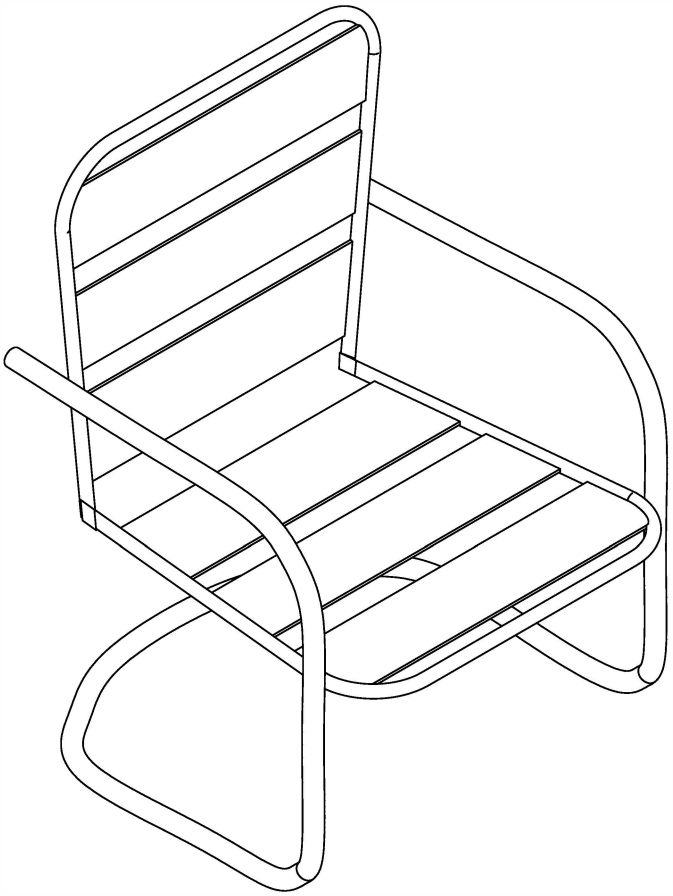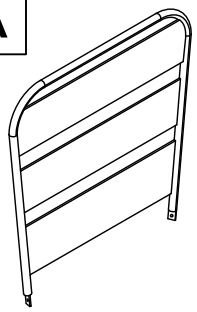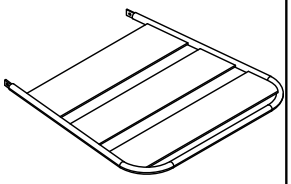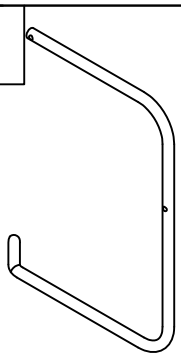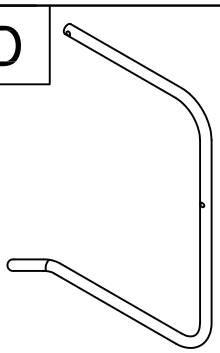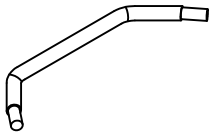

PART LIST

A	B	C	D	E
				
Chair Back 1 PC	Chair Seat 1 PC	Left Support Leg 1 PC	Right Support Leg 1 PC	Leg Connector 1 PC

HARDWARE LIST


#1	#2	#3	#4	#5
 M6X62mm	 M6X13mm			
Long Bolt 4 PCS (Extra 1)	Short Bolt 2 PCS (Extra 1)	Hex Nut 6 PCS (Extra 2)	Flat Washer 8 PCS (Extra 4)	Wrench 1 PC


#6	#7	#8
		
Allen Wrench 1 PC	Plastic Washer 4 PCS	Round Plastic Washer 4 PCS

NOTE: We recommend at least two people work together to assemble unit.


Step 1. Lay chair seat (part B) down on a soft flat surface, such as carpet, as shown below. Attach chair back (part A) to chair seat (part B) using short bolts (part #2), hex nuts (part #3), flat washers (part #4), wrench (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

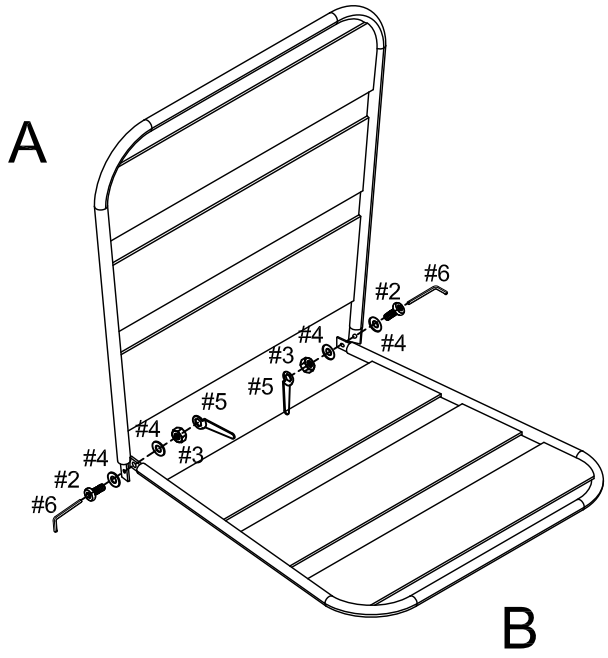

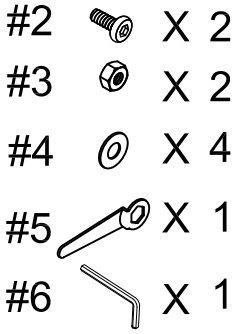


Step 2. Attach left support leg (part C) and right support leg (part D) to leg connector (part E).

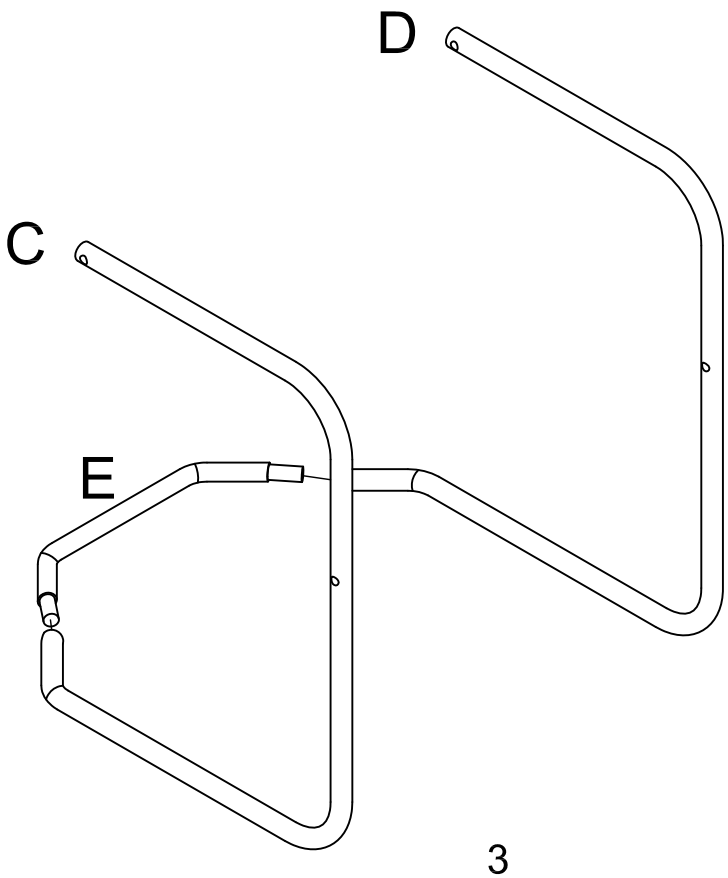

Step 3. Attach support legs (parts C & D) to chair back (part A) and chair seat (part B) using long bolts (part #1), Round Plastic Washer (part #8), hex nuts (part #3), flat washers (part #4), plastic washers (part #7), wrench (part #5) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

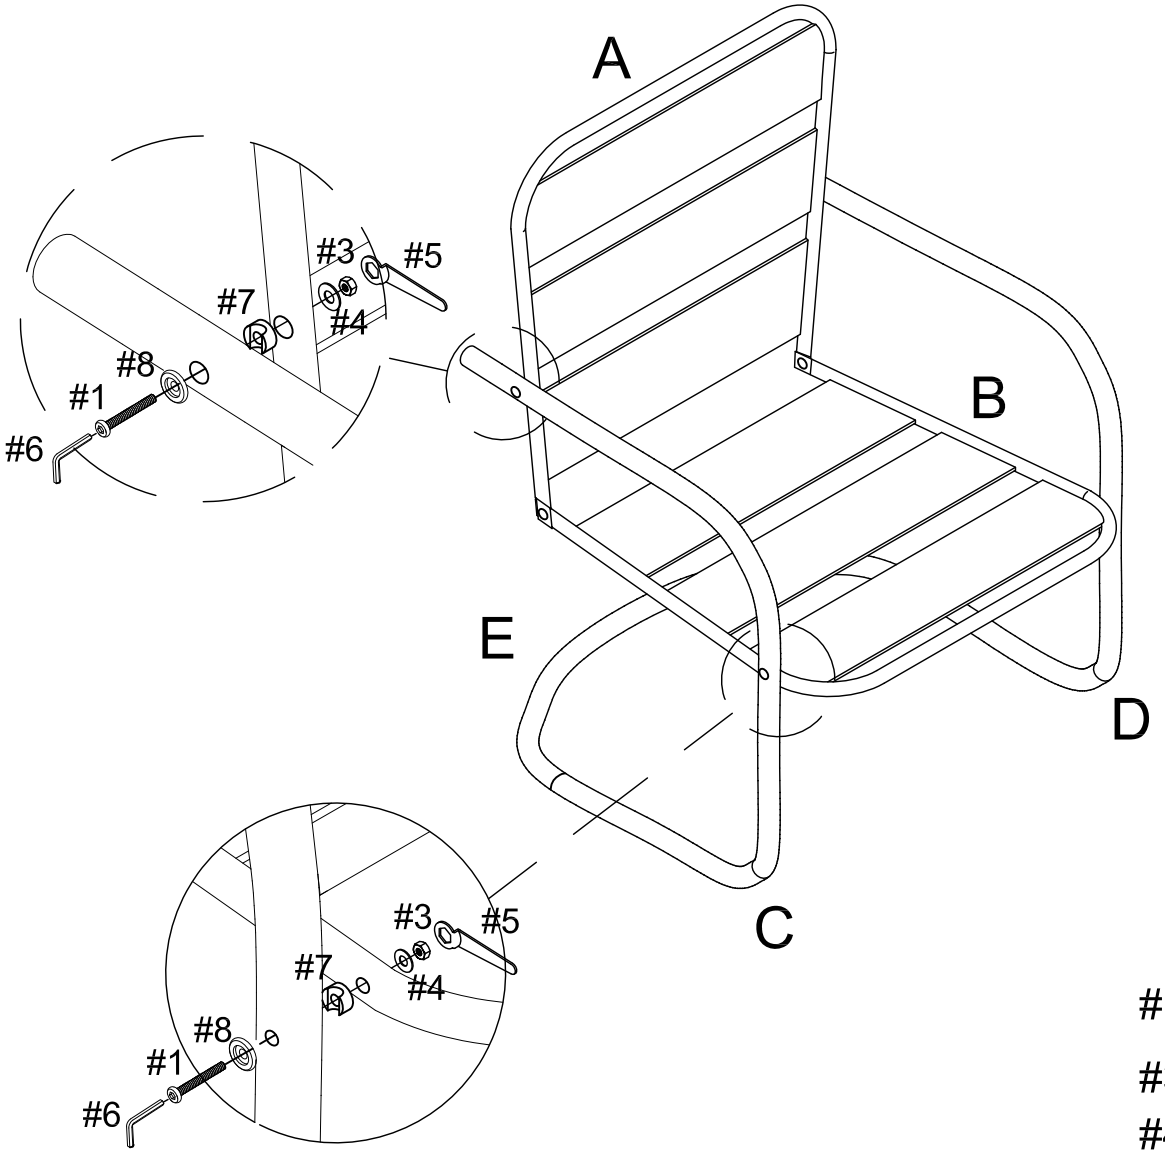

#1 X 4
#3 X 4
#4 X 4
#5 X 1
#6 X 1
#7 X 4
#8 X 4