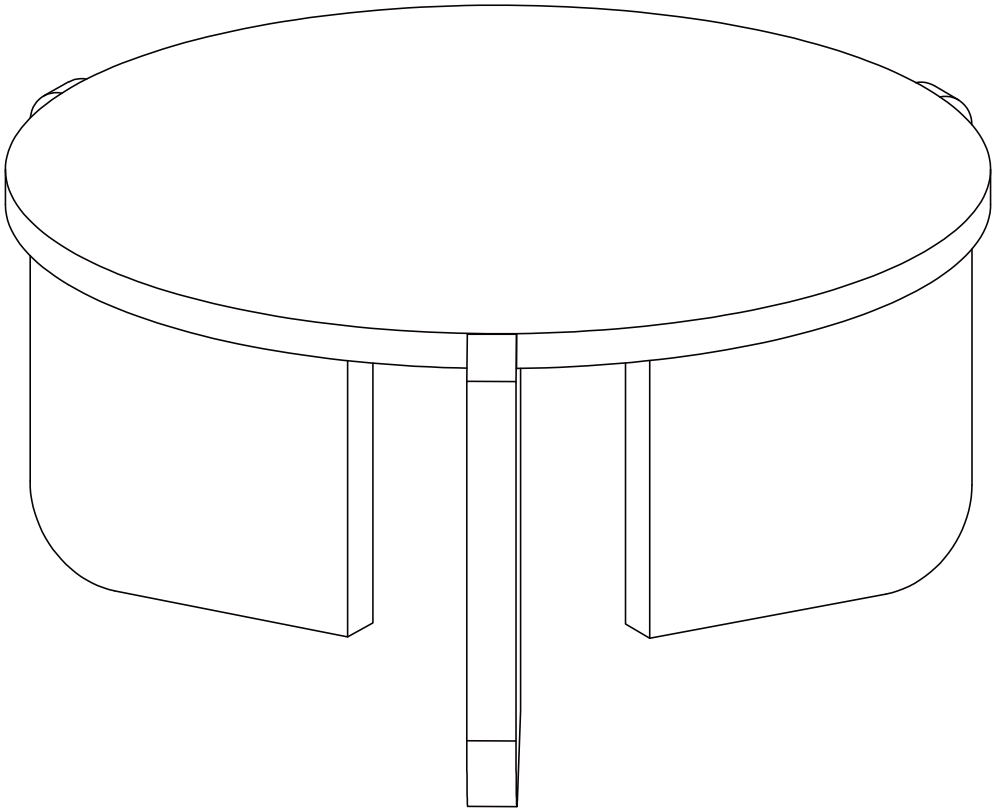
Coffee Table



Trouble shooting

Some parts are missing

Other concerns

Send us an email with your issue at
help@icosiest.com

Spare part ships in 24 hours

Customer care responds in 24 hours

We ensure your complete satisfaction

Contact Information

For assistance or support, please contact our customer service team. We're committed to resolving your concerns promptly.

help@icosiest.com *[24/7]*
(909)312-3668 *[9AM-5PM(PT) Monday to Friday]*

As a valued customer,your satisfaction is our TOP priority!

Return Policy

Your satisfaction is our top priority. If our product fails to satisfy you,please let us know how we can make things right for you. Our trained customer care team can handle most concerns and assist you with any questions you may have. Simply shoot them a message at **help@icosiest.com** with your order number and question.To be eligible fora full-refund return, the item must be in pristine condition,in the original packaging,with all of the shipped components intact and not yet assembled,and with the item's unique proof of purchase.

Assembly Instructions

BEFORE YOU BEGIN:

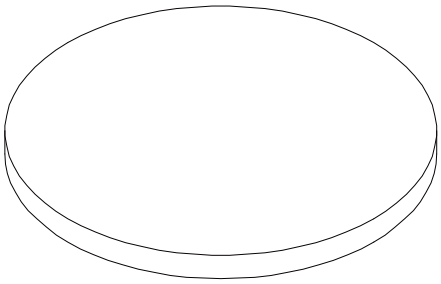
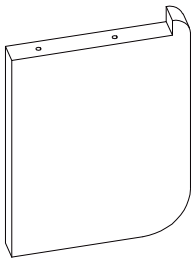
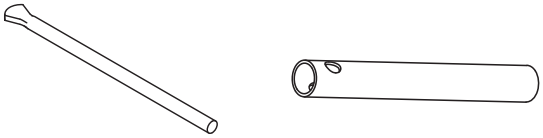


- Please read all instructions thoroughly before starting assembly
- Keep these instructions for future reference
- Verify all components and hardware against the parts list
- Follow each step in sequence for proper assembly

IMPORTANT SAFETY NOTES:

- Assemble the product close to its intended location to avoid unnecessary moving
- Place the product only on flat, stable surfaces
- WARNING: Keep small parts and packaging materials away from children - choking hazard


Need assembly help or missing parts?
Scan for setup guidance and product support.

Packing List

NO.	PICTURE	QTY
1		1
2		3
3	405mm	6
A	 M6	6+1
B		1
C	 Ø6x15	6+1
D	 Ø18x2	6+1
E		6+1


Product Assembly

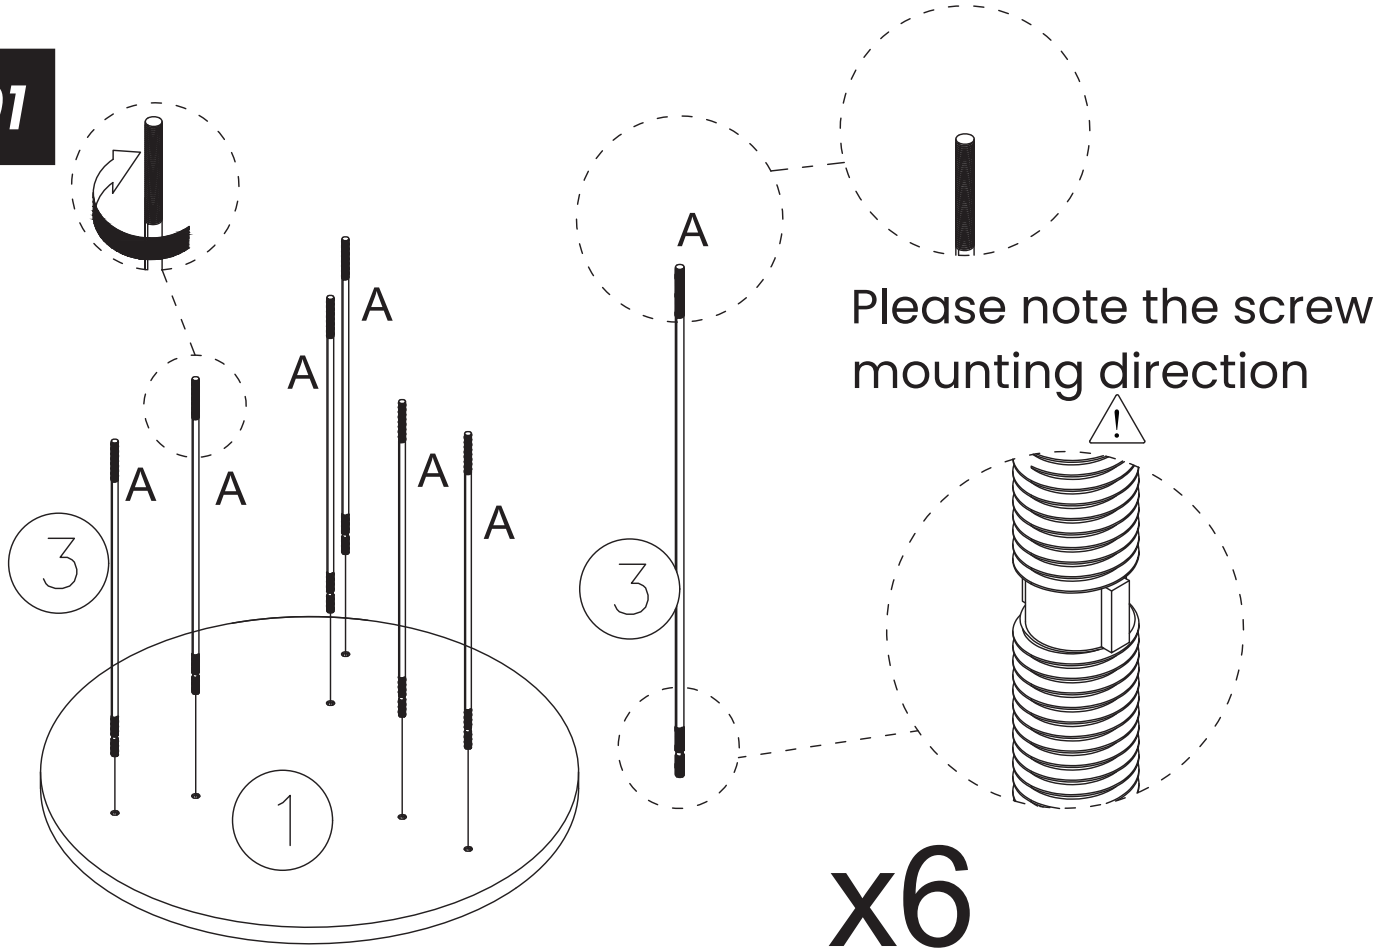01



02

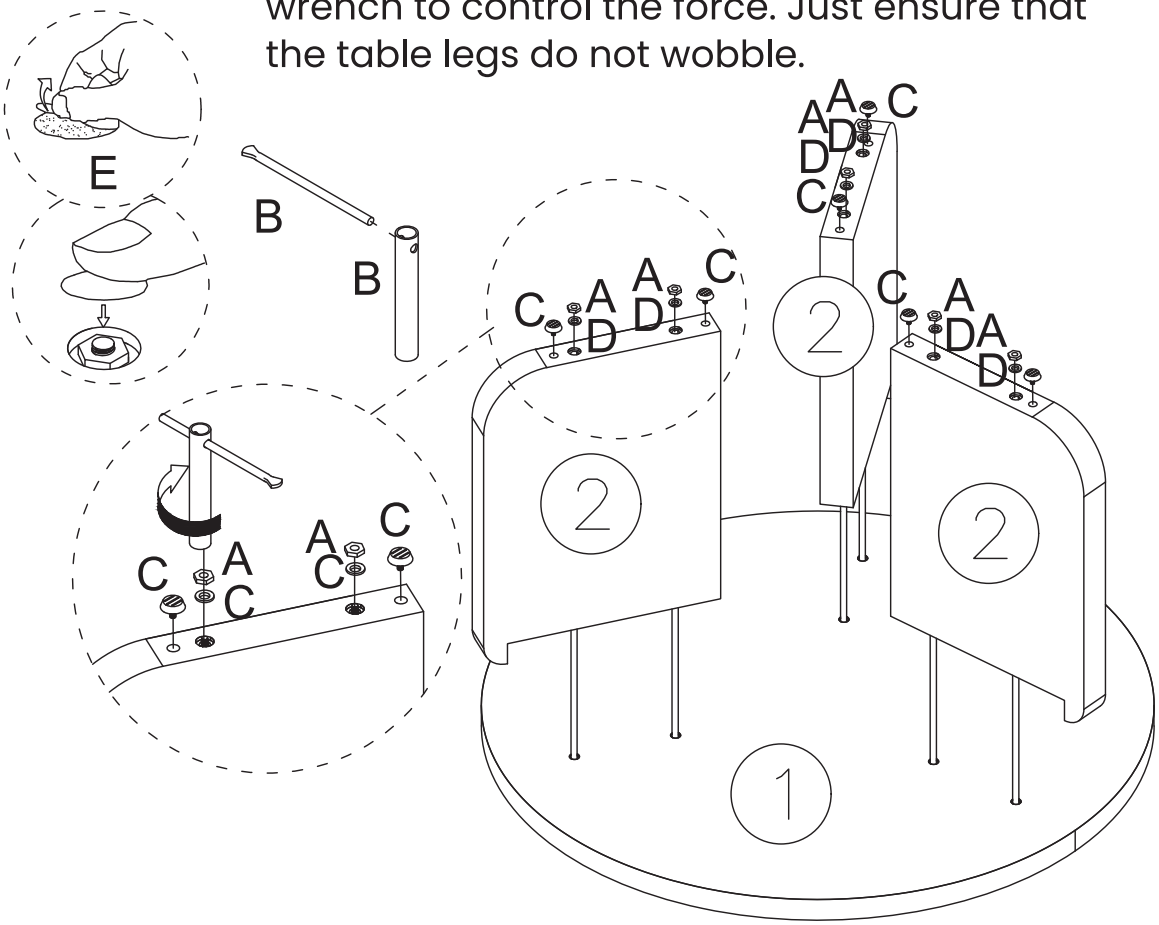⚠ Excessive locking may cause the nuts to loosen. It is recommended to use a torque wrench to control the force. Just ensure that the table legs do not wobble.



A	x6
B	x1
C	x6
D	x6
E	x6

Return / Damage Claim Instructions

- **DO NOT discard the box / original packaging.**
  In case a return is required, the item must be returned in original box. Without this your return will not be accepted.
- **Take a photo of the box markings.**
  A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.
- **Take a photo of the damaged part (if applicable).**
  A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.
- **Send us an email with the images requested.**
  Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

How satisfied are you with our products? Your comments mean a lot to us!
Find more awesome deals on **http://www.icosiest.com**
For latest information, follow us on **facebook.com/icosiest**
For daily design inspirations, like us on **instagram.com/icosiest_furniture/**