
Modern Farmhouse TV Stand

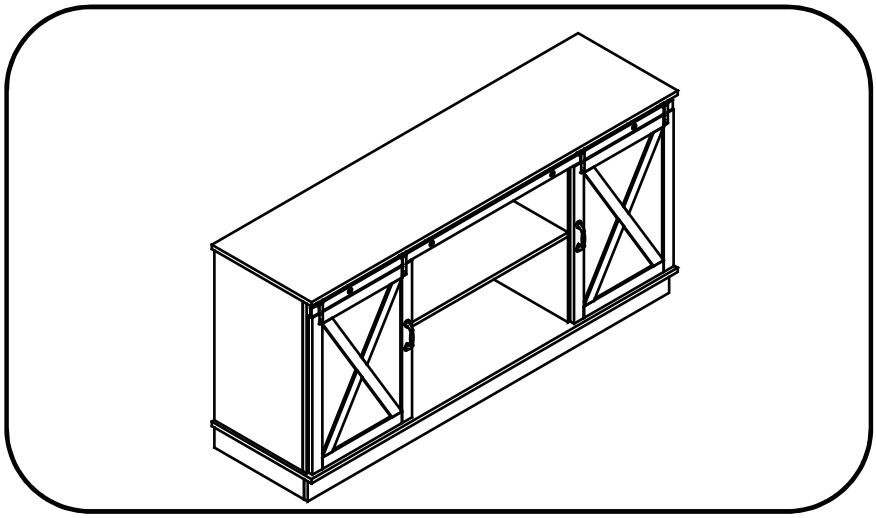

Assembly Instructions

Product Dimensions:
57.87”L×15.35”D×27.95”H

Please take a moment to read through the entire instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

WARNING ⚠ CAUTION

ADULT ASSEMBLY REQUIRED
CHOKING HAZARD

- This product includes small parts, sharp points and sharp edges in its unassembled state. Keep unassembled parts away from children under 3 years of age, and animals.

SAFETY WARNINGS

- Follow the information on the warnings appearing on table and on the carton. Do not remove warning label from cabinet.
- Do not allow children under 3 years of age to use the cabinet.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

FURNITURE TIP-OVER HAZARD

Children have died from furniture tip-over

To reduce the risk of furniture tip-over:

- ALWAYS install tip-over restraint especially if used by a wall or in the open.
- NEVER put a TV on this product
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- ALWAYS place heaviest items in lowest cabinet.

PARENTAL SUPERVISION IS REQUIRED

- Parents or Guardians should supervise use under the intended age specifically regarding children that may have access to it and climb on the unit.
- Do not allow horseplay on, under, or behind the unit and prohibit jumping on the cabinet.
- If used improperly, your table may be pulled over or fall, creating risk of injury or damage. Children should not be permitted to climb or pull on the cabinet.

USE, MAINTENANCE & ASSEMBLY

- Periodically check and ensure that the components are in their proper position, free from
- damage, and that all connectors are tight.
- Use on level surfaces only. Assemble on a soft level surface to avoid damage to unit or floor.
- Do not use this item if any components are missing or damaged.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- Only clean using damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check you have all components and tools listed on page 4
- Do not stand or put weight on this product during assembly, this could cause damage.
- Remove all hardware from the plastic bags and separate them into groups.
- Assemble the item as close to its final position (in the same room) as possible.
- Certain assembly steps may be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- We do not recommend power screwdrivers. Only use hand screwdrivers to prevent damage to unit.
- Keep these instructions for future reference.

Enfants morts suite au basculement d'un meuble.

Afin de limiter le risque de basculement de meuble:

- TOUJOURS utiliser les fixations anti-basculement.
- NE JAMAIS installer de TV sur ce produit.
- NE JAMAIS laisser d'enfants se tenir debout sur les tiroirs, portes ou etageres, y grimper ou s'y suspendre.
- NE JAMAIS ouvrir plus d'un tiroir a la fois.
- TOUJOURS placer les choses les plus lourdes dans les tiroirs du bas.


Han muerto ninos por el vuelco de meubles.

Para limitar el riesgo de vuelco de los meubles:

- Utilisar SIEMPRE las fijaciones antivuelco que suministran.
- NUNCA instalar un TV sobre este producto.
- NUNCA permitar que los ninos se pongan de pie, trepen o se cuelguen de los cajones, puertas o baldas.
- NUNCA abrir mas de un cajon a la vez.
- Colocar los objetos mas pesados en los cajones inferiores.

ASSEMBLY AT A GLANCE

Please take a moment to read through the whole instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

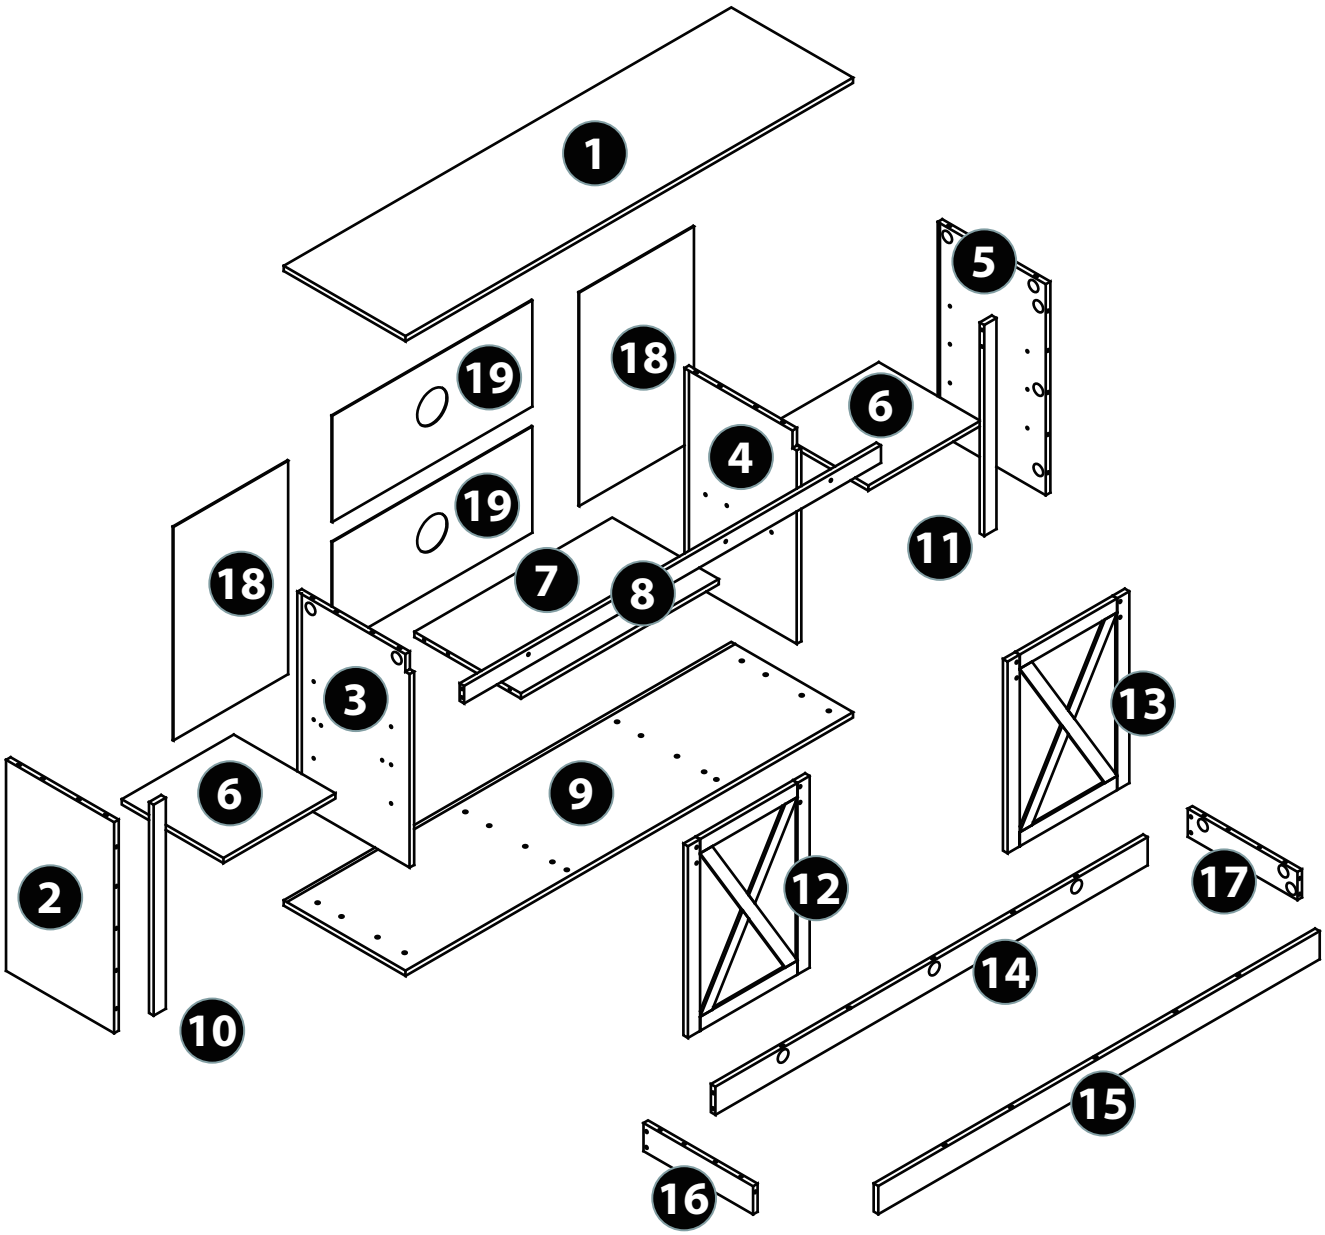


This drawing is to give you an overall idea only of how this assembly will go together and does not replace the assembly instructions.

COMPONENT PARTS

Please check that you have all the parts listed below

1. Top Panel ×1
2. Left Side Panel×1
3. Left Support Side Panel ×1
4. Right Support Side Panel×1
5. Right Side Panel×1
6. Drawer Panel ×2
7. Middle Panel×1
8. Stand Panel ×1
9. Bottom Panel ×1
10. Drawer Left Support Panel ×1
11. Drawer Right Support Panel ×1
12. Left Drawer Door ×1
13. Right Drawer Door ×1
14. Bottom Back Support Panel×1
15. Bottom Front Support Panel ×1
16. Bottom Left Support Panel ×1
17. Bottom Right Support Panel ×1
18. Back Panel ×2
19. Back Panel ×2

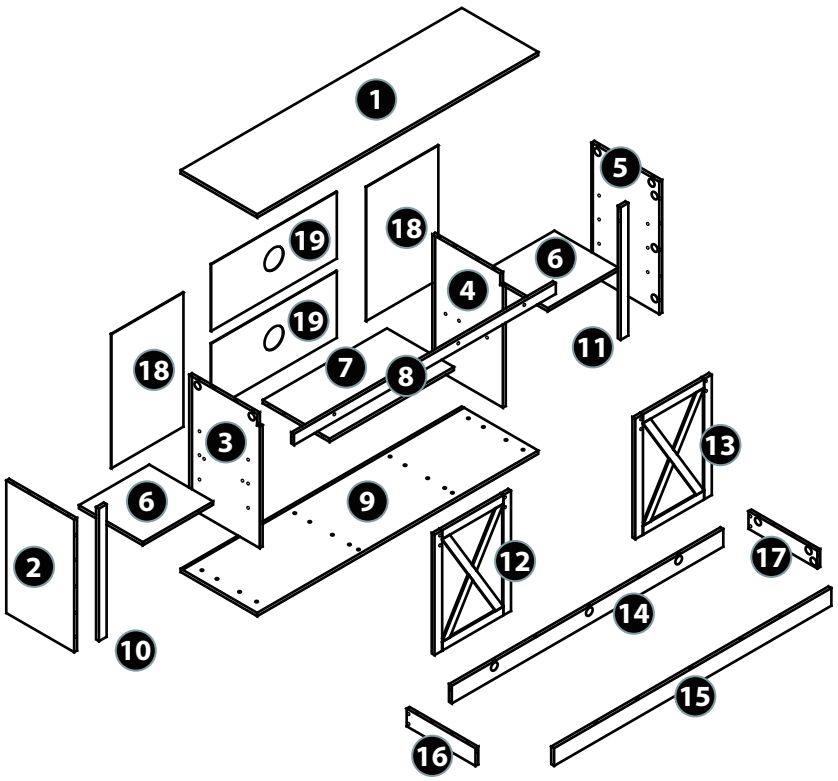

ASSEMBLY HARDWARE



Cam Bolt × 26 | Cam Lock × 26 | Screw ×16 | Screw × 3 | Wood Dowel Pin × 38




Screw × 8 | Bolt × 3 | Drawer Glide×1 | Corner Connector×4 | Shelf Pin×2



Plug × 8 | Drawer Glide×1 | Door Handle×2 | Bolt × 4

Tools Required



Phillips Screwdriver (Medium) (not included)




Hex Screwdriver

***Do Not Use Power Screwdriver or Drill.**

ASSEMBLY INSTRUCTIONS


1


Select C×4, E×4, and 3×1, 4×1,7×1. Position 3 in the left, position 4 in the right. Insert 3 into the 7 with the C×2, E×2. Repeat the same steps for the 4.

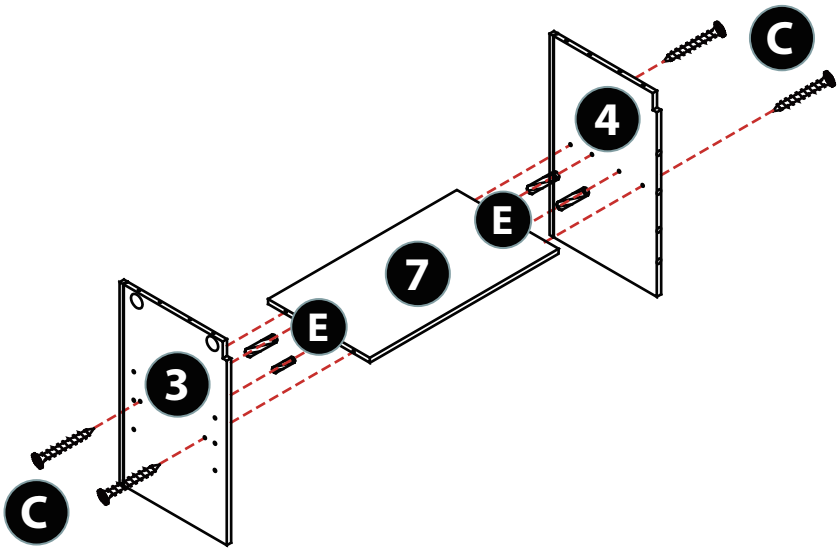

2

Insert 10 into 2 with A×3,E×2. Insert B×3 into the 2.Repeat for the 5 and the 11.

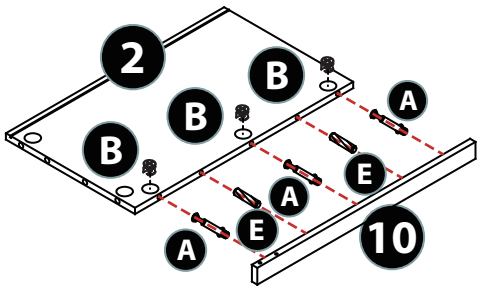


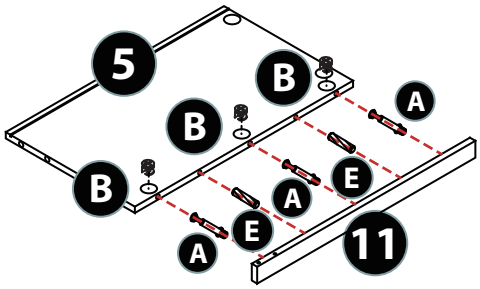

ASSEMBLY INSTRUCTIONS


3

Insert 16 into 14 with C×2.
Repeat for the 17.

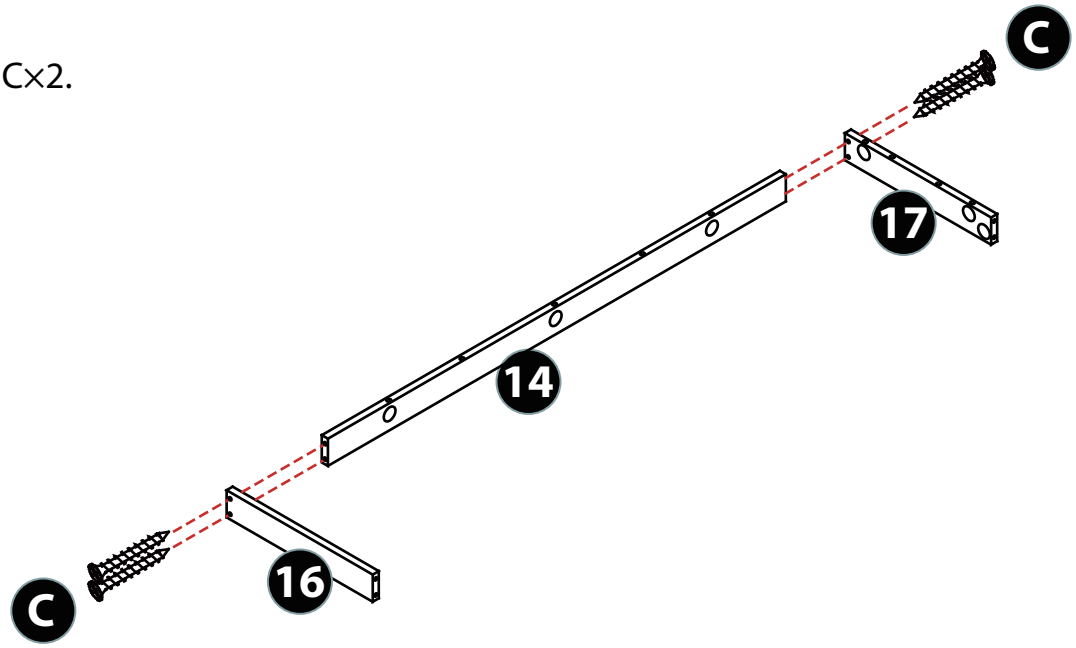

4


Insert 15 into one side of the 16 with A×1,B×1 and E×1.
Repeat for the 15 and the 17.

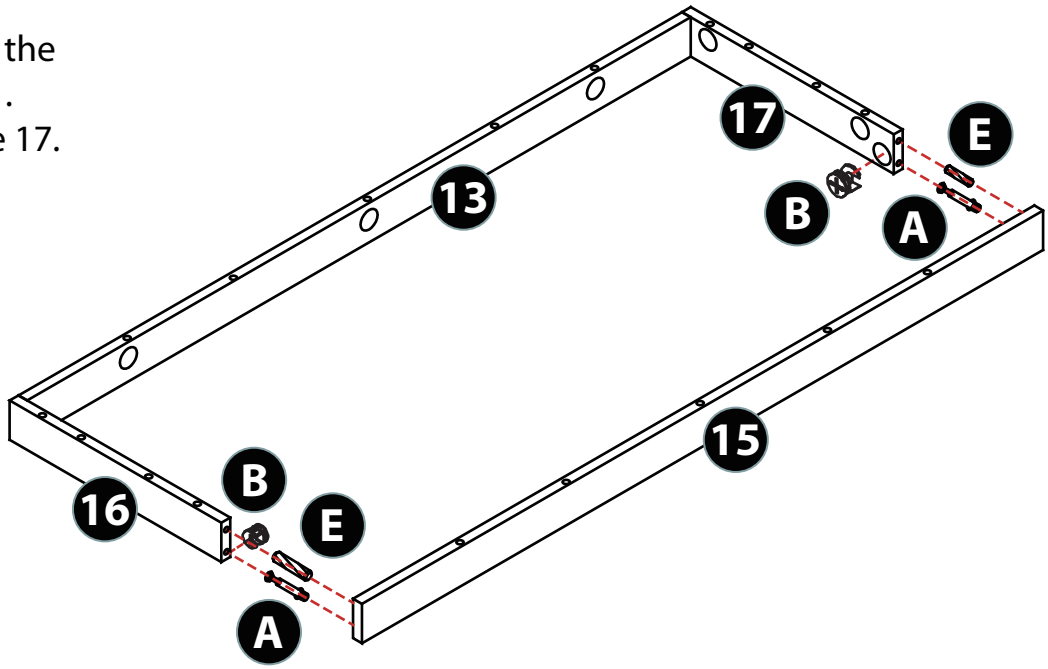

ASSEMBLY INSTRUCTIONS


5

Insert 2 into 8 with E×2.
Repeat for the 5 and 8.

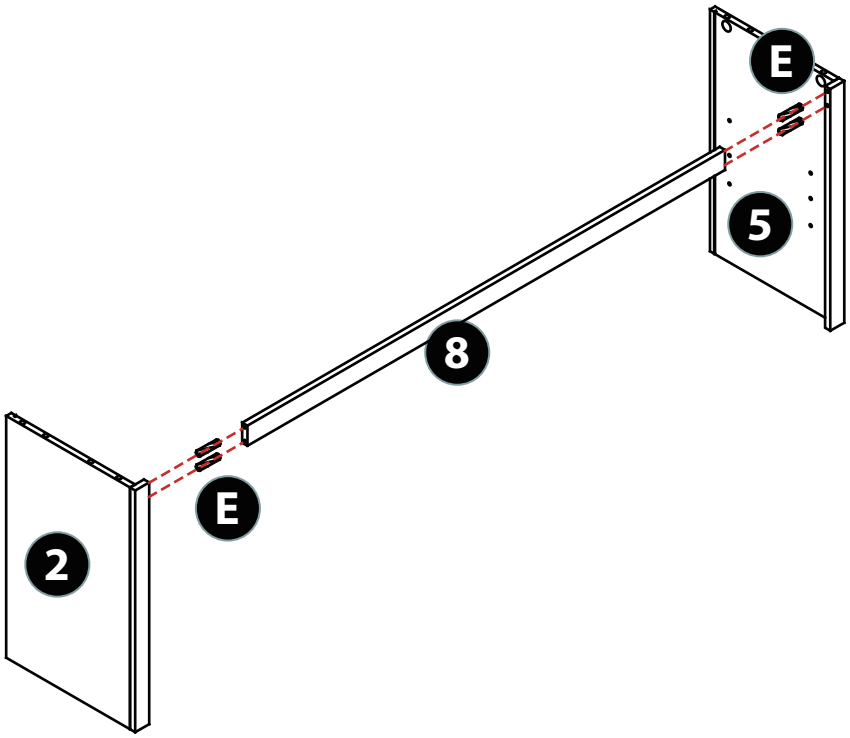

6


Select A×8,B×8,D×3,E×8 and 1×1. Insert 1 into the top of the 2,3,4,5 with A×8,E×8,D×3. Insert B×2 into the 2. Repeat for the B×2 into the 3,4,5.

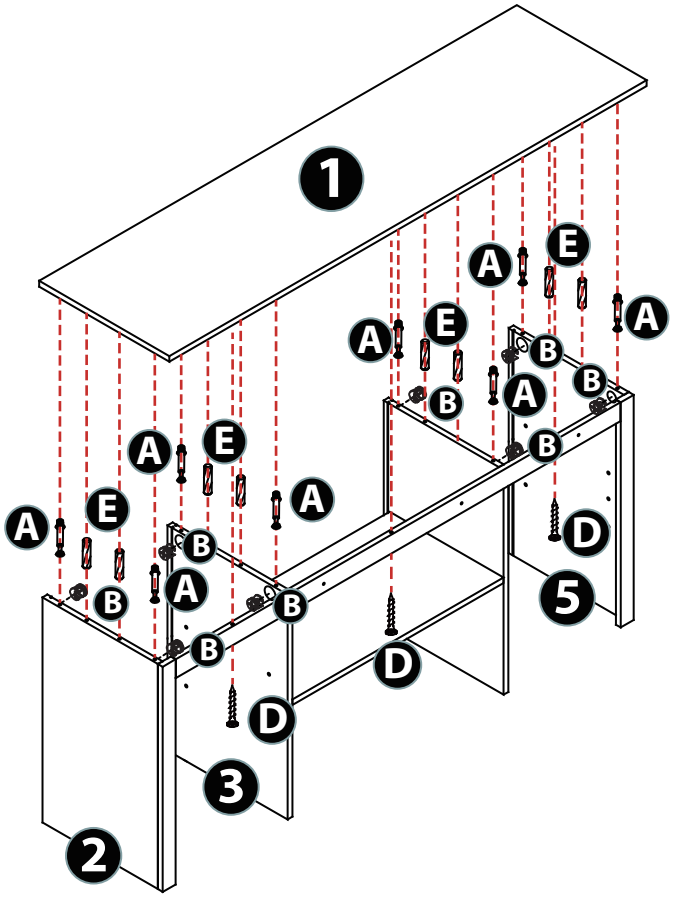

ASSEMBLY INSTRUCTIONS


7

Select C×8,E×8 ,18×2 and 19×2.
Install 18×1 into the groove of the 2 and 3.Install the other 18 into the groove of the 4 and 5.
Insert the 19 into the 19 with L.Install 19×2 into the groove of the 3 and 4.
Turn the TV Stand upside down.Insert the 9 into the TV Stand with the C×8.

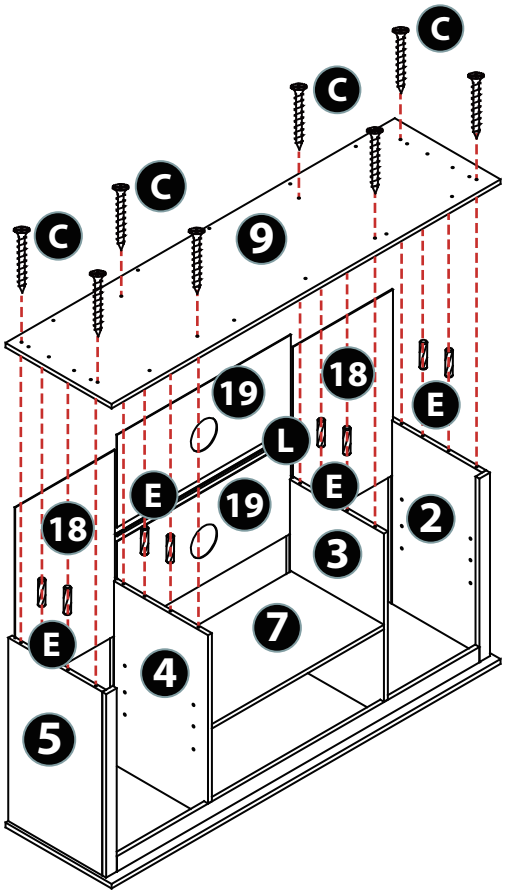

8


Select A×10, B×10,E×8.
Insert Bottom Support Panel into the 9 with A×10, E×8 into the 2 and 5. Insert the B×2 into 17. Repeat for the 16.Insert B×3 into the 14. Repeat for the 15.

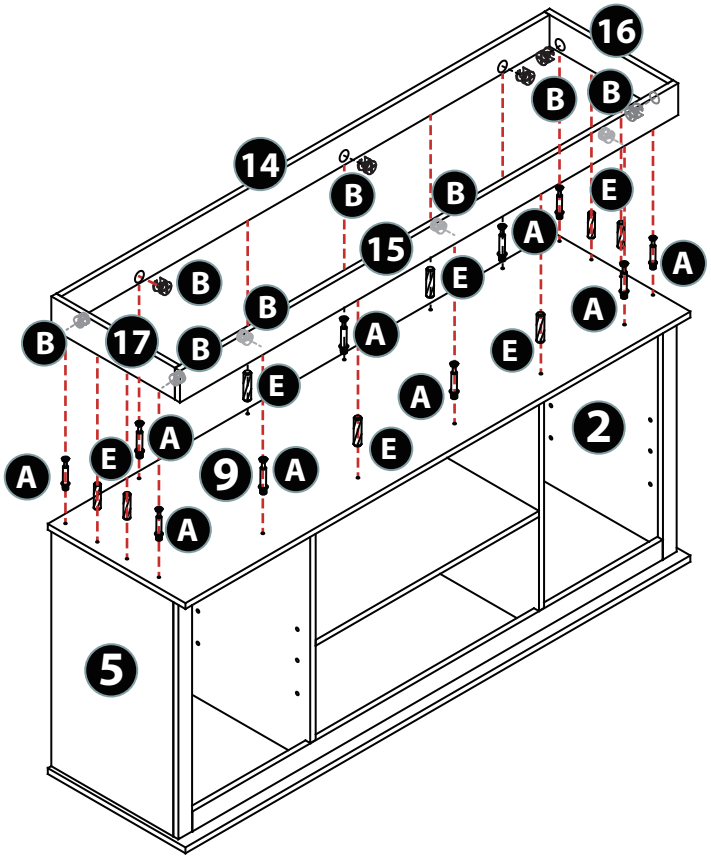

ASSEMBLY INSTRUCTIONS


9

Insert H into the 1 with the G×4. Insert the J×2 into the 9.

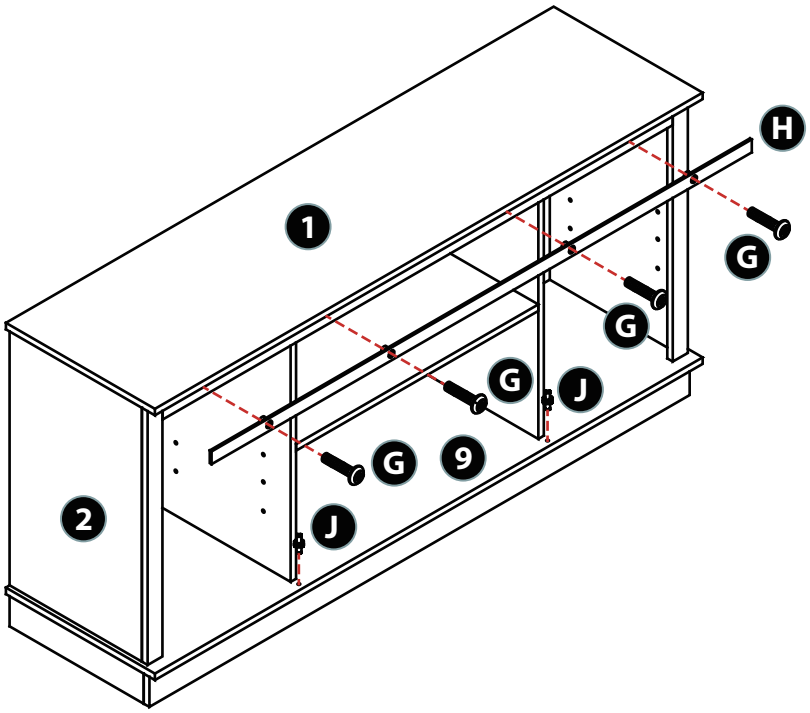

10


Insert the M into the 12 with the N×2. Repeat for the 13 and M.

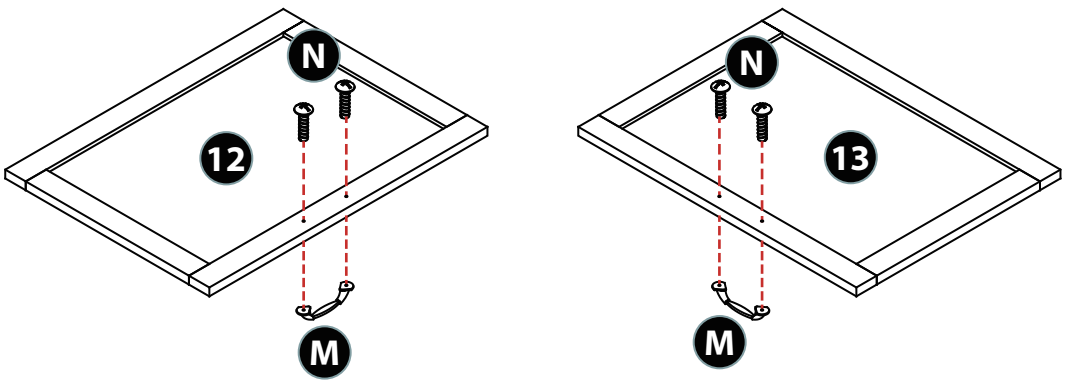

ASSEMBLY INSTRUCTIONS


11


Insert K ×2 into the 3. Put the 6 ×1 onto the K ×2. Repeat for the 5 and 6.

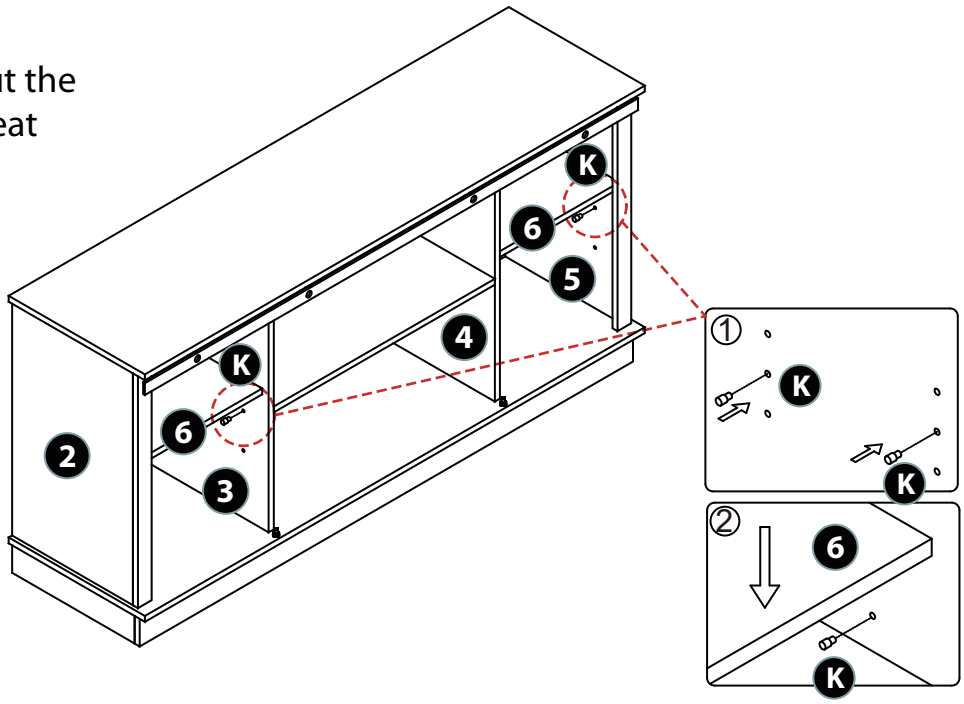

12

Insert Bottom of the 12 and 13 into the TV Stand. Insert the F×4 into the 12 into the 8. Repeat for the 13.

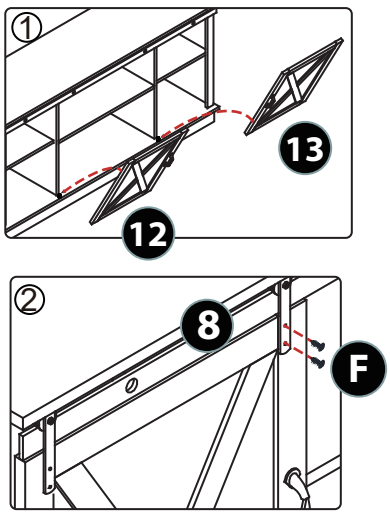

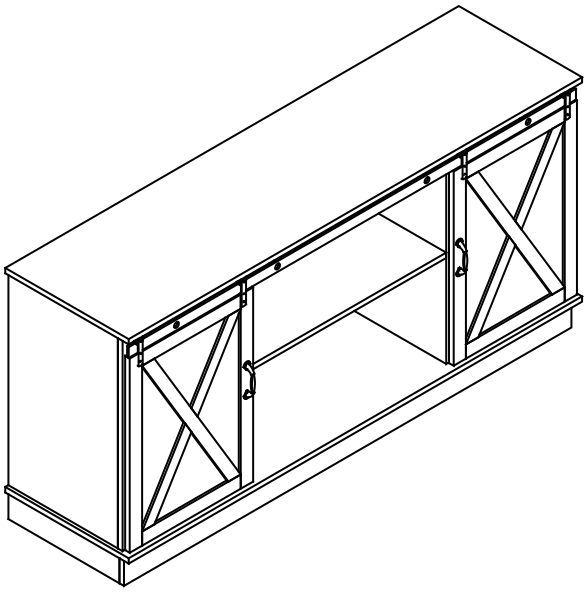

ASSEMBLY COMPLETE

