EASY ASSEMBLY AND OPERATION INSTRUCTIONS

This item, when assembled by the following instructions, should take 10 minutes to assemble.Please follow the step by step guide and enjoy your Pumpkin!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST


A.Base
B.Support poles x 4
C.Shoes x2
D.Pants
E.Torso frame
F.Hip
G.Cloak
H.Right arm
I.Left arm
J. Head
K.Rope



UL Power Adapter Spec
Input:100-240V-50/60Hz
Output:5.9V 2A

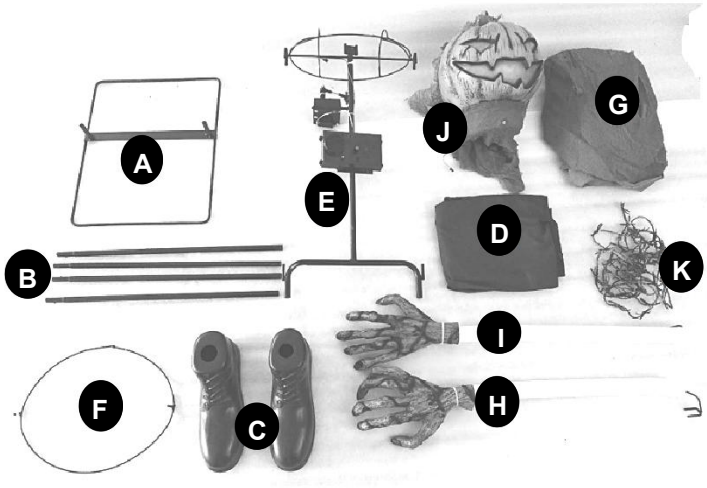

STEP 1:SETTING UP THE BASE AND SUPPORT POLES

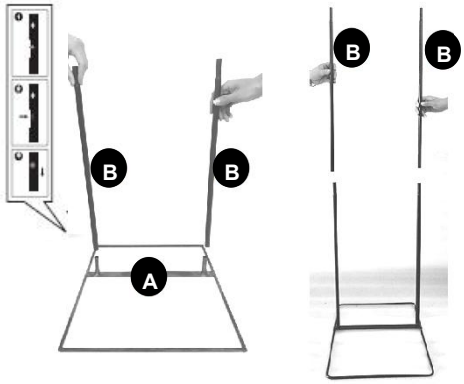


The longer end of the Base (A) goes toward the front.Attach 4 Support Poles (B) to the base (A) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.shoes (C)over the Support poles (B) as shown.



STEP 2:ADDING THE PANTS AND TORSO FRAME


Lower the pants (D) over the support Poles (B),Attach the torso frame (E) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.Lower the Hip (F) over the Torso Frame into the hole on the torso frame,then rise the pants (D) over the tip (F).

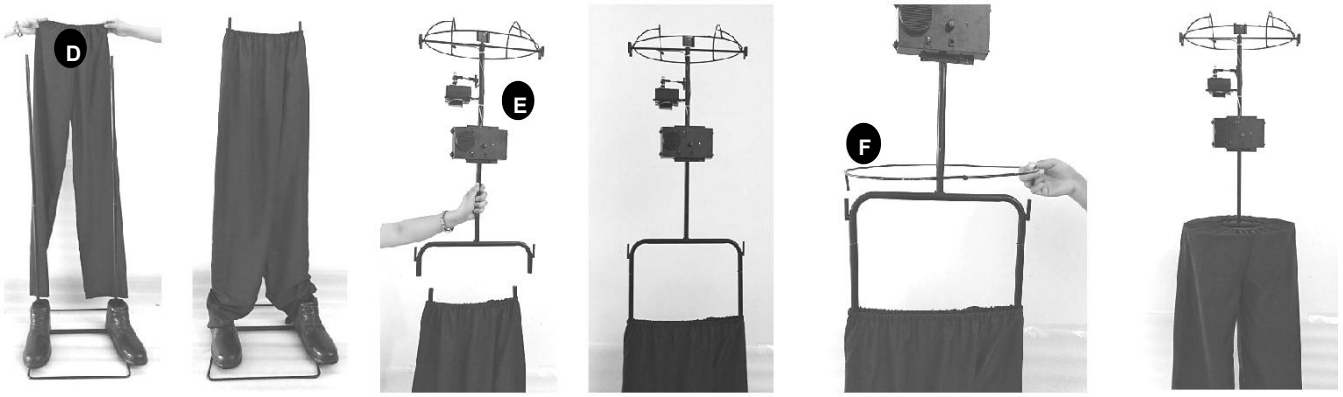

PROCEED TO PAGE 2>>


STEP 3:ATTACHING THE CLOAK & ARMS AND HEAD


Lower the cloak (G) over the Torso Frame (E).Side right arm (H) up through the right sleeve and slide the forked- hooked into hole on the torso frame, repeat for the left arm(I).Set the head (J) onto the torso frame into the hole as show.

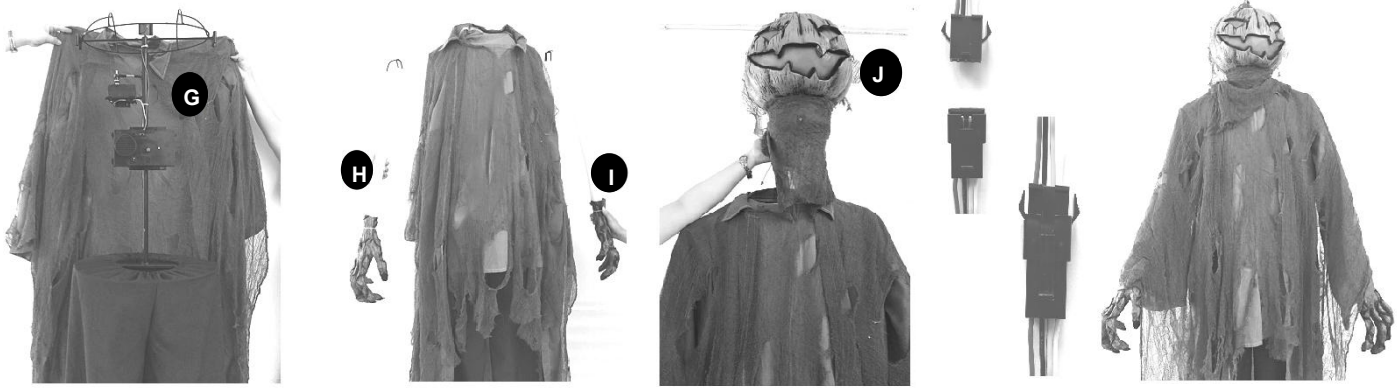

STEP 4:ATTACHING THE ROPE

Set the rope(K) on the cloak as show .Carfully connect conector jack wired from the funtion box to the head,Connect the UL adapter and Try Me button at the funtion box and run down through the costume and out the back.

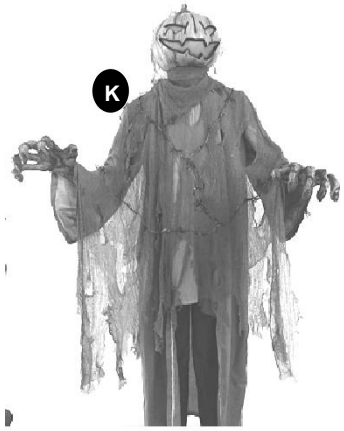

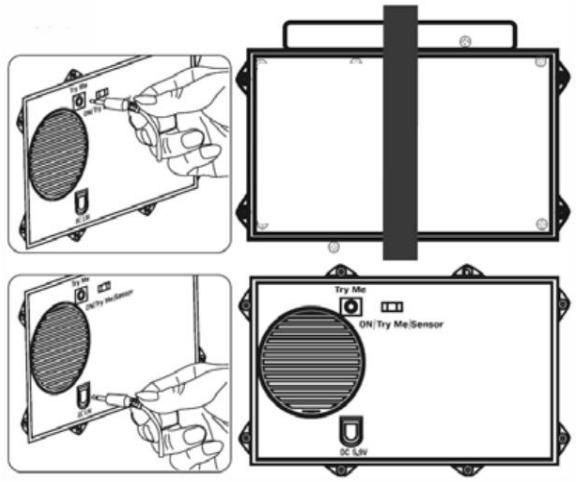

FINISH



OPERATION INSTRUCTION

The Pumpkin has 3 operation settings which can be the main function control box on the torso frame.

ON: This setting allows the item to be activated .

TRY ME: This setting allows the item to only be activated when you push the try me button is activated.

SENSOR:This setting included sound and light sensor ,this setting allows the item to only be activated whe the sensor is activated.the item will operate for one audio-cycle with sensor activation.

ENJOY YOUR Pumpkin!

The Function Control box also includes a Volume Control knob, which allows you to adjust the volume to be as loud or as quiet as needed. Be sure to test the item before finalizing your display so you can set the volume to your liking.

