ROTATING BOOKSHELF INSTALLATION STEPS

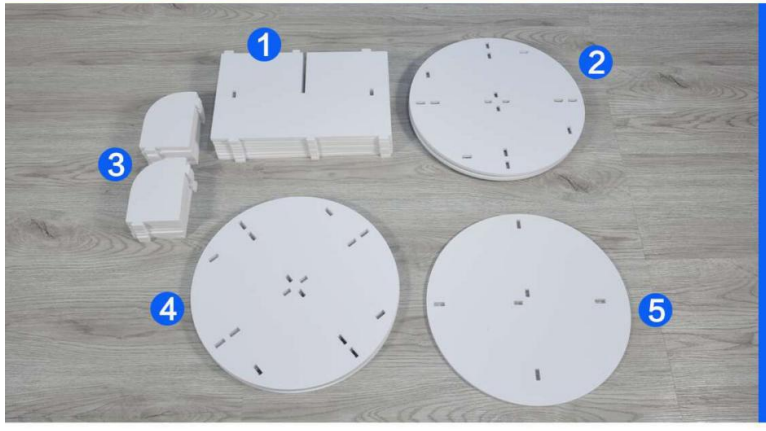

1 Cross partition
2 Rotating base
3 Small partition
4 Round partition
5 Top partition

1、Cross install 1×2

2、Install the combined partition on 2

3、Install the small partition 3

4、Install 4 on the combined partit

Repeat the installation process above