

Assembly Instructions

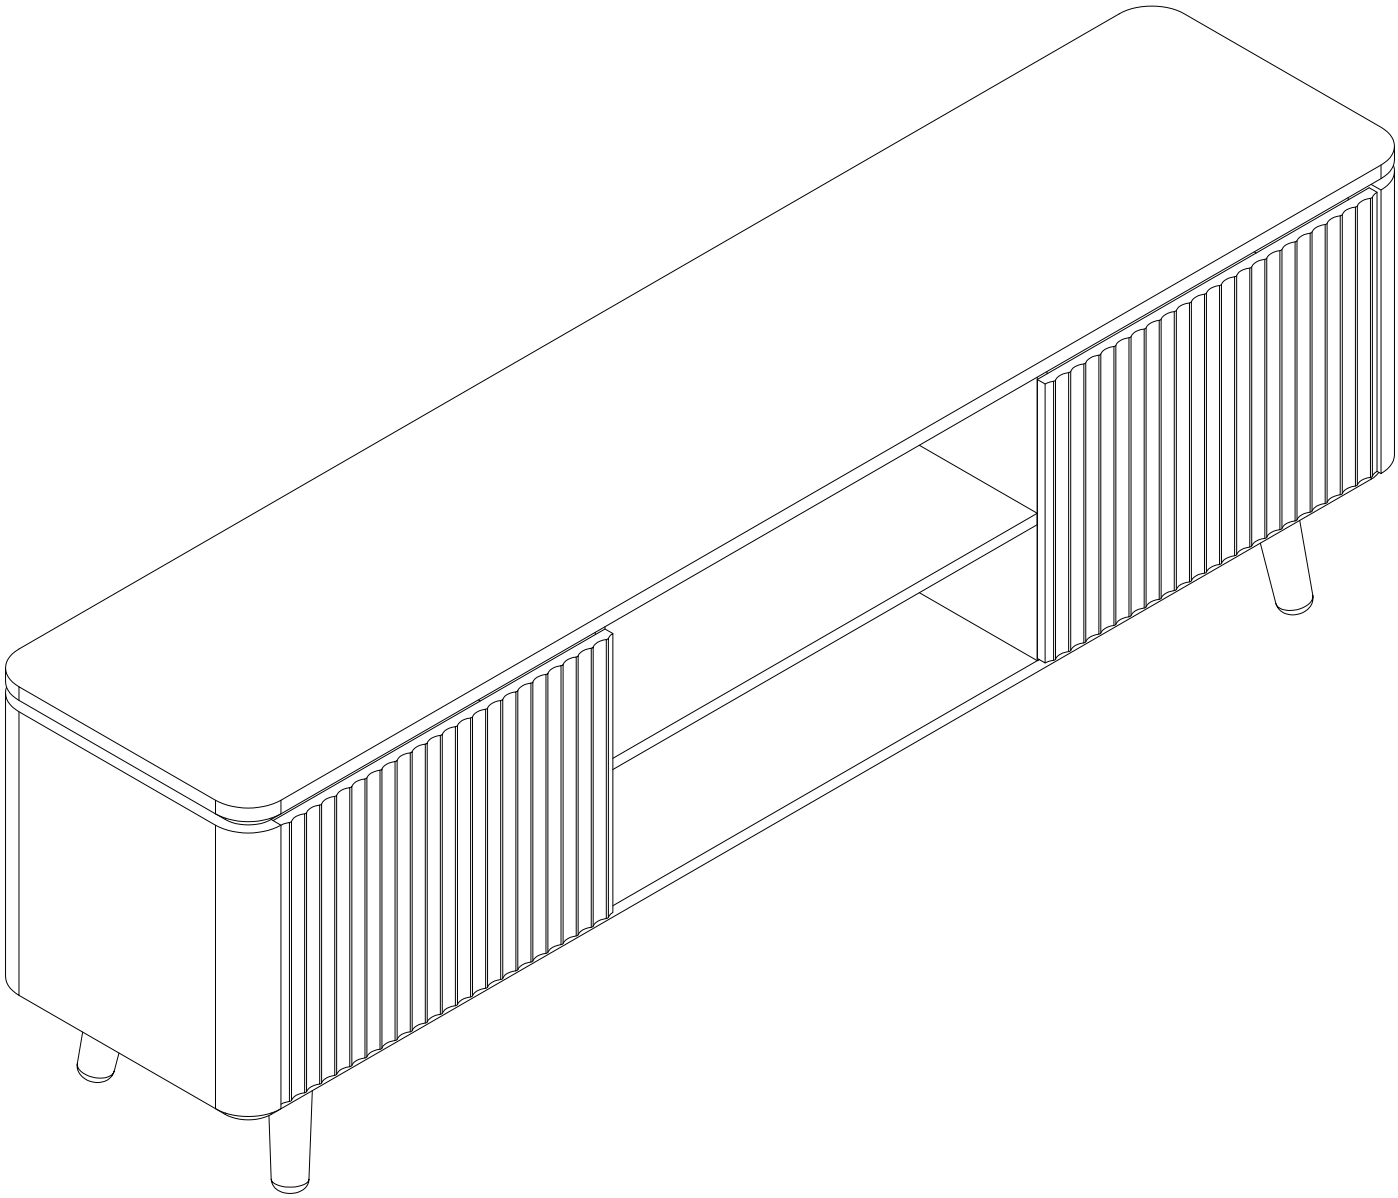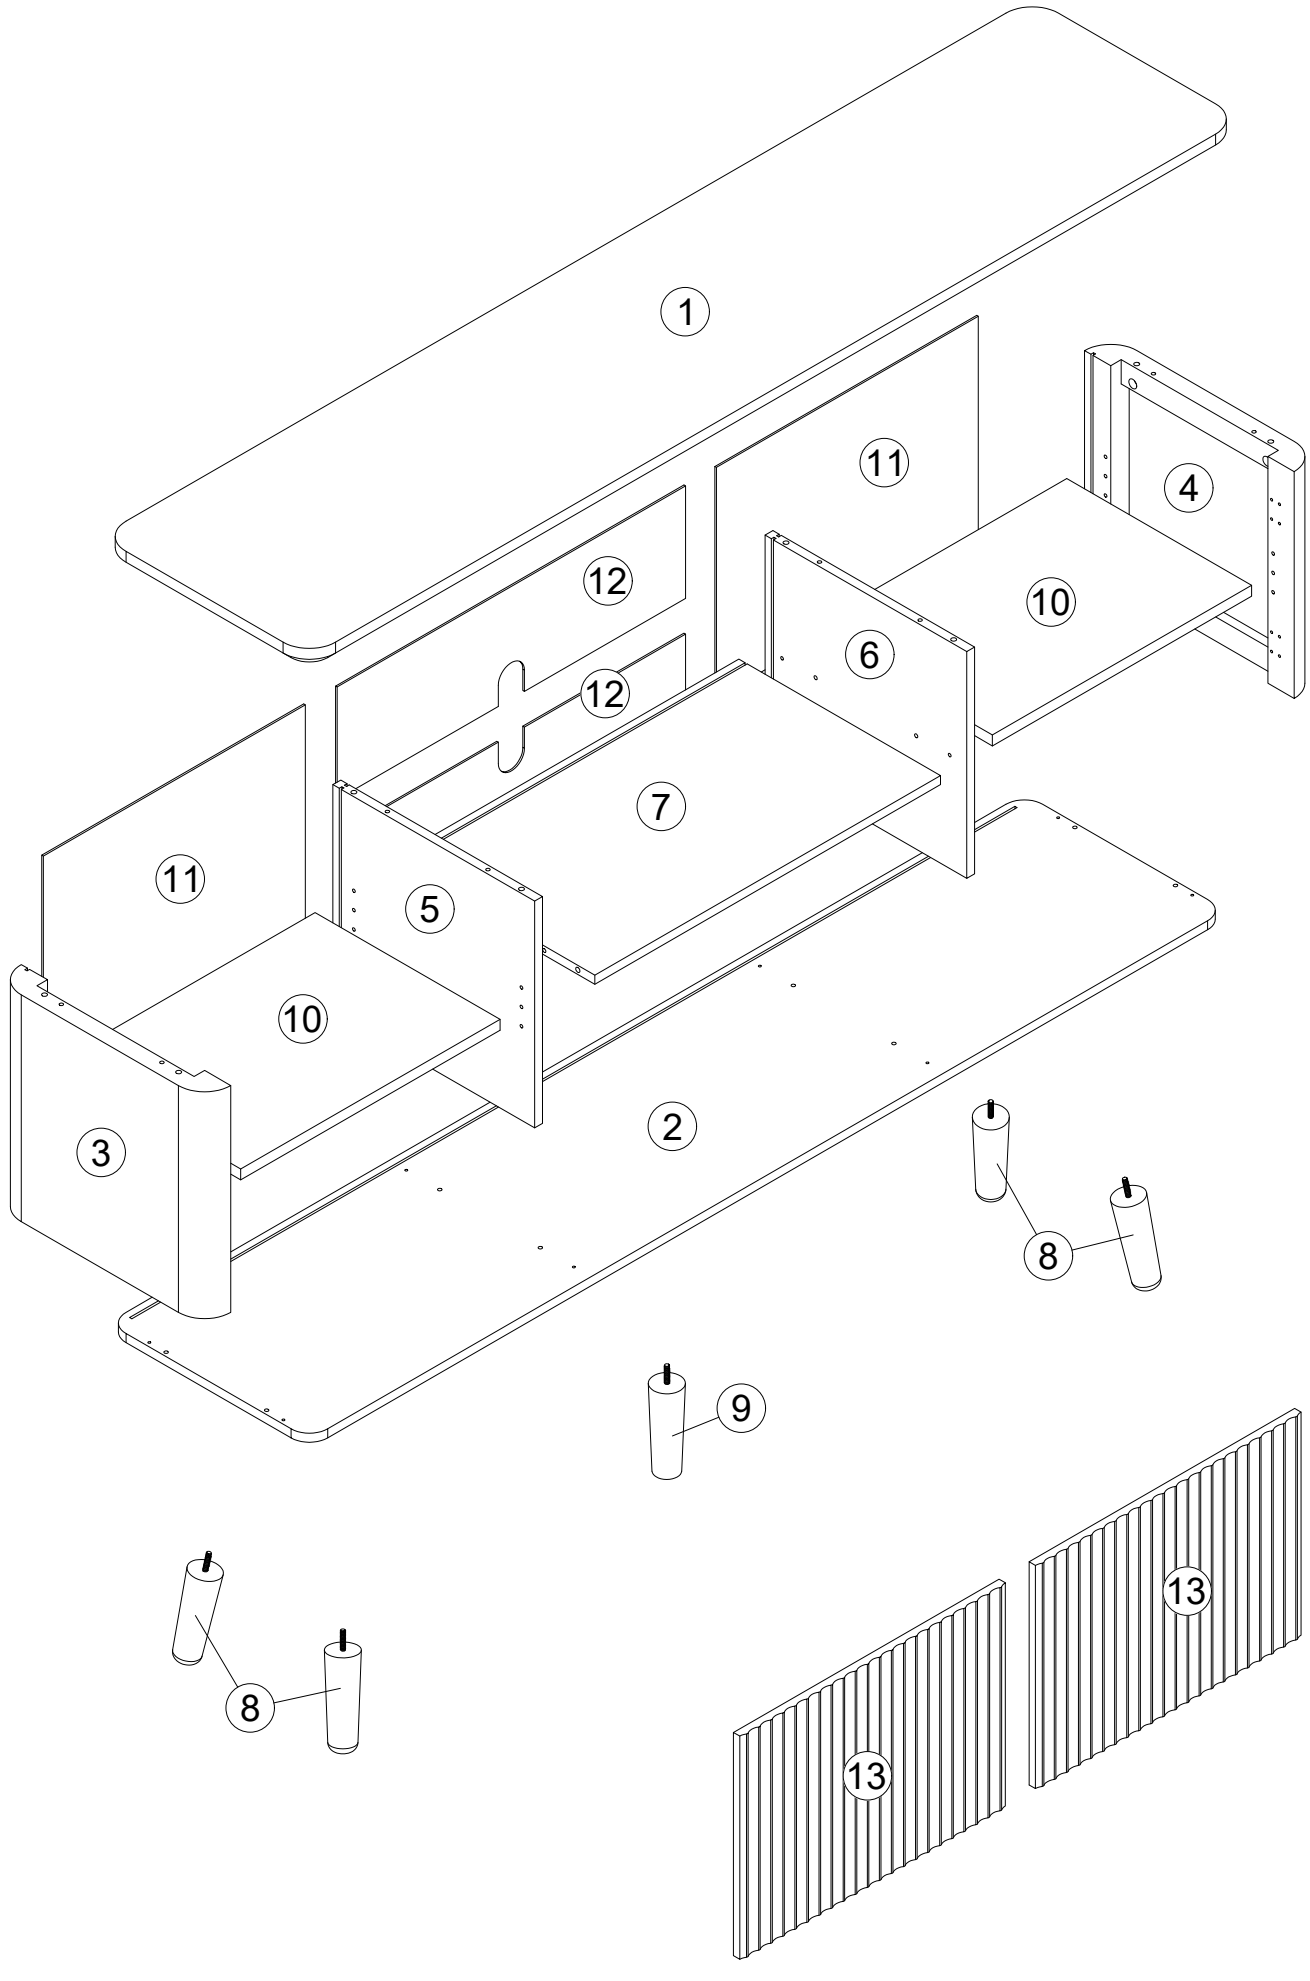


ASSEMBLY TIPS

Remove hardware from box and sort by size to check that all hardware and parts are present before assembling. Follow instructions below in the proper sequence to ensure fast, easy and correct assembly.

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean , smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.



1
11
4
12
10
6
12
7
11
5
10
3
2
8
9
8
13
13

1

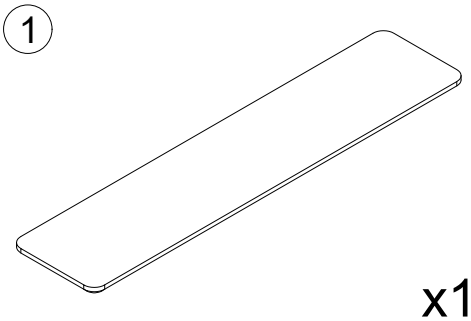


x1

2

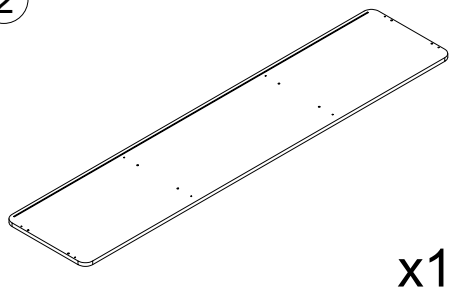


x1

3

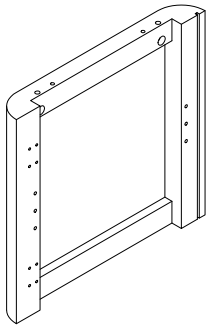


x1

4

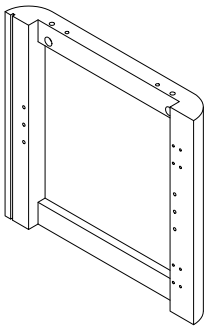


x1

5

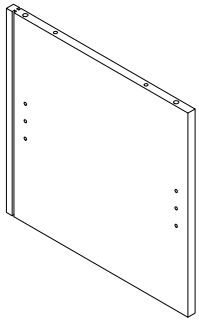


x1

6

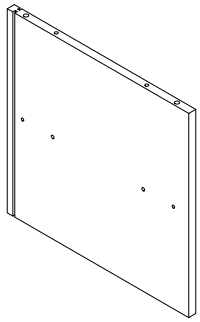

x1

7

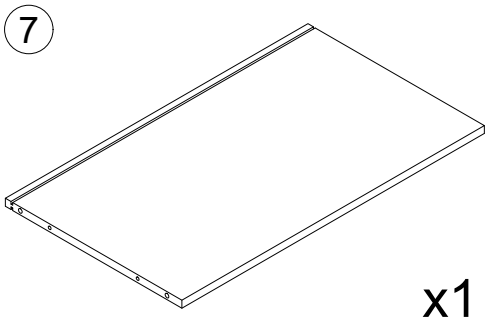

x1

8




x4

9




x1

10

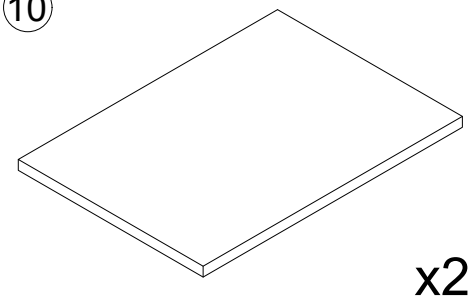


x2

11

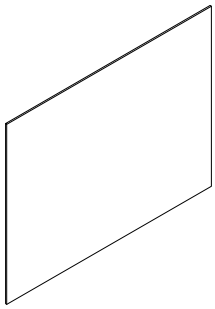


x2

12

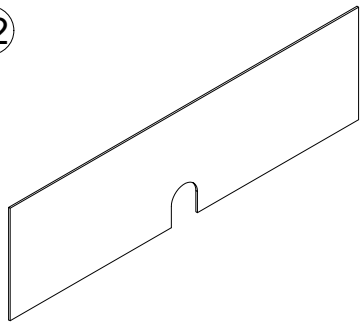


x2

13

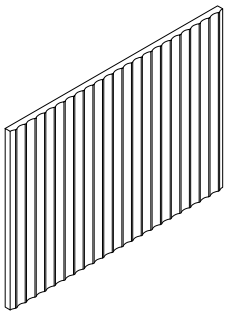

x2

A	x12+1




M6x35mm

B	x12+1




M15x10mm

C	x20+2




M6x30mm

D	x4



E	x1




F	x24+2




M4x14mm

G	x8+1



M5x40mm

H	x1



I	x1



J	x8



K	x4



L	x24+2



M4x14mm

M	x16




N	x16+1




M3x14mm

1

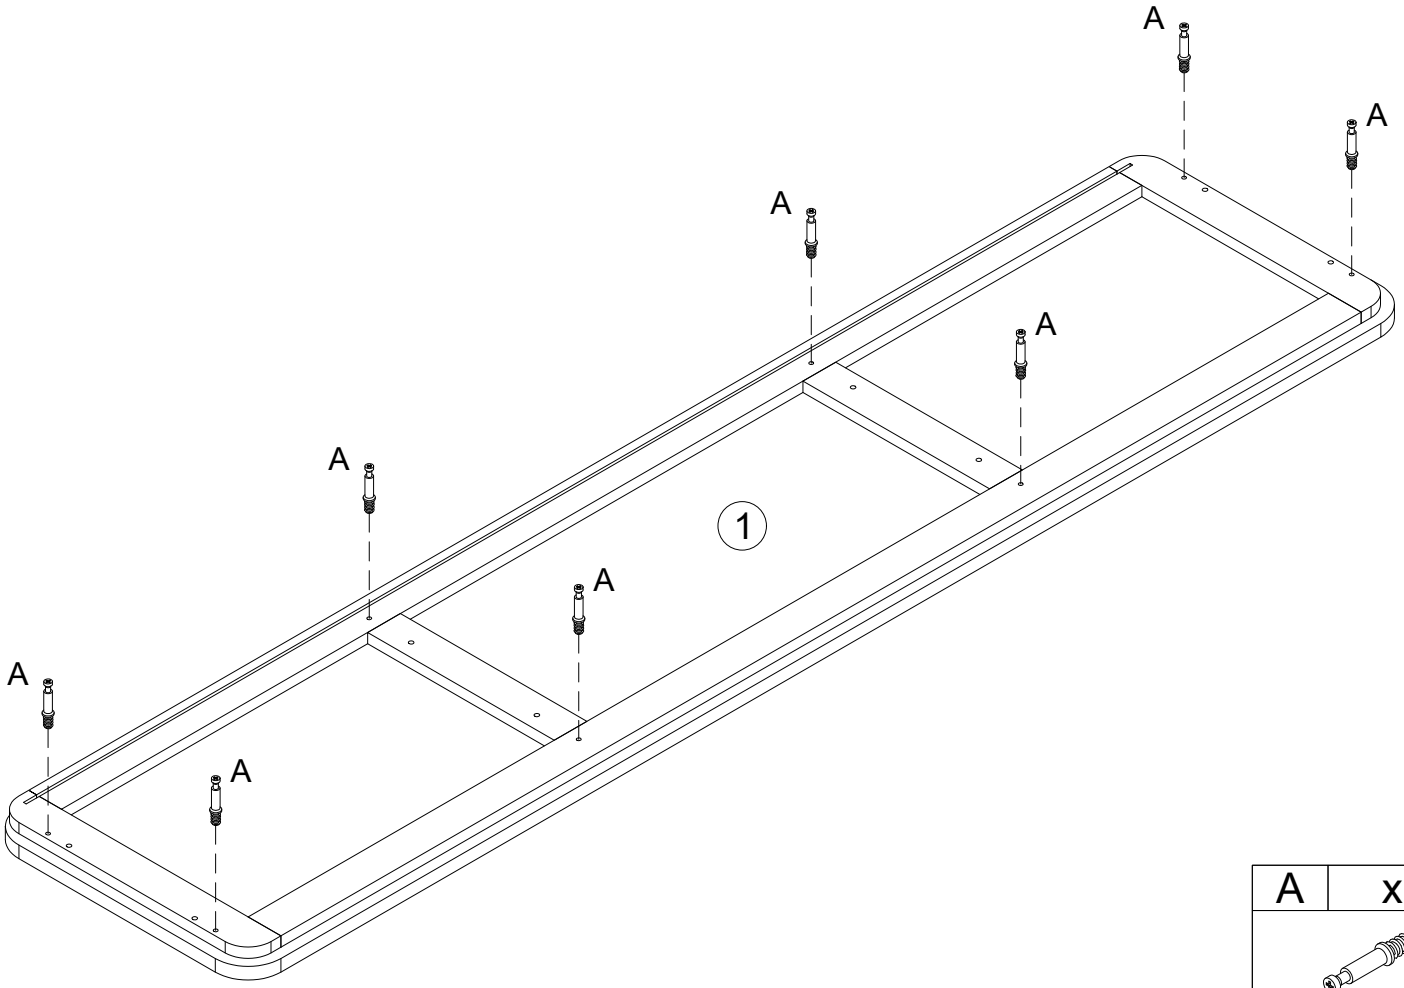


A	x8
M6x35mm	


2

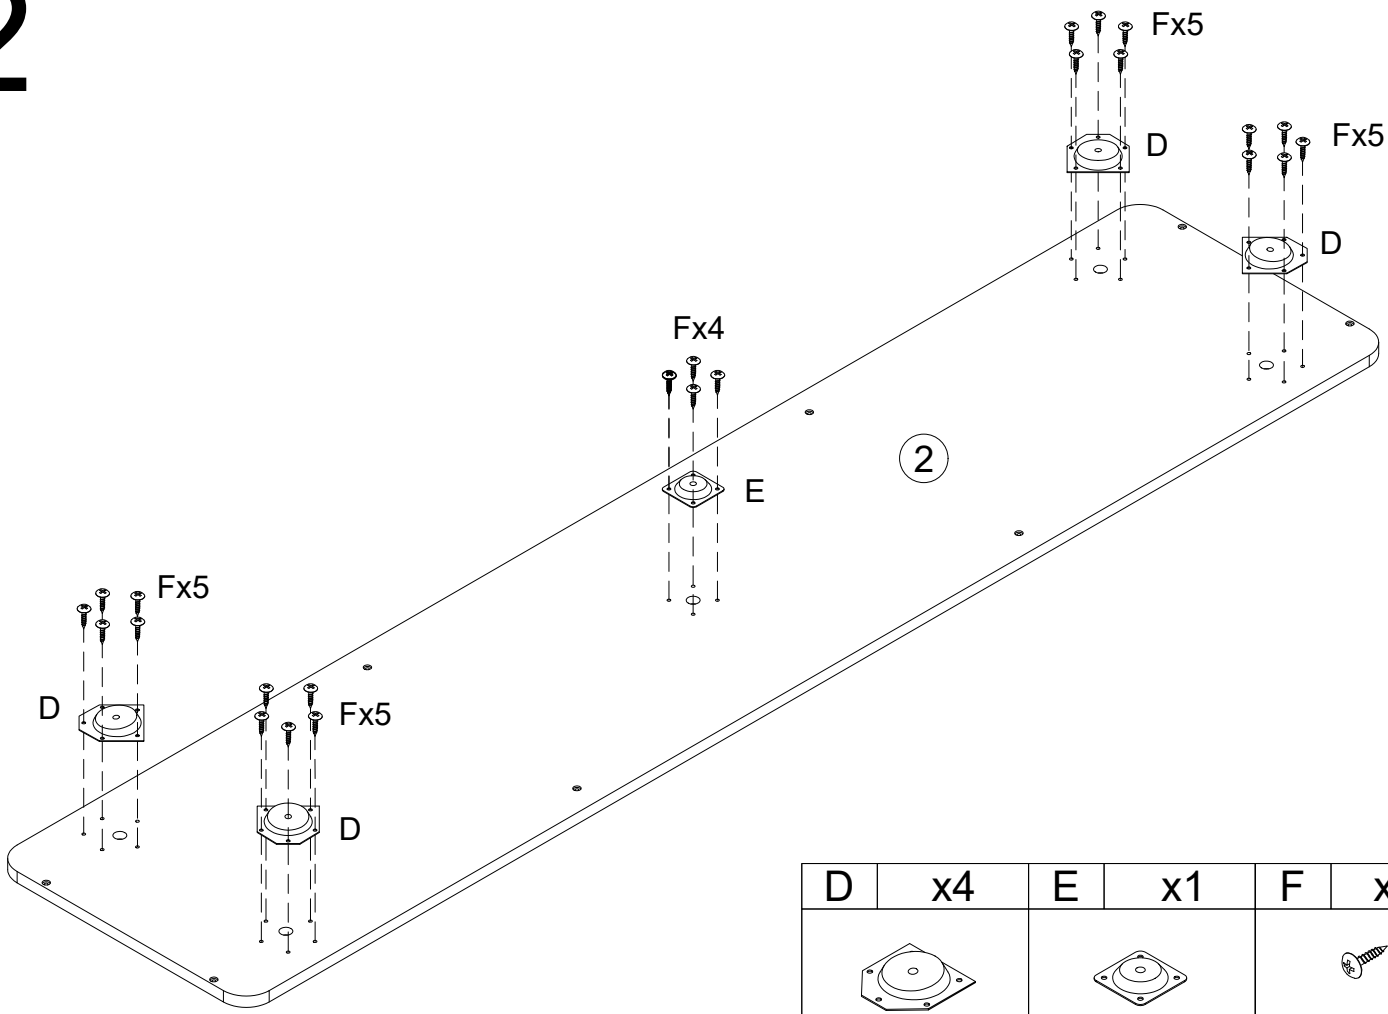


D	x4	E	x1	F	x24
				M4x14mm	


3

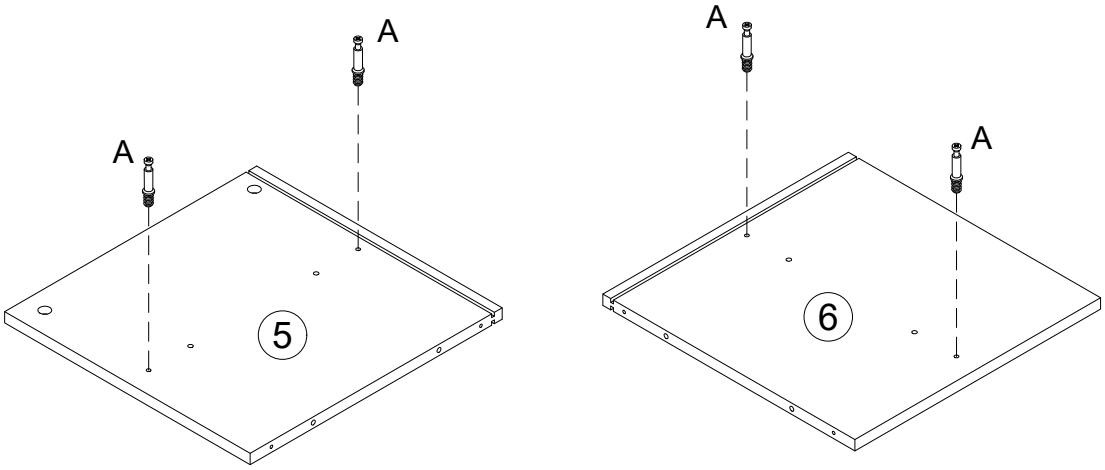

A	x4
	
M6x35mm	


4

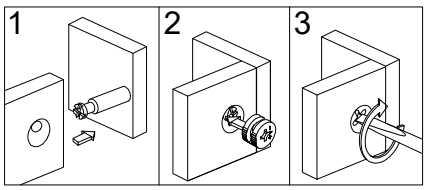


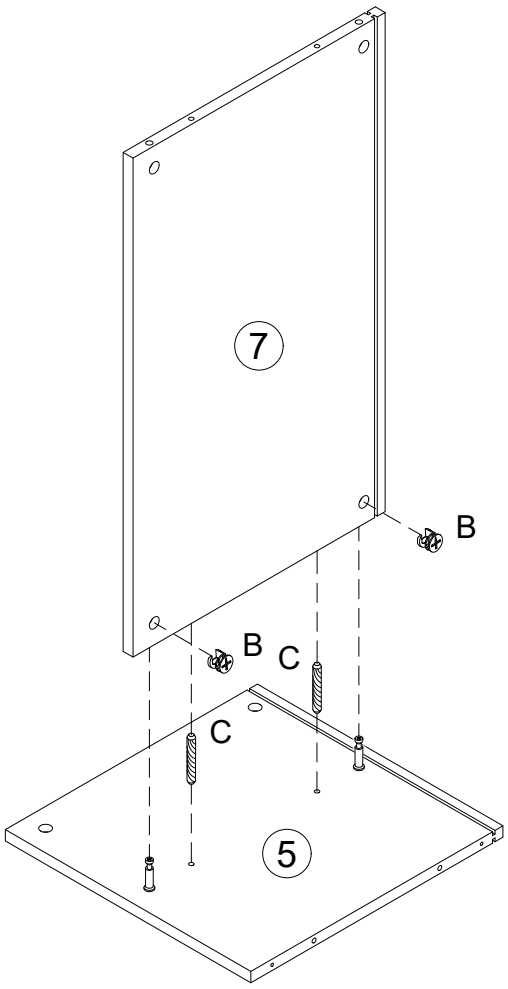

B	x2
	
M15x10mm	
C	x2
	
M6x30mm	


5

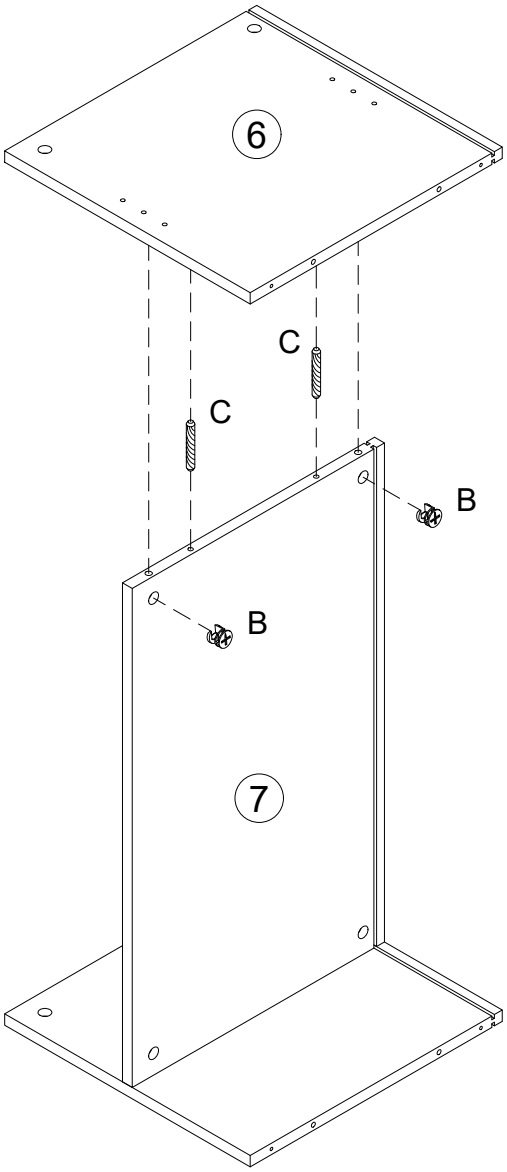

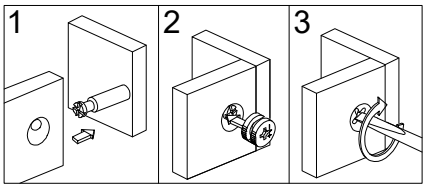


B	x2
 M15x10mm	
C	x2
 M6x30mm	

6

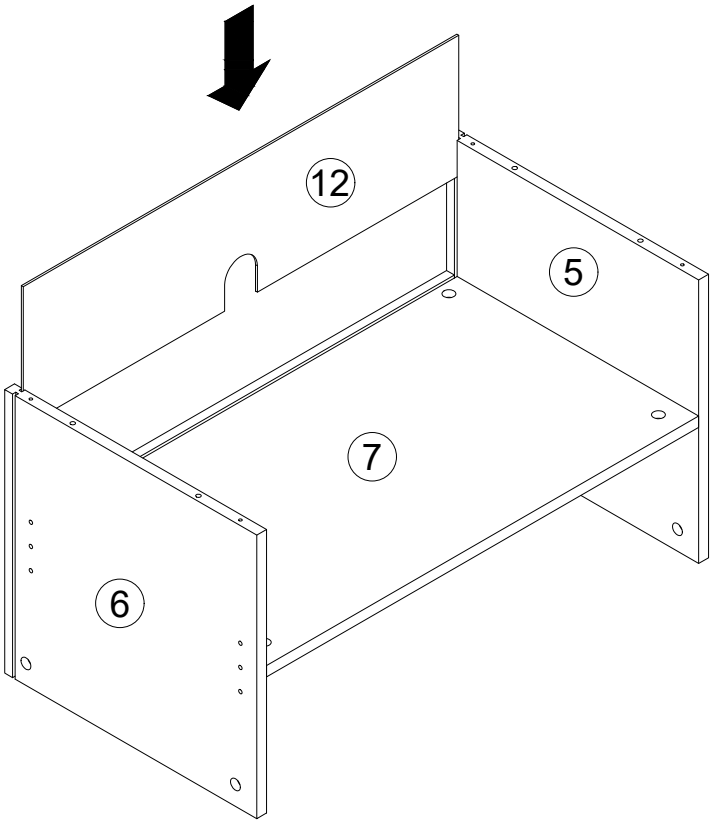


7

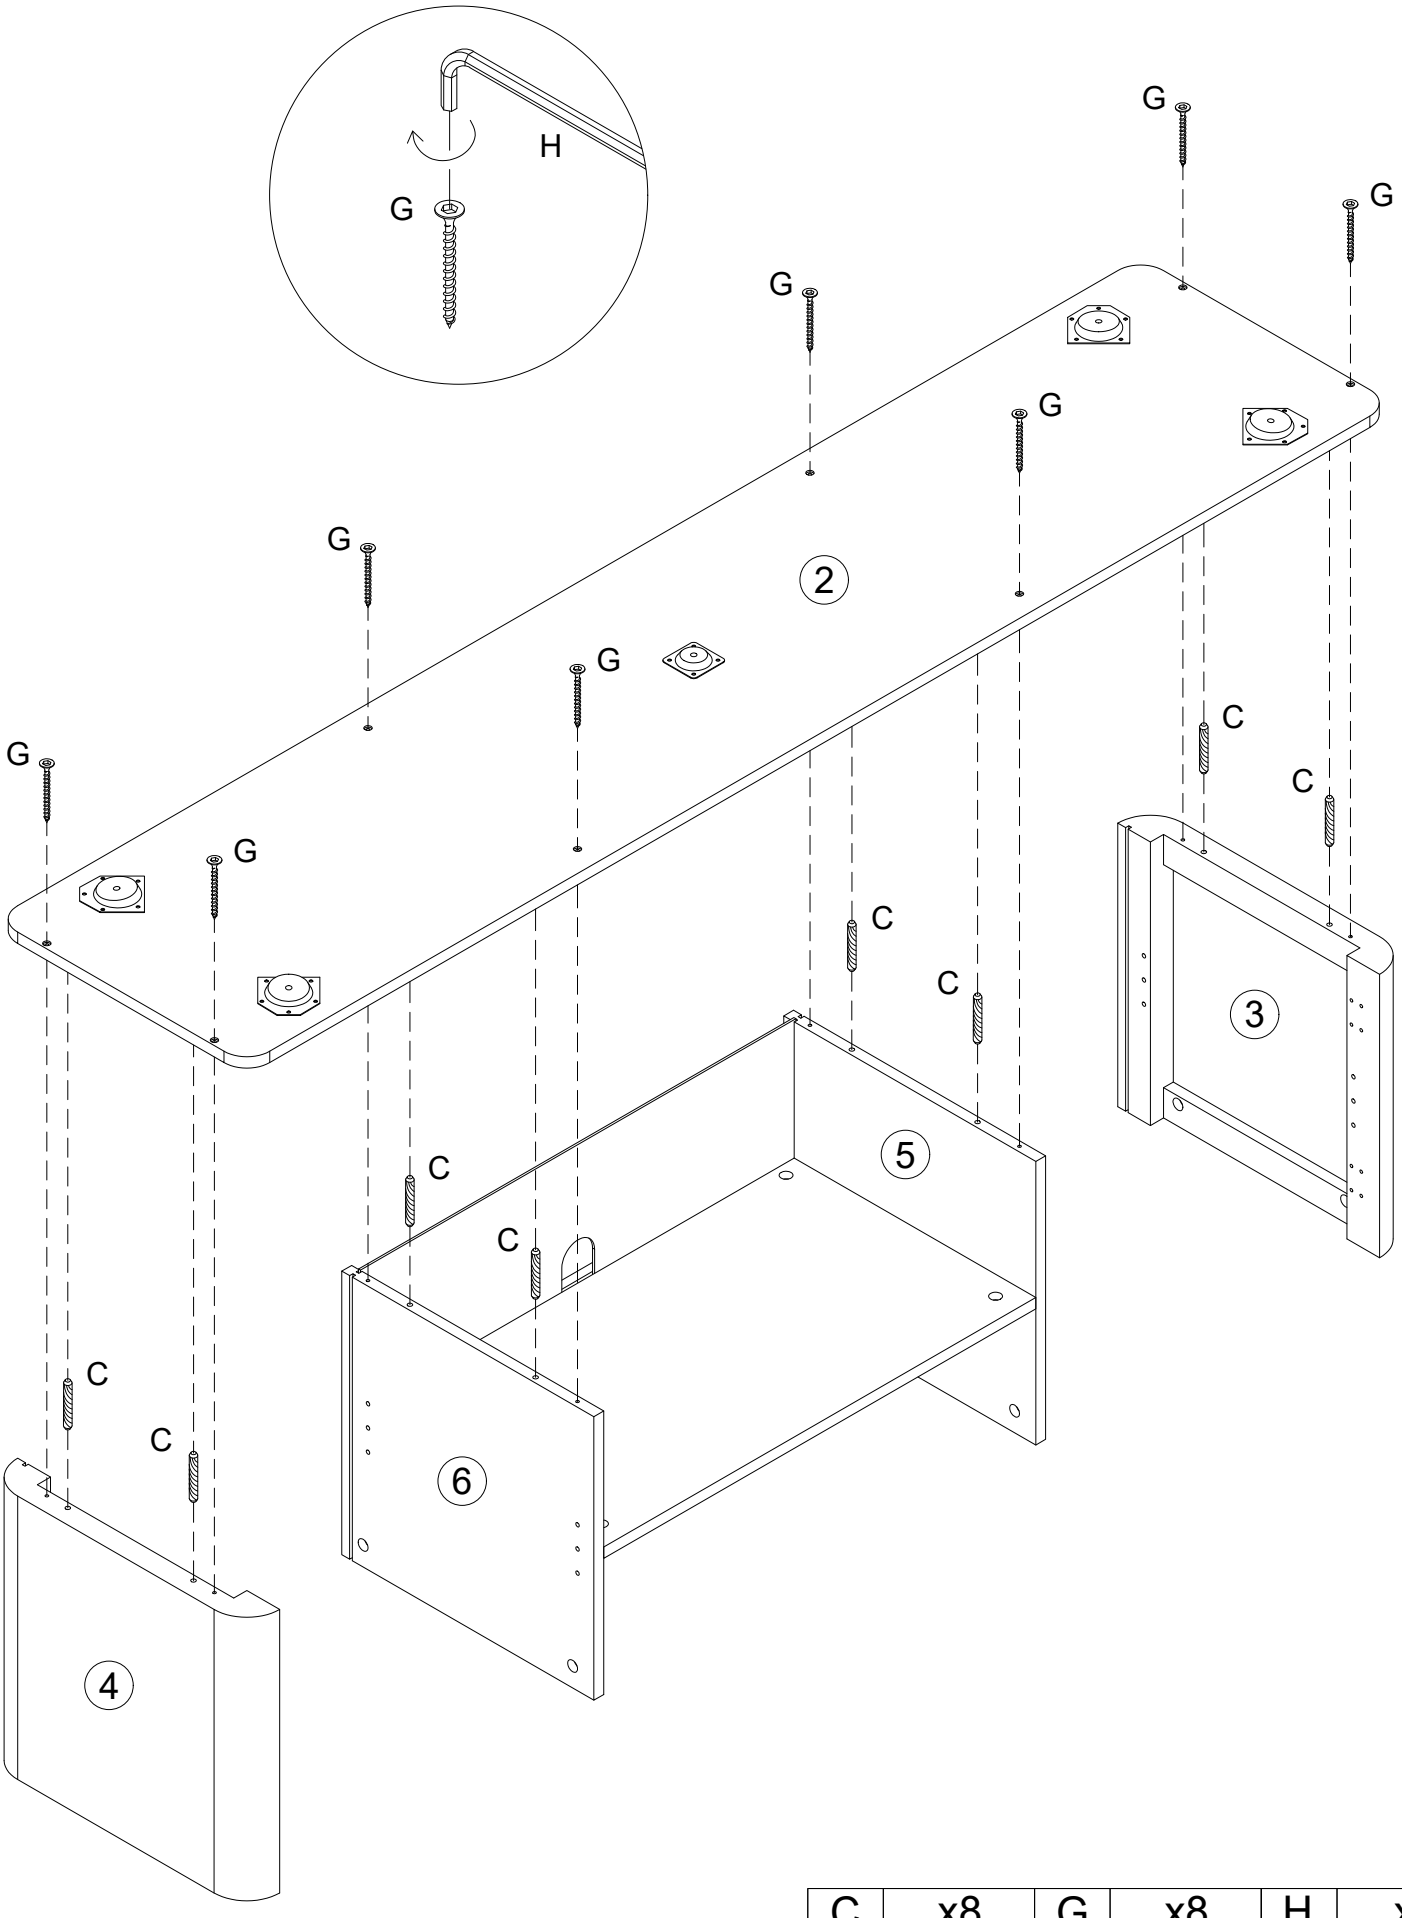


C	x8	G	x8	H	x1
M6x30mm		M5x40mm			

8

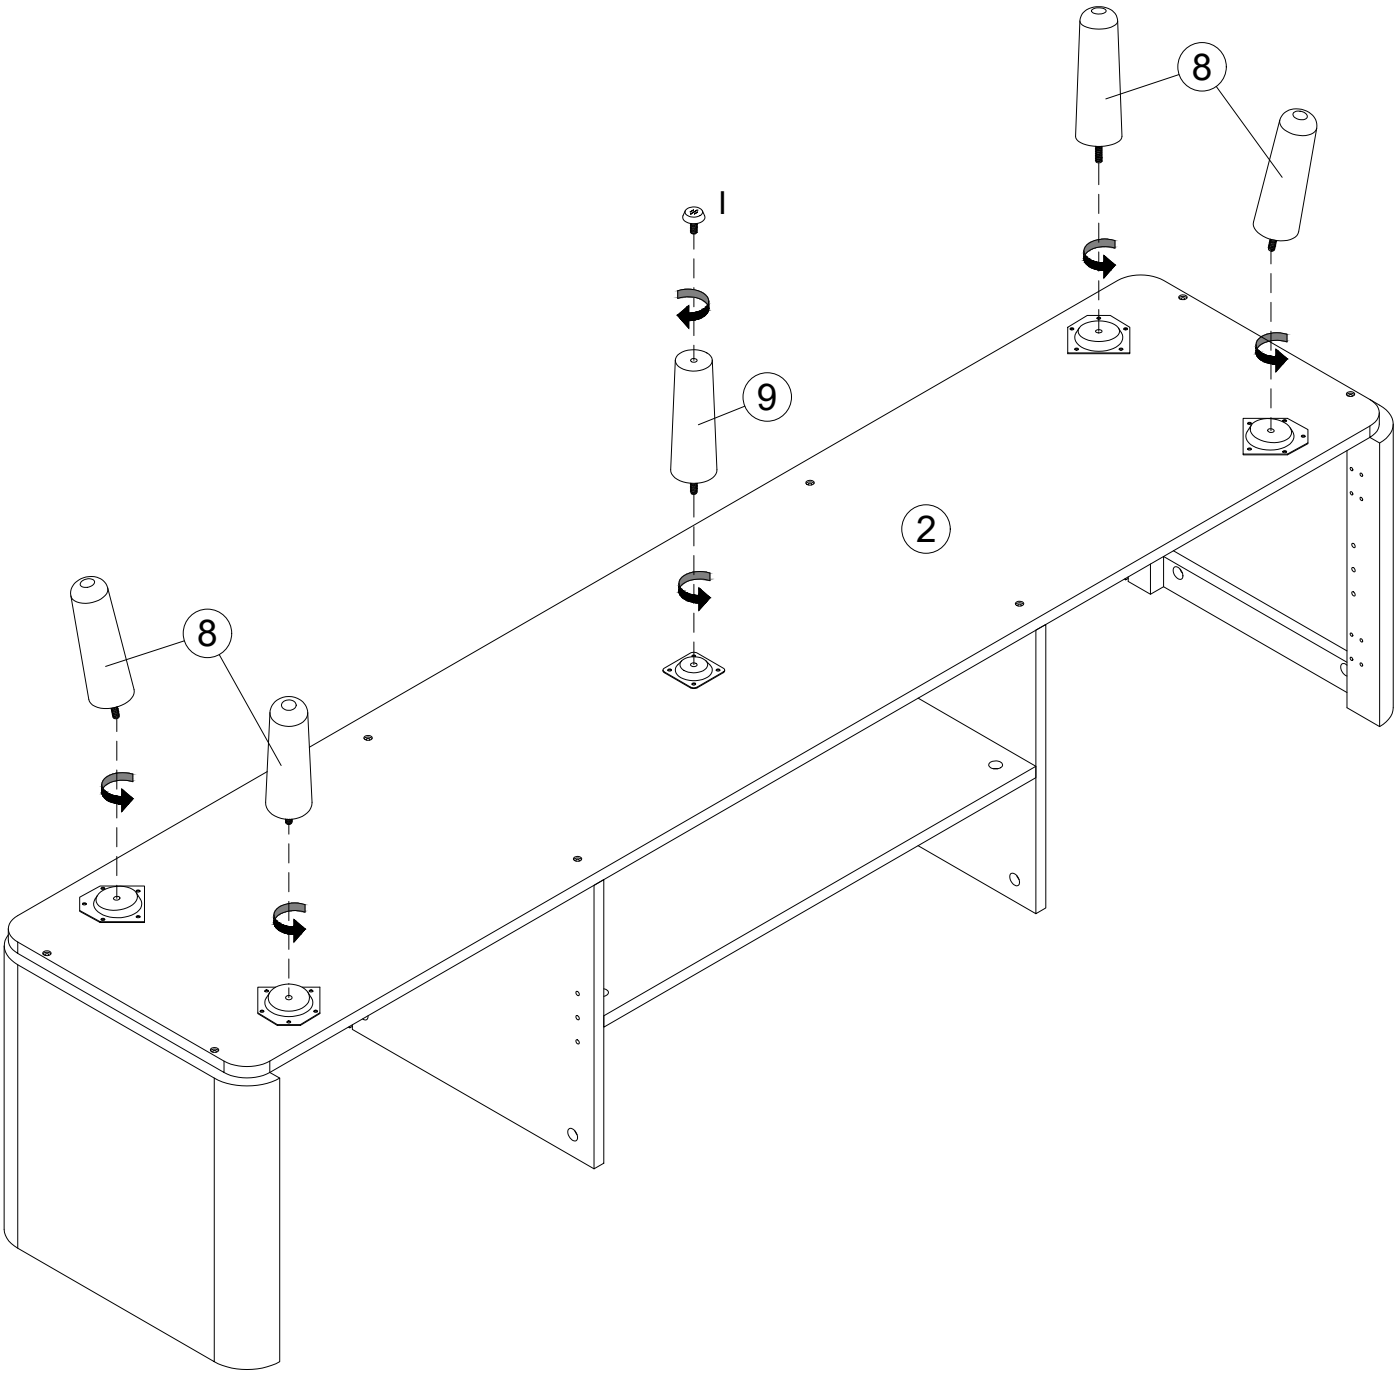



I	x1

9

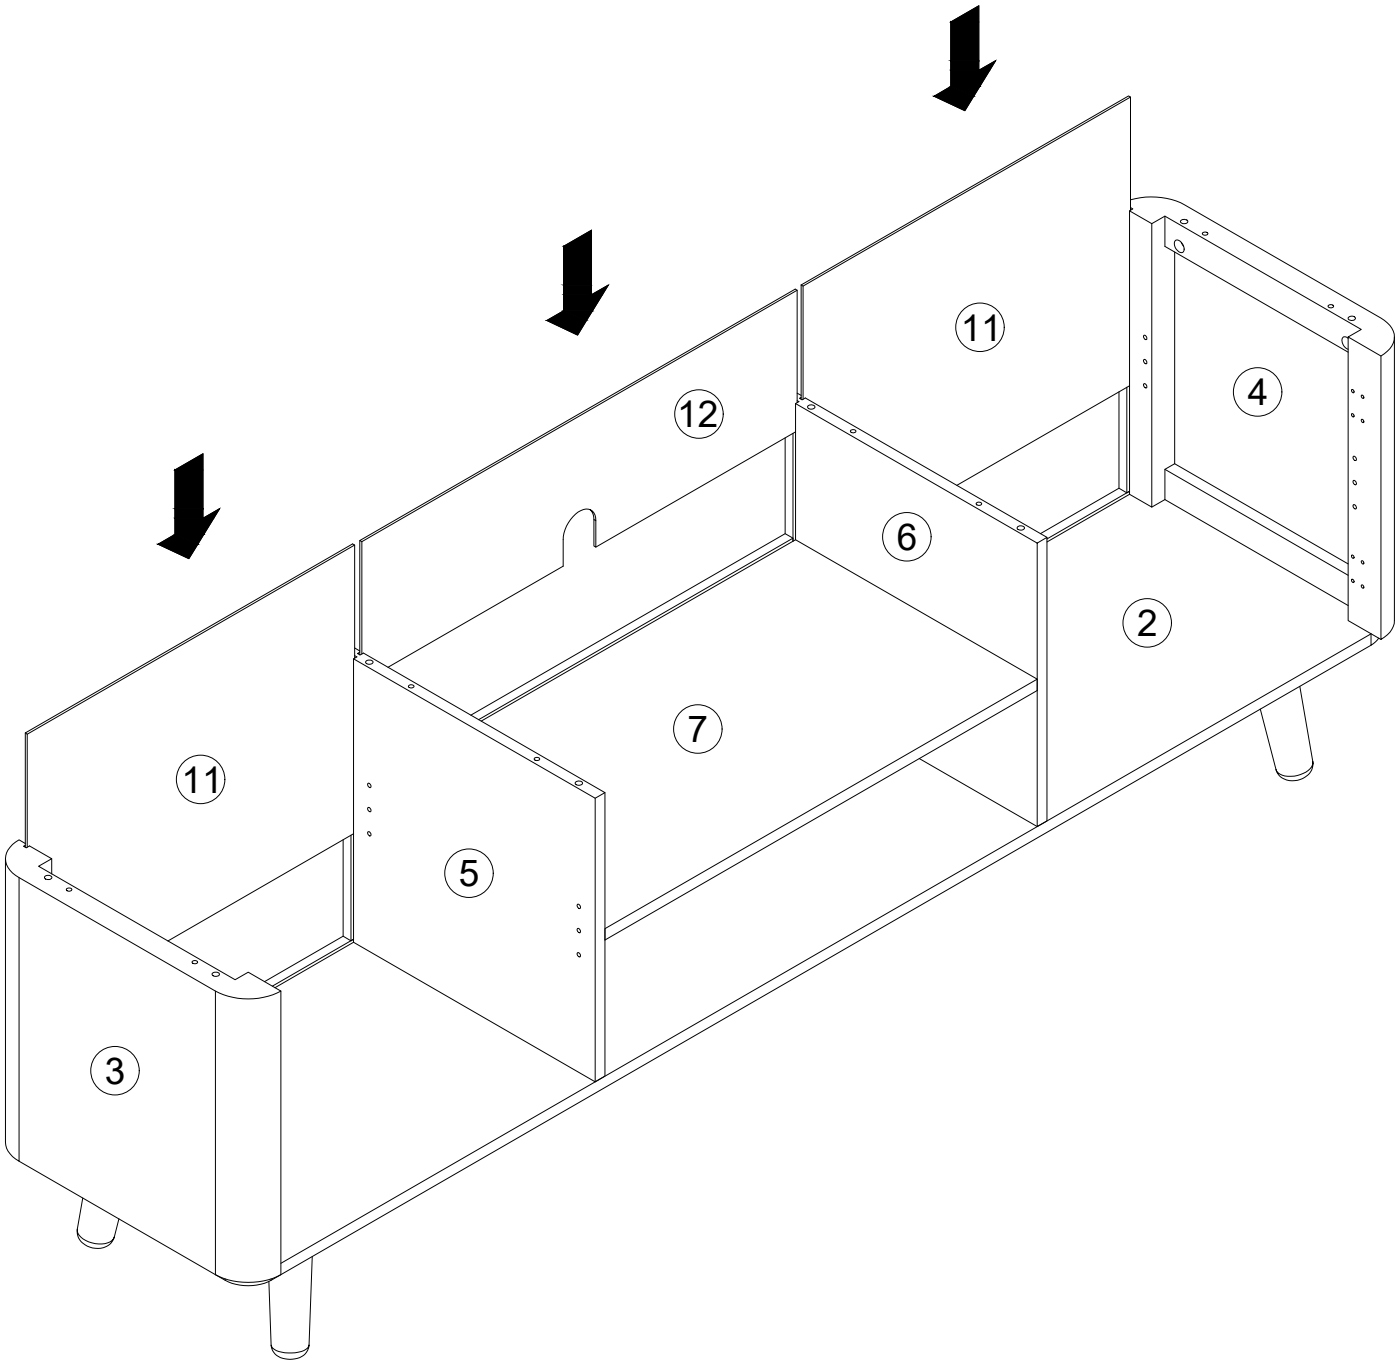


10

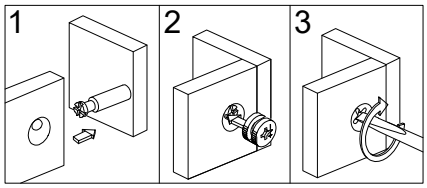

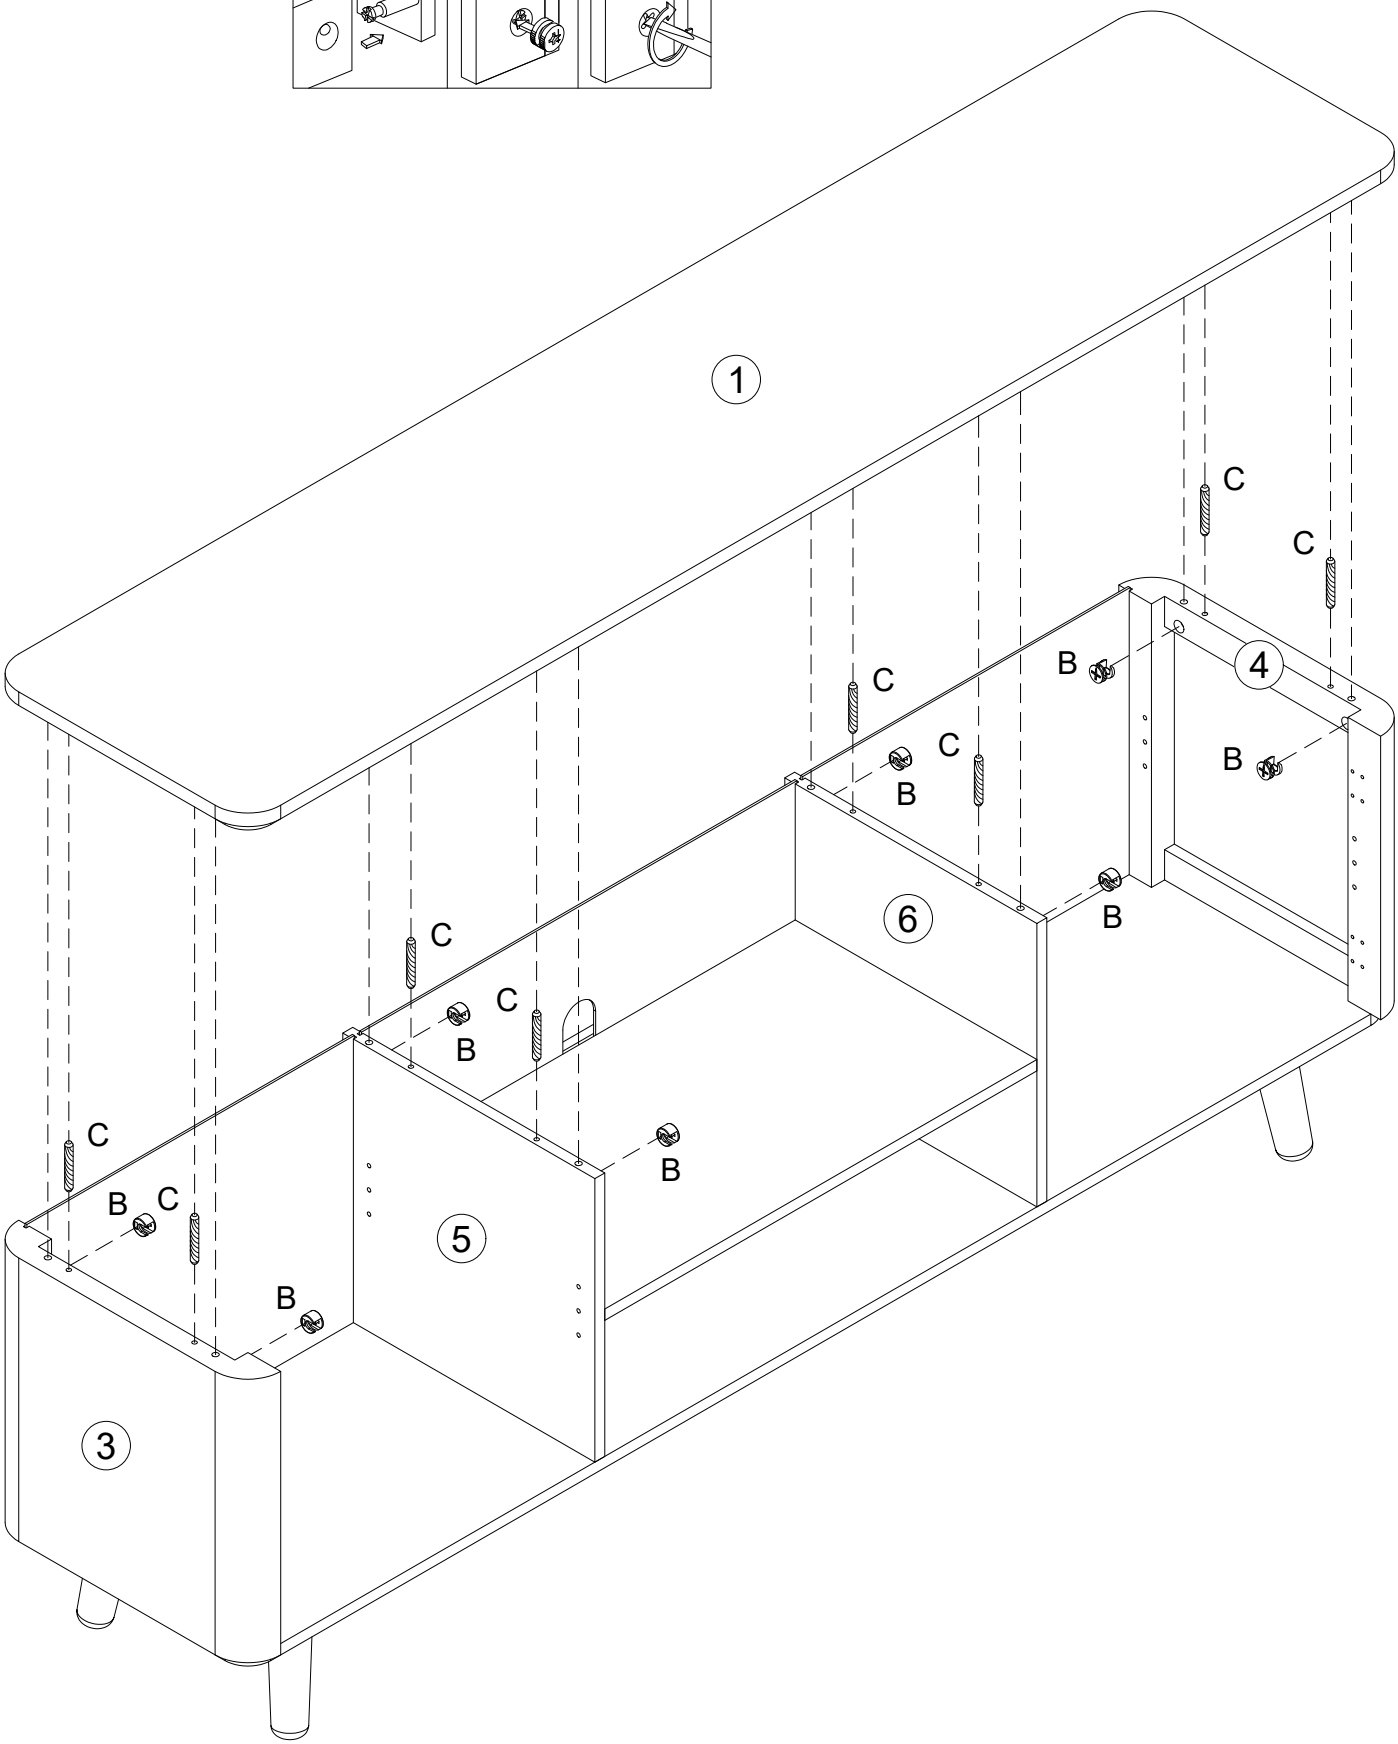


B	x8	C	x8
			
M15x10mm		M6x30mm	

11

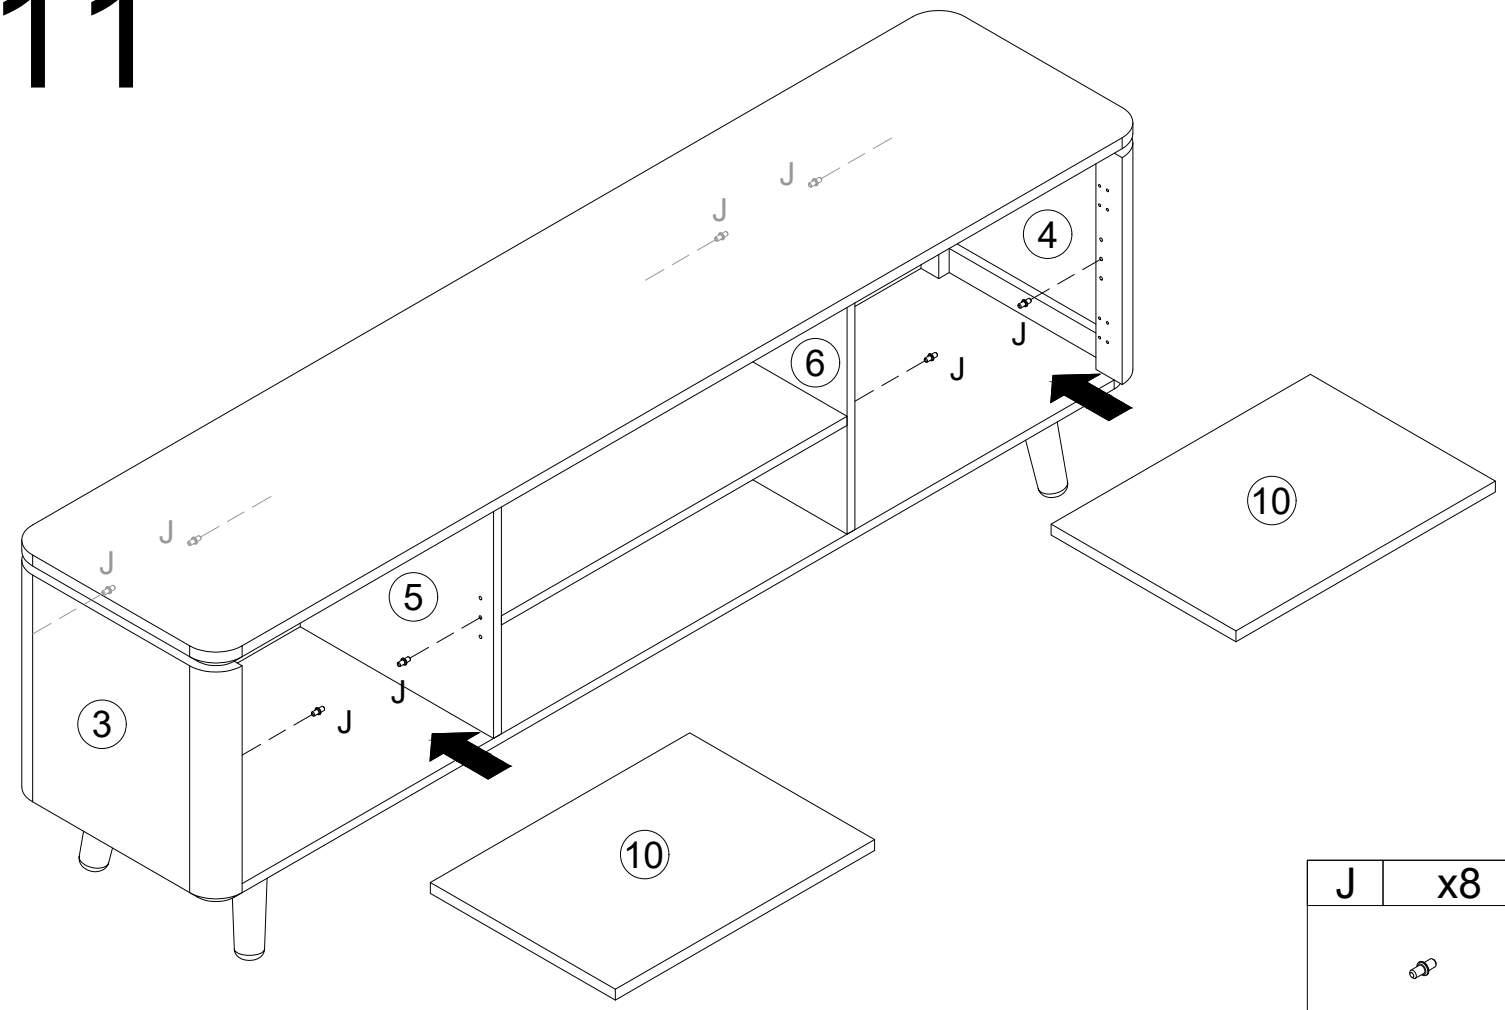

J	x8


12

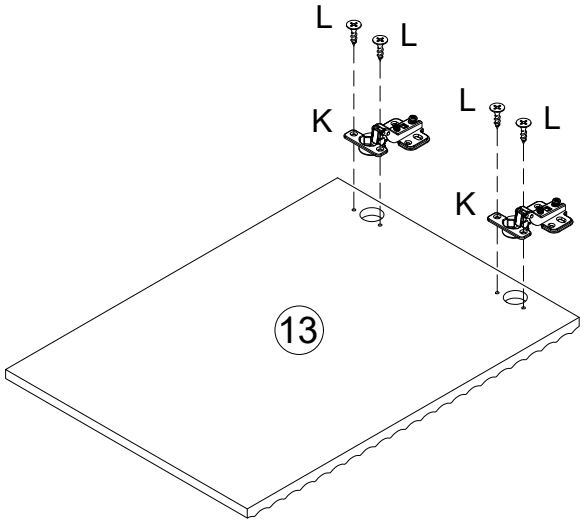

x2

K	x4	L	x8
		 M4x14mm	

13

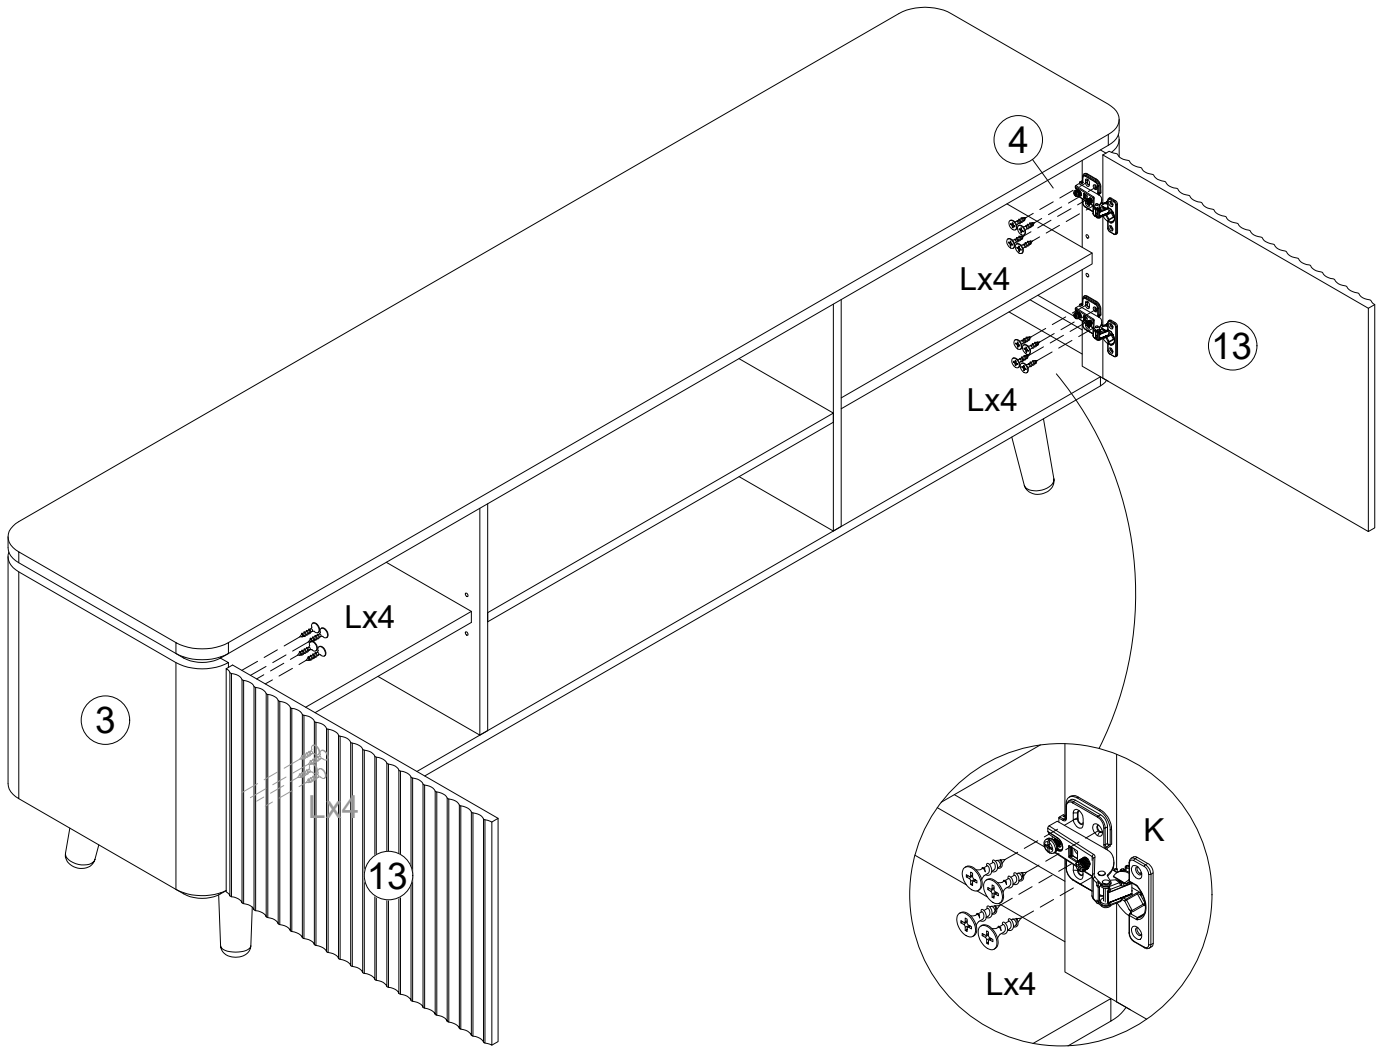



L	x16




M4x14mm

1. First adjust the hinges to ensure the door panel gaps are evenly spaced before fitting the back panel clips.
2. Should hinge adjustment prove difficult, please refer to the installation video via the provided link.

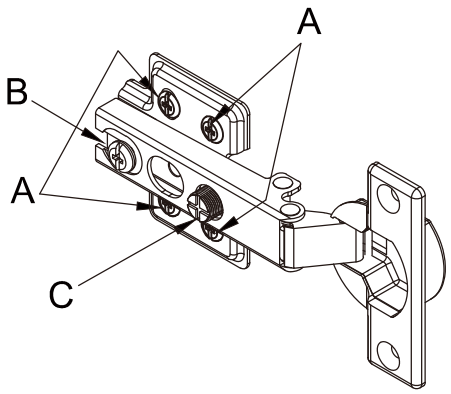


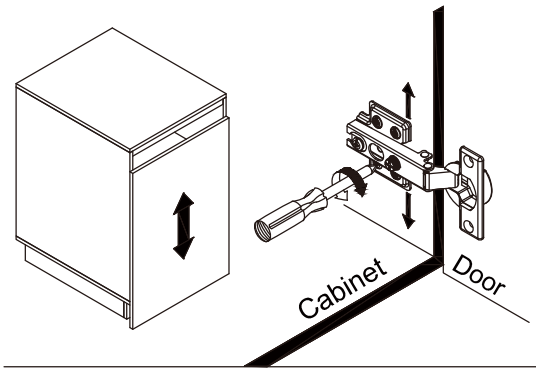

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

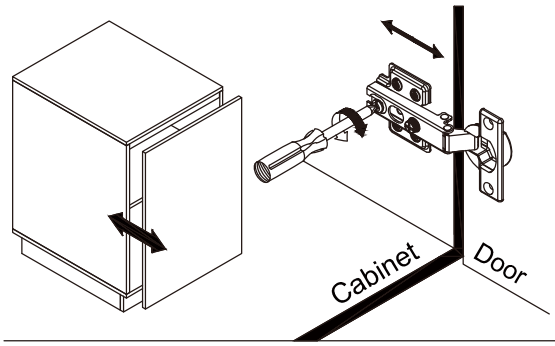


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

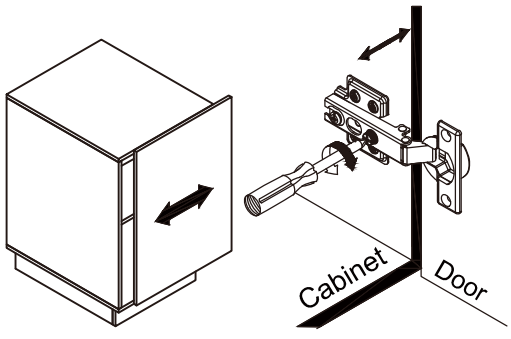

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

14

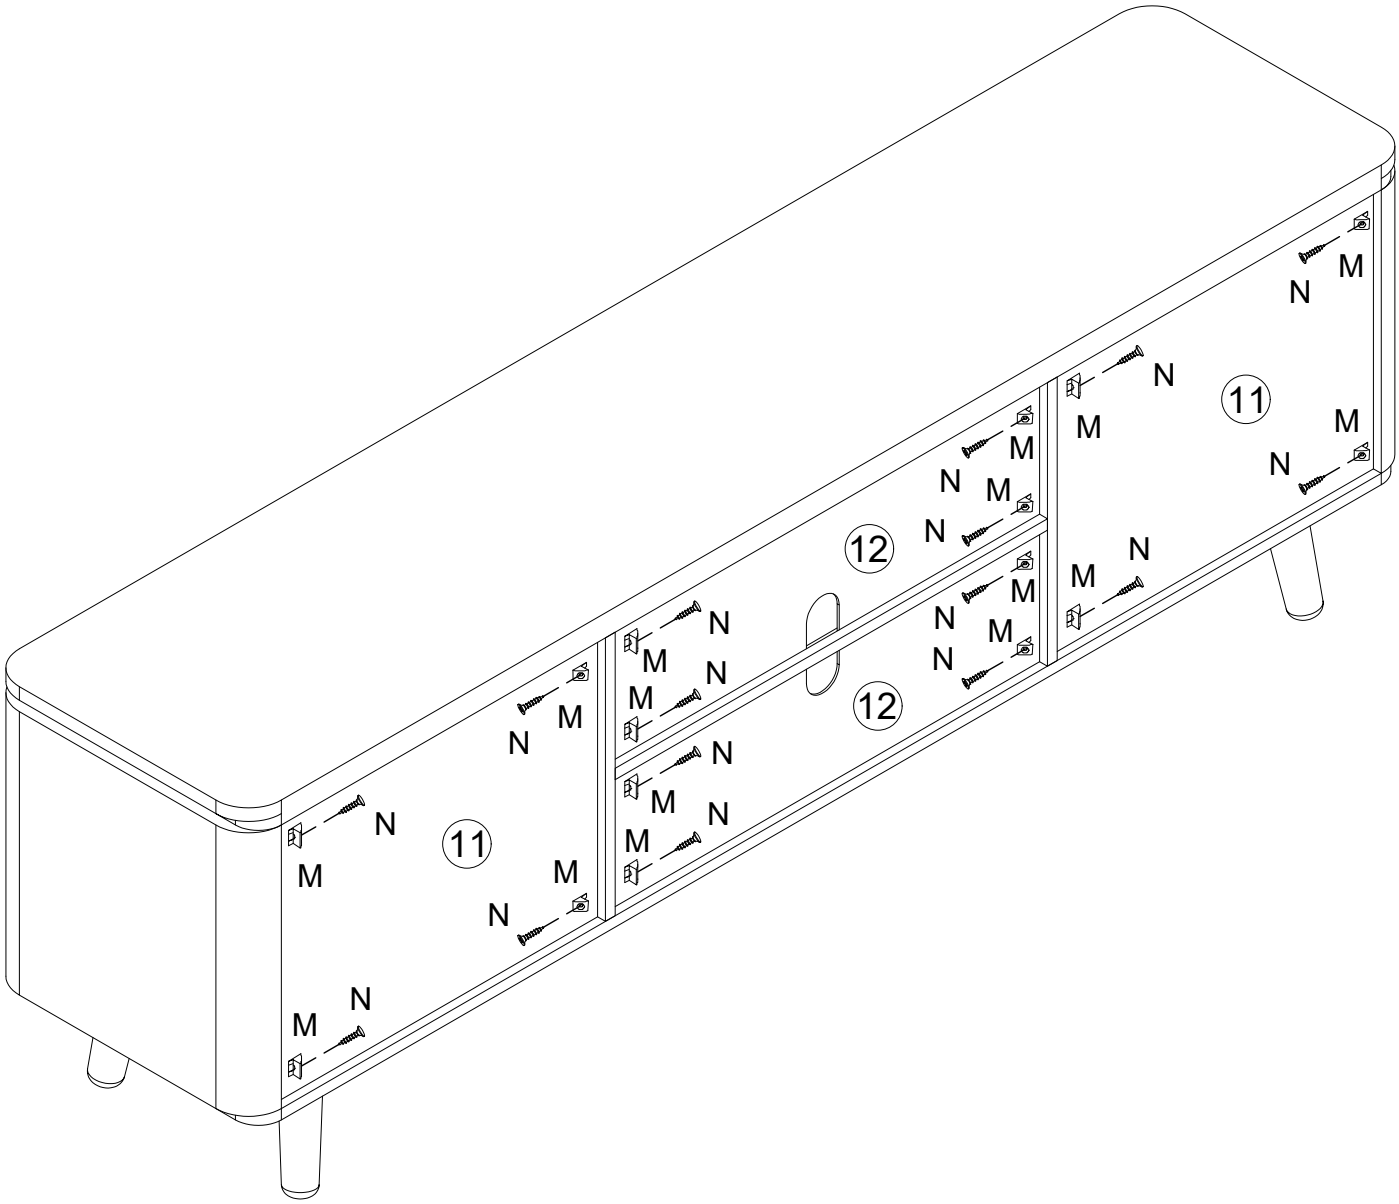

M	x16	N	x16
			M3x14mm