
Please read the manual before using the product. The manual and carton contain important information, please keep them properly for later references. If failure to following the instruction in the manual, it might be dangerous for your child.
In order to improve the product and quality, we may change the parts of structure, appearance, packing method, assembly method and function of the product without any notice. When there is any difference between the manual and the product, please subject to the actual product. We are sorry for any inconvenience.



The assembly manual of battery operated car

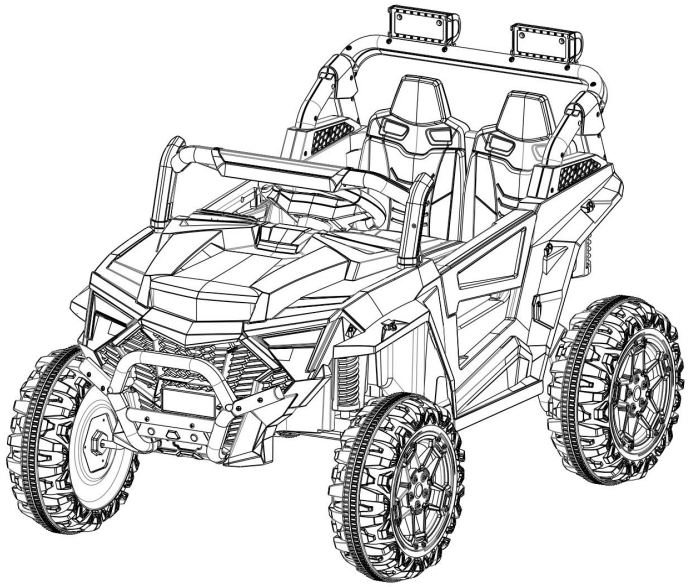

If you have any question, please contact at L843485741@outlook.com directly.

⚠ WARNING

Products should be assembled by an adult. Protective equipment should be worn. Not to be used in traffic. Not suitable for children under 3 years. Choking hazard- small parts. In unassembled state, contains potentially hazardous small parts. Please keep out of the reach of small children. Pay attention to the potential hazards of using the toy in areas other than private grounds.


About product

Specification parameter

Name	Specification
Battery	12V or 24V
Driving motor	12V or 24V
Steering motor	12V or 24V
Suitable age	37-95 months
Load capacity	30KG
Charging time	8-12 hours
Charger	12V or 24V
Speed	3-6 km/h
Product size	99*62*63CM

Battery warning

- Non-rechargeable batteries cannot be recharged.
- For safety purpose, battery charging by adults only.
- New and used batteries cannot be used together.
- Do not insert batteries into wrong polarity, or will be short-circuited.
- The exhausted battery must be taken out of the car.
- Only use charger and battery provided by manufacturer.

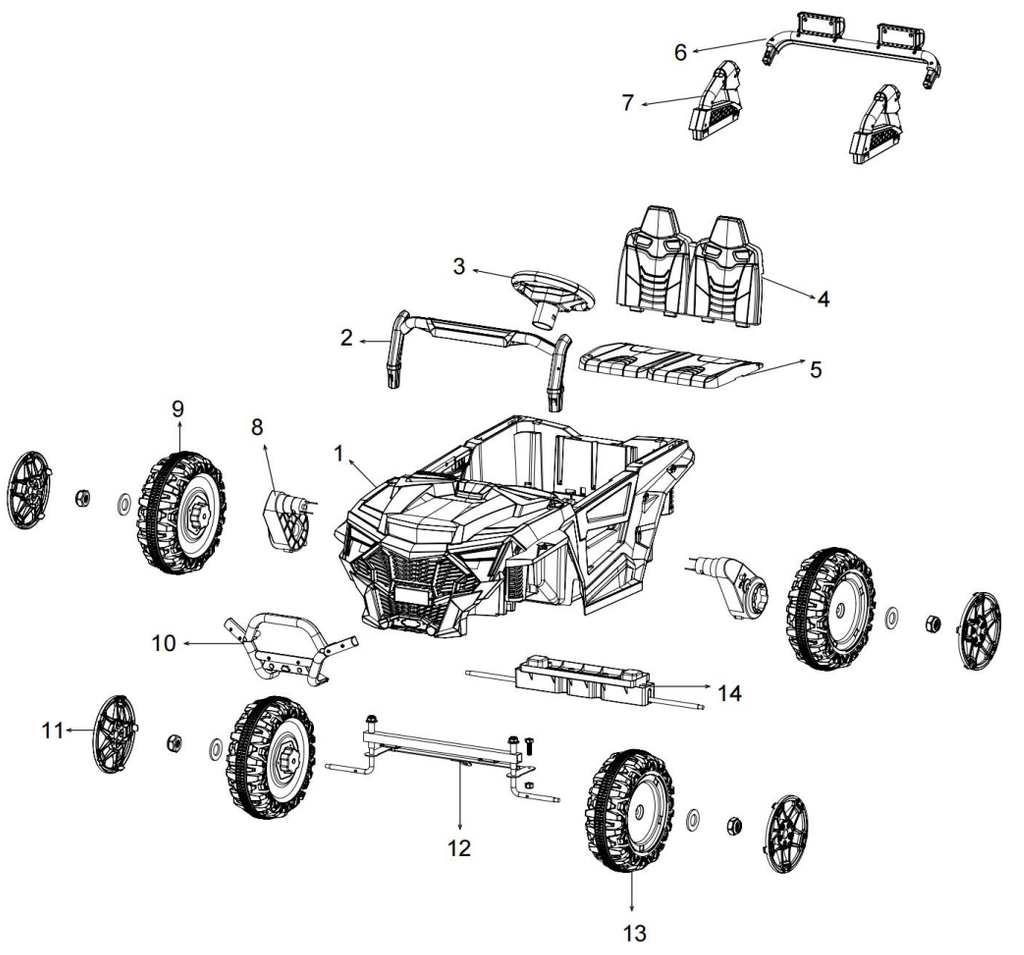

Parts name

No.	Part name	Qty	Remark
1	Car body	1	
2	Windshield frame	1	
3	Steering wheel	1	
4	Backrest	1	
5	Seat cushion	1	
6	Search light	1	
7	Search light holder	2	
8	Drive motor	2	
9	Rear wheel	2	
10	Front bumper	1	
11	Wheel cover	4	
12	Front axle	1	
13	Front wheel	2	
14	Rear axle	1	
15	Guide book	1	
16	Remote control	1	
17	Charger	1	
18	Accessory package	1	

Tool required for installation (Prepared by your own): screwdriver



Warning

Never leave children alone when playing!

1. Do not play in the street, road, slope or ditch.
2. Do not play on the rough terrain.
3. It is not a vehicle, should be played under adult's supervision.
4. It requires some skills to play, please be careful in order to avoid to crash or hurt themselves or others.

Warning

1. Assembly and adjustment must be done by adults.
2. Keep children away from plastic bag, or suffocation may occur.
3. It contains some small parts. Keep children under 36 months away from.

* Please tell your child and his playmates the following safety rules and make sure they understand!

● Make sure your child plays it in a safe driving environment, such as home, garden or playground.
● The car is only suitable for playing on the hard and flat road. In order to keep safety, it is prohibited to play in the following unsafe environments


A Ditch, river, lawn, slope or uneven ground
B Public transport roads
C ObstacleS that may cause injury
D Other unsafe areas.

● Avoid children playing in the dark. Children can not deal with unexpected obstacles or accidents. Only play in the day or in a bright area.
● Do not play it outside when it is raining or snowing.
● Please make sure that the user is suitable of the recommended age range, and do not exceed the maximum load.
● To avoid accidents, make sure the car is safe before playing.
● Please do not allow any children to approach the car or touch the wheels when it is driving.


Assembly

Install front axle

First, place the front axle in the position shown in the picture, andthen secure them with a 6 * 14 nut.

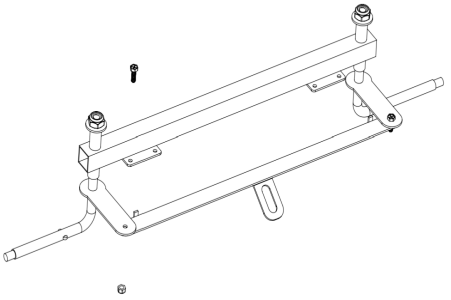


Secondly, install the front axle assembly onto the vehicle body and secure it with 8 4 * 14 self tapping screws.（The steering axis needs to be inserted into the iron plate of the front axle assembly.）

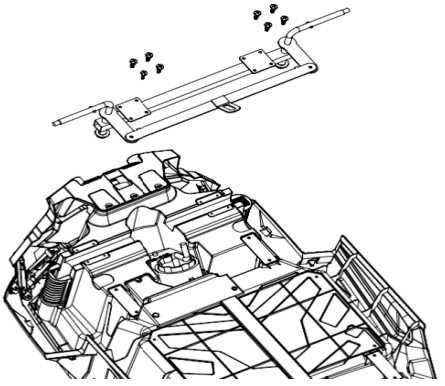

Install rear axle


Install the rear axle assembly onto the vehicle body using 4 * 14 self tapping screws.

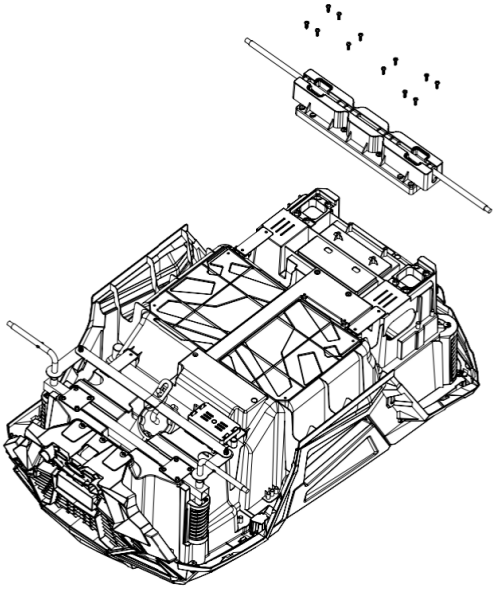

Assembly


Install the front wheels and wheel covers

Install the front wheel onto the front axle, then place the gasket and secure it with an M8 nut before attaching the wheel cover.

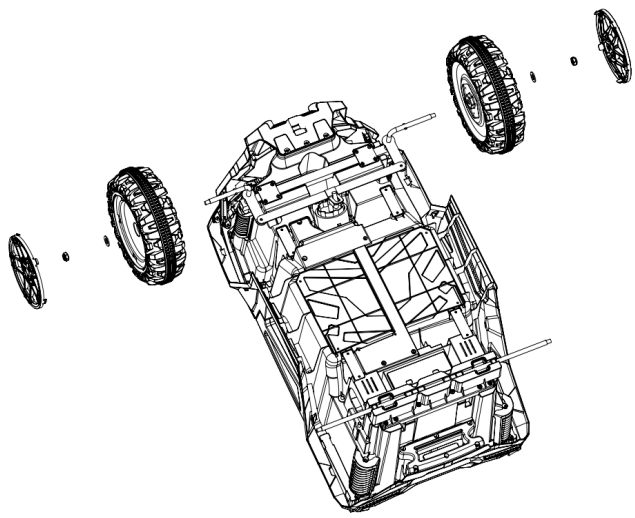

Install the rear wheels and motor


First, install the two motors onto the rear axle, then place washers on the rear wheel and lock it with M8 nuts. Finally, cover the wheel cover.

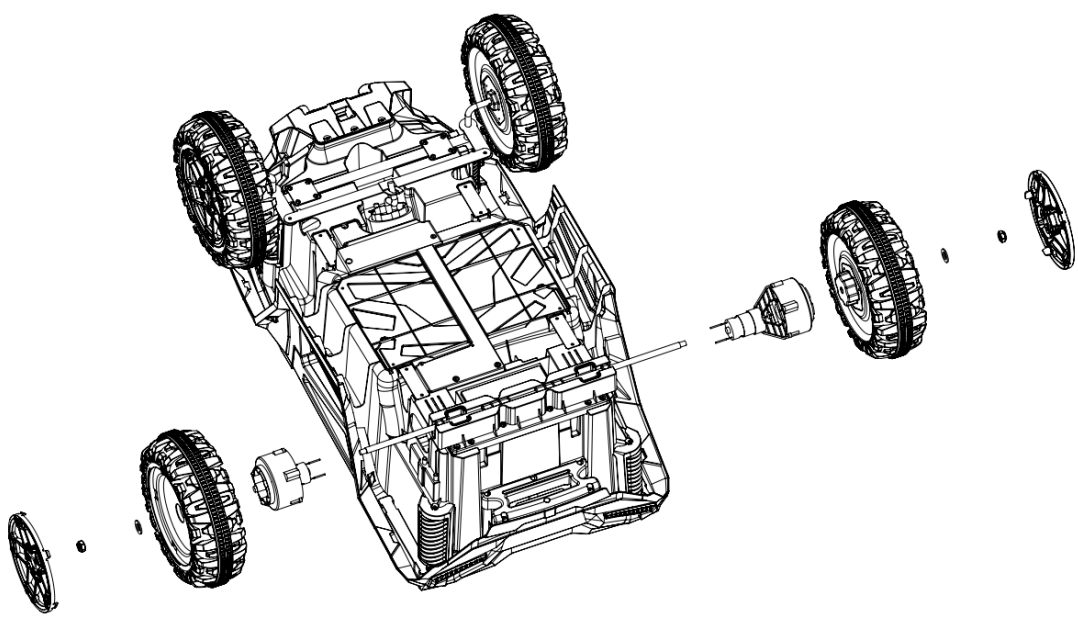

Assembly


Install steering wheel

First, connect the power cord on the steering wheel to the power cord on the vehicle body, and then clip the steering wheel into the interface.

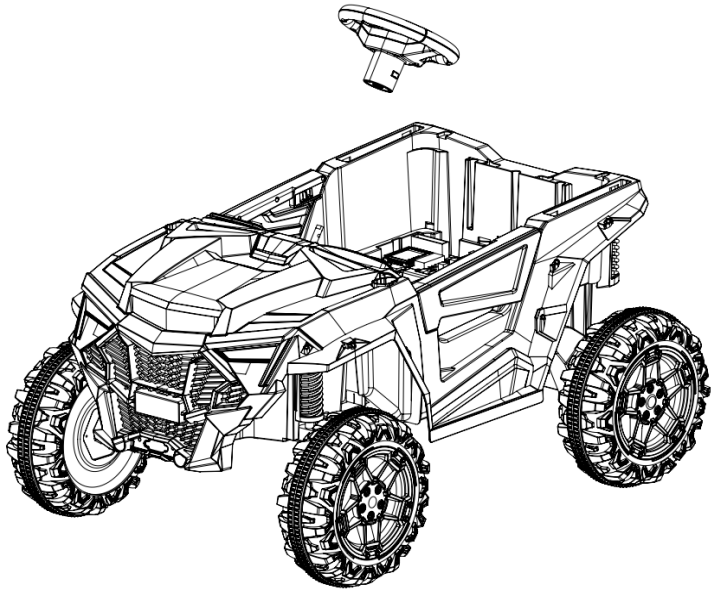

Install the front bumper


Insert the front bumper into the front of the car and secure it with two 4 * 14 self tapping screws.

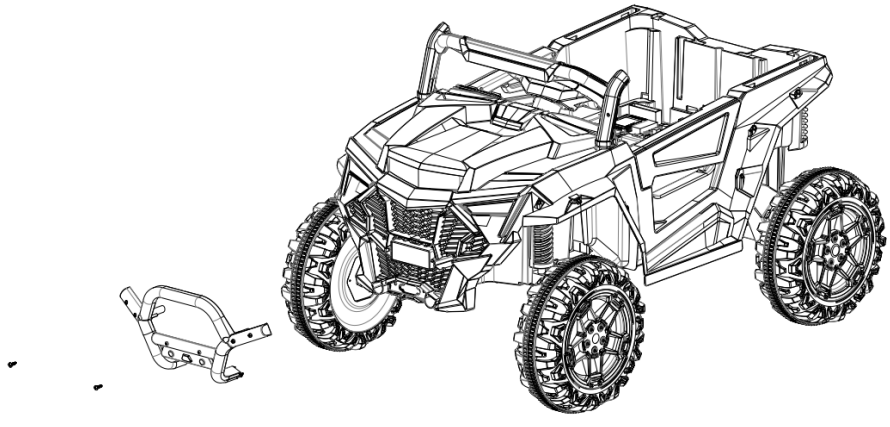

Assembly


Connect the motor and power supply


Connect the motor wires on both sides, and then connect the power cord.

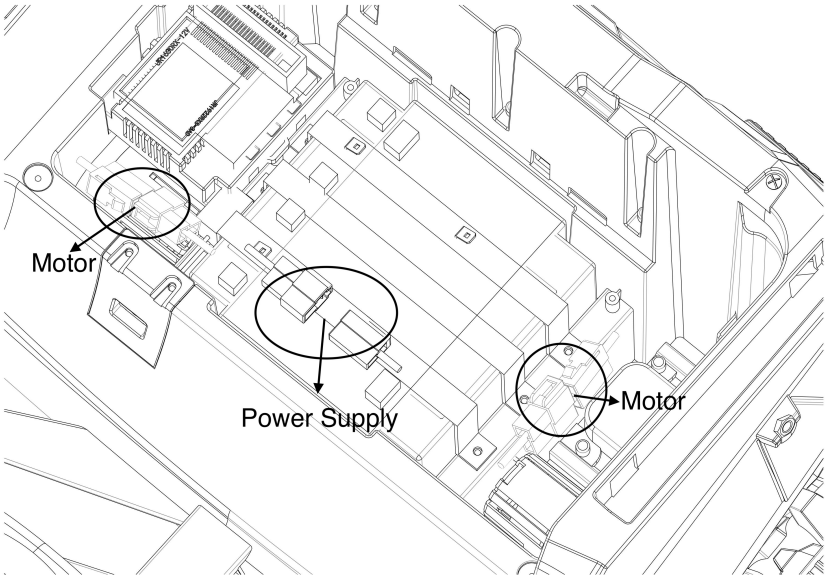

Install the seat and backrest

First, install the seat cushion onto the vehicle body and secure it with two 4 * 14 self tapping screws. Then insert the backrest into the vehicle body and secure it with two 4 * 14 self tapping screws.

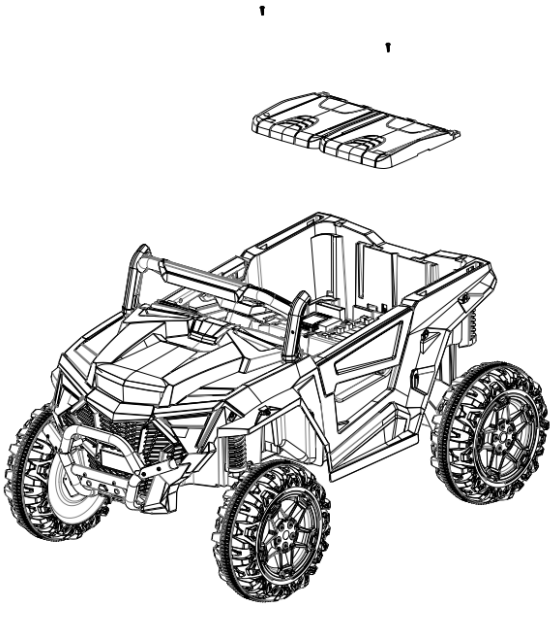


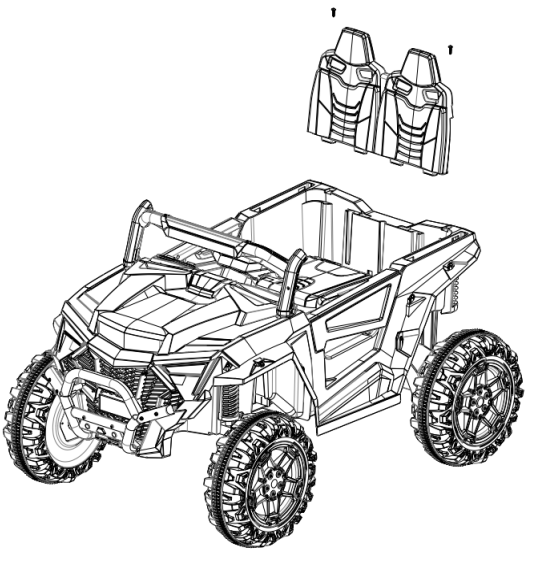


Assembly


Install the search light part

Install the search light into the search light holder as shown in the diagram. And fix it with two 4*14 self tapping screws.

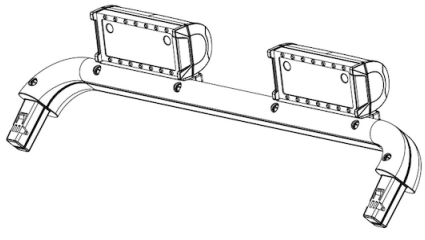


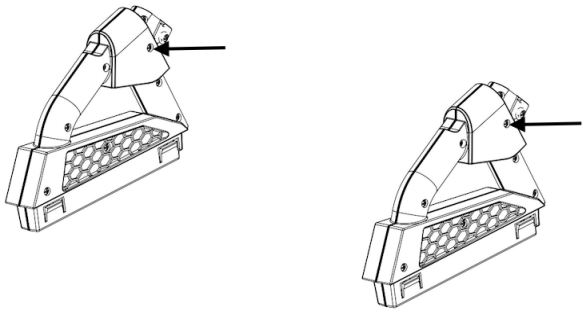

Insert the whole search light part into the vehicle body and secure it.

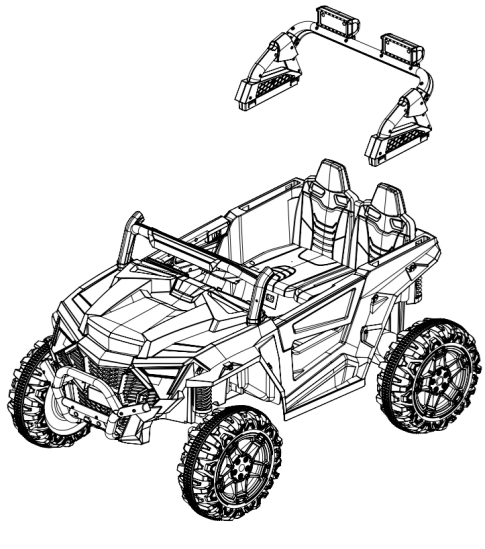

Remote control function and explanation

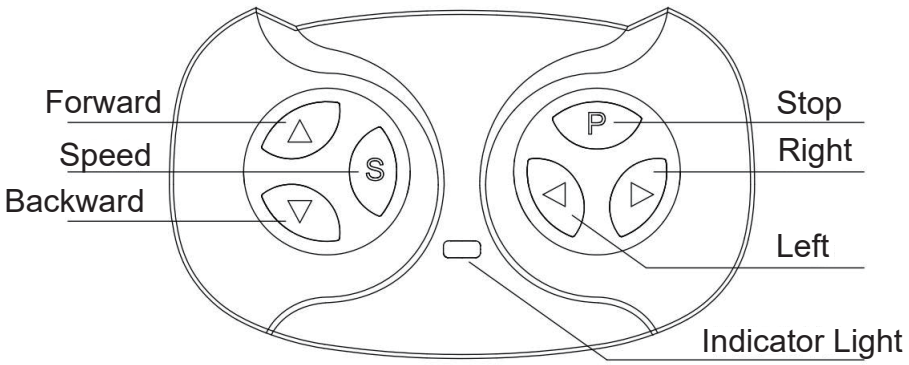

The car with remote control has priority: under the remote control mode, the car can only be operated by remote control, the pedal can not be operated.

Take off the battery cover, put two AAA1.5V remote control battery in the right polarity. When the indicator is lighting, it means battery assembly is correct. Romote control battery is not provided.

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright which means the connection is successful. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

Remote control function and explanation

Do not shift forward/backward button when car is driving, or will damage the motor.
Remote control can be used normally when battery is assembled.
Remote control should be used under adults'supervision.
Remote control is preferred to manual control.

Remote control battery operation

Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.
New and used batteries cannot be used together.
Do not insert batteries into wrong polarity, or will be short-circuited.
Non-rechargeable batteries cannot be recharged. Exhausted batteries should be replaced by adults.
The exhausted battery must be handled and operated properly by adults only. Do not be played by children.


Charge and Center panel operation

Warning!

- The car has charging protection function: all functions are unavailable when charging!
- Charging must be done by an adult! Keep chargers and batteries out of reach of children!

Power switch must be turned off when charging.

- Charging 4-6 hours for the first use, but no more than 10 hours.
- After each use, please charge 8-12 hours, but no more than 20 hours.
- When the normal speed is slow, it indicates that the battery is insufficient, please charge it in time.
- When the battery is insufficient, it should be charged immediately. And charge at least once a month, otherwise battery will be damaged.
- It is normal that the charger is warm when charging.
- Use the charger and battery which provided by manufacturer.

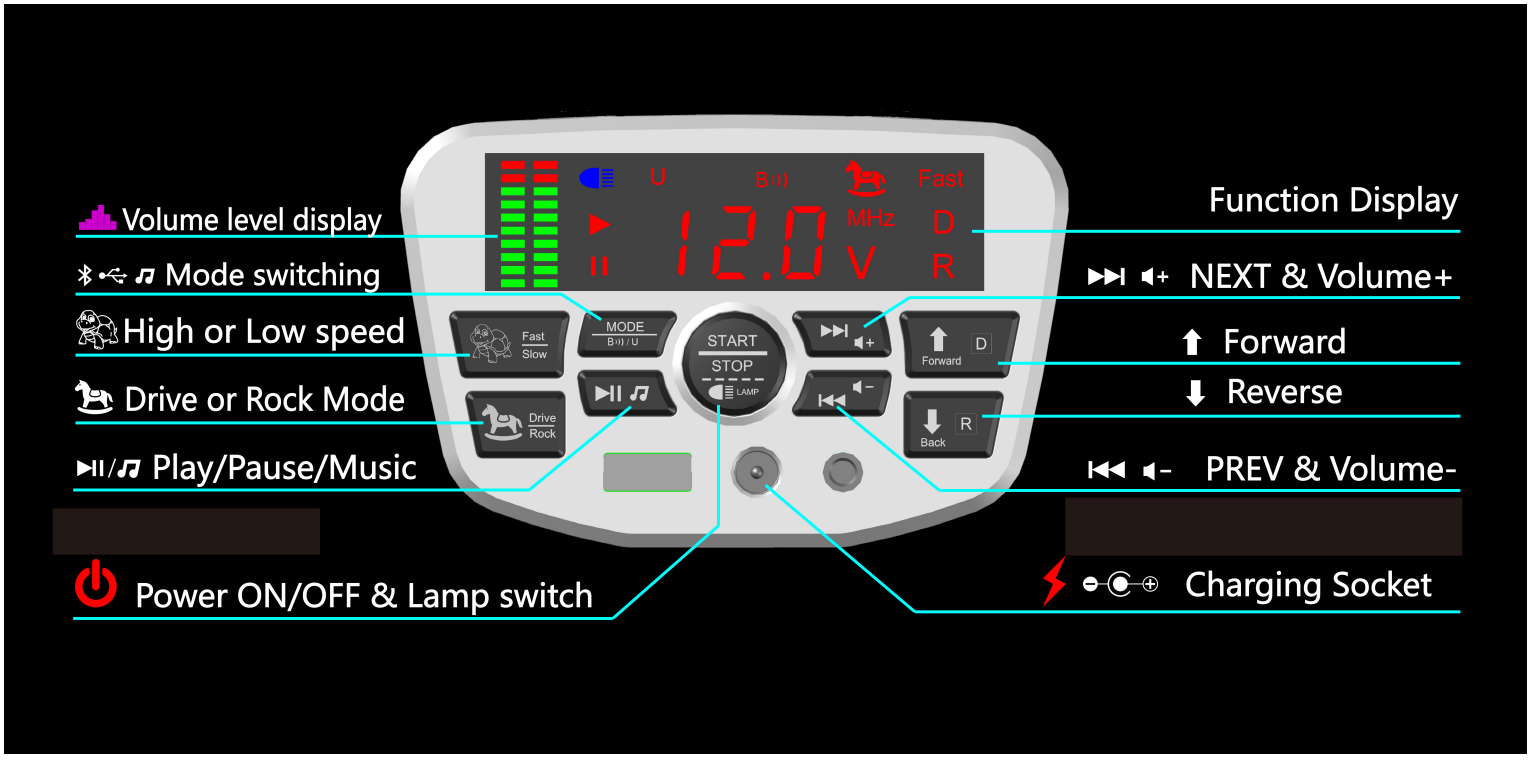

Step 1: Put the charger plug into the plug hole.
Step 2: Connect the charger to the power socket.