

A

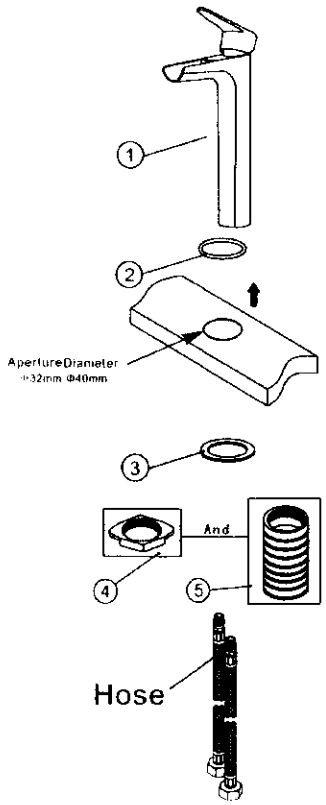


(1)Before installation,ensure there's one hole(Φ32mm-Φ40mm)in the basin. put the O-ring washer under the bottom of the faucet body.

B

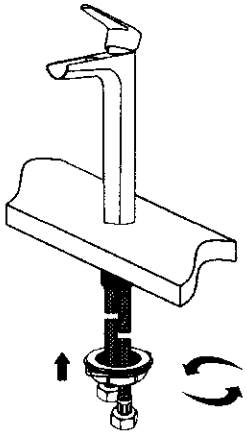

(2)Install the faucet body with inlet hoses and screw bolts into the basin hole,make the fixation parts connect with the screw bolts,screw down the nuts.

C

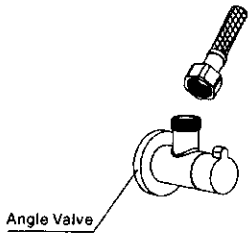


1. Make sure that the sealing pad is in the inlet hose before connecting, then connect the flexible hoses according to the cold/hot water signs with angle valve.
2. Open angle valve switch, turn on the faucet and adjust the water temperature, then check the water temperature adjustment direction is consistent with the leading indicator of faucet. If not, change the 2 pieces hoses with angle valve , then installation is completed.

Note: This installation step is carried out at the bottom of the table. Do not twist the flexible in case of shorting hose life and causing leaking problems.

Note: If leaking,Cause:1.Cartridge or parts has come to loose 2.O-ring is dirty or damaged. Action:1.Re-install the cartridge or tighten the retainer nut.2.Clear or replace o-ring.

D

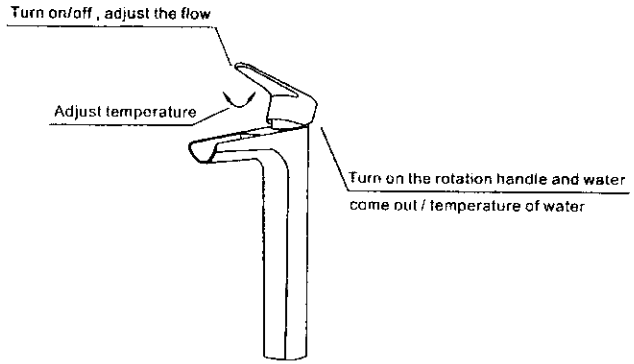

Note: Do not dissemble faucet by yourself. Check every joints are connected closely. (Too loose or too tight is not proper.Too tight will cause connections damaged)