
Zhongshan Topson Electrical Appliances Co.,Ltd.
No.6,Jinsan Road West,Sanjiao Town, Zhongshan City,
Guangdong Province

Made in China

MaxKare Tower Fan

User Manual



MODEL: TST08-RK
NOTE: Please read the manual carefully before using

材质: 105g铜版纸
尺寸: 148.5x210 mm
印刷: 单黑双面印刷
装订方式: 骑马钉装
封面封底内页留白,最后
多的页数为空白页

INTRODUCTION

Thank you for purchasing the tower fan.Please read this user manual carefully and keep it in a safe place for future reference.

INCLUDED

1 x Tower fan
1 x Remote control
1 x User manual
2 x Base accessories
(Note:Please check first to make sure the product is complete without any damage.If you have any doubts, please do not use and contact us.)

Model	TST08-RK
Name	Tower fan
Input voltage	AC 120Vac 60Hz
Rated power	60W
Wind speed settings	Low/Mid/High
Mode settings	Normal/Nature/Sleep
Timer settings (hour)	1-12 Hours
Product dimensions	36inch

IMPORTANT SAFETY INSTRUCTIONS

When using electric devices, basic safety precautions must be observed. To avoid the risk of burns, electric shocks, fire, and/or personal injury, please read the instruction manual carefully before using the device, and observe all of the instructions during the operation of the device.

⚠ GENERAL GUIDELINES

- Electronic devices are not toys! Keep children away from the device!
- Only use the device for its intended purpose.
- Household and indoor use only.
- Do not leave the device unsupervised while in use or connected to the mains.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet first.
- Do not carry the device by the power cord.
- Keep the device clean and dust-free.
- Never use the device outdoors.
- Check the device regularly for signs of visible damage. Do not use the device if determined damage occurs. If the device has fallen down or if it does not function properly. Do not attempt to repair the device yourself.
- Repairs are only allowed to be carried out by qualified specialists.
- The power point must be located near the device so that the plug can be removed easily in an emergency condition.
- Use of attachments that are not recommended or sold by the device manufacturer may cause a risk of injury to person's body.
- The device is only intended for the purpose described in user manual. Do not use the appliance or any part of the appliance out of the intended use to avoid risks.

⚠ HAZARDS DUE TO ELECTRIC CURRENT

- The voltage stated on the nameplate of the device must agree with the voltage of your mains electricity network.
- Only connect the device to a power socket that has been installed properly. Do not use a power strip or an extension cable.
- Never operate the device using or another remote control device.
- Never touch the device, the power cable and the plug with damp or wet hands or when standing on a wet ground.
- Do not place the power cord in the sink.
- Do not immerse the device in water.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Keep the device, the power cable and plug away from hot surfaces, naked flames, direct sunlight and sharp edges. When using the device make sure that the cable is not jammed (e.g. indoors).
- When you pull the plug out of the power socket, always pull on the plug and never on the cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


⚠ HAZARDS TO PEOPLE


- The device can be used by children aged 8 years and above. Persons with reduced physical, sensory or mental capabilities or lack of experience may use the appliance in a safe way and understand the hazards involved. Children should not play with the device.
- Cleaning and user maintenance should not be done by children without supervision.
- Children may not recognize the hazards which can arise when handling electrical devices. Keep children away from the device. Pay particular attention when using the device if children are in the vicinity!
- Keep packaging materials such as plastic bags and polystyrene parts out of the reach of children. Risk of suffocation!
- When laying the cable make sure that it will not be a tripping hazard.
- Make sure that the device itself cannot be tripped over.

ARTICLE-SPECIFIC HAZARDS

- Make sure that the device isn't dirty and is assembled correctly.
- Never operate the appliance on uneven surfaces or in the vicinity of steps. Avoid tipping the device over when it is in use (e.g. if there are borders on the floor).
- The tower fan may only be used, if it is fully assembled. Check all screw / plug connections at regular intervals. Re-tighten loose screws and ensure that plug connections are properly adjusted.

OVERVIEW OF APPLIANCE

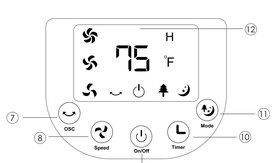


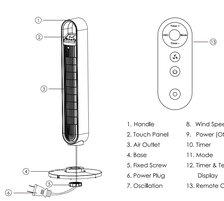

1. Handle
2. Touch Panel
3. Air Outlet
4. Base
5. Fixed Screw
6. Power Plug
7. Oscillation
8. Wind Speed
9. Power (ON/OFF)
10. Timer
11. Mode
12. Timer & Temperature Display
13. Remote Control

ASSEMBLING THE STAND BASE

1. Take all of the appliance parts out of the package and remove all packaging materials and inserts.
2. Take the bases (4) in 2pcs, and make the power plug (6) to cross it. See the Fig.1
3. Snap the bases (4) in 2pcs together, see the Fig.2
4. Tighten the fixed screw (5), see the Fig.3



HANDLING THE APPLIANCE POWER

- Press the On/Off Button ⏻ (9), to select power on / off the appliance.

SPEED

- Press the button of Speed (8) to select the wind speed.
- 3 speed for selection : 🍃 Low Speed; 🌀 Mid Speed; ✿ High Speed
- After power-on, the default wind speed is High Speed ✿

MODE

- Press the button of Mode (11) to select the fan mode.
- 3 modes for selection : (Normal/Nature/Sleep).
- After power-on, the default mode is 'Normal' and the indicator of 'Normal' will not be displayed on the screen, and the Sleep Mode 🌙 / Nature Mode 🍃 with the indicator be light up.

TIMER (1 - 12 HOURS)

- Press the button of Timer (10) to the desired time period (1-12 Hours)
- It will now remain in operation until the selected period of time runs out.
- After the time runs over, the device will turn off.

OSCILLATION


- Press the button of Oscillation (7), appliance will swing from Left to Right.

TEMPERATURE DISPLAY

- Temperature display, which is an automatic function to show the indoor temperature when appliance works.

REMOTE CONTROL

- All the functions above can be set by remote control.

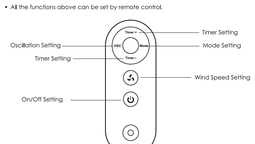

CLEANING AND MAINTENANCE

Before cleaning the appliance always disconnect the power plug from the receptacle.

- The appliance, the power cord and the power plug should not be immersed in water or other liquids when you are cleaning them. Clean them with a dry cloth.
- If it is very dirty, the outside of the appliance can be wiped carefully with a moist cloth and then dried carefully. Make sure that no moisture penetrates into the interior of the appliance.
- Do not use any harsh cleaners, steel brushes, scouring powder or other hard objects to clean the appliance as these can cause scratches on the surfaces.
- Clean the appliance regularly.
- Never use solvents, benzene or oil-based cleaners as these can damage the housing.
- Re-tighten visible screw connections on the appliance regularly in order to ensure that the device is functioning properly.

DISPOSAL

Used electric household devices
1. If you do not want to use your electrical appliance any longer, return it free of charge to a recycling depot for used electric appliances.
2. Used electric devices do not belong in the household garbage (see symbol).

Further disposal instructions
1. Return the electrical appliance in such a condition that its later re-use or recycling is not adversely affected. Batteries must be removed in advance and the destruction of parts which contain fluids must be avoided.
2. Electrical appliances can contain harmful substances. Improper handling or damage to the appliance can lead to health problems or water or ground contamination, when the appliance is recycled later.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

⚠ WARNING

INGESTION HAZARD: This product contains a button cell or coin battery.
DEATH or serious injury can occur if ingested.
A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours.**
KEEP new and used batteries **OUT OF REACH of CHILDREN**
Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.