

HOME PILATES REFORMER

Instruction

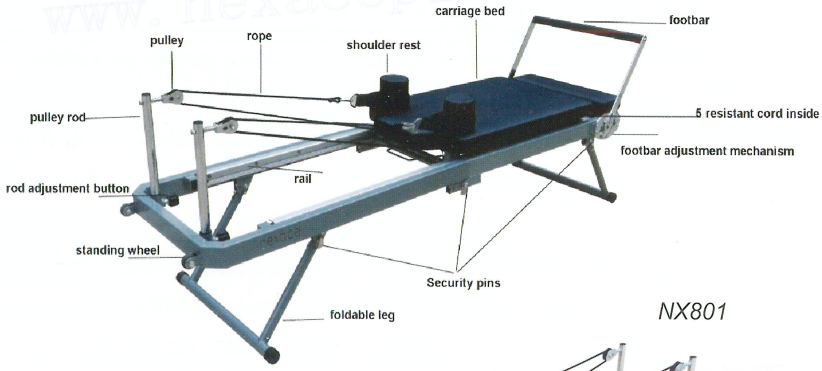

NX801

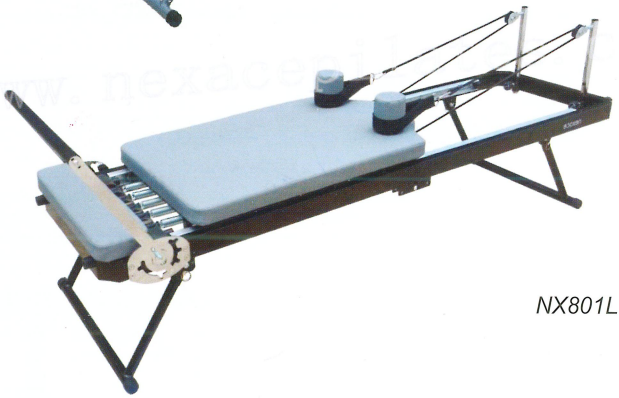

NX801L

CAUTION:

Weight on this product should not exceed 300lb/135kg

IF you have any questions or problems with reformer,
Please do not request return directly. Contact us FIRST!
(including damage due to shipping, missing part, etc)

⚠ WARNING **To reduce the risk of serious injury,**

Read the following safety instructions before use

1 Always make sure all bolts and nuts are securely tightened prior to each use.

2 Always make sure that all the six (6) security pins are fully inserted.

3 Please be careful not to pinch your fingers when unfolding or folding the product.

4 Keep children and pets away from the nexace reformer in use.DO not allow children to use or play.

5 This product should be installed on the floor, not near the machine with water vapor,dirt and heat.

6 Excessive use by unskilled persons is prohibited.

7 Exercise can present a health risk. Consult a physician before beginning any exercise program.


8 Please do a simple warm-up workout before using the nexace reformer.

9 Be careful to maintain your balance while using,mounting,dismounting,or assembling.Loss of balance may result in a fall and bodily injury.

IF you have any questions or problems with reformer,
Please do not request return directly. Contact us FIRST!
(including damage due to shipping, missing part, etc)

www.nexacepilates.com

Package includes: (applicable for NX801 / NX801L)

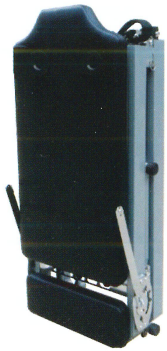



shoulder rest X2



strap X2



pulley rod X2



footbar X1



spring X5

Key assembly steps (for NX801 and NX801L)



1
Stand up the machine and
pull out the pins on both middle sides



2
Unfold the frame, let the carriage
wheels go inside the other rail slowly




3
Pull out pins on legs, unfold legs
Then insert back pins fully



4
Assemble the foot bar with tool
Included



5
Insert the pulley rod to its place
the button can be loosen and pull

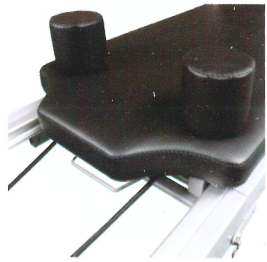


6
Insert the shoulder rest



7
Let the ropes stretched out properly
NO tangle with each other or with
metal handle




8
Hook the rope with hand strap

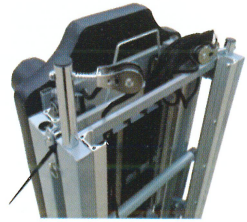


Tip
Pulley rod can be stored in
the frame when not in use

www.nexacepilates.com

Adjustment tips (for NX801 and NX801L)

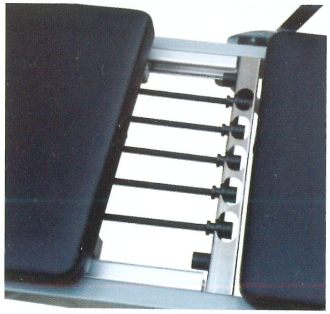


NX801

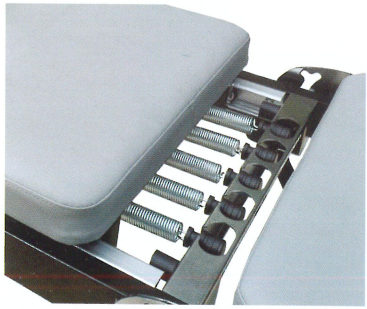


NX801 L

tension adjustment on model 801 and 801L

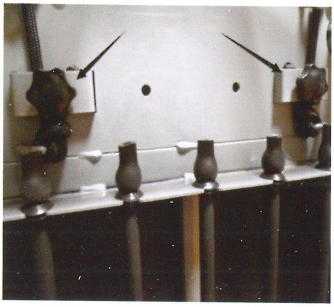

NX801

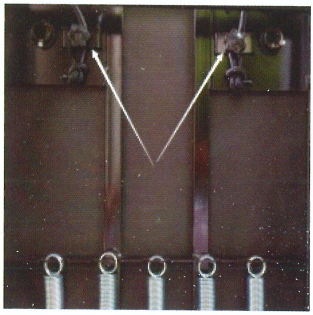



801L

If you feel ropes uneven, please adjust rope length via these twist buttons under carriage

www.nexacepilates.com



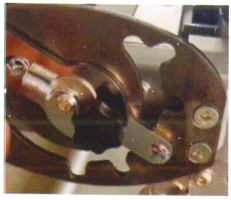

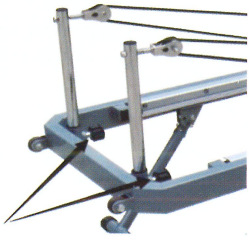

Foot bar angle adjustment
(pull the foot bar up ,then move and lock with black plastic-head screw)


Pulley rod height adjustment button

Folding tips (for NX801 and NX801L)

Correct folding below –(carriage stay same side with footbar)



Wrong folding below-(carriage NOT stay same side with footbar)

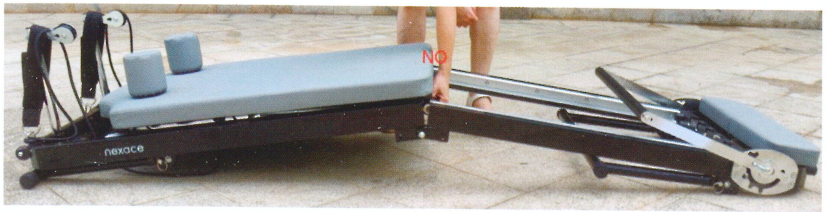



Questions and Answers:

Q:Why still cannot unfold the machine when I already pull out 2 pins in the middle of frame ?

A:Please check circle marks in the below image to see if any one of these leg foundation part get stuck with other part of machine ? If so, please use a little strength to pull out like in the image. This sometimes happens due to over-impressed by other packages at transit . But only open this way for the first time

(this answer for model NX801 and NX801L)

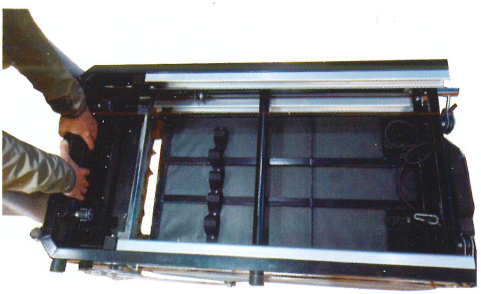

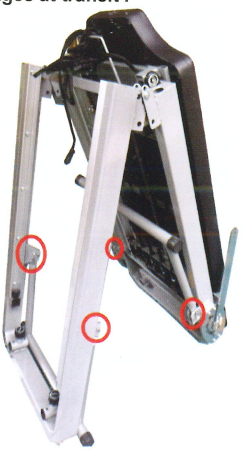

Q: How can we change for spring on model NX801 ? (sometimes already installed with this spring)

A: In some production batch of model NX801 , we offer springs as bonus gift (note: these gift springs NOT within warranty)

Please follow below steps to change (only for NX801):

--- Turn the whole machine upside down

--- Take out all rubber cords directly from its holes

--- Put on rubber ring at one side - see image 2

--- Connect to the frame base via steel wire- image 3

(please note: sometimes steel wire are 5 short pcs in your package,not like one long pc as in the image)

www.nexaceplates.com



Image1

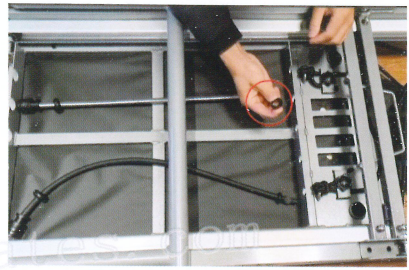


image2

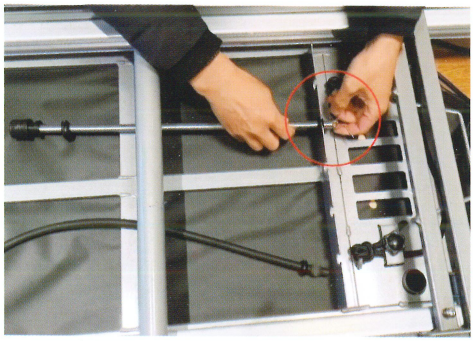


Image 3

(please note: sometimes steel wire are 5 short pcs)