Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.








- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Dining Table




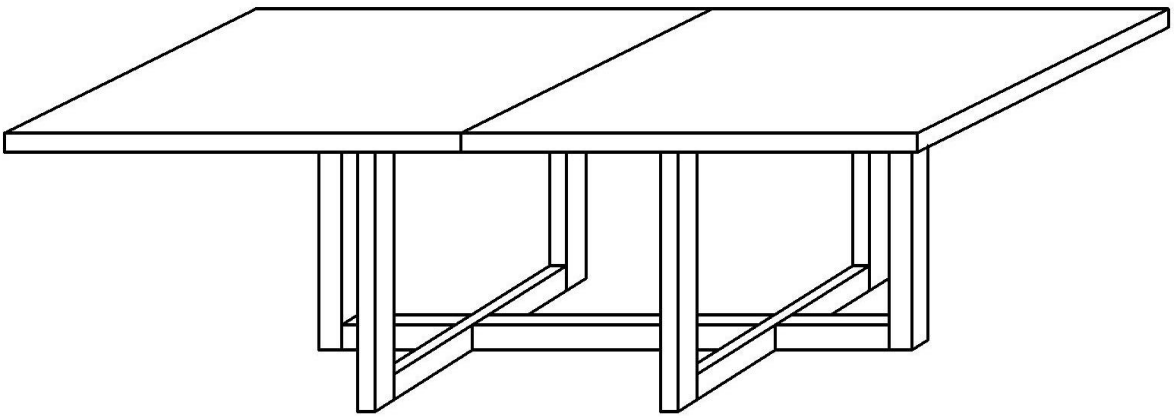


Parts List

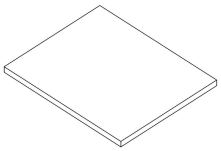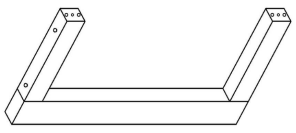Label	Picture	Description	QTY
A		Table Top	2
B		Foot frame	2

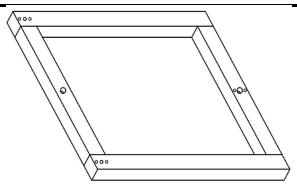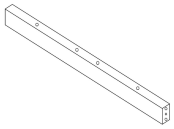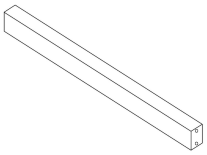
C		Foot frame	2
D		Rung	2
E		Link	1


Hardware

Label	Picture	Description	QTY
①		Allen Wrench 5mm	1
②		Bolt (M8*50mm)	9
③		Bolt (M8*63mm)	13
④		Spring Washer (M8)	22
⑤		Flat Washer (M8)	22
⑥		Wood Tenon (Φ10x40mm)	21
⑦		Iron piece	2
⑧		Screw (Φ8x25mm)	9
⑨		Screwdriver (not provided)	1

Assembly Preparation


Before Beginning Assembly:

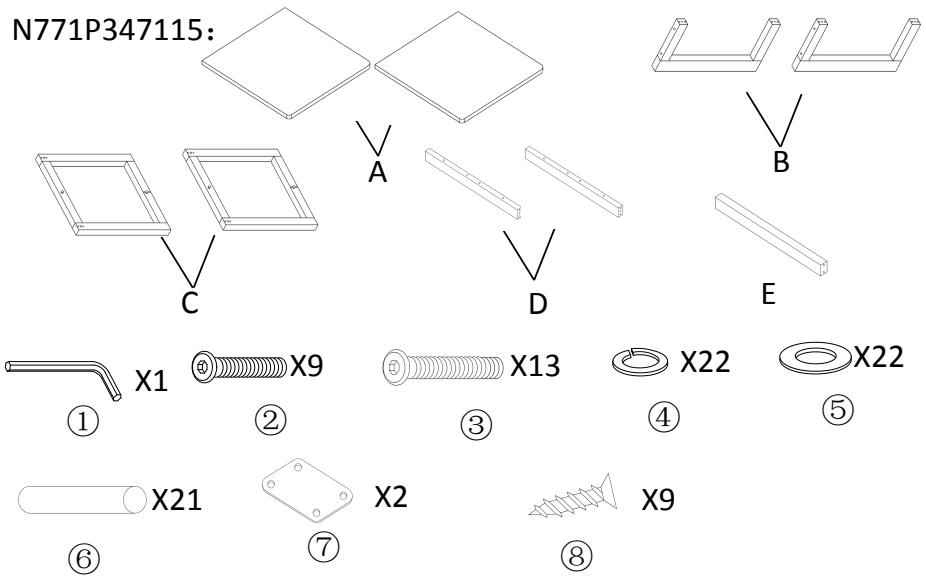

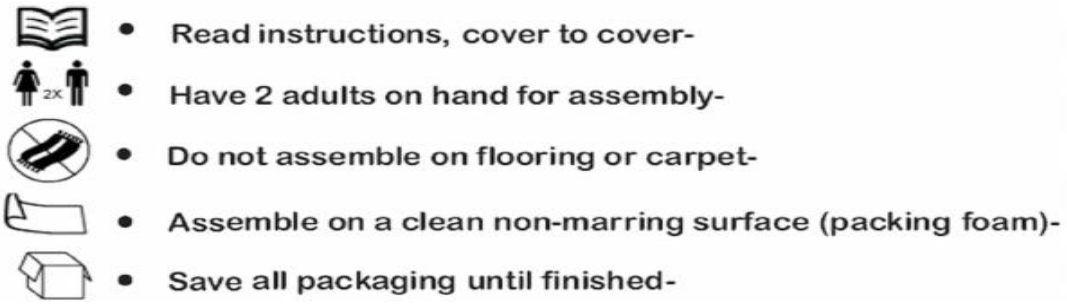


Assembly Steps

Overview

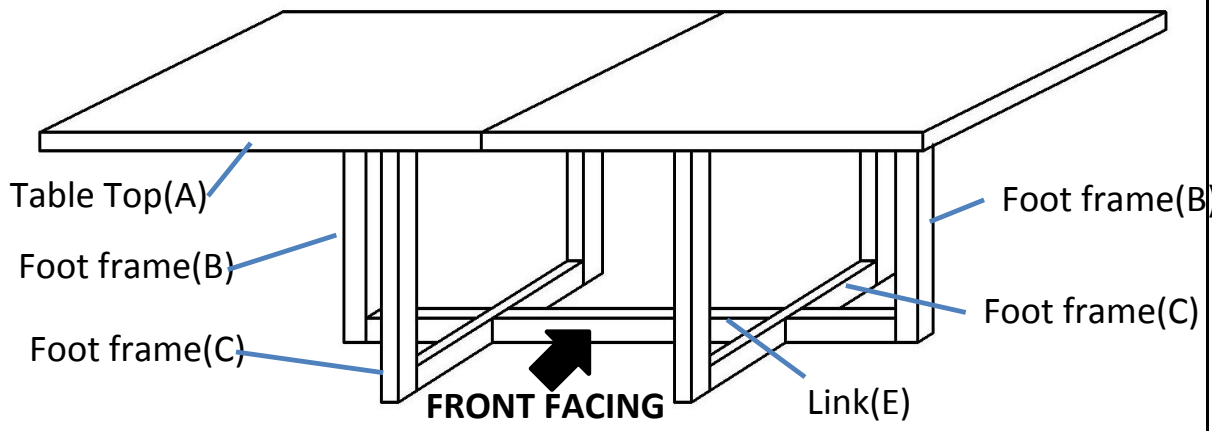


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

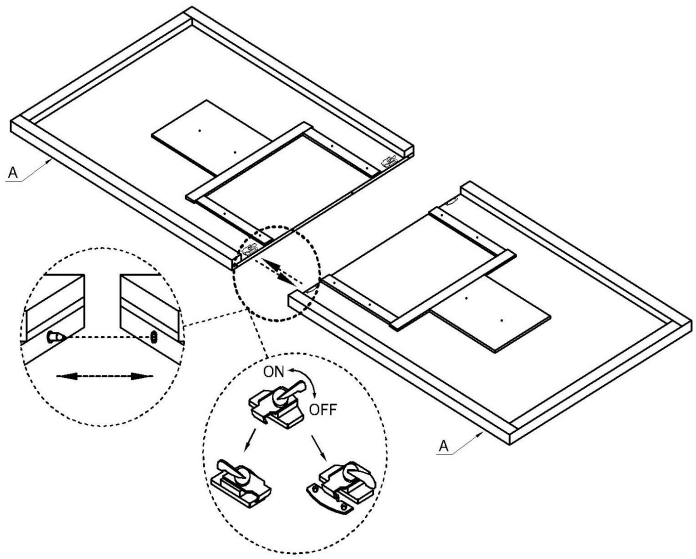


Please put the two panels (A) together as shown.
Place all the parts on a clean, non-marring surface.

Step 2

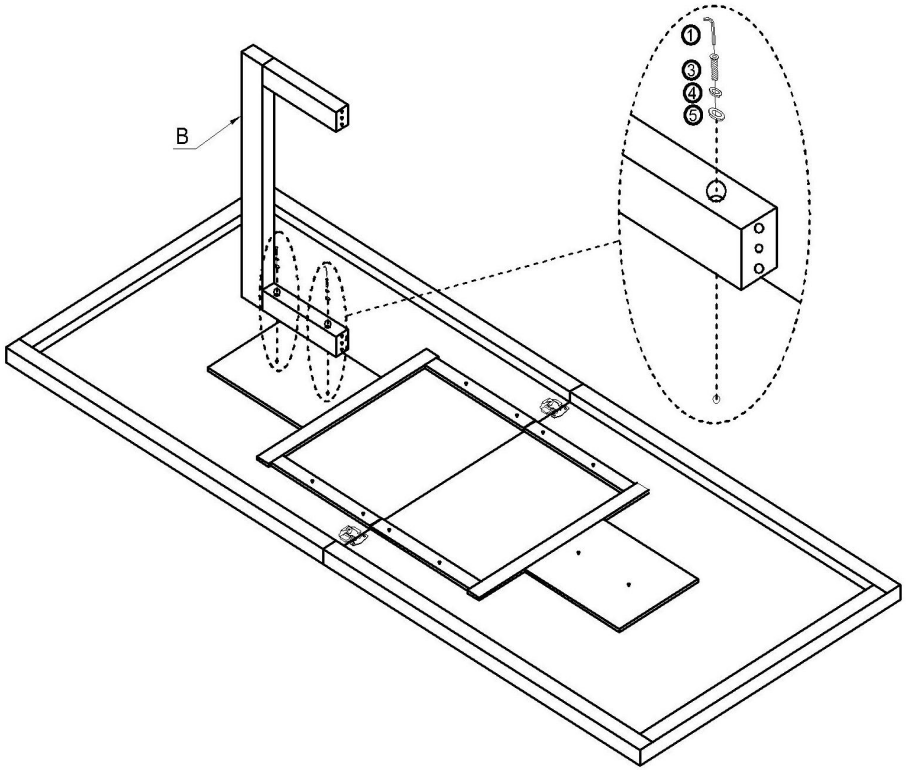

As shown in the figure: Please fix the Table Top (A) and the Foot frame (B) using Bolts (③) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).


Step 3

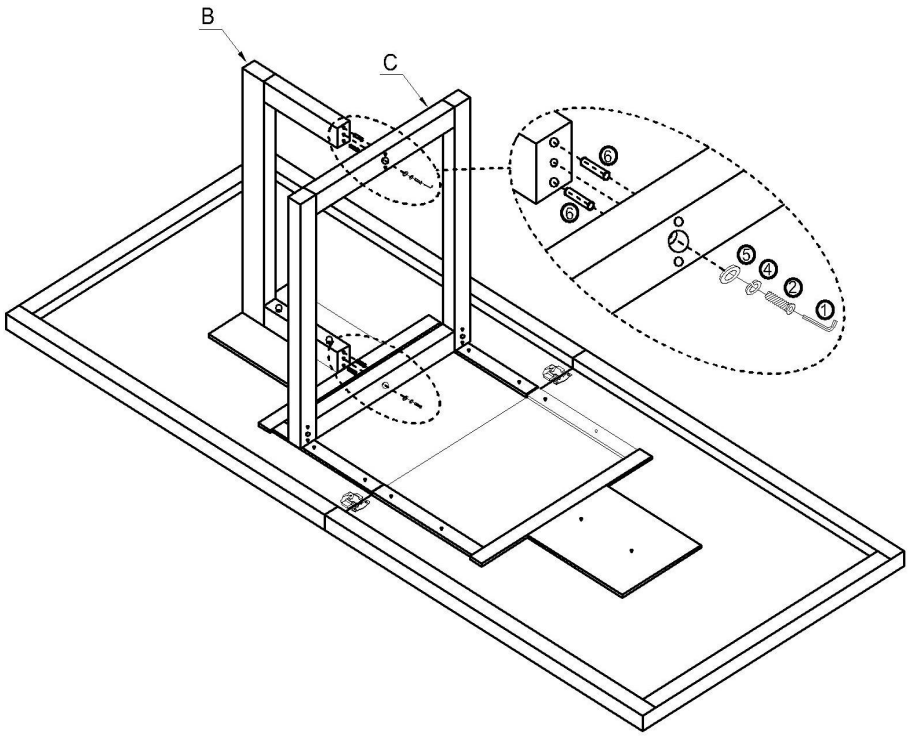

As shown in the figure: Please fix the Foot frame (B) and the Foot frame (C) using Wood Tenon (⑥) ,Bolts (②) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).


Note: DO NOT fully tighten the Bolts at this time.

Step 4

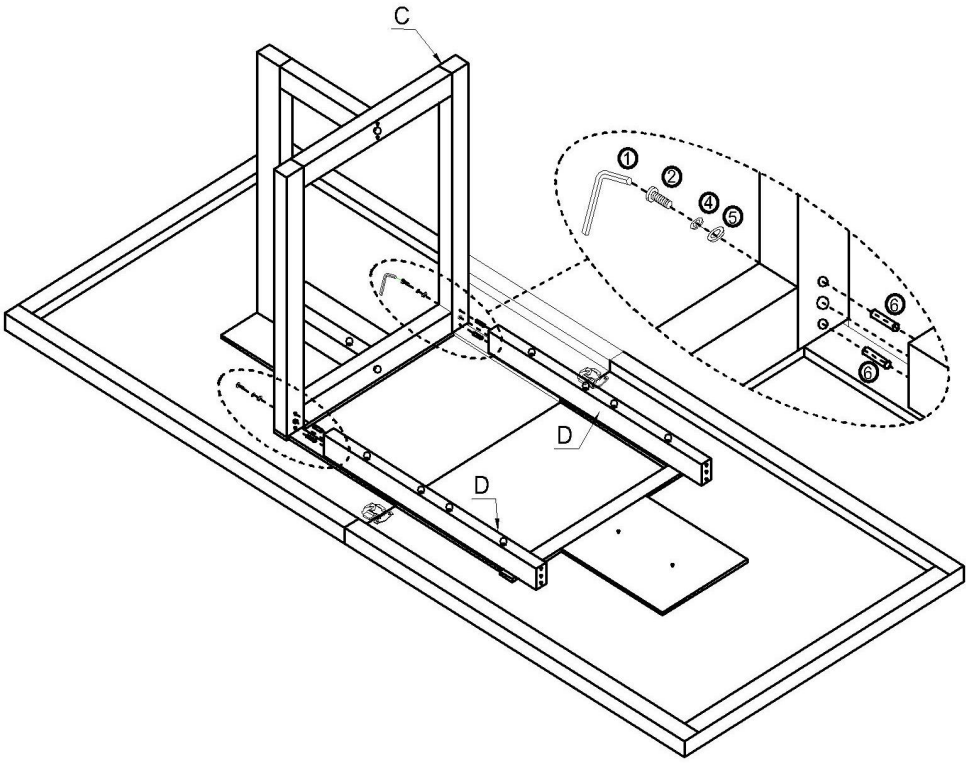


As shown in the picture: fix the Rung (D) and the Foot frame (C) with Wood Tenon (⑥) , Bolts (②) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).

Step 5

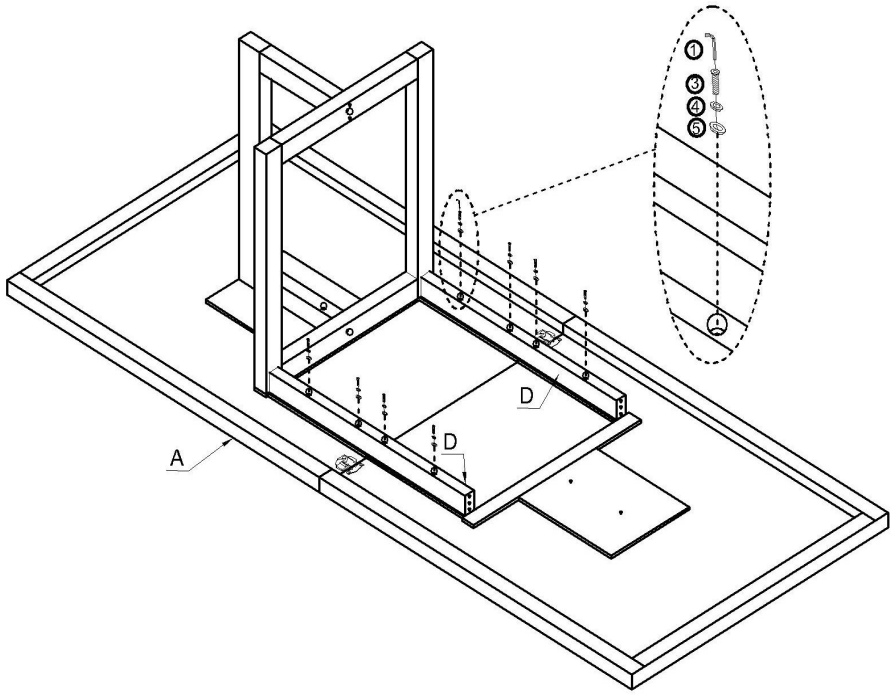


As shown in the picture: Please fix the Rung (D) to the bottom of the Table top (A) with Bolts (③) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).

Step 6

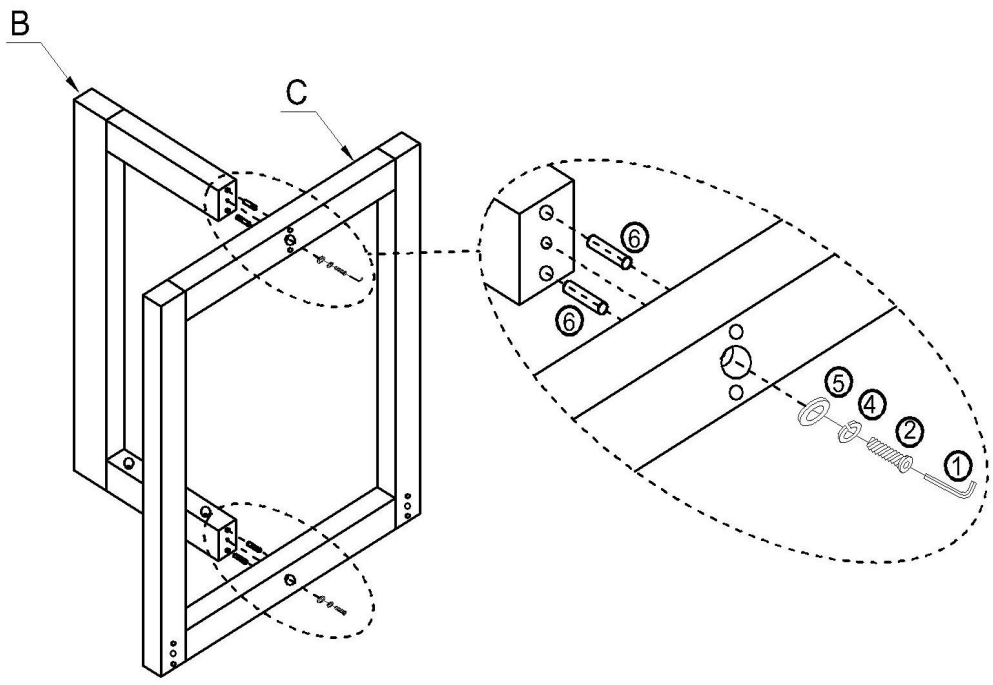


As shown in the figure: Please fix the Foot frame (B) and the Foot frame (C) using Wood Tenon (⑥) ,Bolts (②) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).

Step 7

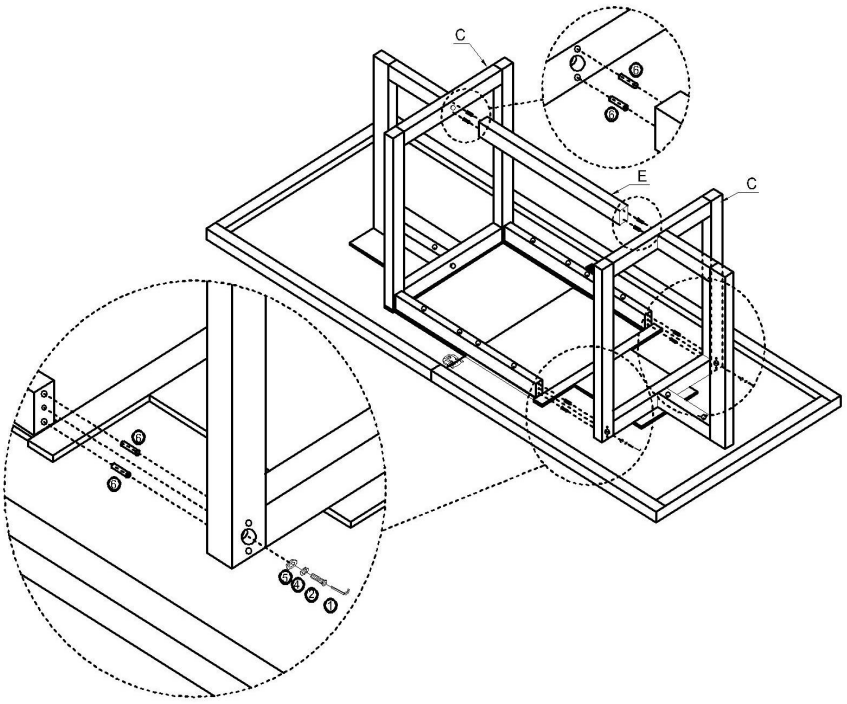


As shown in the picture: Please use Wooden dowels (⑥), Bolts (②) + Spring washers (④) + Flat washers (⑤) and Allen wrenche (①) to fix the Foot frame (C) and Link (E).

Step 8

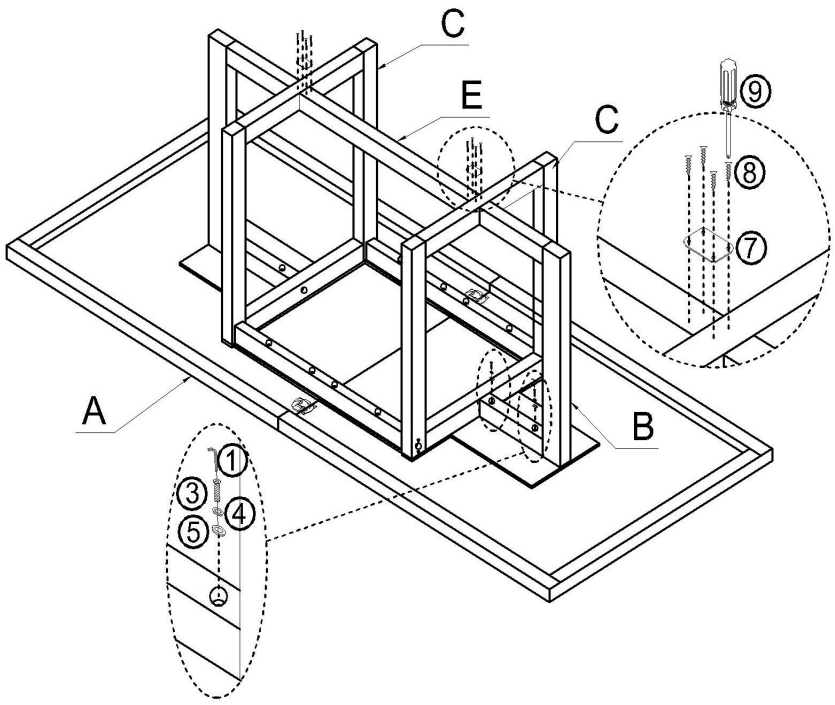

As shown in the picture: Please use a Screwdriver (⑨) and Screws (⑧) to fix the Iron piece (⑦) on the Link (E) and Foot frame (C).
Please fix the Table Top (A) and the Foot frame (B) using Bolts (③) + Spring washers (④) + Flat washers (⑤) and Allen wrench(①).

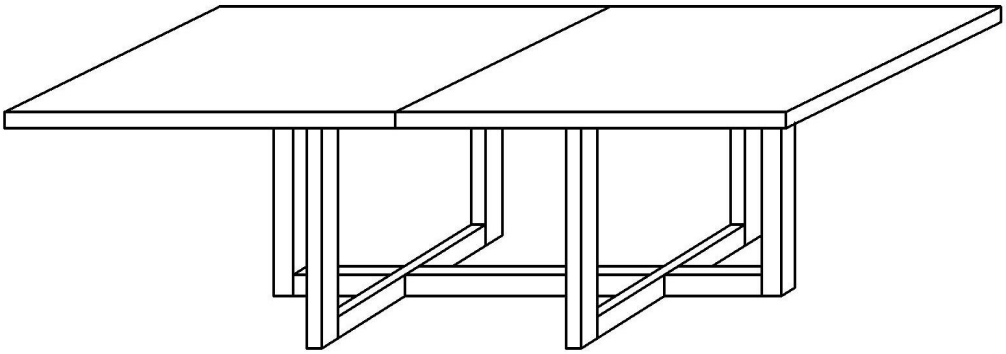Step 9	
Your Dining Table is ready for use. This Dining Table should only be used on a flat, level surface.	