
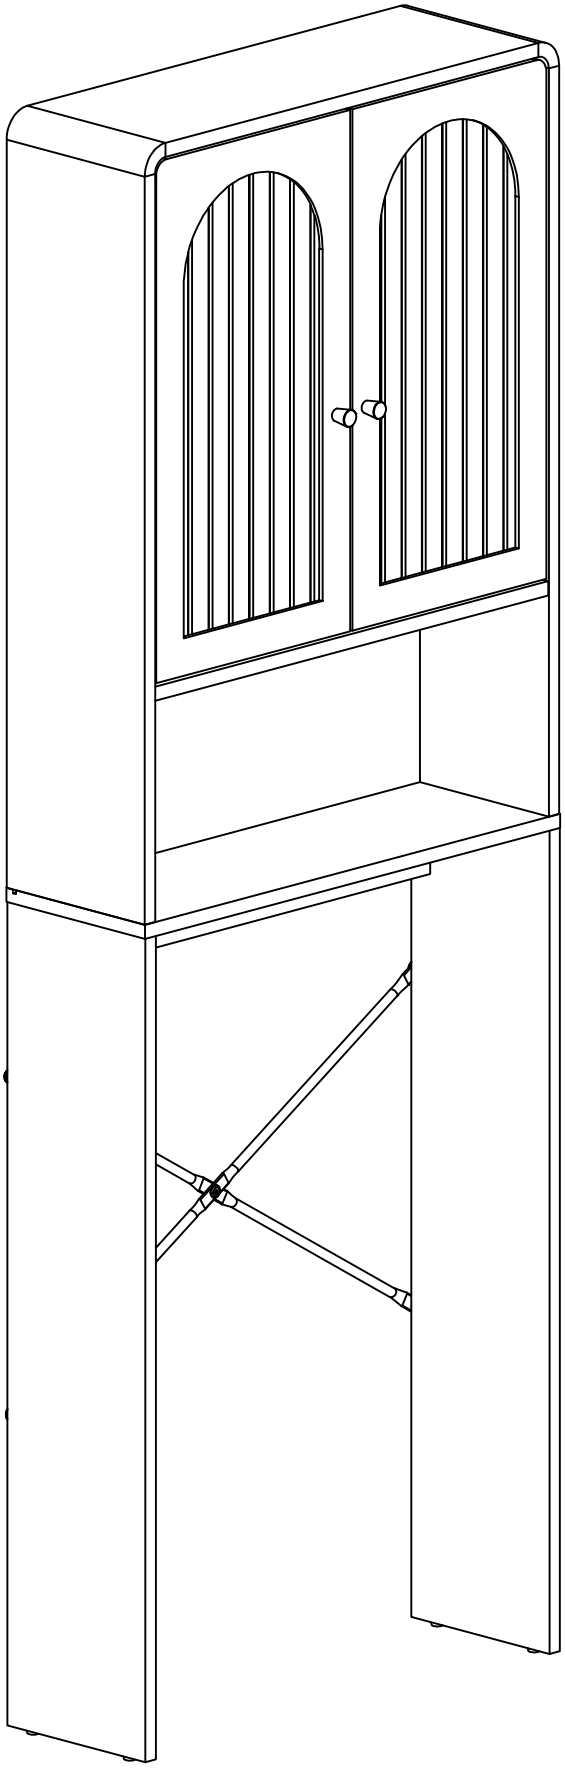


Before You Start

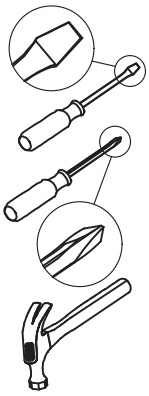

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: **1-2**



- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

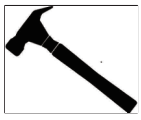

- Compression dowels are lightly tapped in with a hammer.




- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.


- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

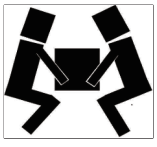















-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.


- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

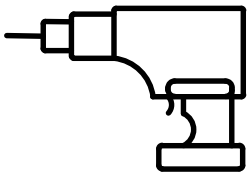


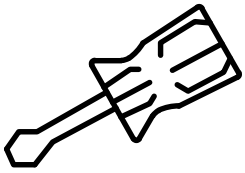

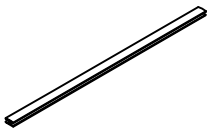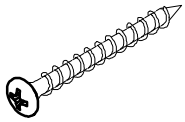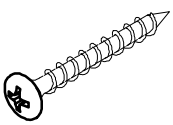
A×22PCS	B×22PCS	C×22PCS	D×38PCS	E×14PCS
 M6×35mm	 Ø15×12mm	 Ø6×30mm	 Ø3.5×14mm	
F×4PCS	G×1PC	H×2PCS	I×18PCS	J×2PCS
 Ø6×50mm		 Ø4×14mm		
K×2PCS	L×1PC	M×2PCS	N×2PCS	O×4PCS
 M4×22mm	 M4mm	 Ø6×30mm	 Ø4×35mm	 Ø5×19mm
P×4PCS	Q×1PC	R×2PCS	S×1PC	T×1PC
			 M6×12mm	 M6mm
U×4PCS				
 Ø5×30mm				

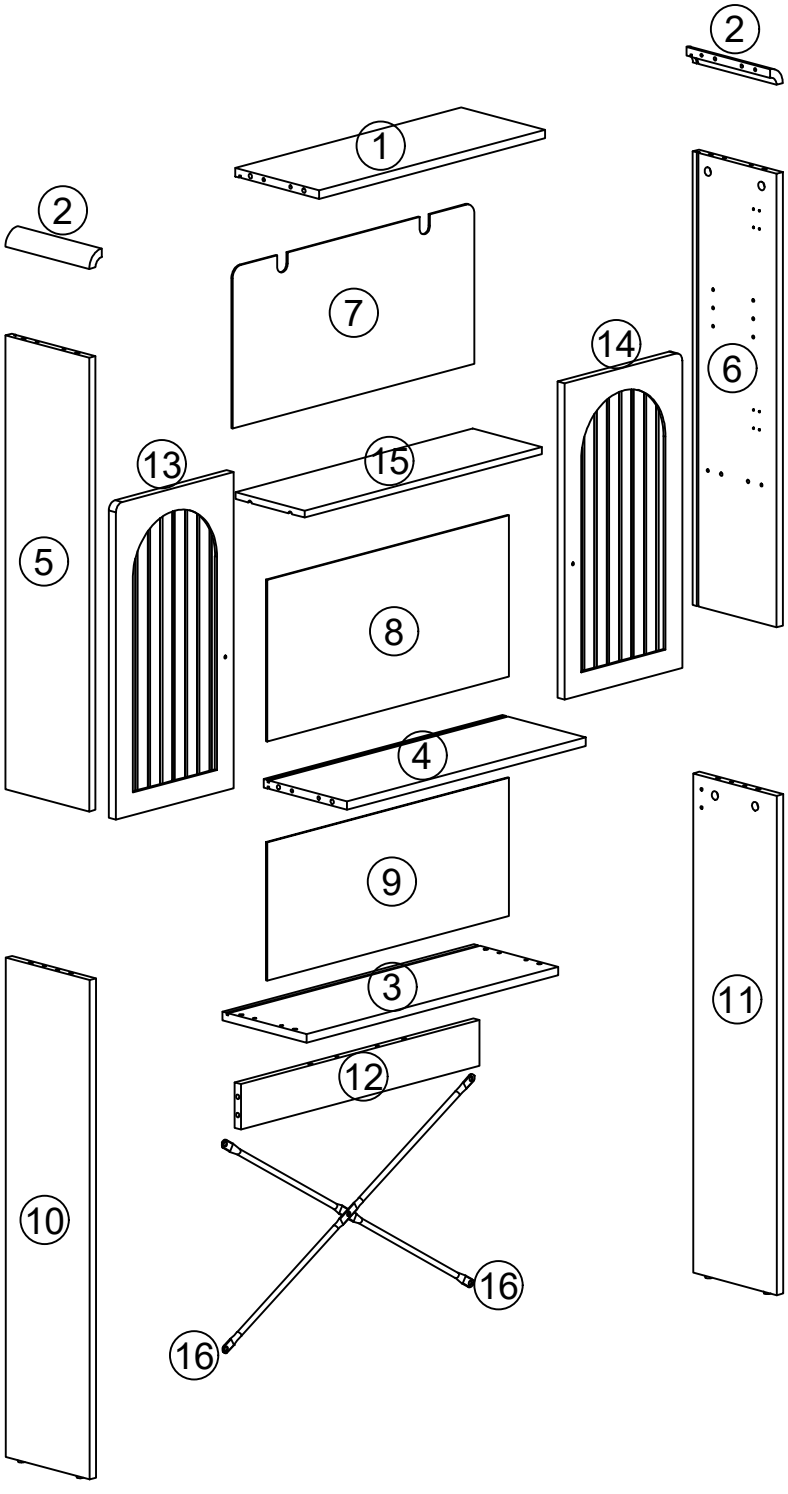

2
1
2
7
14
6
13
15
5
8
4
9
11
3
12
10
16
16

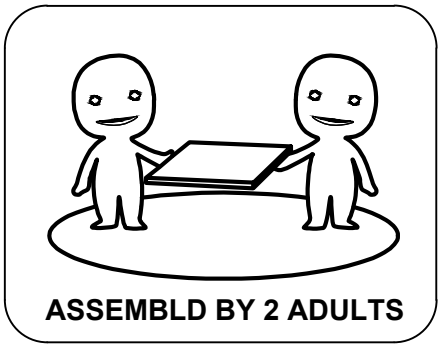

ASSEMBLD BY 2 ADULTS

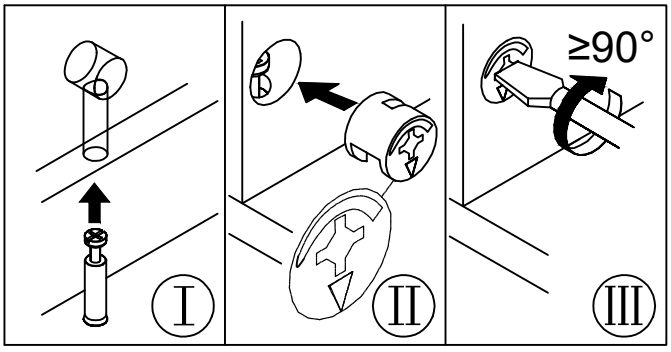
≥90°
I
II
III

1.


A×4PCS

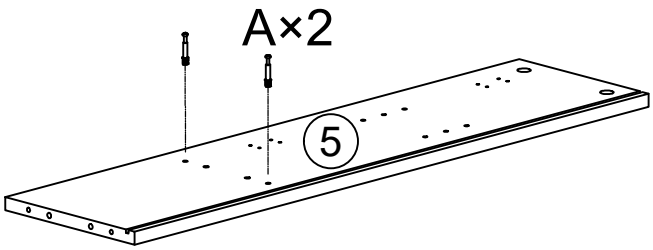M6×35mm

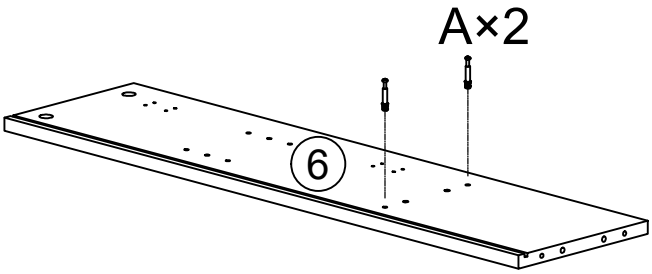



2.

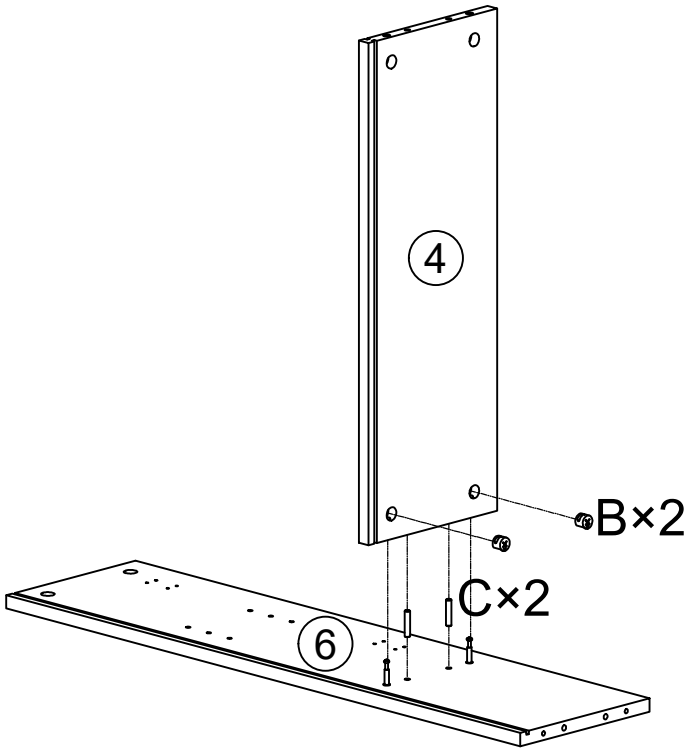
B×2PCS	C×2PCS
	
Ø15×12mm	Ø6×30mm




B×2PCS	C×2PCS
 Ø15×12mm	 Ø6×30mm


3.

4.

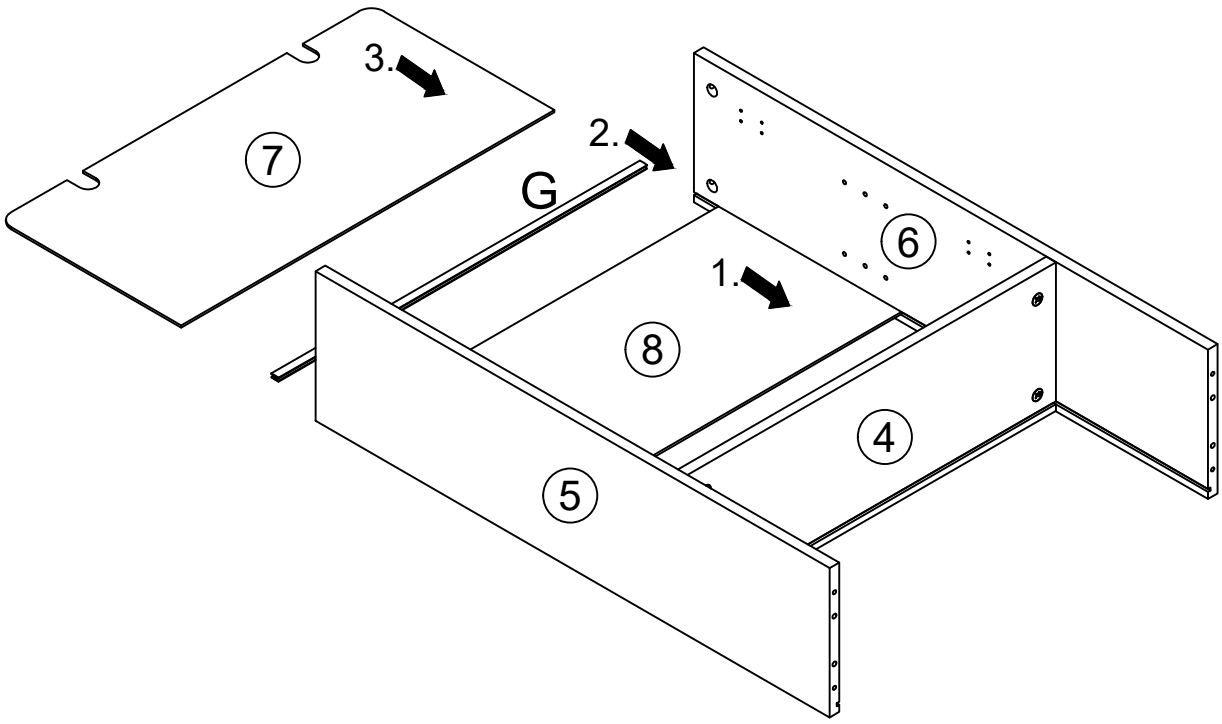

5.


A×8PCS

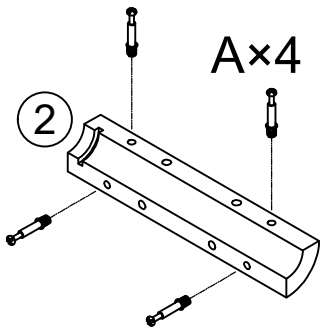M6×35mm



×2


6.

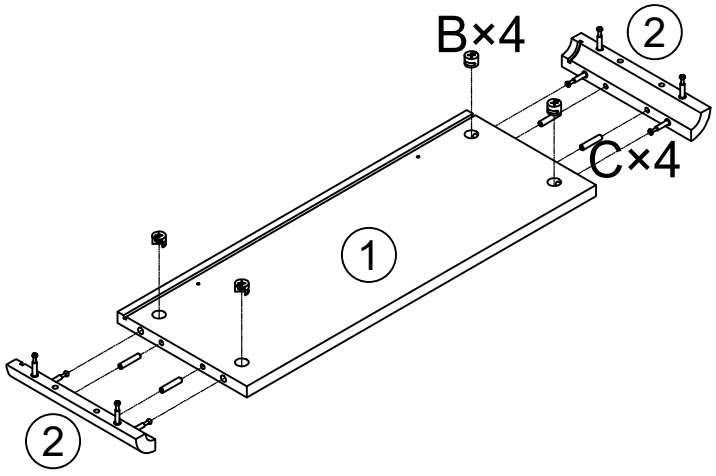
B×4PCS	C×4PCS
	
Ø15×12mm	Ø6×30mm



H×2PCS	R×2PCS
 Ø4×14mm	


7.

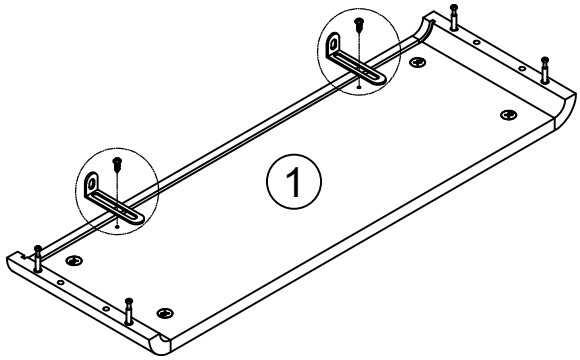


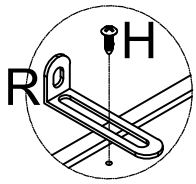

B×4PCS	C×4PCS
 Ø15×12mm	 Ø6×30mm


8.

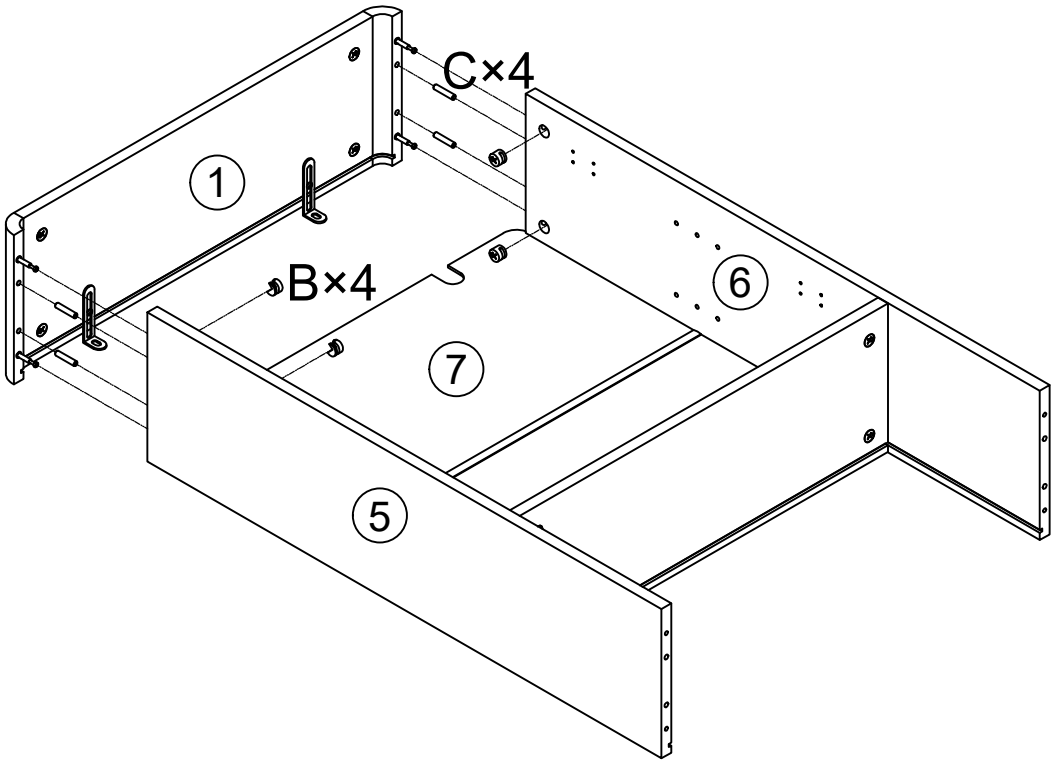


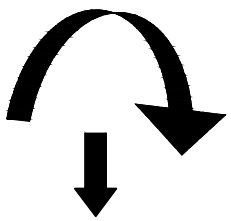


step 9.


9.

A×6PCS

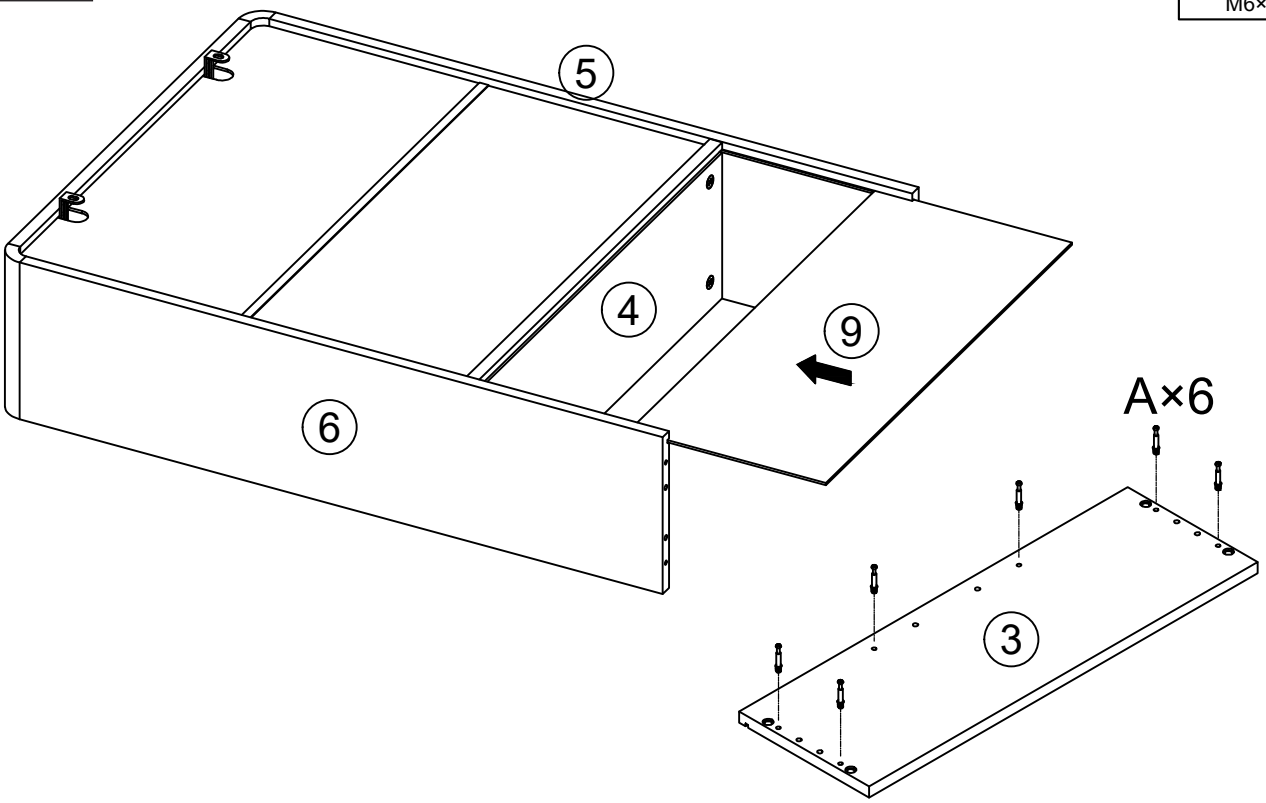M6×35mm




10.

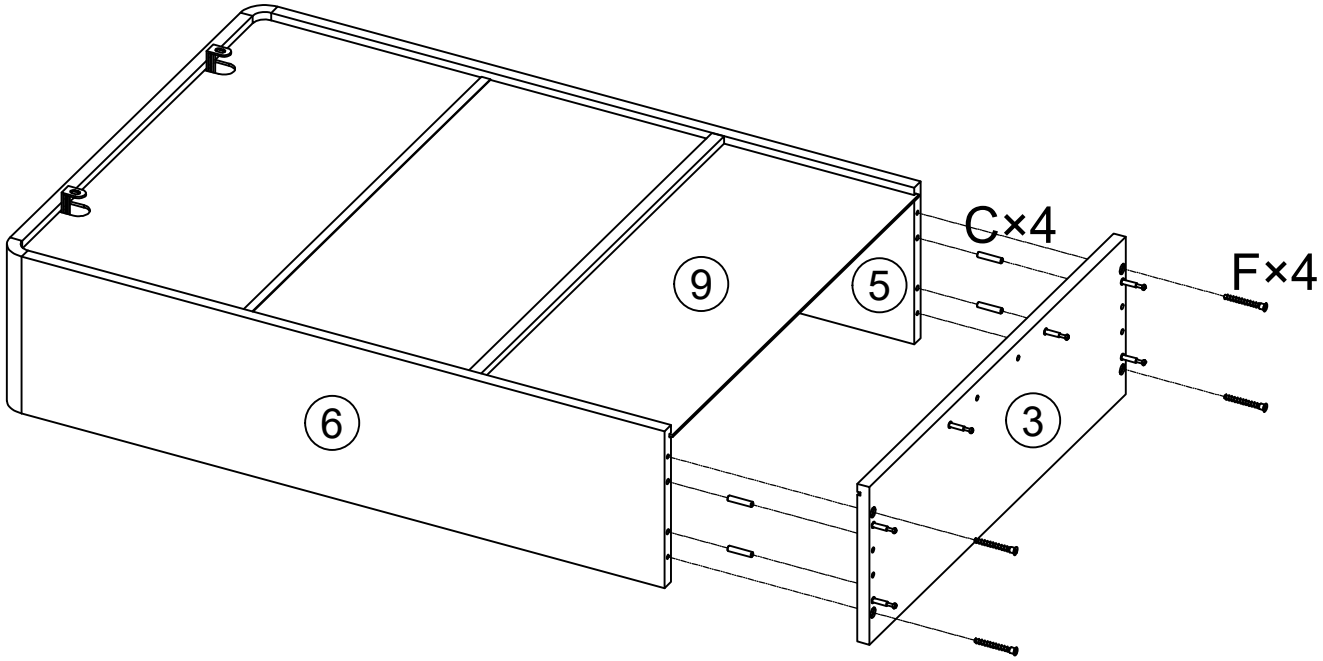C×4PCS	F×4PCS	L×1PC
		
Ø6×30mm	Ø6×50mm	M4mm





A×4PCS



M6×35mm

11.

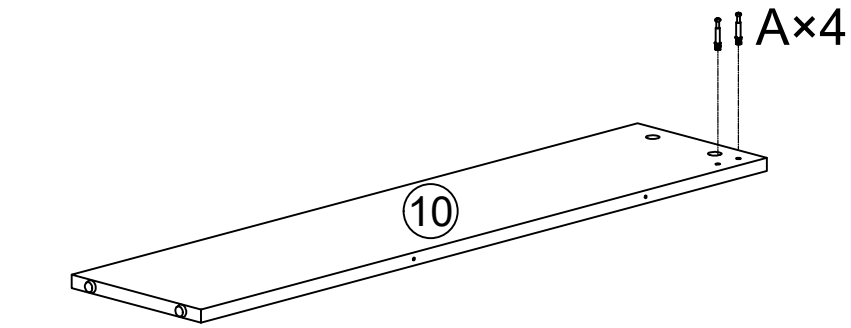

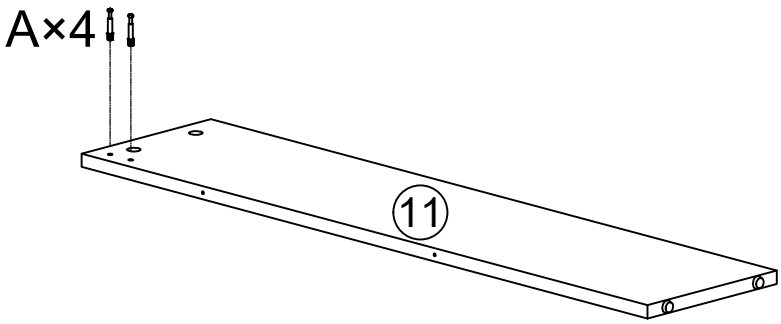


B×2PCS



Ø15×12mm


12.

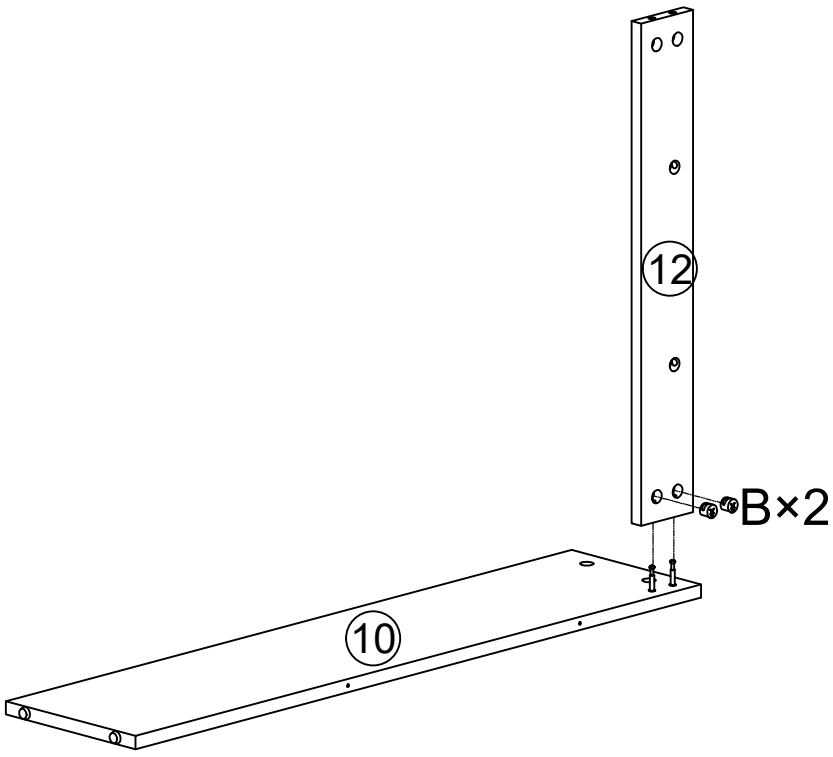

13.


B×2PCS


Ø15×12mm

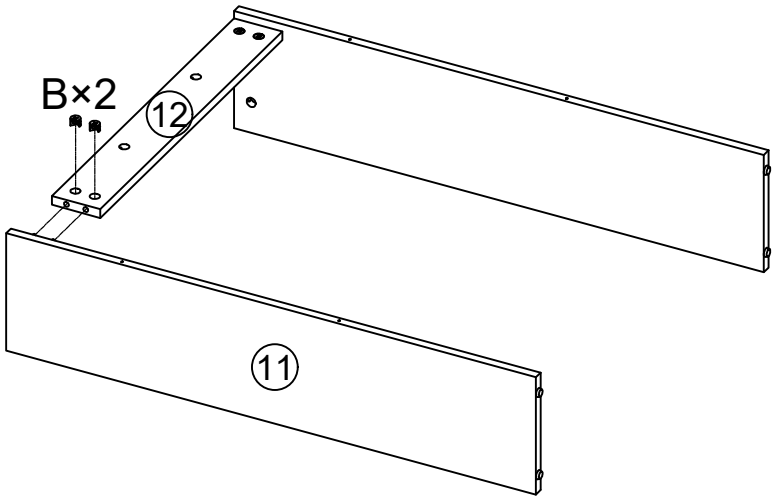

14.


B×6PCS	C×6PCS	I×18PCS
		
Ø15×12mm	Ø6×30mm	

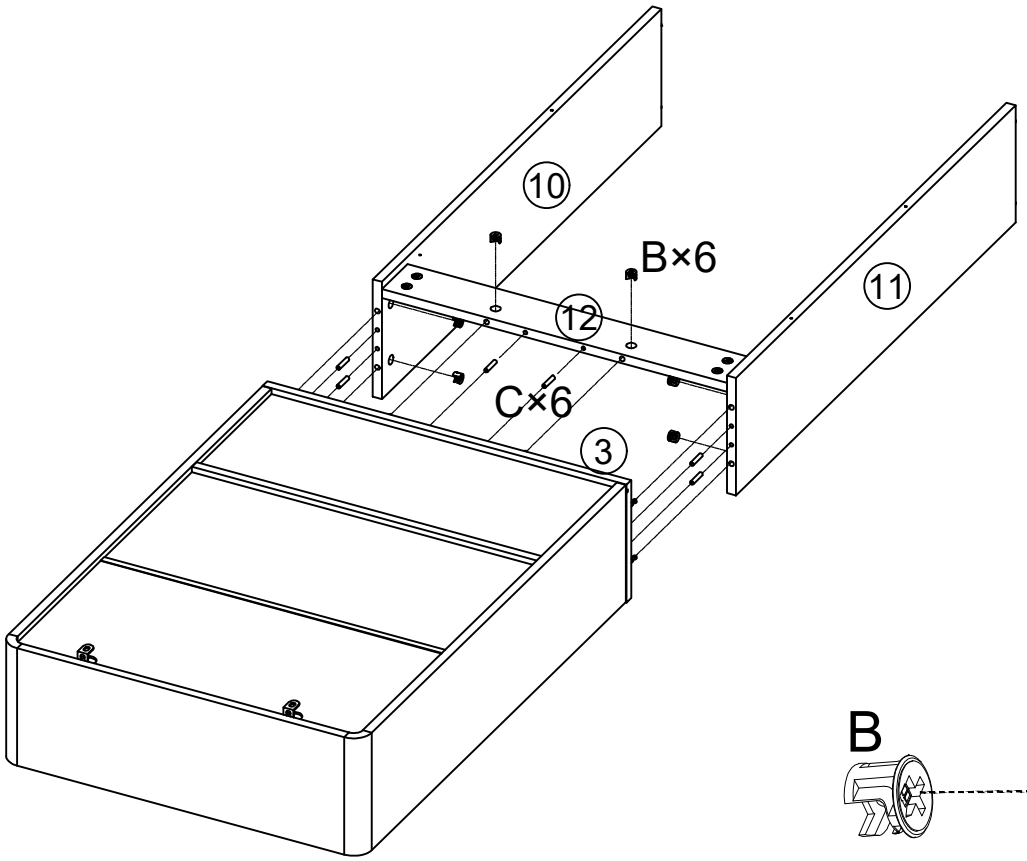

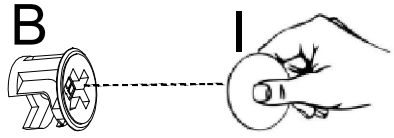



15.


D×14PCS	E×14PCS
 Ø3.5×14mm	

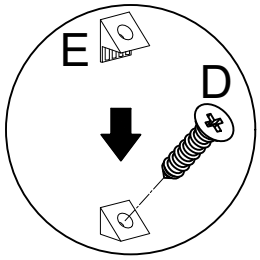

Ensure all "E" components are fitted as per the manual to improve cabinet stability.

16.


S×1PC	T×1PC	U×4PCS	Q×1PC	L×1PC
 M6×12mm	 M6mm	 Ø5×30mm		 M4mm

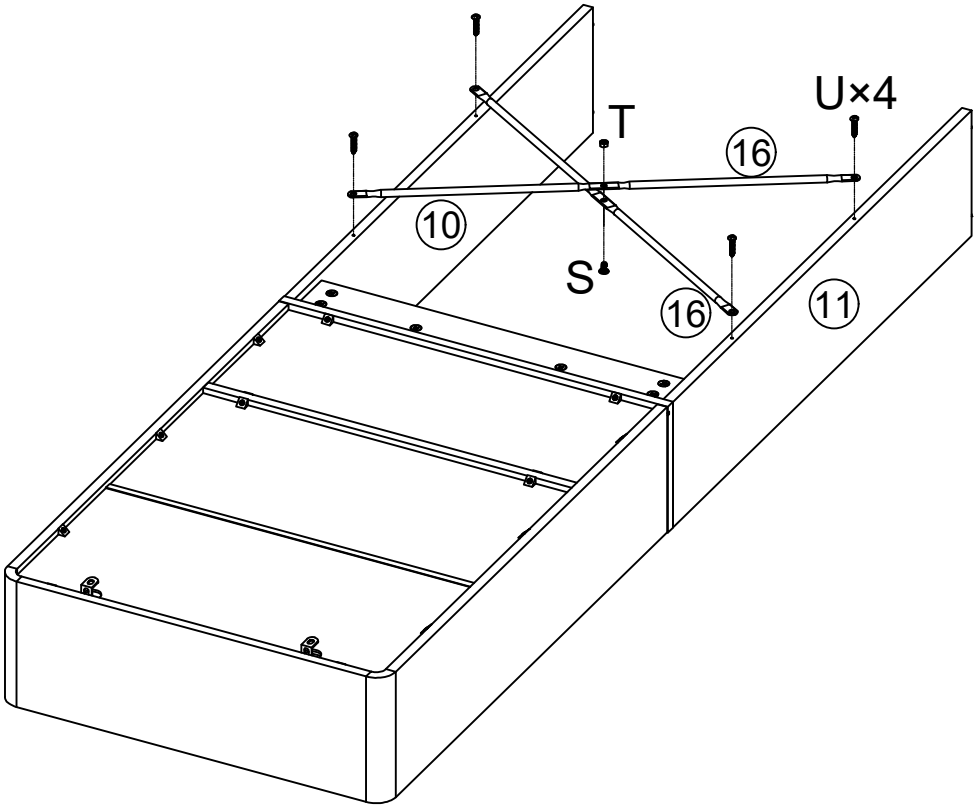

17.


O×4PCS


Ø5×19mm

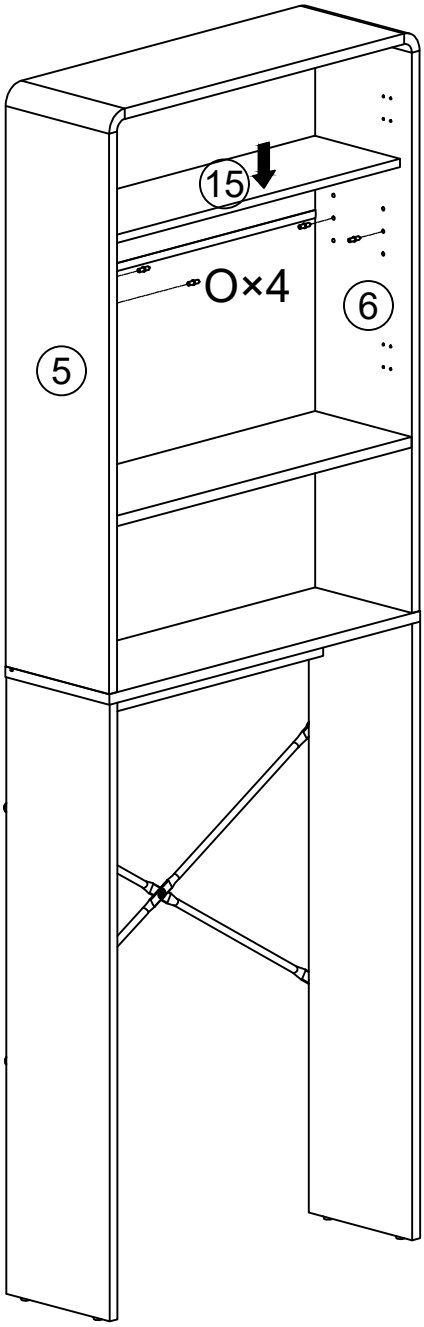

18.


D×8PCS	P×4PCS
	
Ø3.5×14mm	

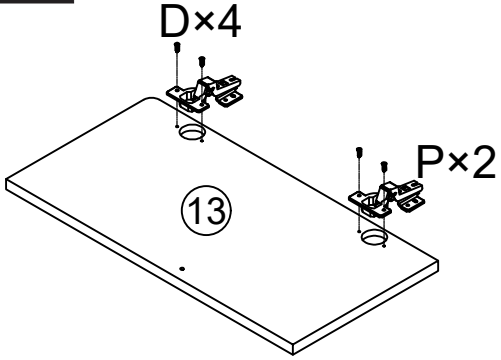

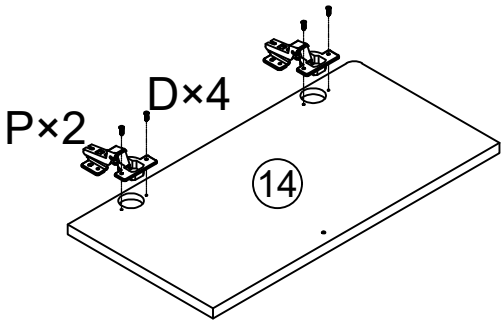

D×16PCS
 Ø3.5×14mm


19.

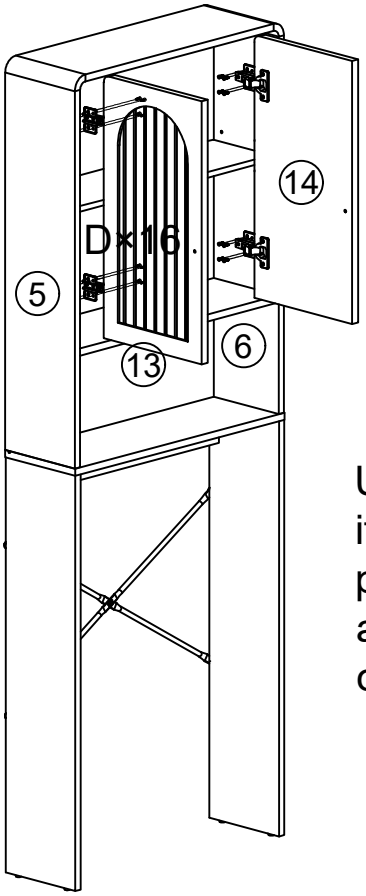


Upon completion of installation,
if the doors are not aligned,
please refer to the door
adjustment method provided
on the last page of the instruction manual.

J×2PCS	K×2PCS
	 M4×22mm

20.

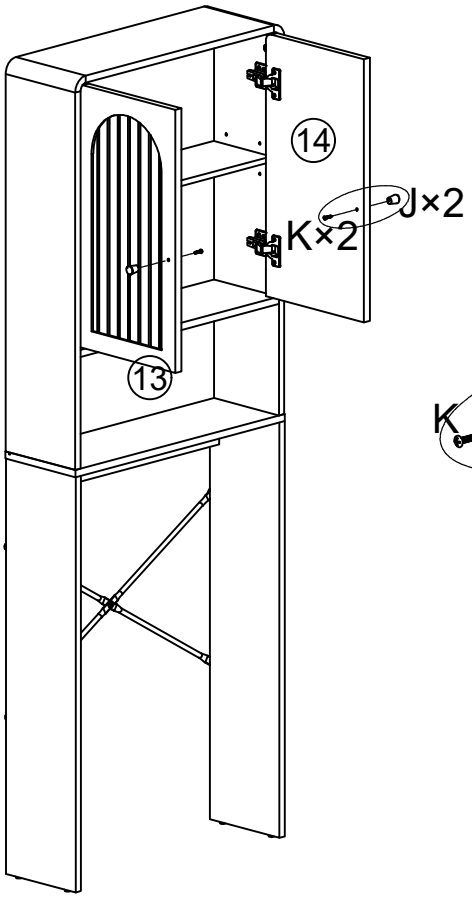


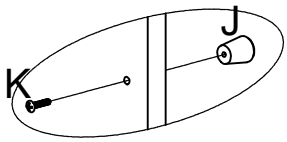


21.


M×2PCS	N×2PCS
 Ø6×30mm	 Ø4×35mm

This step is intended to fix the anti- tip fitting to the wall.

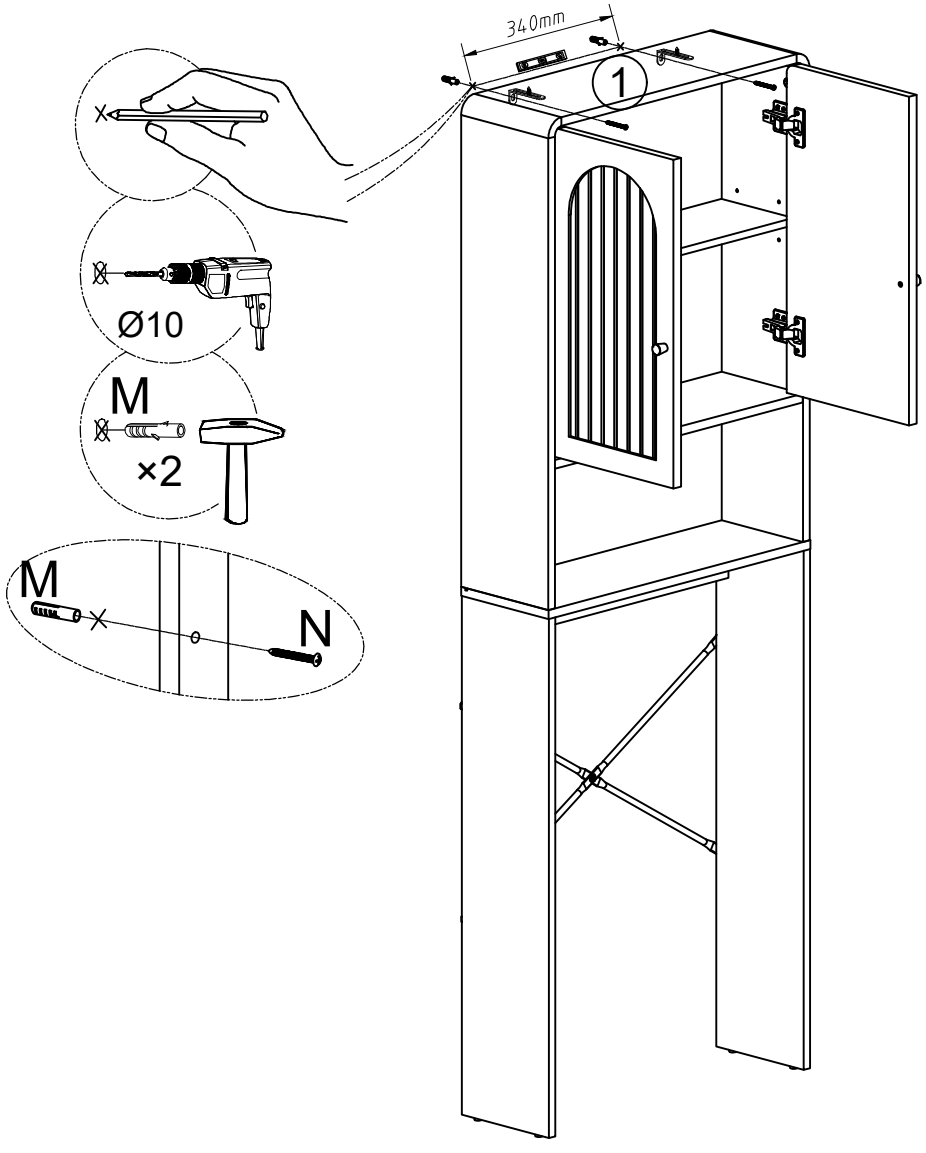


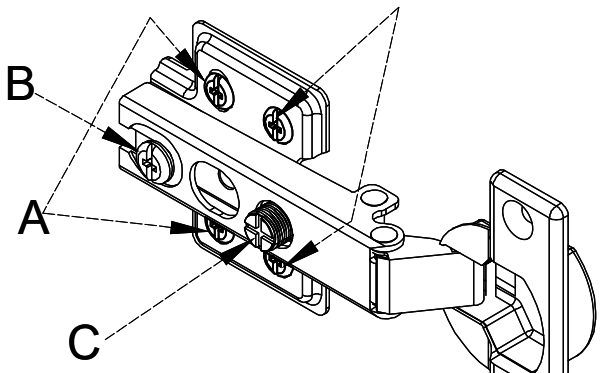


In case of uneven floor conditions that result in the wardrobe door being misaligned, the ABC system allows for a slight adjustment to correct it.

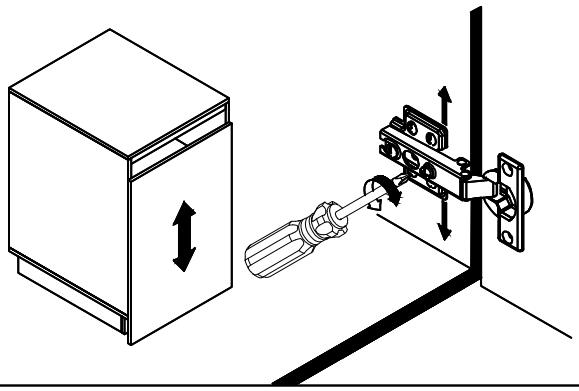

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes, which allow adjustment upwards or downwards by a few millimetres. Then, retighten.

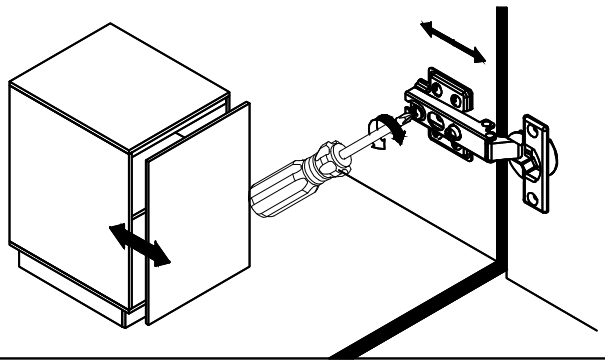

To adjust the depth.
Loosen screw "B" and adjust the door. If you cannot adjust it, loosen screw "C" and try again. Tighten screws "B" and "C".

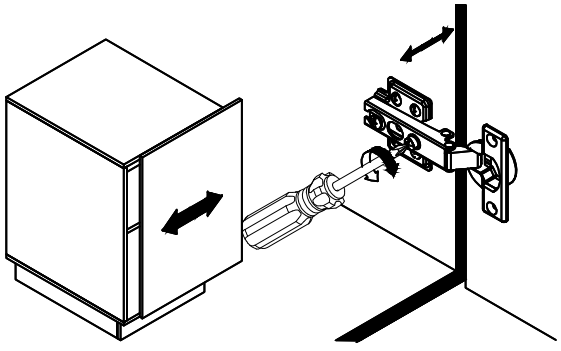

To adjust laterally.
Turn screw "C" on BOTH hinges of each door.