
60 mins


Dual-person

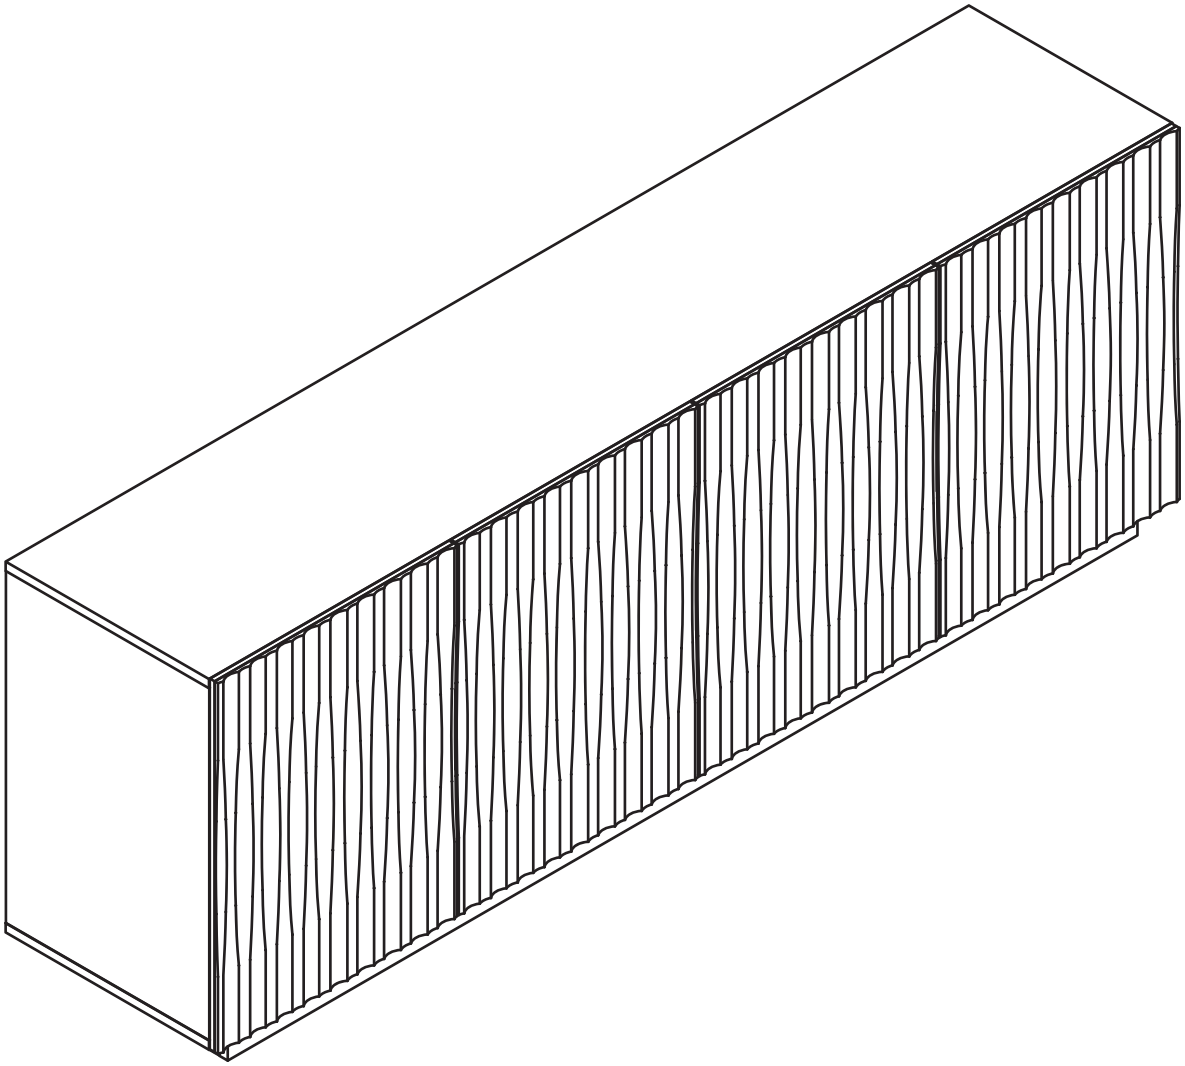

Oryvia

71" TV Stand


Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly

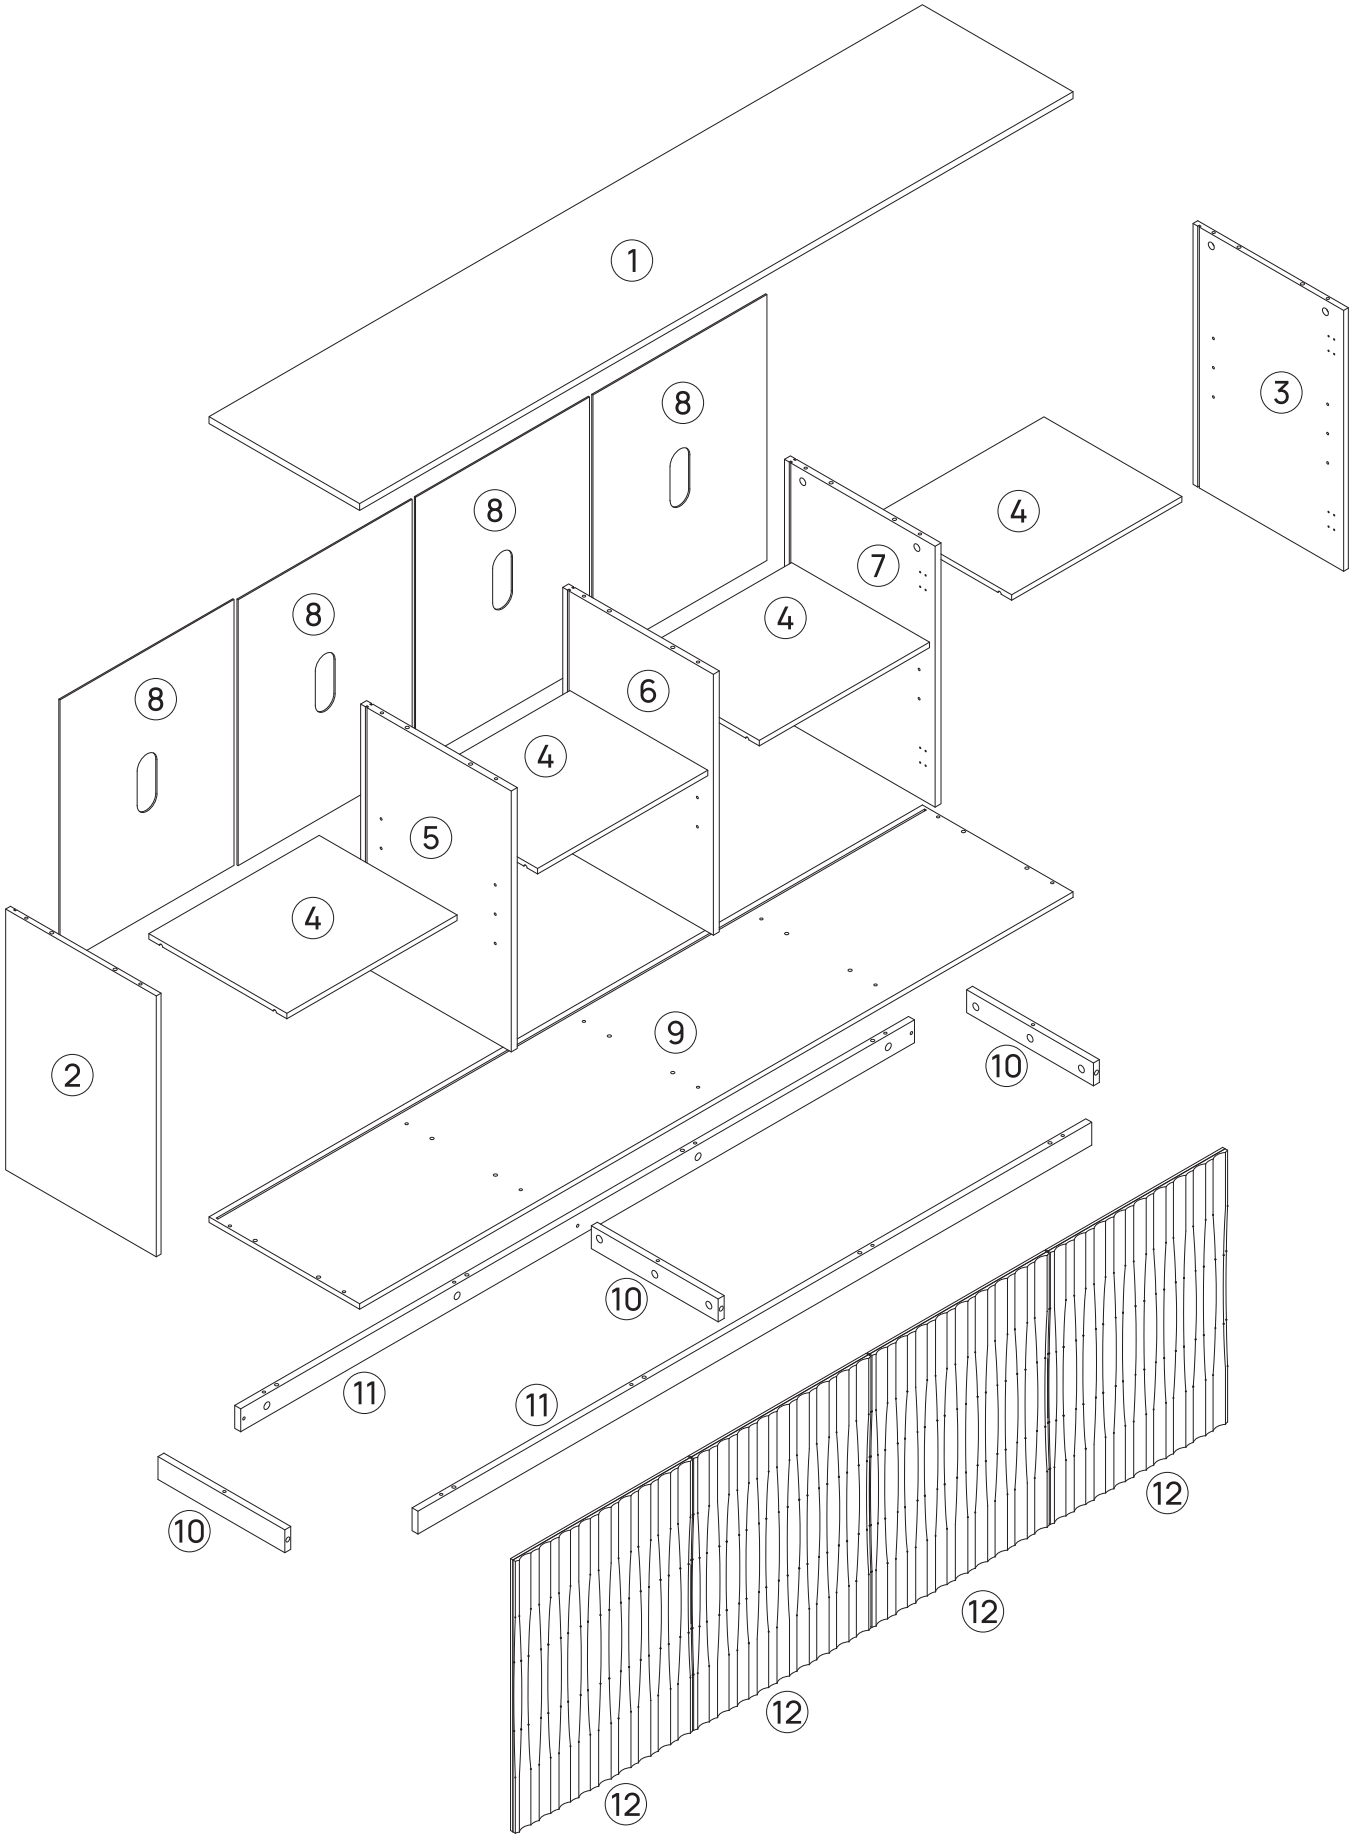
1
3
8
8
8
8
8
4
7
4
6
4
5
4
2
9
10
10
11
11
10
12
12
12
12
12


Components

Please check if all the pieces listed below are received.


1 x1

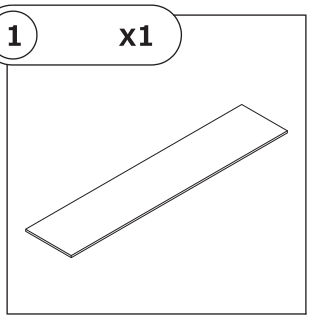


2 x1

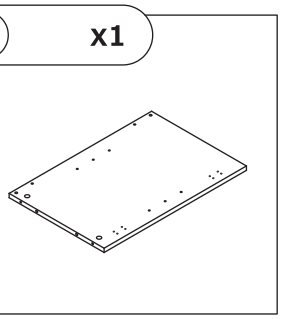


3 x1

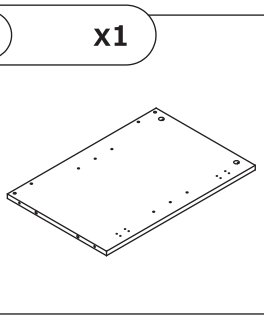


4 x4

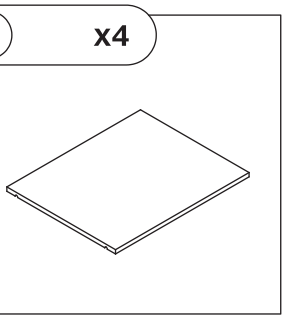


5 x1

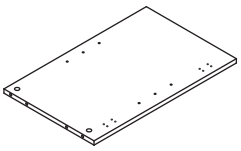


6 x1

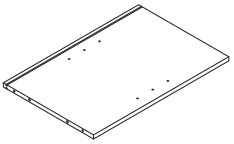


7 x1

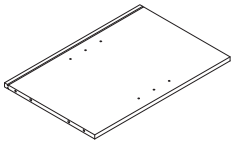


8 x4




9 x1

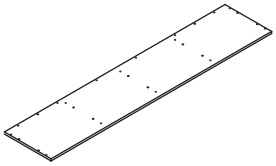


10 x3

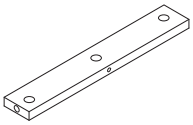


11 x2

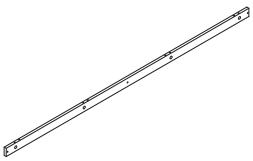

12 x4




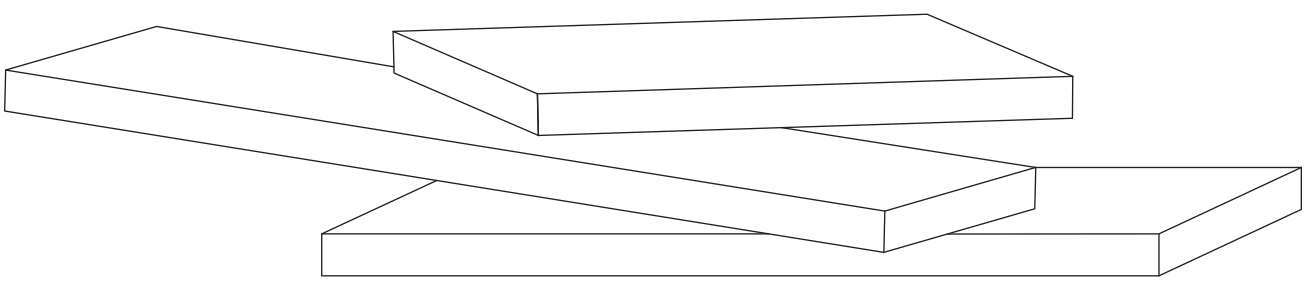

Components


Please check if all the pieces listed below are received.

A x27+2



ø6x33.5mm

B x27+2




ø15x9.5mm

C x27+2



ϕ20

D x28+2




ø6x30mm

E x10+1




ø5x48mm

F x4




ϕ35

G x4




ϕ35

H x48+2



ø4 x 12mm

I x2

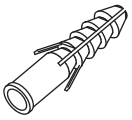

ø8x40mm

J x2



ø4x14mm

K x2




ø4x38mm

L x2




M x8




15x15x10mm

N x16+1




ϕ5x15 mm

O x8




ø3 x 16mm

P x1




Q x4




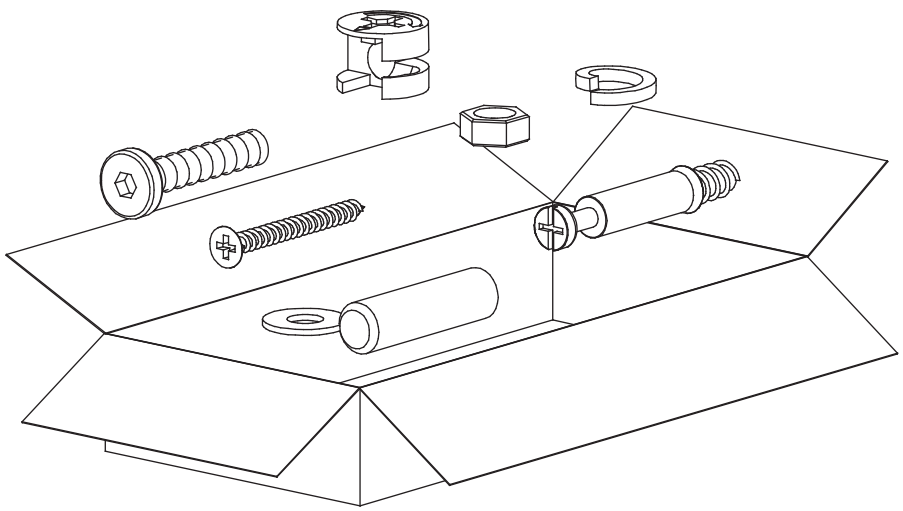

Step 1

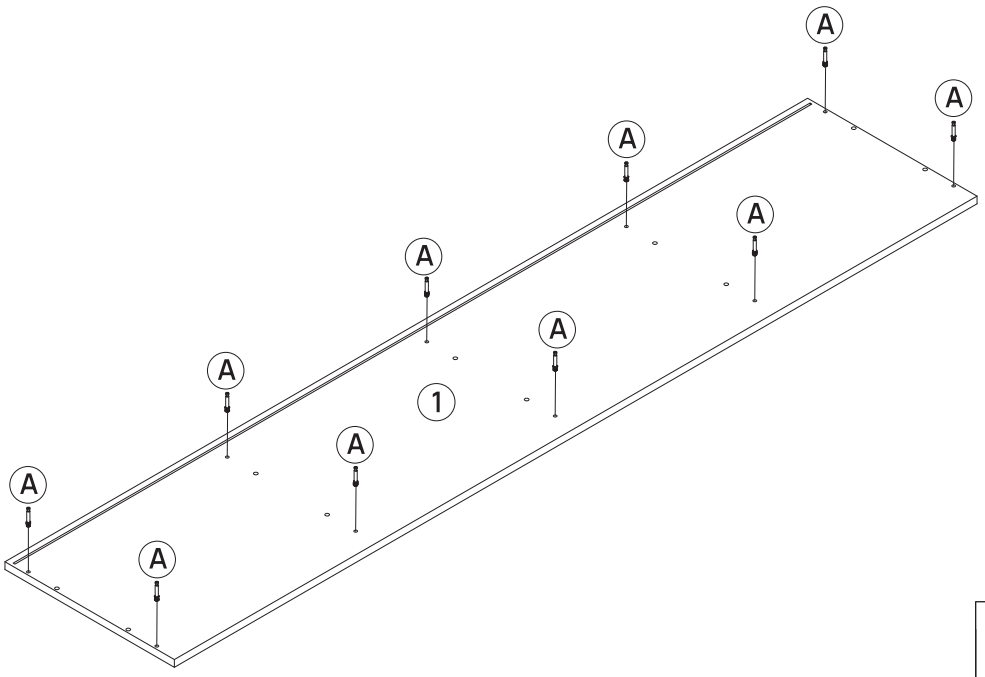


A x10




ø6x33.5mm

Step 2

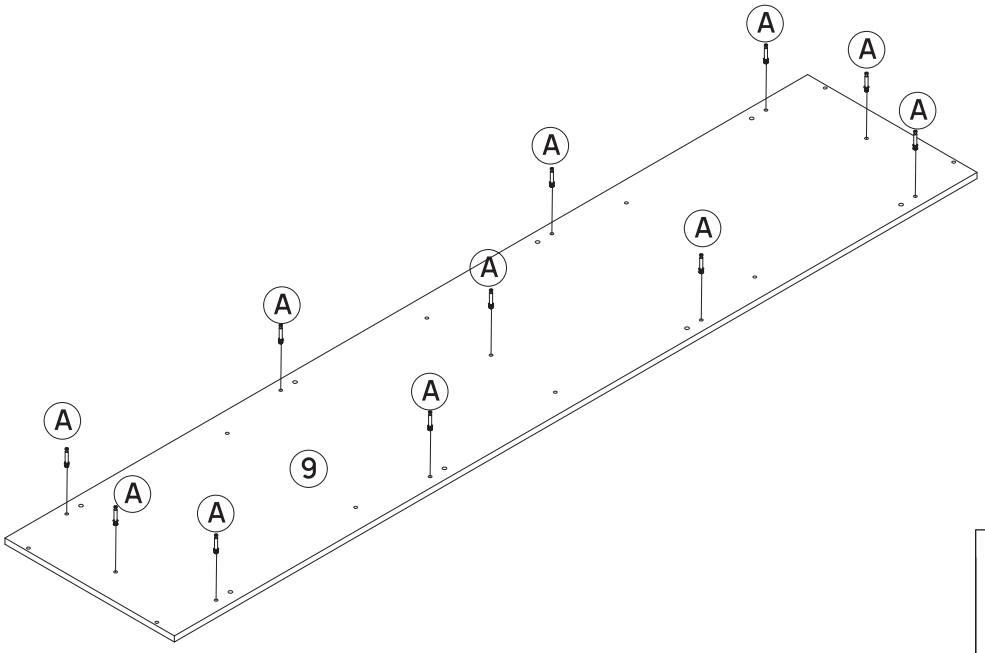


A x11




ø6x33.5mm

Step 3

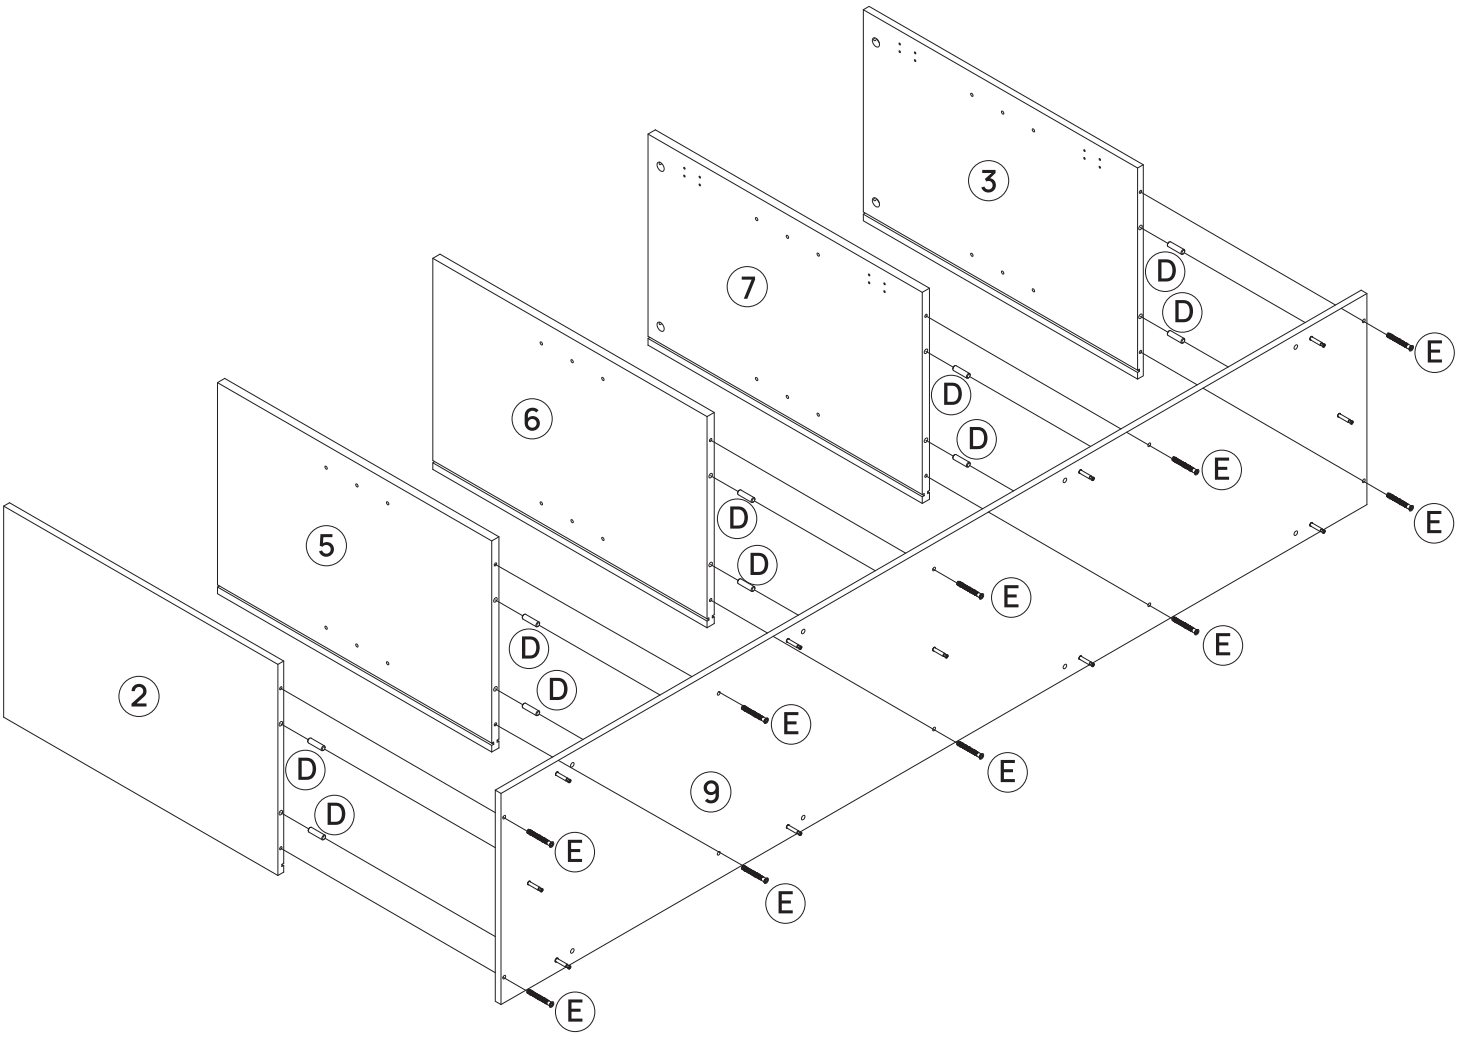


E x10




ø5x48mm

D x10




ø6x30mm

Step 4

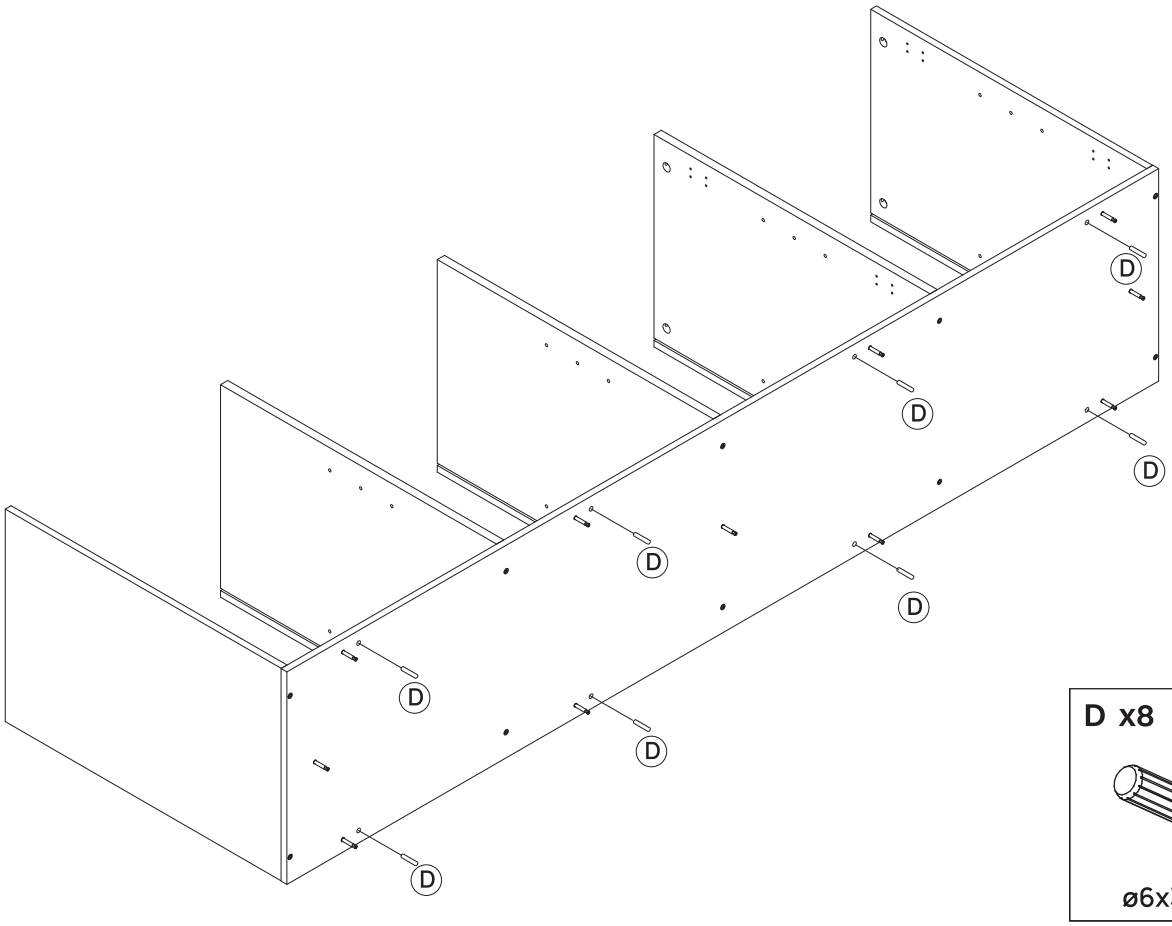


D x8




ø6x30mm

Step 5

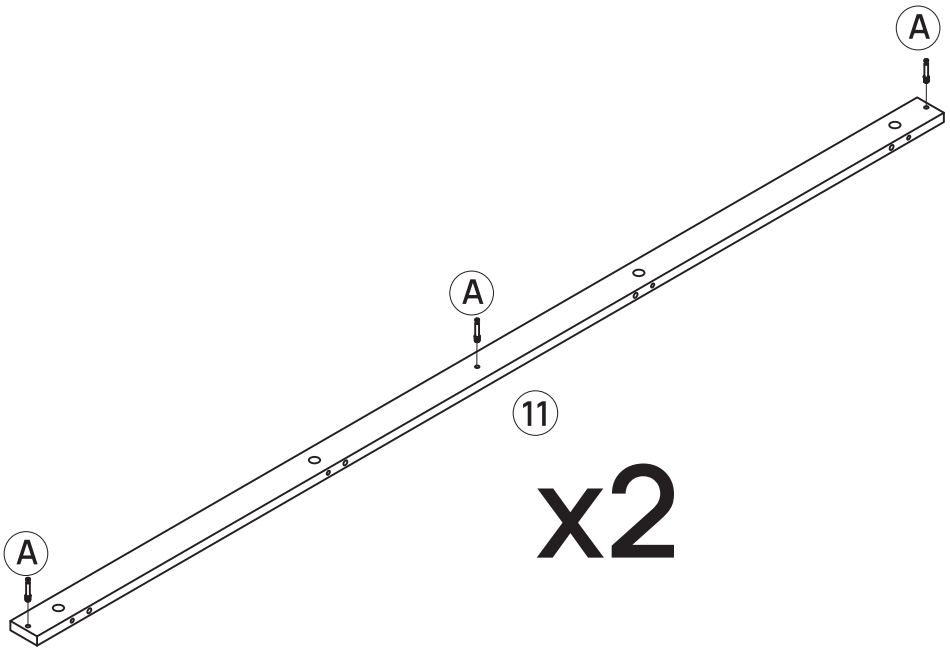


A x6




ø6x33.5mm

Step 6

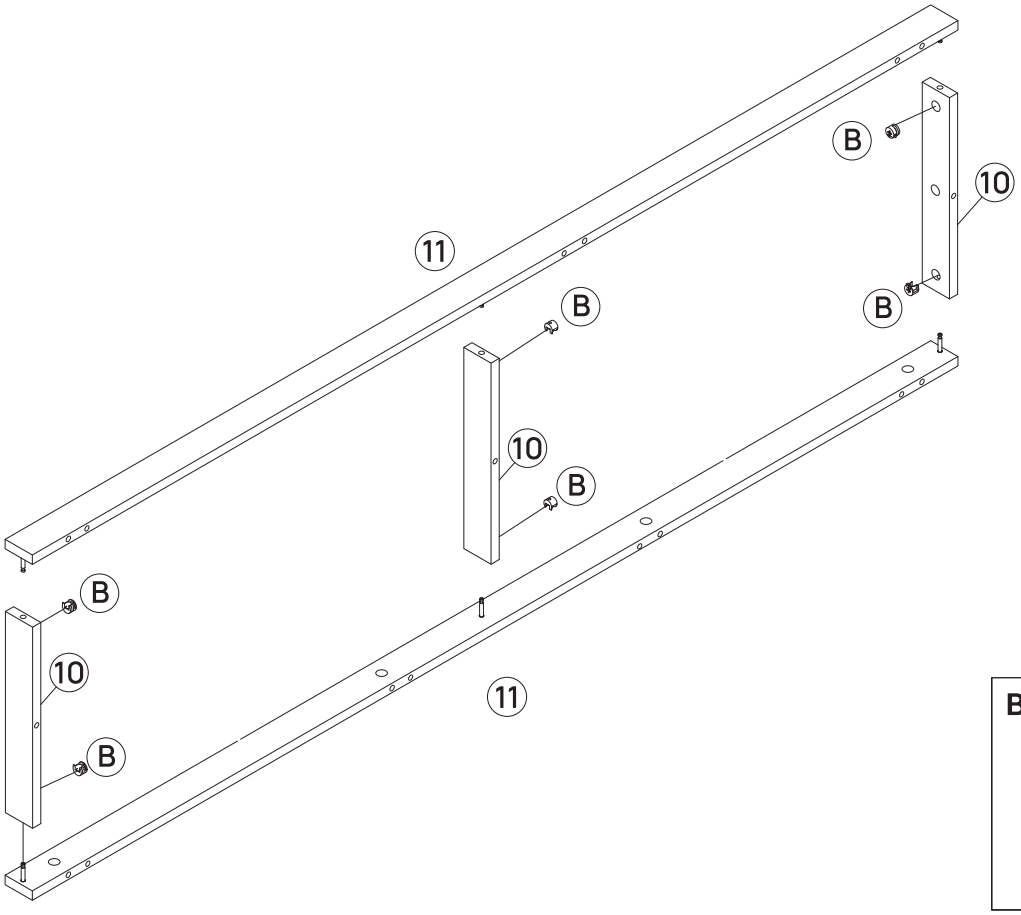


B x6



ø15x9.5mm


Step 7

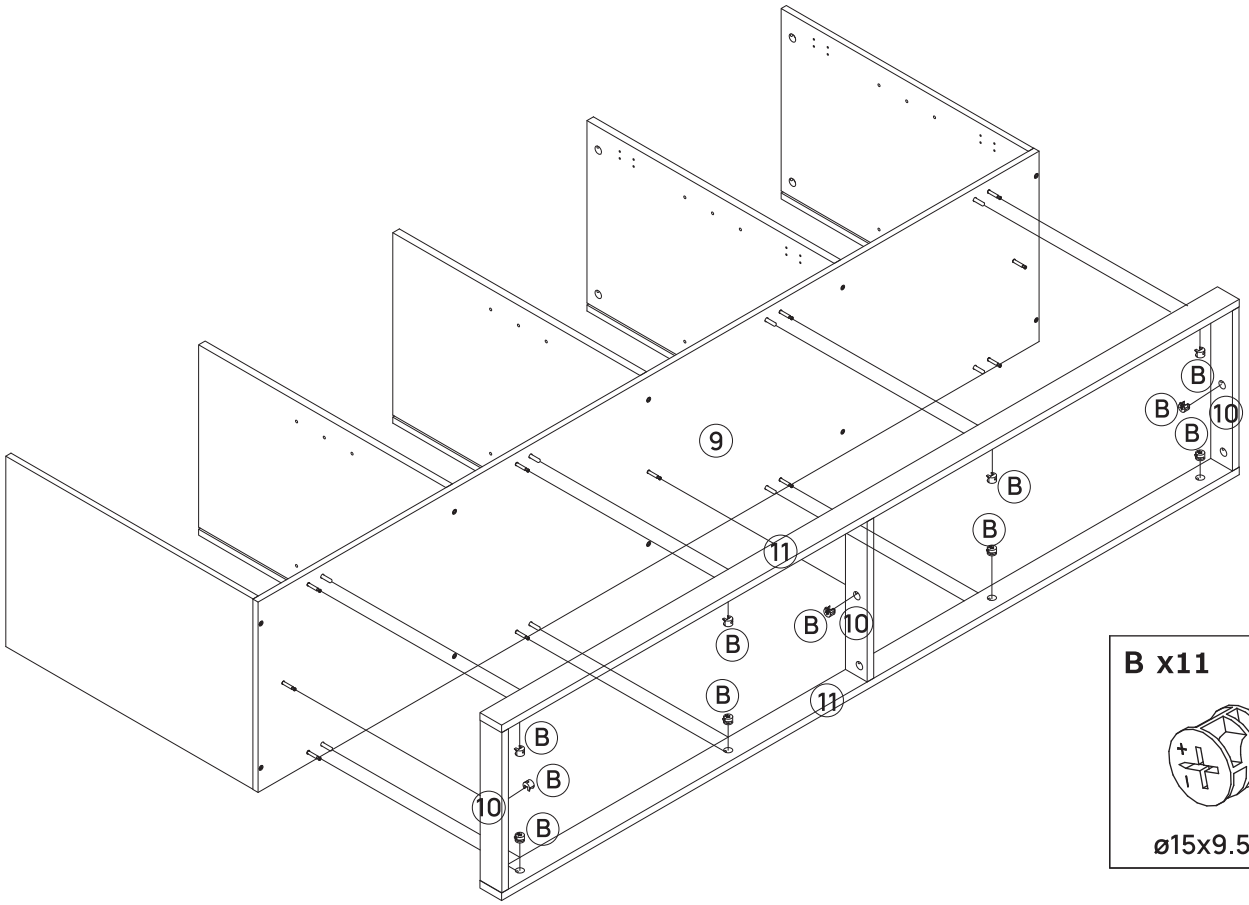


B x11

ø15x9.5mm


Step 8

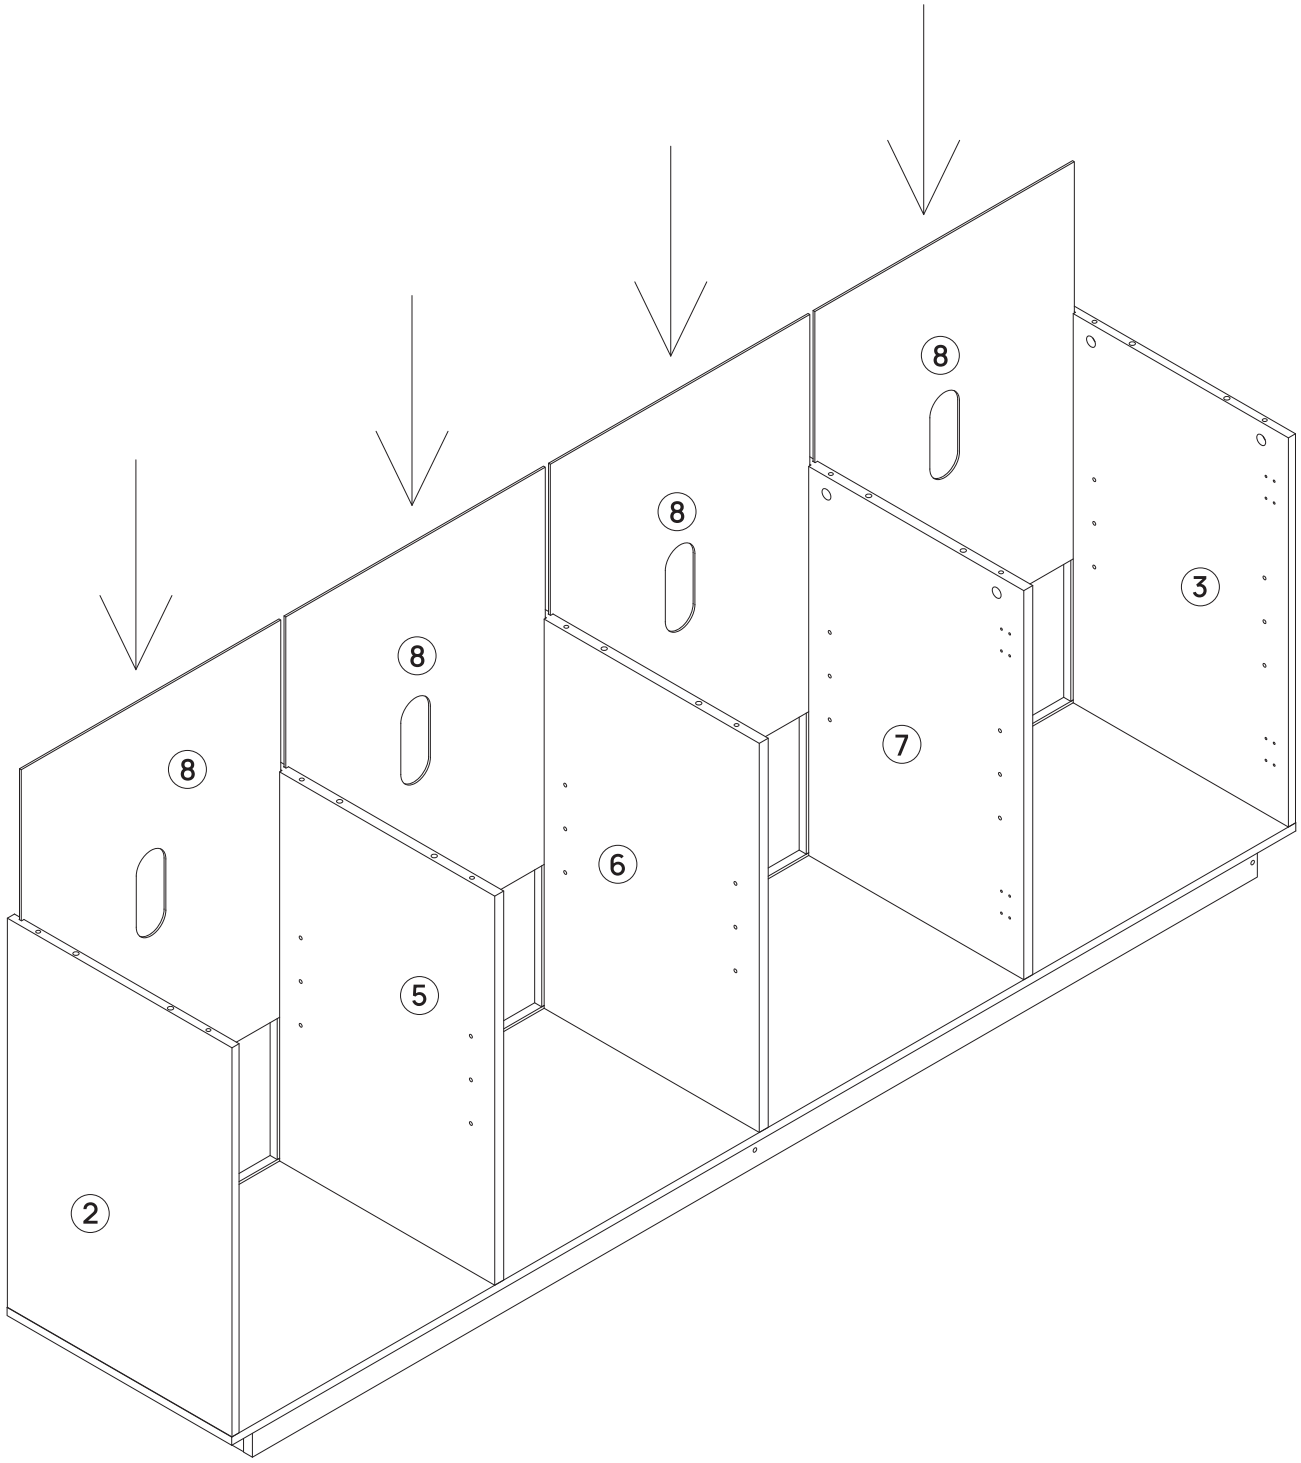

Step 9

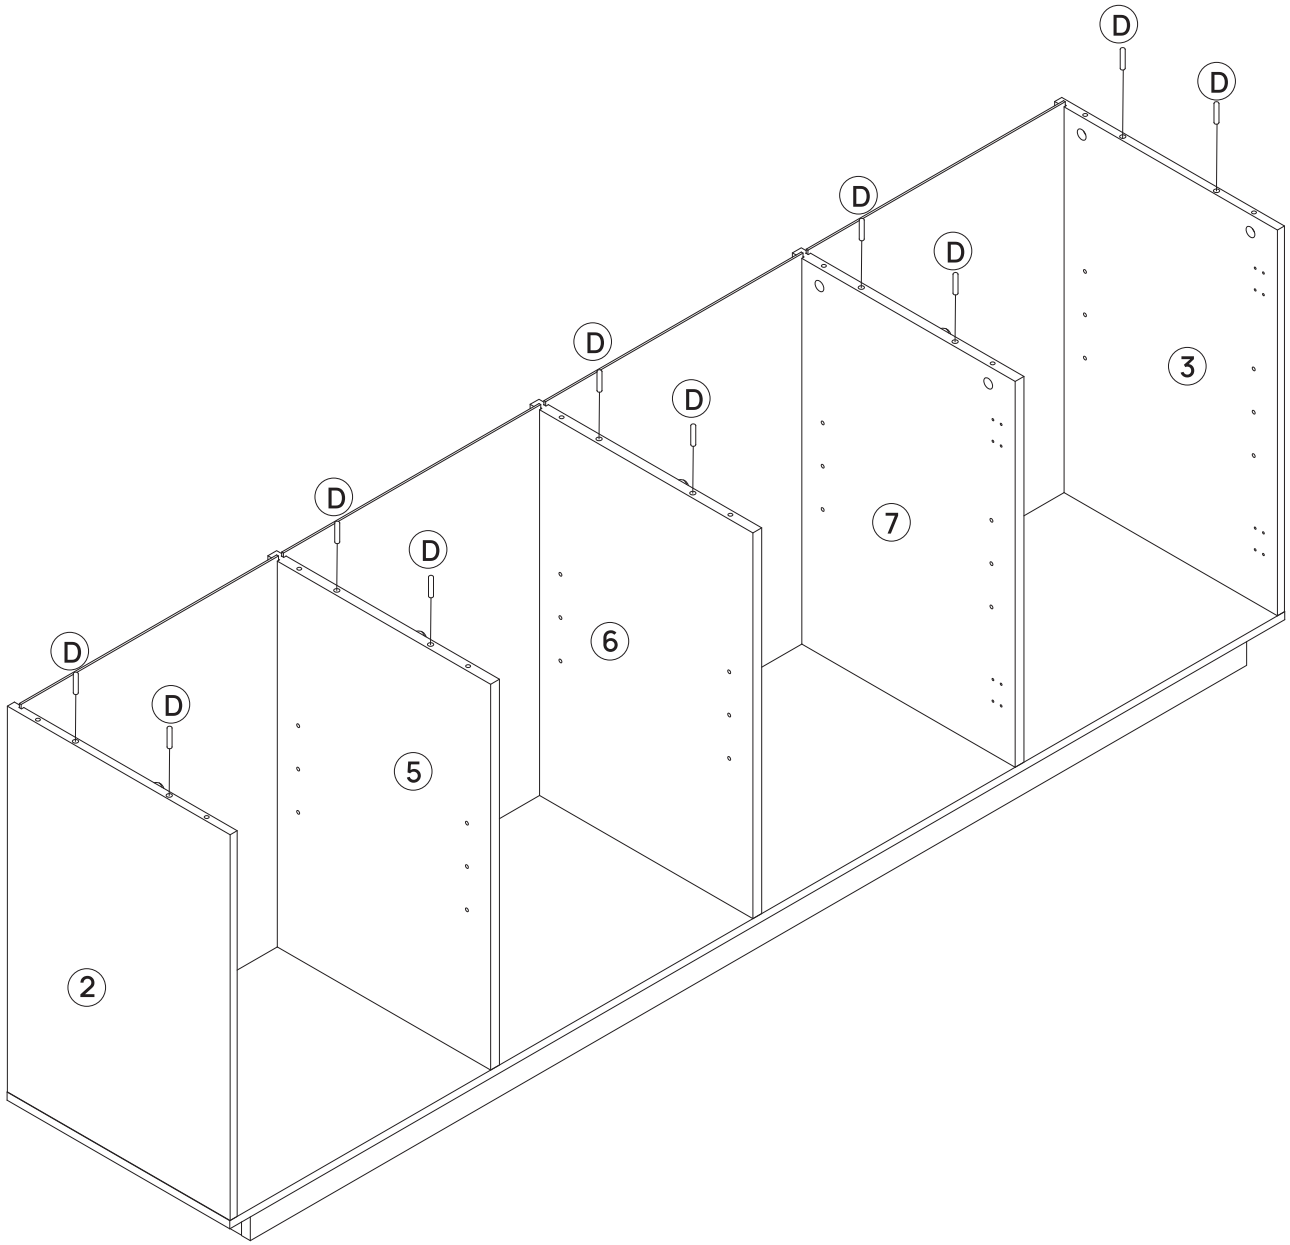


D x10



ø6x30mm

Step 10

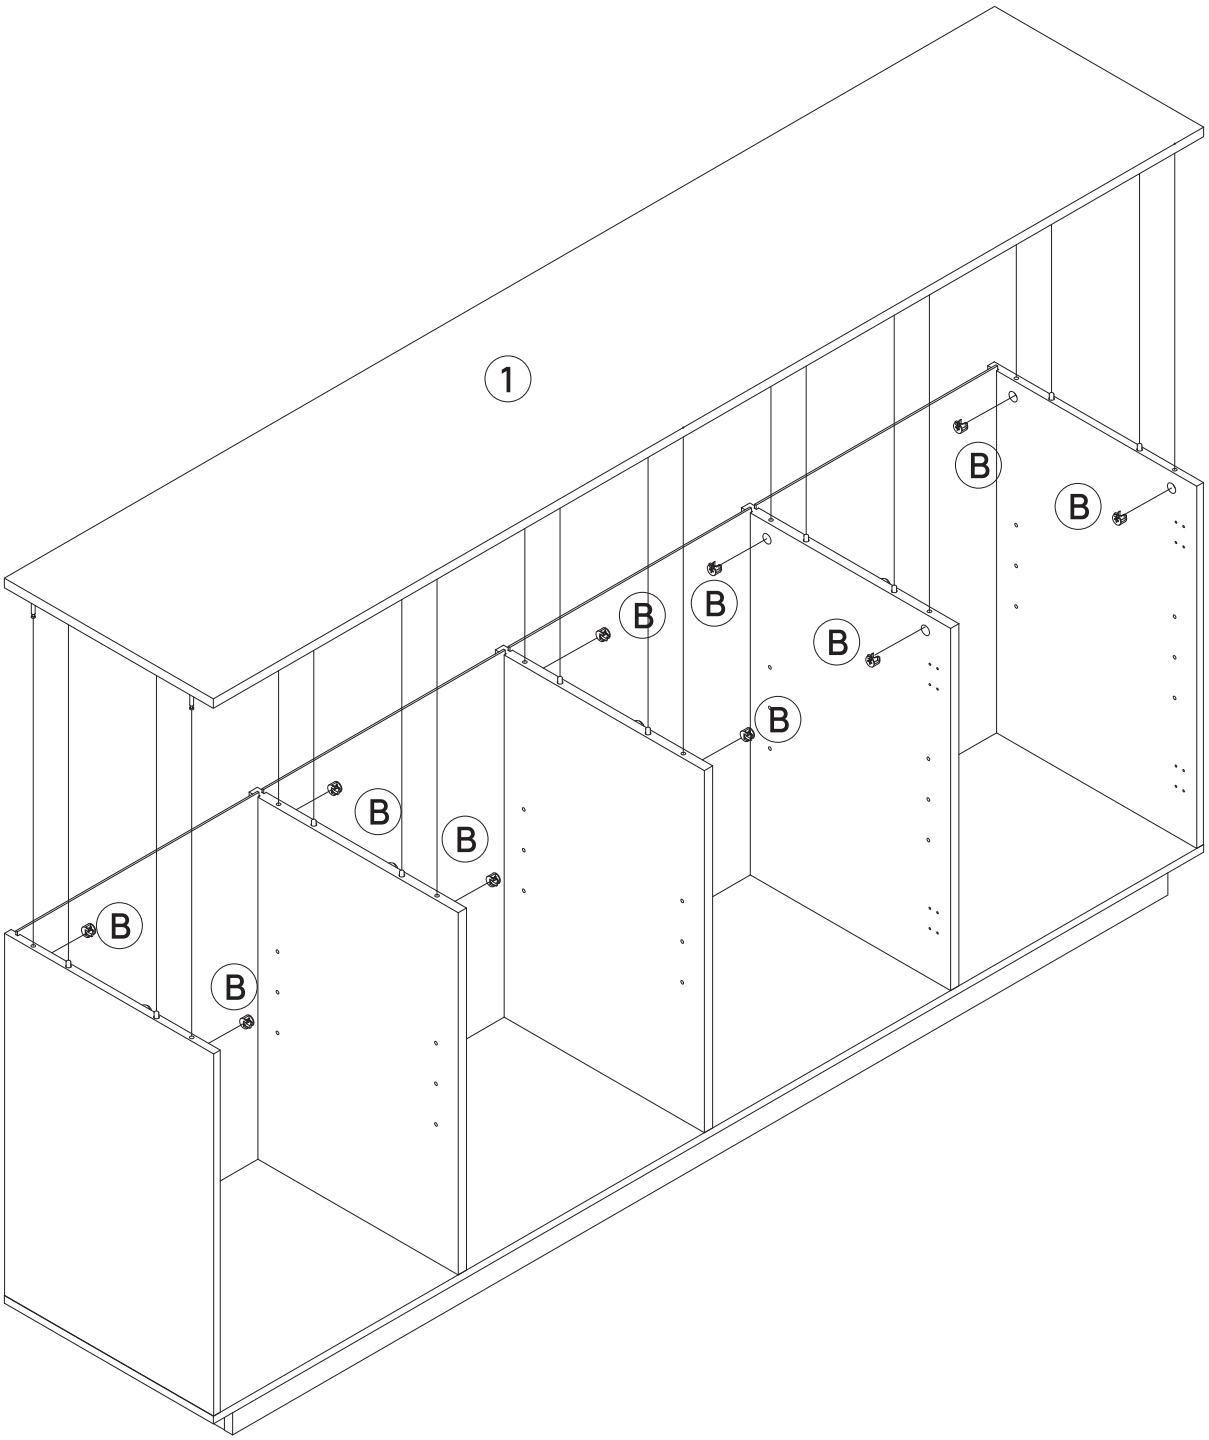



B x10





ø15x9.5mm


Step 11

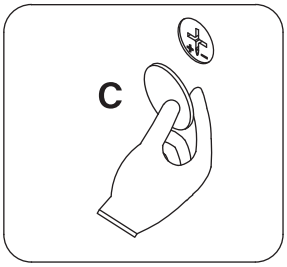


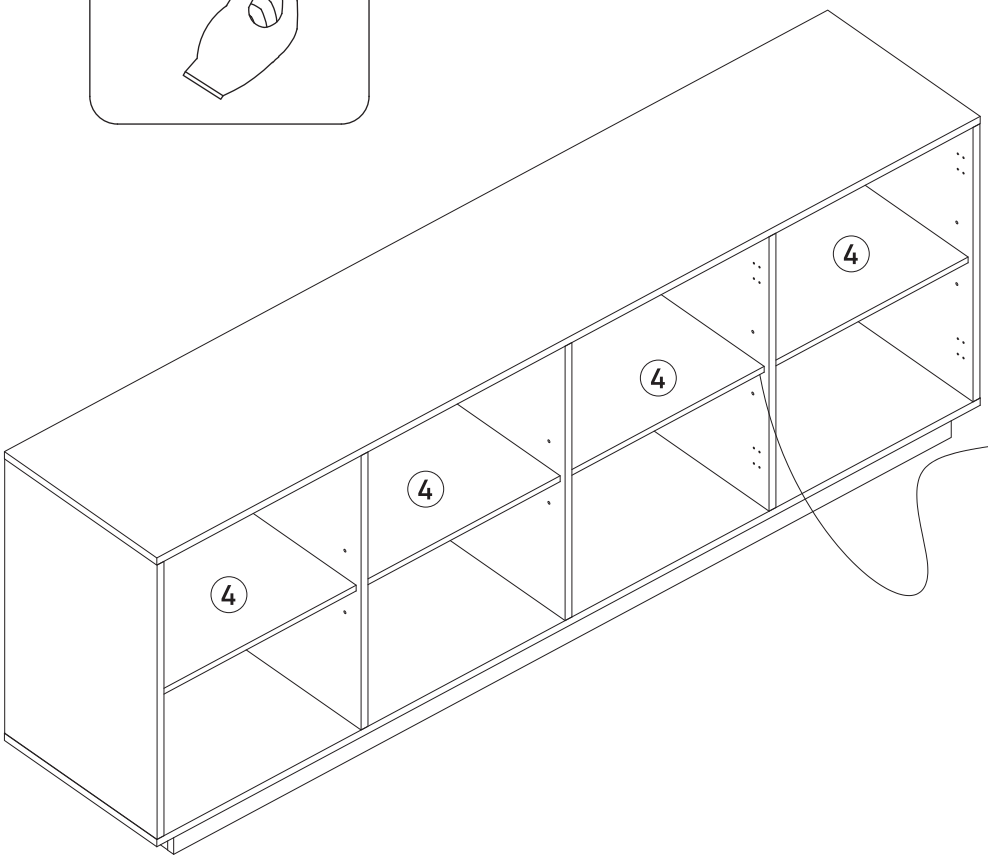

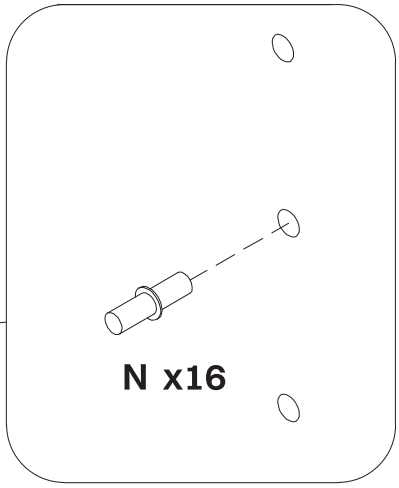

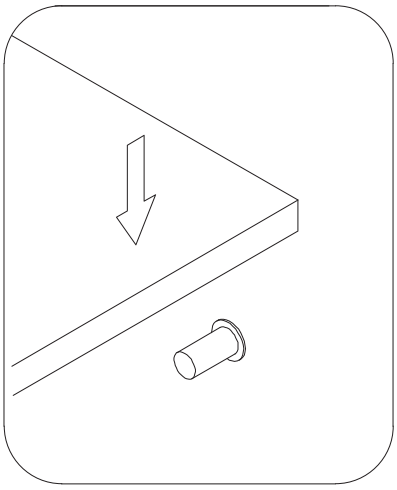


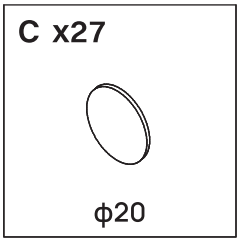


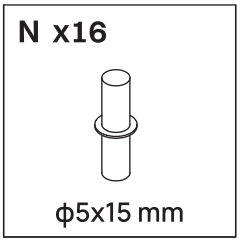




Step 12

Notice: Be sure to install back-panel clips. Otherwise, wobbling may occur.

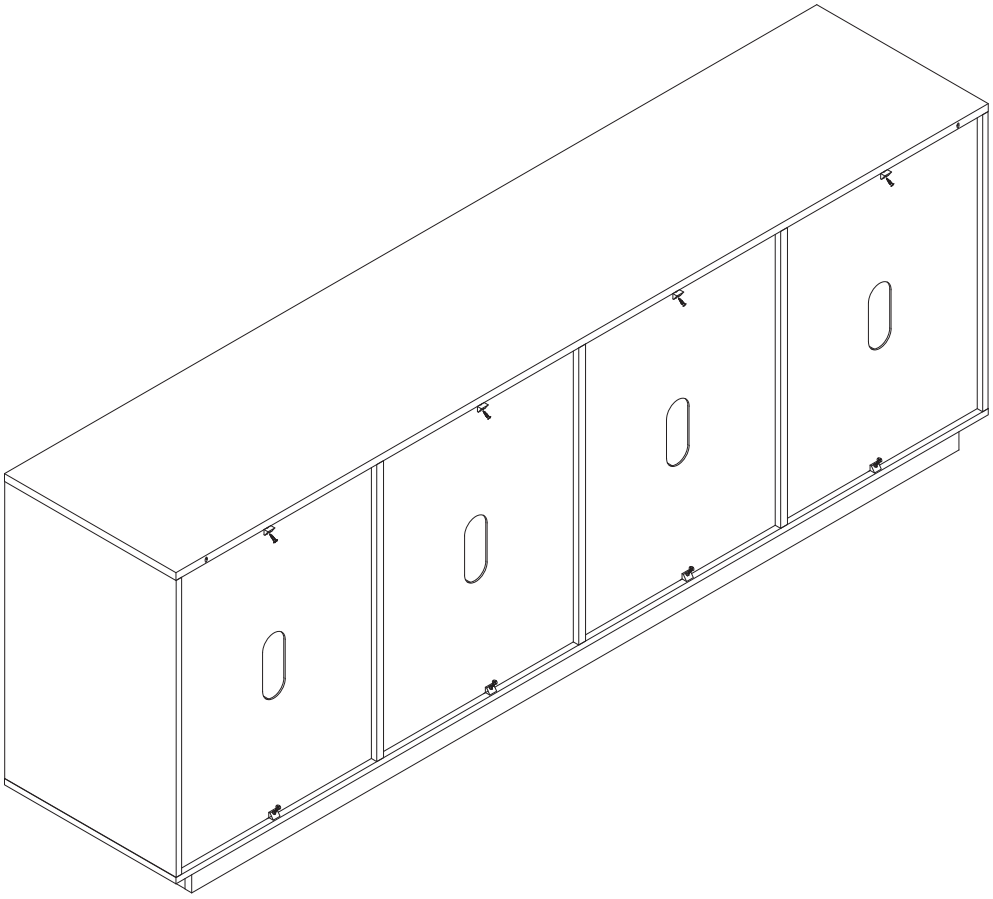


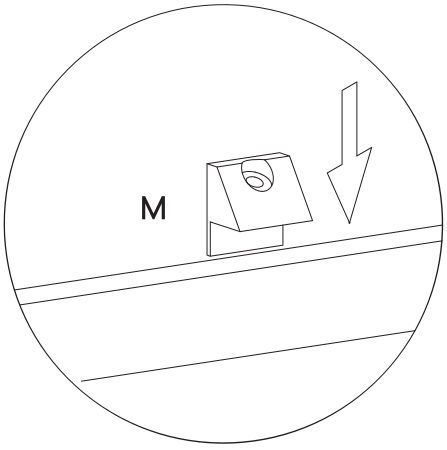

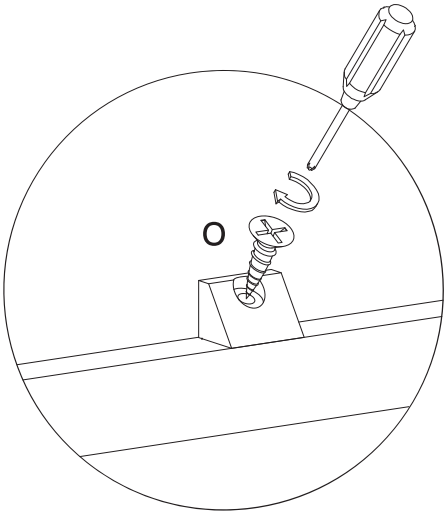

M x8	O x8
	
15x15x10mm	ø3 x 16mm


Step 13

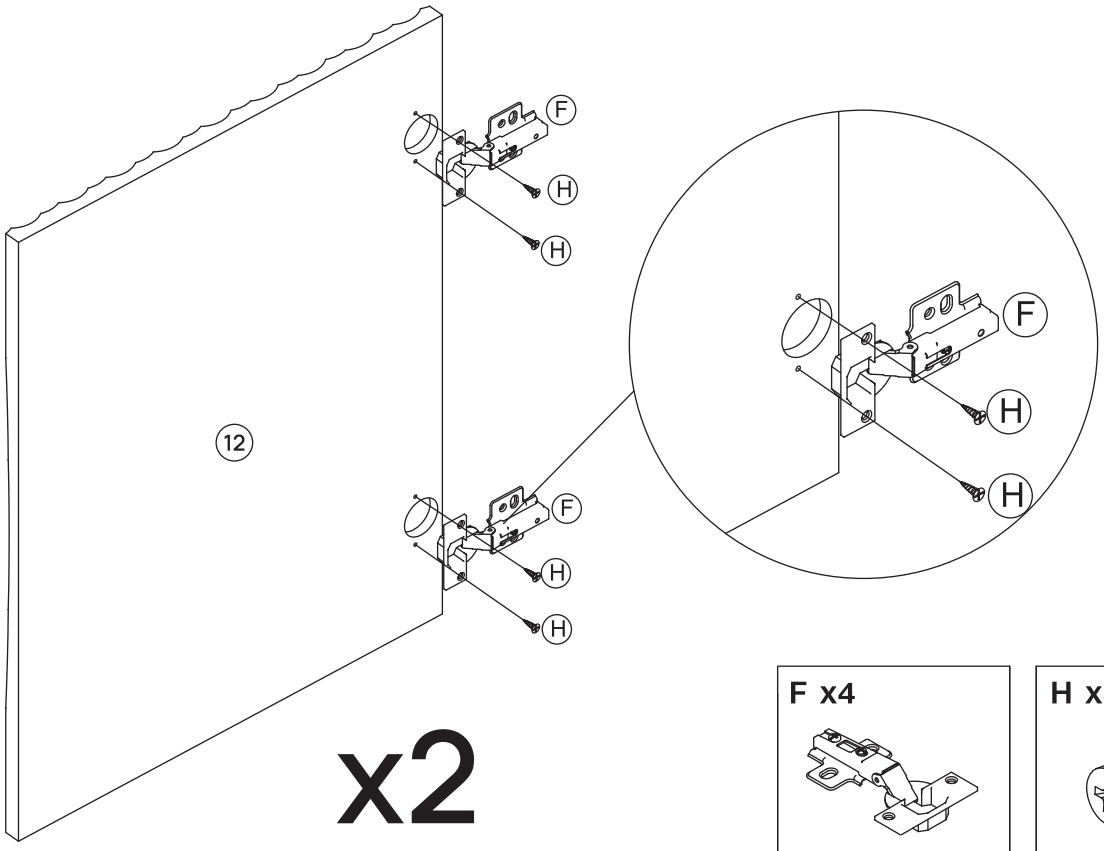

F x4


ϕ35

H x8



ø4 x 12mm


Step 14

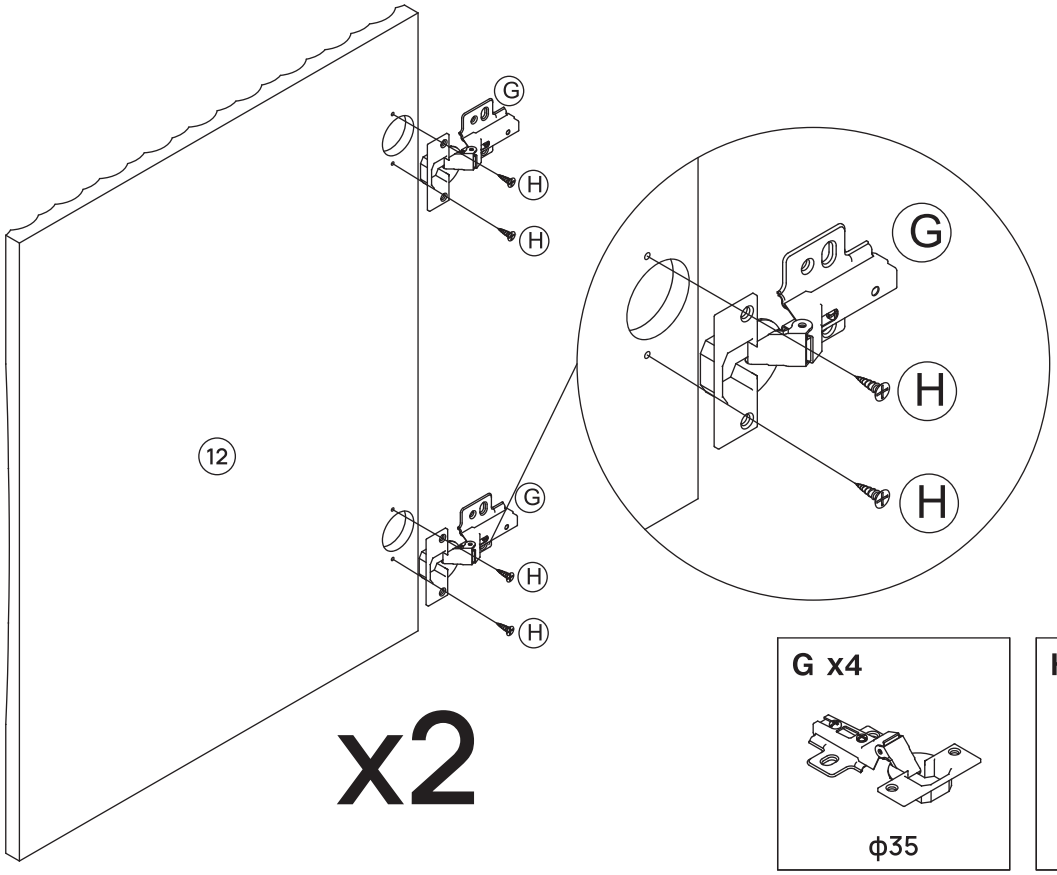

G x4


ϕ35

H x8



ø4 x 12mm


Step 15

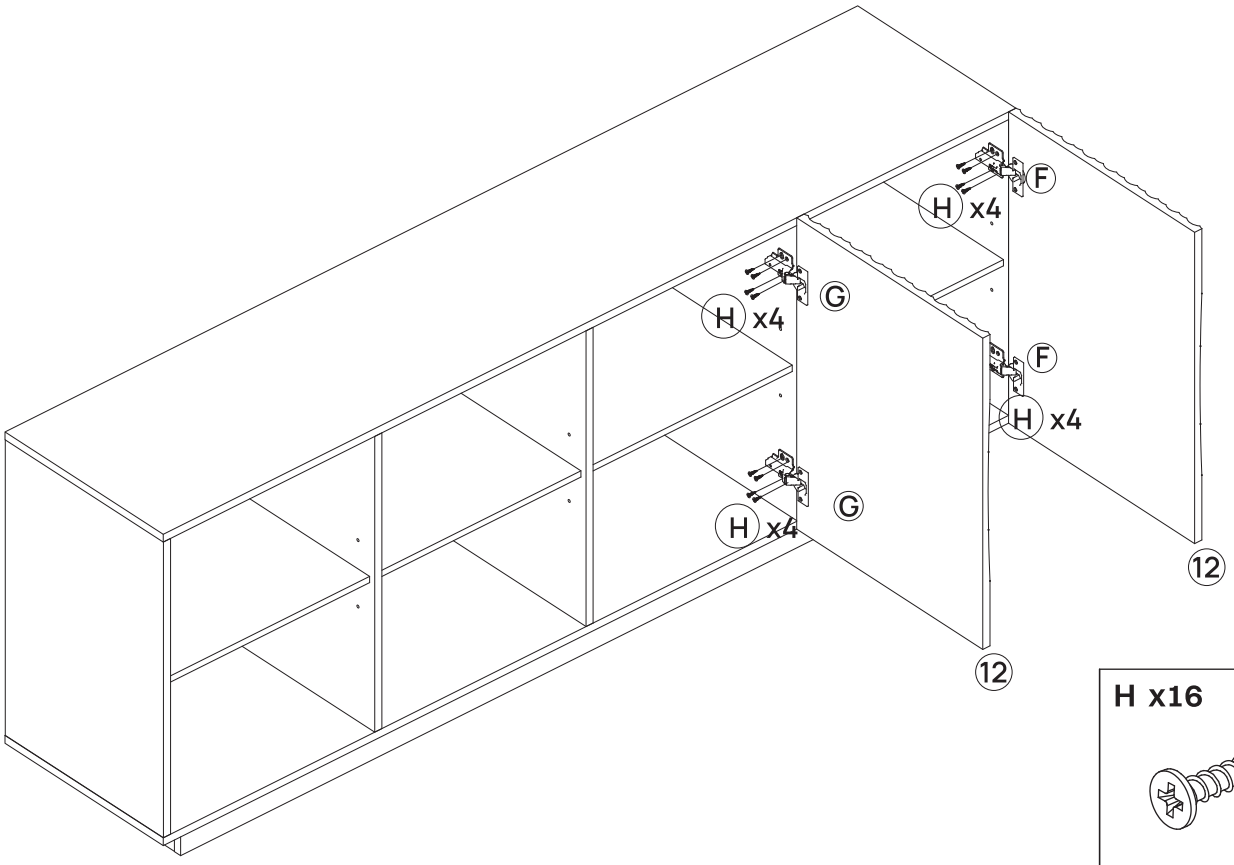


H x16

ø4 x 12mm

Step 16

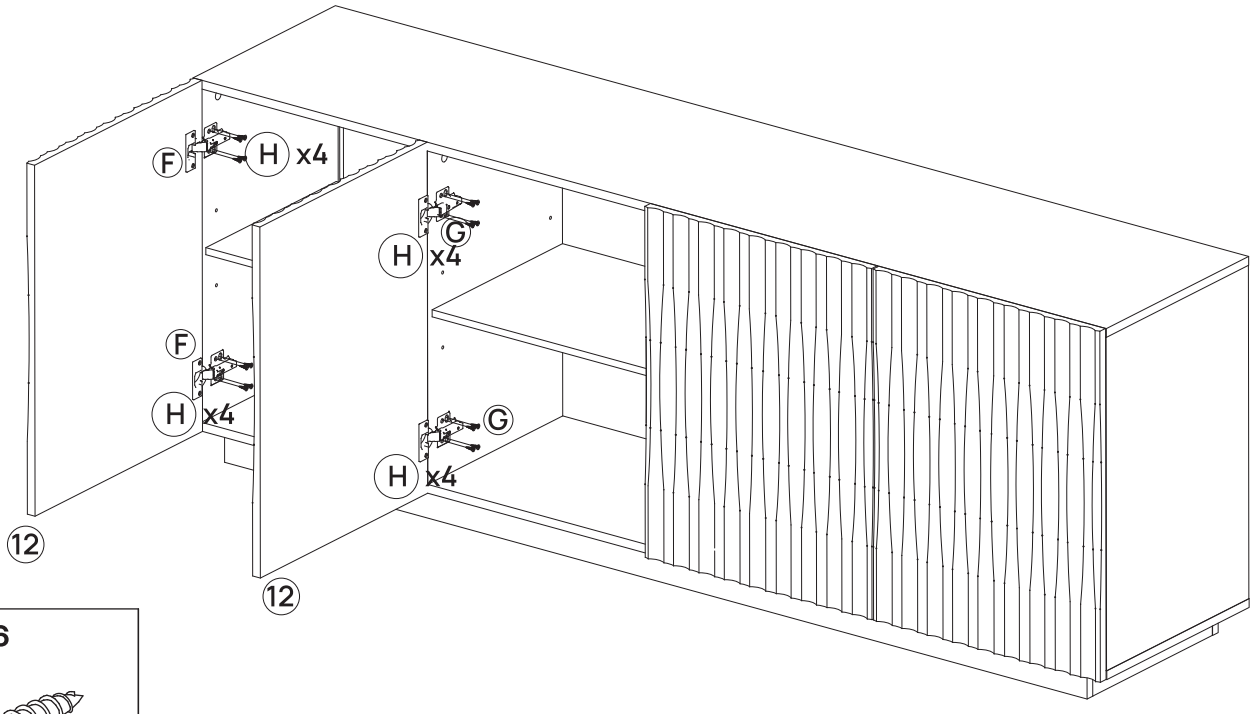


H x16




ø4 x 12mm

Step 17

YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

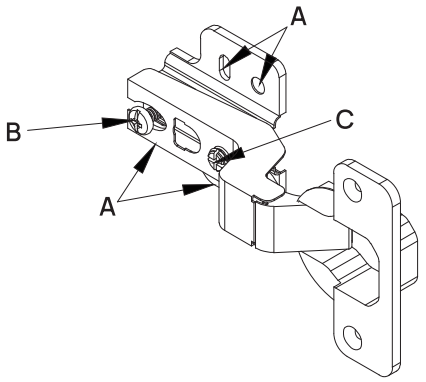


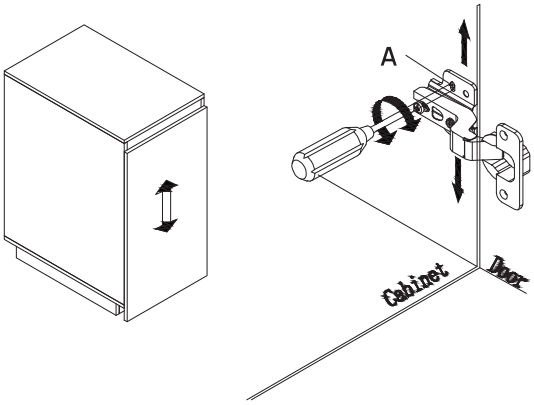

If you find a large gap above or below the door.


To adjust the vertical height.

Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

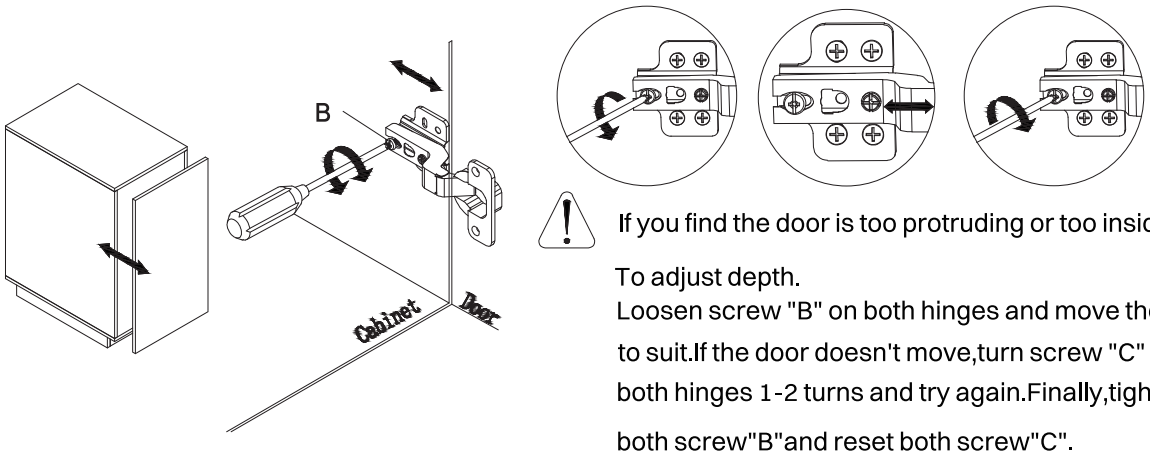

If you find the door is too protruding or too inside.

To adjust depth.
Loosen screw "B" on both hinges and move the door to suit.If the door doesn't move,turn screw "C" on both hinges 1-2 turns and try again.Finally,tighten both screw"B"and reset both screw"C".

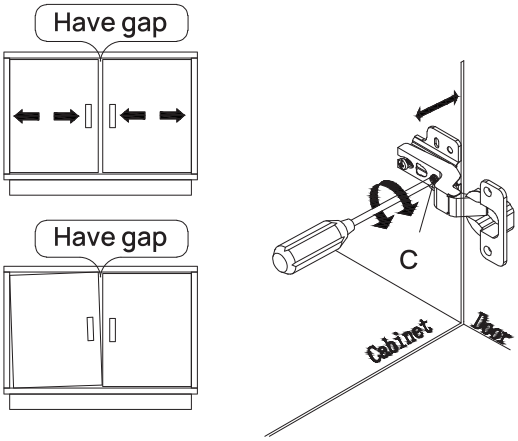



If you find a large gap between or beside the doors.
Don't worry,It's not the problem with product.

To adjust side ways.


Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.


Step 18

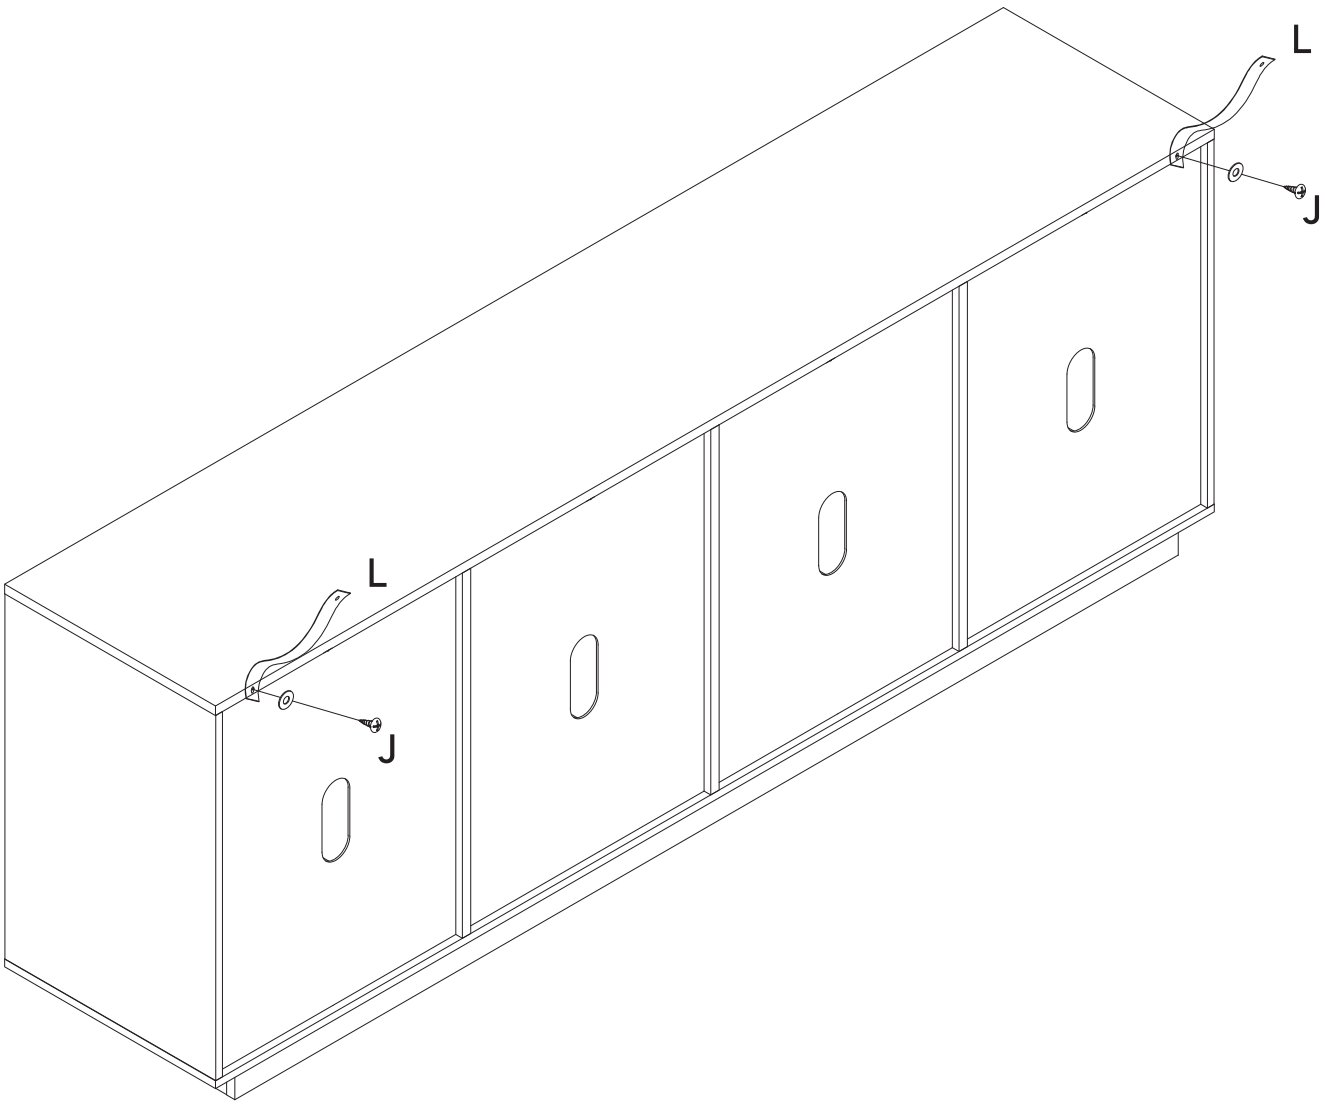

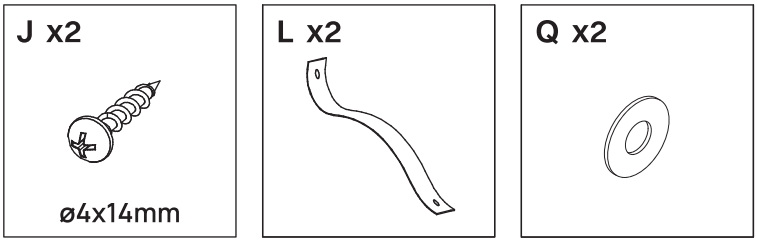

Step 19

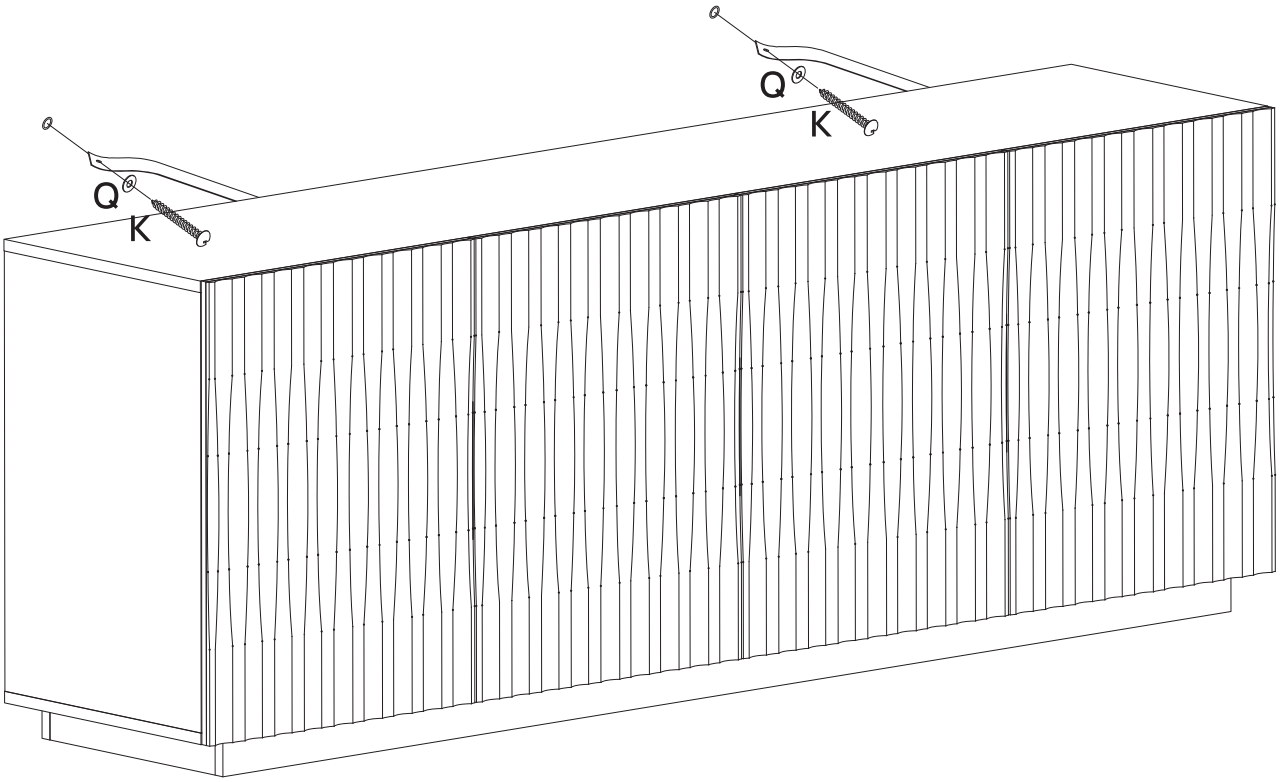

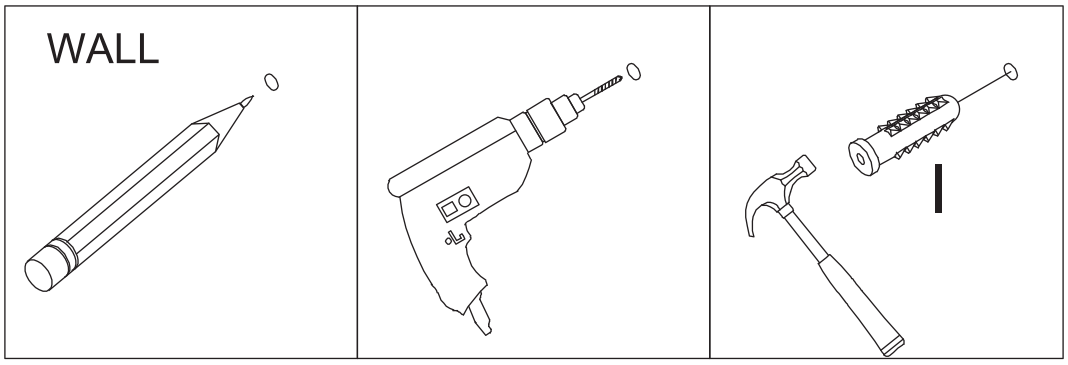

K x2



ø4x38mm

I x2



ø8x40mm

Q x2





If you encounter any issues with the product,
please scan the QR code,
and we will do our best to assist you.