
Gardening
Made Easier.
Anytime,
Anywhere.

vego garden®

User Manual For Classic Rolling Dragon Fruit Planter

Gardening Made Easier. Anytime, Anywhere.

Copyright @ 2026 Vego

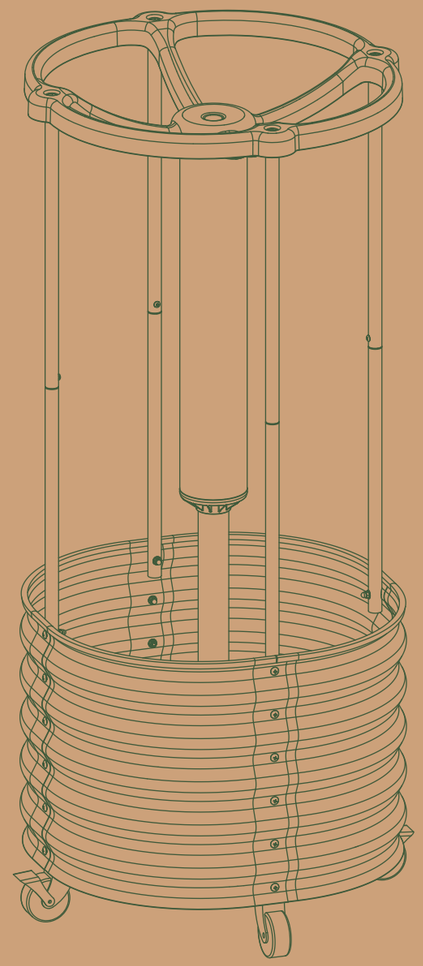

Contact Us

+1 (866) 597-1888
Vego Garden Academy
hello@vegogarden.com
vegogarden.com
vego_garden
Houston, TX

vegogarden.com

Parts List



P1

Qty: 4

P2

Qty: 4

P3

Qty: 4



P4

Qty: 1



P5

Qty: 1



P6

Qty: 1



P7

Qty: 1



B1

Qty: 1



Non- Locking Caster

Qty: 2



Locking Caster

Qty: 2



SE

Qty: 1



F1 M6 x 18

Qty: 4



F2 M6 x 10

Qty: 16



F3 M6 x 14

Qty: 16



F4 M6 Cap Nut

Qty: 8



F5 M6 Standard Nut

Qty: 12




F6 M6 x 28

Qty: 8




T1

Qty: 1

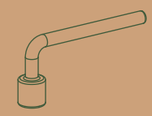

T2

Qty: 1

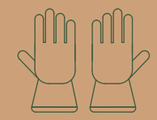

Gloves

Qty: 1

Safety Precautions

This product may contain sharp metal corners and edges. To prevent injury:


- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed

If you are unsure about any step, pause and seek assistance.




Assembly Guide

1 Remove protective film from both sides of all P1 curved panels.

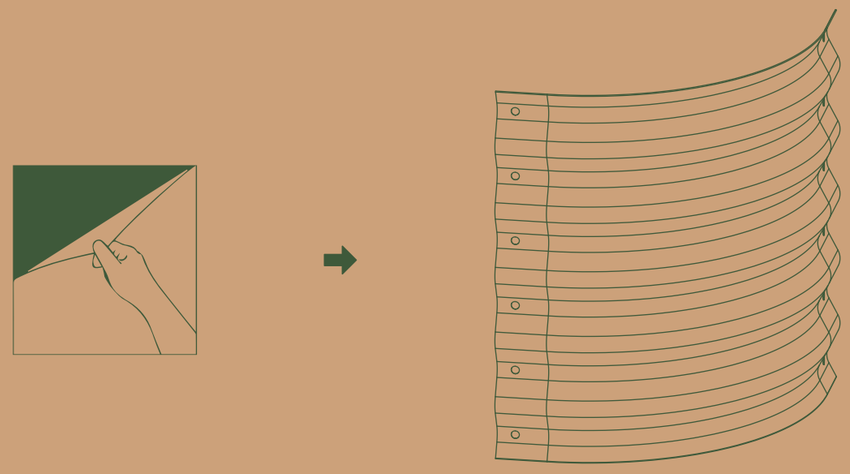


2 Take out the assembly support card from the package. Follow the diagram to fold it into a support stand.


Note: The notched part should fold inward to lock the stand in place.

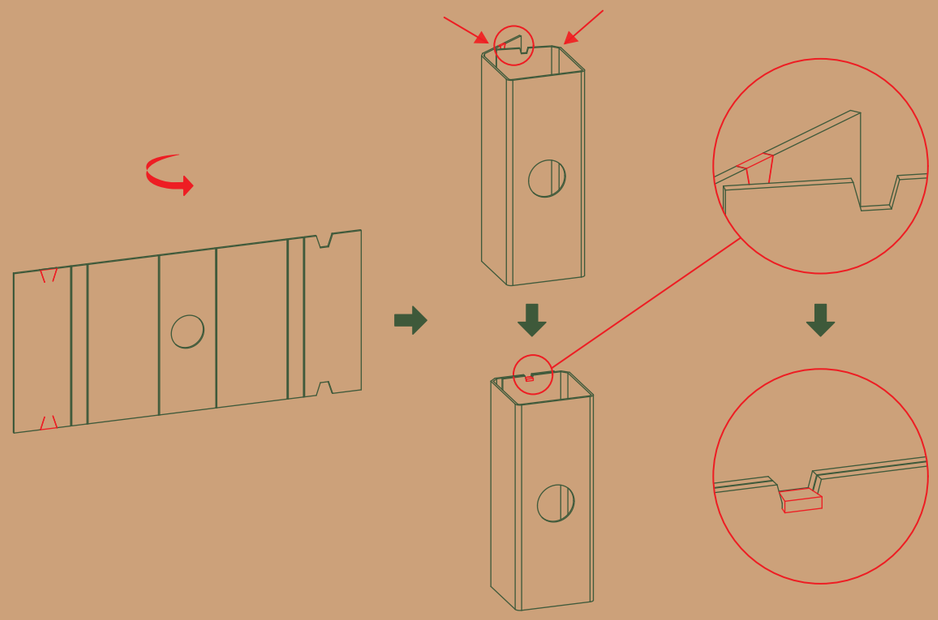


3 Put on gloves and place the B1 base on top of the stand. Make sure the base is centered and stable, with the side that has the frame facing up.

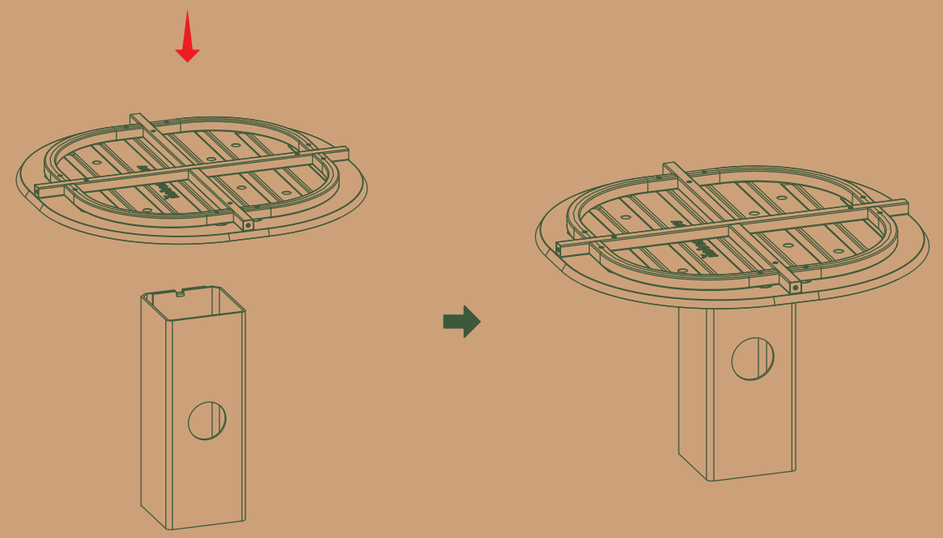

4 As shown in the diagram, place the P1 curved panels around the B1 base. Make sure the holes on each P1 panel line up with the holes on the base frame.

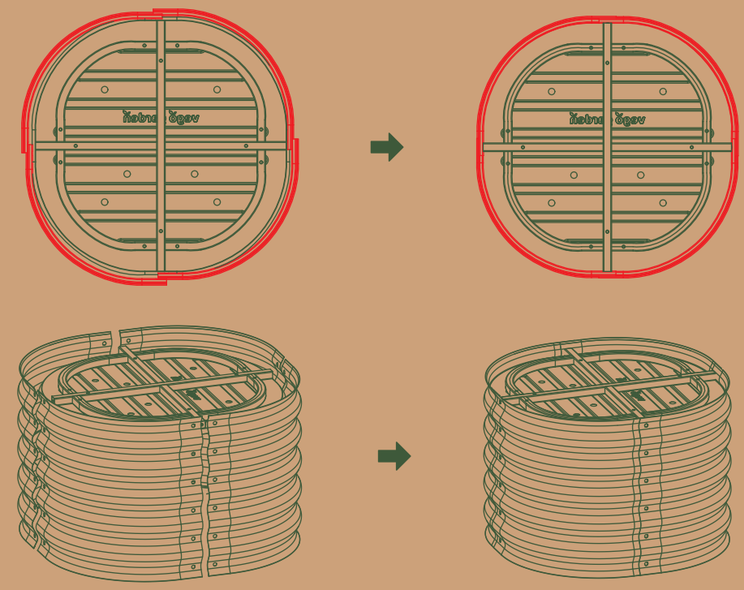


5 Attach the P1 panels to the B1 base using F1 bolts. Fully tighten all F1 bolts.

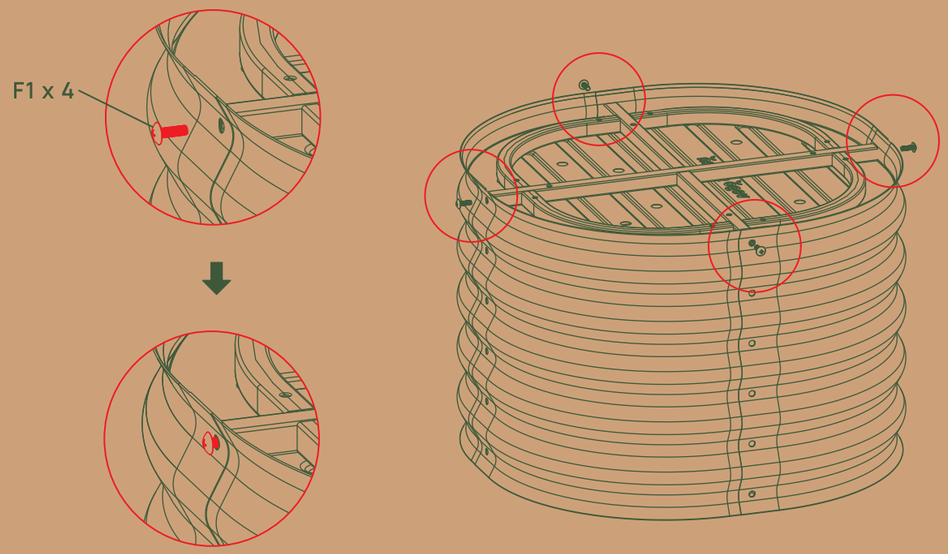

6 Use the T1 wrench and F3 bolts to secure both the locking and non-locking casters to the base frame.


Notes:

- The two locking casters should be installed diagonally, on opposite sides, for better locking control.
- Fully tighten all F3 bolts.

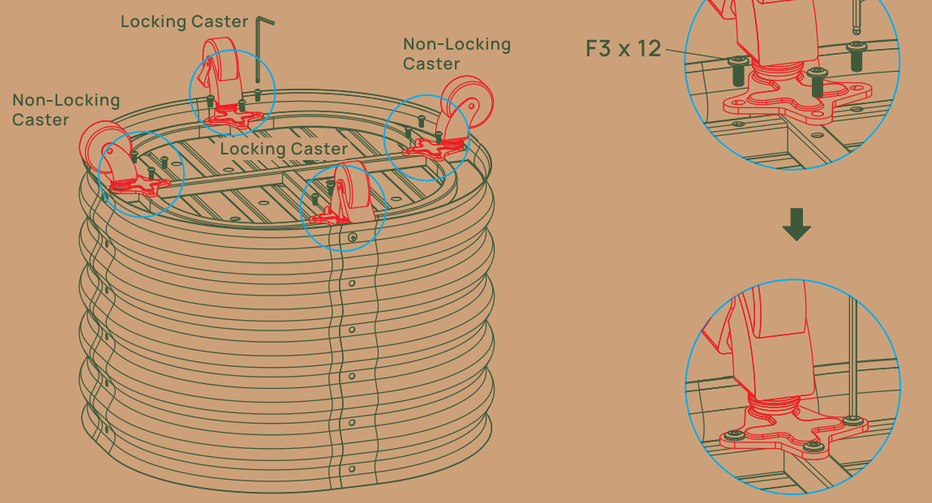


7 Gently turn the planter upside down and connect the four curved panels, leaving the top row open for later installation of the support frame.
Use F2 bolts and F4 cap nuts for the second row. For the remaining rows, use F2 bolts and F5 standard nuts.

Note: To make later assembly easier, do not fully tighten the F2 bolts and nuts yet.

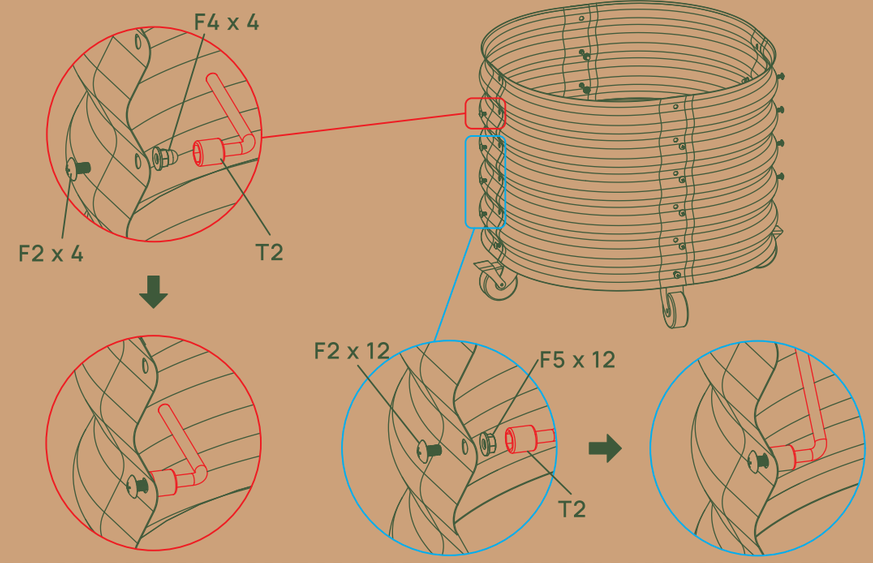


8 Use the T1 wrench and F3 bolts to connect the P2 and P3 metal poles to form one Z1 assembly.
A total of four (4) Z1 assemblies are required.

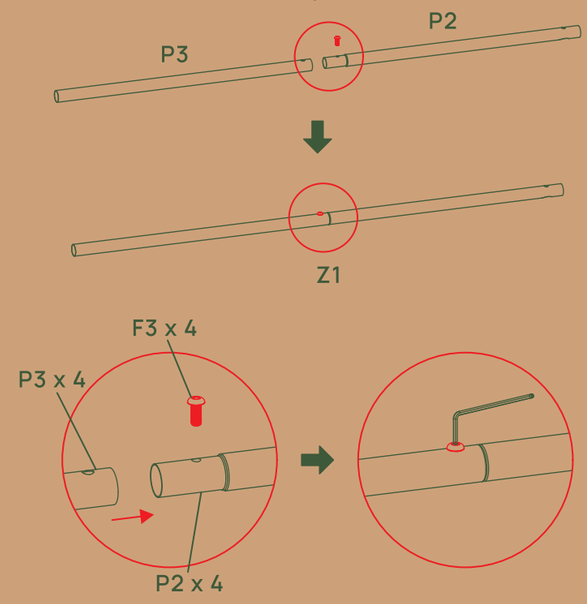


9 Attach the four Z1 assemblies to the planter using F6 bolts and F4 cap nuts.

Notes:

- Make sure the curved, recessed side of the bottom hole on each Z1 aligns and fits against the corrugated panel of the planter.
- To make later assembly easier, do not fully tighten the bolts and nuts yet.

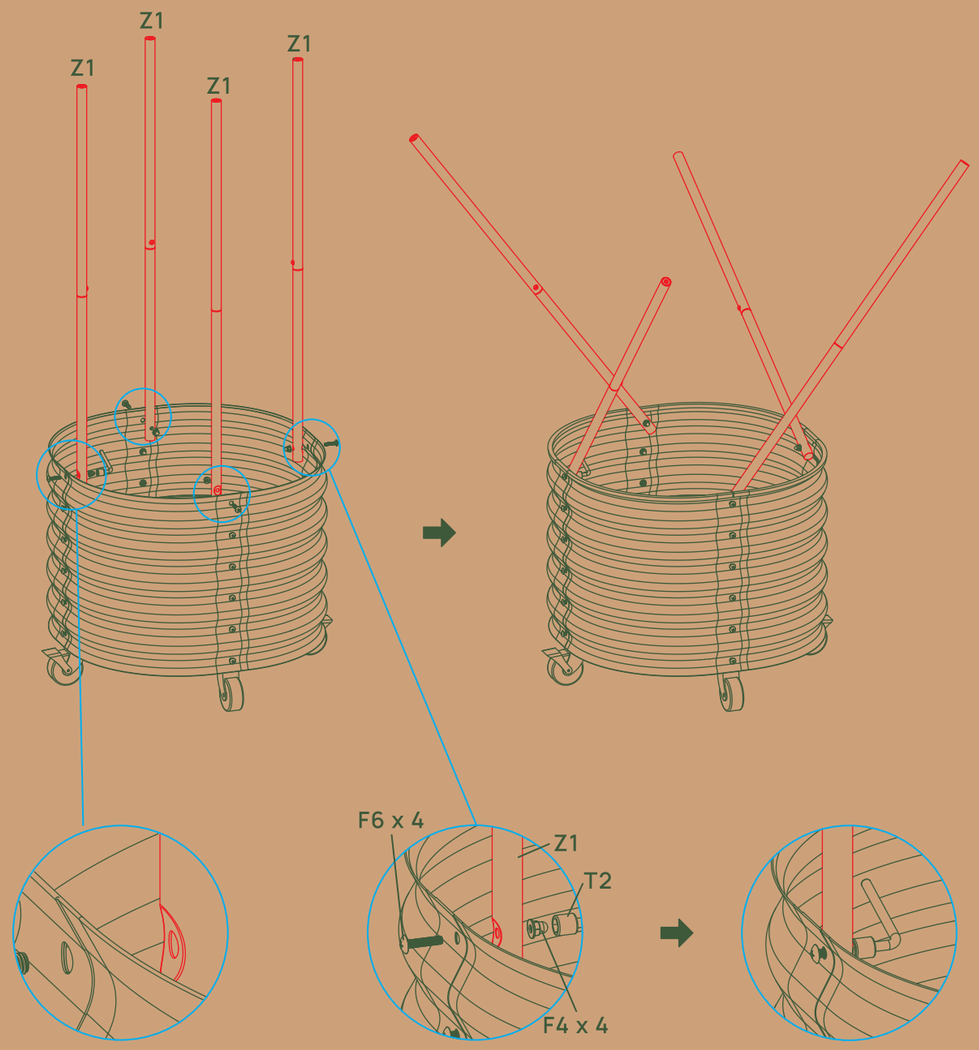


10 As shown in the illustration, assemble P4, P5, P6, and P7 to form the trellis. Once assembled, place it on a flat surface and press down firmly to ensure all parts fit tightly together.

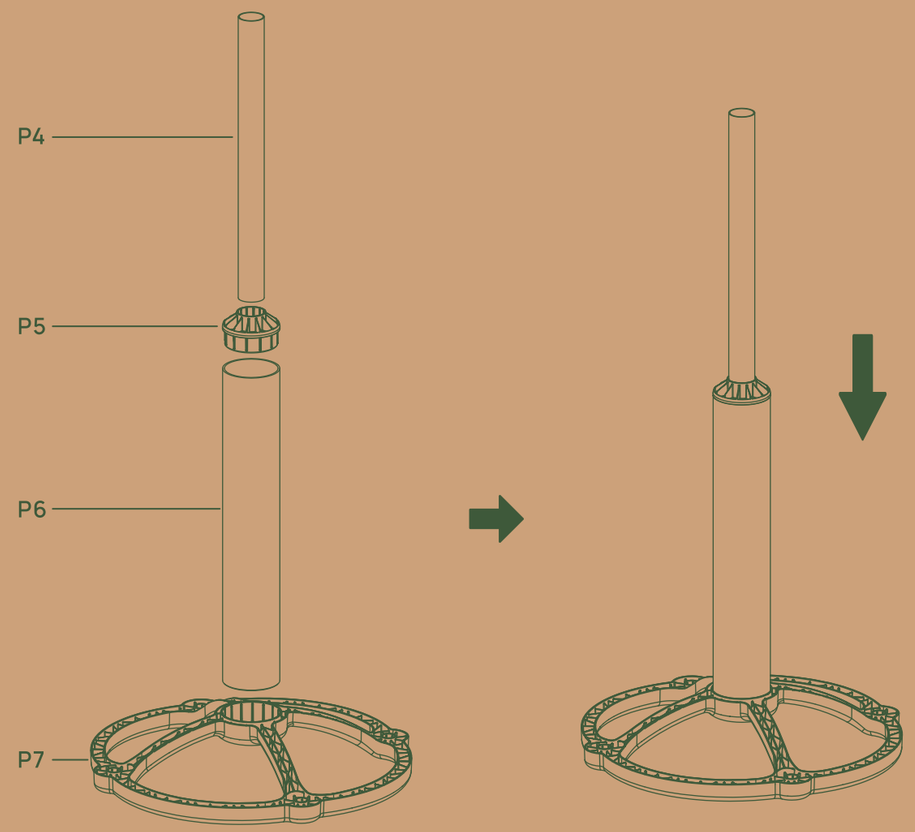


11 First, insert the bottom of the trellis onto the raised round posts on the B1 base. Then, use a Phillips screwdriver and F6 bolts to secure the top of the trellis to the Z1 metal poles.

Notes:


- Gently press down on the trellis top to align the holes with the Z1 poles.
- Thread each F6 bolt 3–4 turns at first. Once all four Z1 poles are attached to the trellis top, fully tighten all F6 bolts.

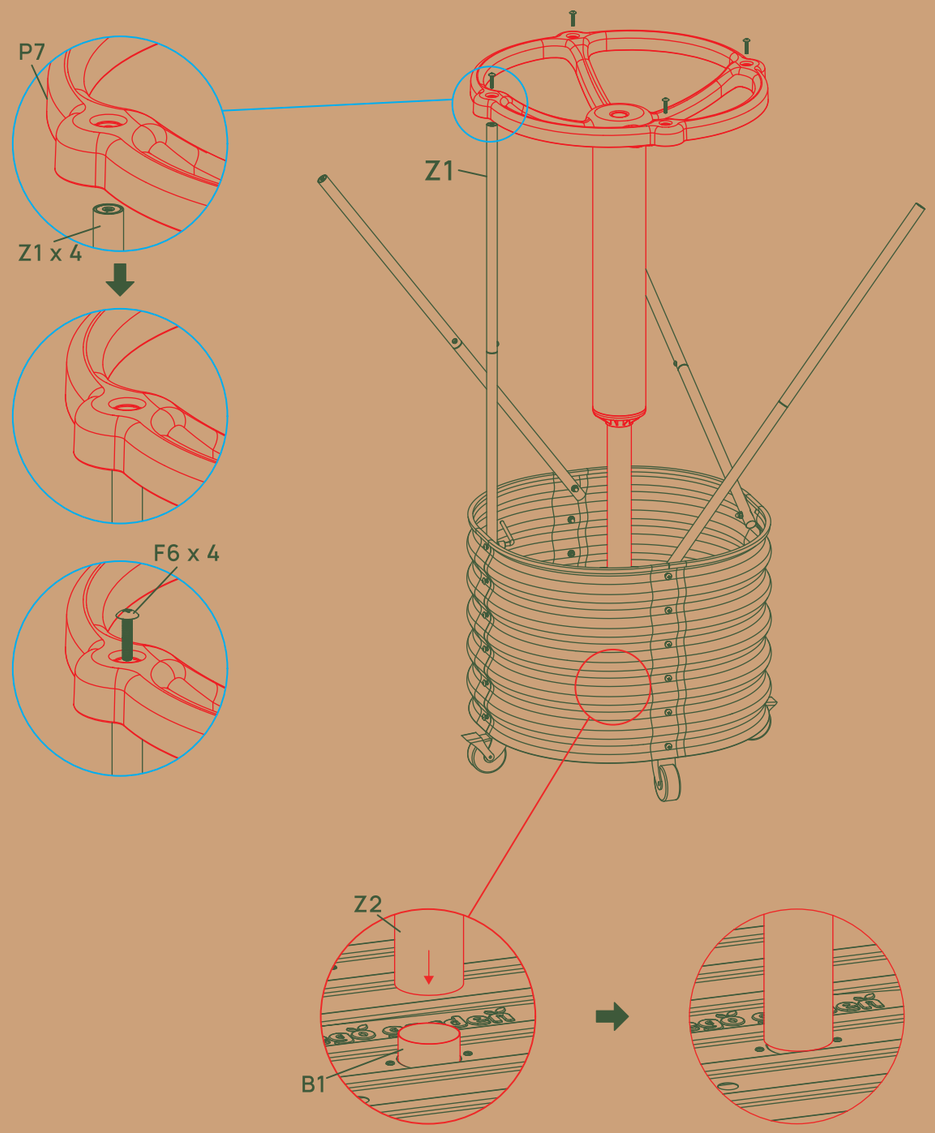


12 Tighten All the bolts and nuts on the planter.

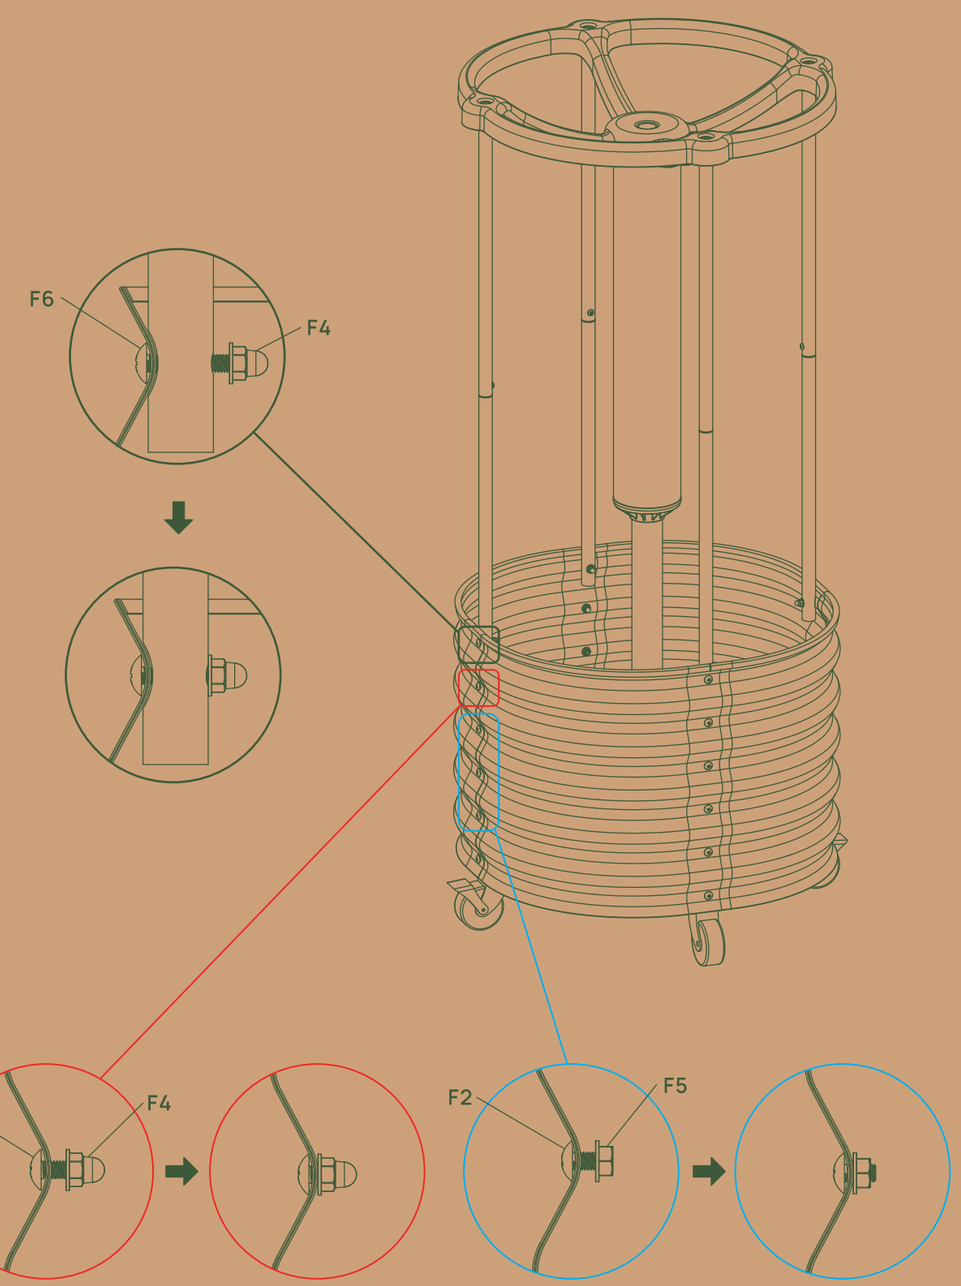

13 Press the safety edging along the top edge of the bed to secure it in place.

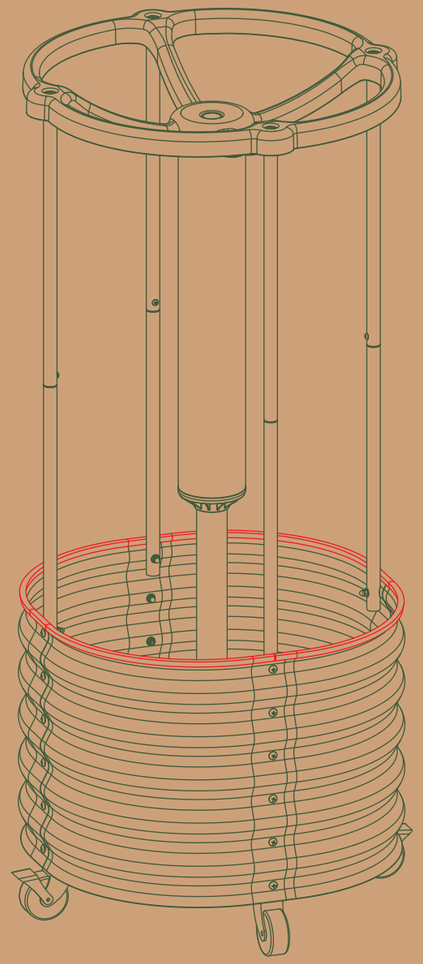

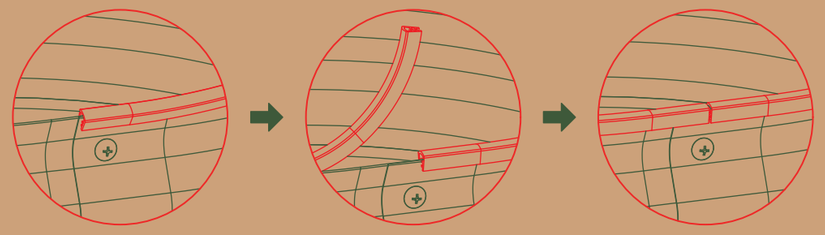

Important Caster Note

For optimal use, safety, and to prolong the lifespan of the casters, please adhere to the following guidelines:

- Always engage the casters' brakes when the planter is stationary to prevent unintended movement.
- Avoid depressions or grooves deeper than 0.75 inches, as they may cause the casters to become unstable.
- Remove any small stones, debris, or obstacles that could hinder movement or damage the casters over time.
- Use only on the suitable surfaces listed below:

Suitable Surfaces

- Flat, stable surfaces
- Concrete
- Wooden & composite decks
- Pavers & tile

Unsuitable Surfaces

- Slopes or inclines
- Soft ground such as grass, soil, or sand
- Uneven gravel or rocky areas