SIZE:145x210mm

Brentwood®

INSTRUCTION MANUAL

ELECTRIC SKILLET

MODEL:
SK-45

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage, when using electrical appliances basic safety precautions should always be followed, including the following:
1. Read all instructions.
2. Be sure that handles and cover knob are assembled and fastened properly before using this appliance.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not immerse control, cord, or plug in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Do not operate if the legs become cracked or damaged.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid. If it must be moved when it contains hot oil or other hot liquid, use extreme caution.
13. Always attach heat control to appliance first, then plug cord into wall outlet. To disconnect, turn control to “OFF” then remove plug from wall outlet.
14. Do not use appliance for other than intended use.
15. A short detachable power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
16. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
17. If a longer detachable power-supply cord or extension cord is used,
18.The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
19. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
20.There are no user serviceable parts inside. Repair should be done only by authorized
service personnel.
21.If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

PRECAUCIONES IMPORTANTES

Cuando se utilicen electrodomésticos, debe de prestarse atención a ciertas precauciones básicas de seguridad, lo que incluye lo siguiente:

1.Lea estas instrucciones cuidadosamente antes de utilizar el electrodoméstico.
2.No sumerja el aparato en agua u otros líquidos ni lo utilice cerca de lavatorios o vabos. Asegúrese de que el electrodoméstico no se moje (con salpicaduras de agua, etc.) y no lo manipule con las manos mojadas. No sumerja el cordón, el enchufe o el conector en agua. Límpielos con un paño húmedo si es necesario.
3.Desecha las bolsas de plástico y los otros artículos del empaque ya que pueden ser potencialmente peligrosos para los niños.
4.Desenchufe el electrodoméstico cuando no esté en uso, cuando lo llene con agua o cuando le haga limpieza.
5.Un electrodoméstico que haya sufrido una caída o daños no debe de ser utilizado hasta que sea revisado por un técnico de mantenimiento.
6.No permita que los cables entren en contacto con objetos calientes.
7.Si se daña el cordón, debe de ser reemplazado por el fabricante o el agente de servicio técnico o por una persona calificada para evitar eventualidades. Reemplace solamente con piezas adecuadas y autorizadas.
8.Manténga fuera del alcance de los niños. Este electrodoméstico no ha sido diseñado para ser usado por niños o personas discapacitadas. A los niños se les debe supervisar para evitar que jueguen con el electrodoméstico.
9.Utilice este electrodoméstico solamente para fines de uso normal. Utilice solamente aditamentos originales vendidos por el agente autorizado.
10.Este electrodoméstico es para uso exclusivo en el hogar y no para fines comerciales o industriales.
11.No debe de utilizarse el electrodoméstico al aire libre ni colocarse cerca de un quemador u hornilla a gas o eléctrico o dentro de un horno caliente.
12.No permita que el cordón cuelgue de la mesa o repostero de cocina debido al riesgo de ocasionar quemaduras.
13.Nunca debe de dejarse un electrodoméstico solo mientras este encluñado.
14.El aparato genera calor y vapor. Manténgase alejado del vapor caliente y no toque las superficies calientes.
15.Siempre coloque el electrodoméstico sobre una superficie resistente al calor.
16.Asegúrese de que exista la adecuada ventilación, deje un espacio de 20 cm. a todo alrededor del electrodoméstico.
17.No utilice el electrodoméstico cerca de materiales inflamables tales como cortinas, o cualquier otro material combustible.
18.Si el electrodoméstico va a ser utilizado por una tercera persona, facilítele el manual de instrucciones.
19.El fabricante no asume ninguna responsabilidad por daños causados por el incumplimiento de las instrucciones o por el uso o manejo inapropiados del aparato.

CONSERVE ESTAS INSTRUCCIONES

PRECAUCIÓN
No intente reparar el electrodoméstico Ud. mismo. El servicio técnico debe de ser llevado a cabo por el personal técnico calificado.

The cooking temperatures listed in this user manual are estimates. Adjust the cooking temperature slightly up or down to achieve the results you prefer.

Food	Temperature Program	Cooking Time(approx.)
Pancakes	375º	1-3 min.
Bacon	375º	4-7 min.
Hash browns	390º	8-10 min.
Eggs	300º	2-5 min.
Fish	355º	6-9 min.
Pork Chops	375º	10 min.
Sausage	355º	10 min.

Before initial use and after each subsequent use, wash skillet in dishwasher or in warm sudsy water, rinse and dry. Do not immerse heat control in water or let it come in contact with any liquid.
For best results use nylon, plastic, wooden, or rubber utensils. Do not use metal utensils as they may scratch the nonstick surface. Do not cut foods on the cooking surface.

If there is any food residue remaining on the cooking surface, it should be removed after each use. To do so, scrub gently with a mild abrasive, such as a mild abrasive cleanser or a fine cleansing pad–nylon mesh or other dotting cleansing pad. Do not use steel wool or abrasive kitchen cleaners. Soaking the skillet to loosen food residue is not necessary. If, however, soaking the skillet is desired, do not soak for more than two hours. Soaking for more than two hours may damage the nonstick finish.

CARE AND CLEANING
1. Unplug the cord and let unit cool completely.
2. Make sure the variable temperature control is removed.
3.Wash the pan and lid with warm sudsy water. The lid can also be washed in the dishwasher, top rack only.
4. If washing by hand, use a sponge or nylon scouring pad with liquid detergent. Do not use any abrasive
cleaners or metal pads as they can damage the nonstick coating.
5. Rinse and dry.
6.Wipe the outside of the base with a damp cloth. Do not immerse in water or other liquid.
7. Store the unit in a dry place and wind electric cord into a coil securing it with a twist fastener.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

BEFORE FIRST USE
1. Insert the probe firmly into the socket. Important: Make sure the control is securely inserted.
2. Plug unit into an AC electric outlet.
3. Turn temperature control to desired setting or according to your recipe. The indicator light comes on. The desired temperature should line up with the indicator light. When the selected temperature is reached, the light goes off.During cooking the light will blink on and off, indicating the temperature is maintained.
4. When finished cooking, set temperature control to WARM to keep food at serving temperature.
5. To take the skillet to the table for serving, remove the variable temperature control by pressing the quick-release lever and pulling out the control.
Caution: Be careful when removing the probe as the skillet might stay warm for a while.
6.Use plastic, rubber or wood utensils when cooking and serving. If using metal utensils, be careful not to scrape the nonstick finish.

HOW TO USE
1. Place skillet on a dry, level surface. To prevent possible heat damage to your countertop, place a heat resistant counter protector, such as aluminum foil, under appliance.
2. Insert the heat control into the skillet so the two electrical pins on the skillet are fully inserted into the heat
3. Connect cord to a polarized outlet only. As a safety feature, this appliance has a polarized plug (one blade is wider than the other).This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
4. Turn heat control to desired temperature. Remove cover and preheat skillet (this takes approximately 10 to 15 minutes).
5. Prepare food for cooking.
6. Because the skillet features a nonstick finish, food may be prepared with or without shortening, according to taste.
7. Place food in skillet and cook according to temperature-timetable. Heat should be adjusted according to personal preference and particular food being cooked. During cooking, pilot light will go on and off indicating desired temperature is being maintained.
8. Turn heat control to OFF when cooking is completed. Unplug heat control from wall outlet then from appliance.

To attach/detach the Handle:

CAUTION: Ensure the Temperature Dial is set to “OFF,” the Power Cord is unplugged from the electrical outlet, and the product has thoroughly cooled before attaching or detaching the Handle.

To attach:

1. Align the electrical pins of the Base with the electrical pinholes of the Handle. Ensure the Locking Lever is in the raised position.
2. Slide the Handle into position on the Base.
3. Push down the Locking Lever so it securely locks into the tab recess.

To detach:

1. Slightly push the Locking Lever tab away from the tab recess.
2. Push the Locking Lever to its vertical position.
3. Remove the Handle from the Base.
NOTE: Do not twist or bend the Handle when removing it from the Base, as product damage may result.
4. Push down the Locking Lever so it securely locks into the tab recess.

Cooking with the electric skillet:
NOTE: Thoroughly clean the product before using it for the first time.

CAUTION: Do not touch hot surfaces. Always use the Handle and knobs of the product. Use protective oven mitts or gloves to avoid burns or serious personal injury.

1. Place the product on a flat, steady, stable, heat-resistant surface.
2. Ensure the product is unplugged from the electrical outlet and the Temperature Dial is in the “OFF” position.
3. Follow the “To attach/detach the Handle” procedure to attach the Handle.
4. Grease the interior surface of the skillet.
Lightly coat the entire cooking surface with cooking oil or unsalted vegetable shortening. Repeat as necessary for a longer lasting, non-stick surface.
5. Plug the Power Cord into a standard 120V AC electrical outlet.
6. Preheat the skillet by setting the Temperature Dial to the “MAX” position. Allow the skillet to warm up, uncovered for about 30-45 seconds.
7. Place the ingredients or food to be prepared into the skillet.
CAUTION: When cooking with the Lid in place, use protective oven mitts or gloves to avoid burns or serious personal injury.
8. Set the Temperature Dial to the desired cooking temperature level and cook the food or ingredients until done.
NOTE: The optimal cooking temperature level for this product is the 1/3 point to 2/3 point on
dial (see Diagram A).
High cooking temperature levels may cause discoloration or shorten the life of the non-stick
surface.

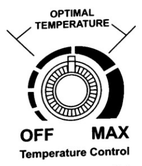

(Diagram A)

9. Once cooking is complete, set the Temperature Dial to the “OFF” position and unplug the Power Cord from the electrical outlet.

CAUTION: Allow the product to thoroughly cool before handling it.

Using Cooking Utensils with the Non-stick Surface:
- Plastic, rubber, or wooden cooking utensils are recommended for use with the non-stick surface of the skillet.
- Never use sharp-edged metal utensils (i.e., forks, knives, mashers, beaters, or food choppers), as they will scratch the non-stick surface.

Cleaning and Maintenance:

CAUTION: Allow the product to completely cool before handling or cleaning it. Do not pour cold water onto the product as the sudden temperature change may damage the product and create a burn hazard.

CAUTION: Set the Temperature Dial to the “OFF” position, unplug the Power Cord from the electrical outlet, and remove the Temperature Dial from the product before cleaning it.

- Clean the product after each use.
- Drain out the excess oil or wipe the interior surface of the skillet with a paper towel.
- Hand-wash the Base of the product in hot, soapy water using a sponge or non-metallic cleaning pads.
- Do not use abrasive scouring pads to clean the product, as the non-stick surface may be damaged.
- Do not use household bleach to clean the skillet surface, as it will permanently fade the non-stick finish.
- Clean the outside of the product and the Base with a damp dishcloth.
- Do not clean the product in a dishwasher.
- Rinse the product with hot water and thoroughly dry with a dishtowel.
- Dry the terminal guard and pins immediately after washing the product.
- Periodically check the screws of the product and retighten as necessary. Do not over-tighten the screws as they may crack or be stripped.
- Store the product in a cool, dry place.

La siguiente guía ofrece el tiempo aproximado de cocción. El tiempo puede variar de acuerdo a las diferentes cantidades.

Alimento	Programa de temperatura	Tiempo de cocción (aproximado)
Panqueques	375º	1-3 min.
Tocino	375º	4-7 min.
Hash browns (papas doradas)	390º	8-10 min.
Huevos	300º	2-5 min.
Pescado	355º	6-9 min.
Chuletas de cerdo	375º	10 min.
Salchichas	355º	10 min.

NOTA: Con el fin de evitar que los alimentos se peguen a la superficie de cocción, utilice temperaturas bajas y asegúrese de que haya suficiente líquido / aceite de cocina y sazone la superficie de la plancha para freír antes y después de cada uso.

NOTA: La primera vez que se utilice el electrodoméstico, puede haber una ligera emisión de humo y olor. Esto es normal. Se debe a que se calienta la capa protectora que cubre los componentes para el calentamiento. Esta capa protectora es para preservar los componentes durante el transporte.

LIMPIEZA Y MANTENIMIENTO

¡ADVERTENCIA! Siempre desconecte de la electricidad y retire el conector para electricidad antes de proceder a limpiar. Siempre deje que el electrodoméstico se enfríe totalmente antes de proceder a su limpieza. **¡ADVERTENCIA! NO VIERTA AGUA FRÍA SOBRE LA PLANCHA PARA FREÍR YA QUE ESTO PUEDE DEFORMAR O TORCER EL ELECTRODOMÉSTICO.**

¡ADVERTENCIA! Nunca sumerja el cordón, el enchufe, el conector de electricidad o el electrodoméstico en si en agua u otros líquidos. Asegúrese de que la entrada para el conector de electricidad del electrodoméstico se encuentre completamente seca antes de usar y después de lavar.
•Si es necesario, limpie el conector de electricidad y el cordón con un paño ligeramente humedo y luego seque con una toalla seca.
•Limpie la superficie de la plancha para freír con un paño y con agua caliente jabonosa. Seque con una toalla seca. Asegúrese de que no ingrese agua dentro de la entrada para el conector de electricidad. Deje que seque completamente antes de usar de nuevo.
•No utilice esponjas para refregar ni materiales abrasivos ya que estos pueden dañar las partes plásticas, la superficie antiadherente y el acabado del exterior del aparato.
•Para sacar manchas difíciles o restos de comida, llene con agua CALIENTE y jabonosa y deje que remoje. Esto hará que se aflojen los residuos y que sean más fáciles de limpiar.
•Siempre sazone la plancha para freír de nuevo frotando una pequeña cantidad de aceite sobre la superficie de cocción después de limpiar y antes de guardar el aparato.
•Guarde su electrodoméstico en su caja o empaque original o en una alacena en un ambiente seco.
•No utilice utensilios de metal ya que estos pueden arañar la superficie para cocer.

ANTES DEL PRIMER USO

* Su electrodoméstico ha sido empacado de manera cuidadosa para asegurarnos de que el producto llegue a su destino en buenas condiciones. Si el producto ha sufrido daños, caídas o cualquier tipo de desperfecto, o si el cordón se encuentra dañado, inmediatamente póngase en contacto con su agente de ventas para que le reemplace o se repare.
* Desempaque su electrodoméstico con cuidado. Tenga cuidado de no desechar ningún empaque o envoltura hasta que se haya encontrado todas las piezas del electrodoméstico.
* Limpie con un paño húmedo el exterior del electrodoméstico y la superficie de cocción con
cuidado para retirar el polvo que se pueda haber acumulado. Seque con una toalla seca. No utilice limpiadores ásperos y abrasivos.
Retire las etiquetas o calcomanías.

¡ADVERTENCIA! No sumerja el cordón, el enchufe o el conector de electricidad en agua o cualquier otro líquido. No sumerja la plancha freidora en agua.

FUNCIONAMIENTO
•Siempre coloque el electrodoméstico sobre una superficie nivelada, no resbalosa y estable.
•Siempre coloque el electrodoméstico sobre una superficie resistente al calor, ya que el aparato alcanza altas temperaturas.
•¡ADVERTENCIA! No deje el electrodoméstico encendido si se lo deja solo.
•¡ADVERTENCIA! Siempre deje un espacio de aproximadamente 20 cm. alrededor del exterior del electrodoméstico cuando se encuentre funcionando. Nunca lo utilice cerca de cortinas, debajo de alacenas o cerca de paredes o de cualquier otro material inflamable.
•¡ADVERTENCIA! NO DEJE QUE EL CORDÓN CUELGUE DEL BORDE DE LA MESA O REPOSTERO, YA QUE PUEDEN OCURRIR QUEMADURAS U OTROS DAÑOS PERSONALES SI ALGÚN NIÑO TIRA DEL CORDÓN Y HACE CAER EL ELECTRODOMÉSTICO.
•Asegúrese de que el controlador de temperatura se encuentre en "OFF" (apagado). Acople el controlador de temperatura al aparato, asegurándose de que encaje hasta el fondo y quede fijo en su lugar.¡ADVERTENCIA! Nunca enchufe el controlador de temperatura al electrodoméstico si éste está conectado a la electricidad; siempre conéctelo al aparato antes de conectar al tomacorriente.
•Este electrodoméstico debe de ser usado solamente con el controlador que viene con el aparato.
•Conecte el enchufe a la electricidad y proceda a encender el aparato.
•Para encender la plancha freidora, simplemente regule el controlador de temperatura al nivel deseado de temperatura.
•La luz indicadora y el calentamiento se activarán y desactivarán alternadamente de forma automática una vez que se haya llegado a la temperatura adecuada. El electrodoméstico está listo para usarse.
•¡ADVERTENCIA! No utilice utensilios de metal o artículos similares ya que éstos pueden arañar la capa antiadherente y dañar el electrodoméstico.
Utilice utensilios de madera o de plástico.
•¡PRIMER USO! La primera vez cubra la superficie de cocción con una pequeña cantidad de aceite de cocina.

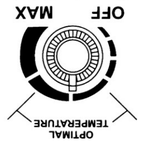

(Diagram A)

9. Una vez que haya terminado de cocinar, apague la unidad y desconecte del toma corriente.

PRECAUCIÓN: Antes de tocar el producto, permita que se enfríe completamente.

UTENSILIOS DE COCINA
• Utensilios de madera y plástico son los únicos utensilios de cocina recomendados para usar en la superficie antiadherente del sartén eléctrico.
• Nunca utilize utensilios de cocina de metal como tenedores, cuchillos navajas batidores, moledores de metal, podrían dañar la superficie del sartén.

LIMPIEZA Y MANTENIMIENTO:

PRECAUCIÓN: Permita que la unidad se enfríe completamente antes de tocarlo y limpiarlo. Nunca ponga agua fría en el producto cambios bruscos de temperatura podrían causar daños al producto y provocar un incendio.

PRECAUCIÓN: Coloque el control de temperatura en apagado(OFF) desconecte del toma corriente y remueva el cordon de la unidad antes de limpiar.

• Limpie el producto despues de cada uso.
• Lave a mano la base del producto en agua caliente con jabón y una esponja o estropajos no metálicos.
• Tire el exceso de aceite o limpie el interior de la superficie antiadherente con una toalla de papel.
• Lave a mano la base del producto en agua caliente con jabón y una esponja o estropajos no metálicos.
• Nunca use espátulas o estropajos de metal para limpiar el producto o la superficie antiadherente podría dañarse.
• No utilize solventes para limpiar la superficie del sartén al hacerlo podría dañar el terminado de antiadherente permanentemente.
• Limpie la superficie exterior y la base del sartén con una toalla húmeda.
• No lave el sartén en el lava platos.
• Enjuague el sartén y seque perfectamente.
• Sequ los conectores y contactos eléctricos inmediatamente despues de lavar el sartén.
• Periodicamente compruebe si tuercas o tornillos estan ajustados correctamente re-ajuste si es nesesario, no sobre ajuste los tornillos podrían rajarse o barrer.
• Guarde el producto en un lugar seco y fresco.

Brentwood®

MANUAL DEL USUARIO

SARTEN ELECTRICO

MODELO:
SK-45