
## TOOLS REQUIRED



Screwdriver
( Not included)

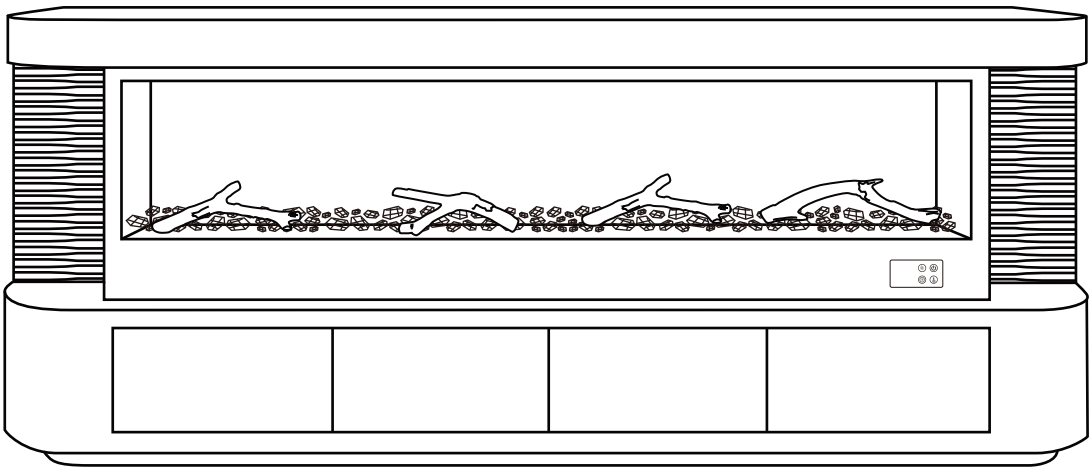



2 - People

## ASSEMBLY RATING



EASY ——→ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

## CHECK BEFORE STARTING

- [ ] **Are you missing anything?**
  Double-check all parts, hardware and accessories listed are all acccounted for.
- [ ] **Should we send any replacements?**
  Are there any irregularities or flaws in the parts? We can send replacements!
- [ ] **Check out our Quick Tips!**
  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
- [ ] **Prep Time!**
  Please review the assembly instructions and all diagrams prior to assembling.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



### Suitable Location

Assembling near the area of the intended location is highly recommended.



### Sufficient Space

Make sure you have enough space to move around during the assembly.



### Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



### Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE

**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly and insert screws or bolts into their respective holes.

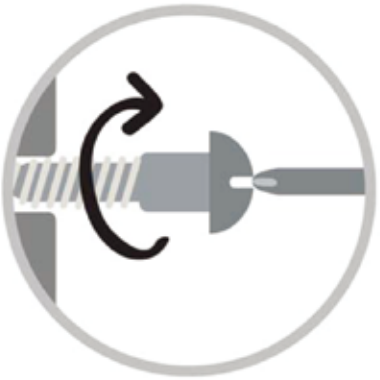

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.**

# SAFETY INFORMATION (CONTINUED)

## FCC STATEMENT

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1)This device may not cause harmful interference, and

2)This device must accept any interference received, including interference that may cause undesired operation.


CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

# TV STAND

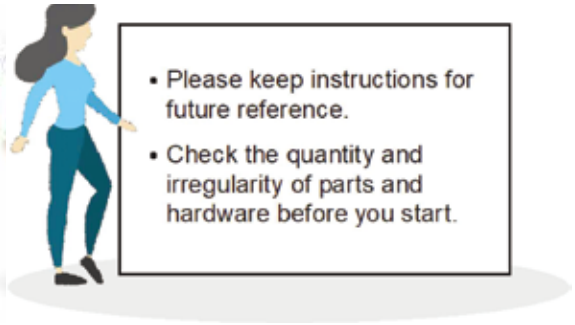



## PARTS IDENTIFICATION

**A TV STAND**

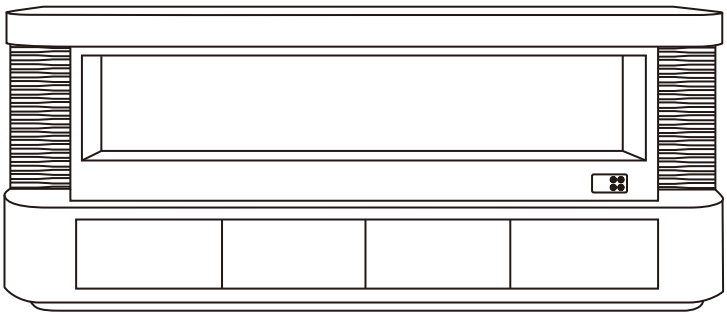


**1PC**

**B FAUX CRYSTAL**

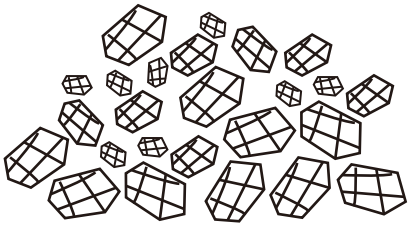


**1BAG**

**C REMOTE CONTROL**

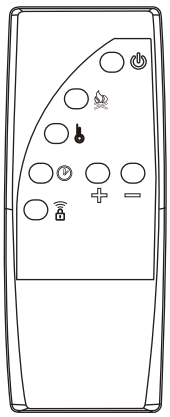


**1PC**

**E DOWN LIGHT CONTROL**

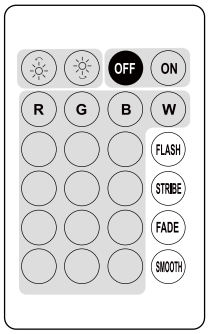


**1PC**


**D CHARCOAL**

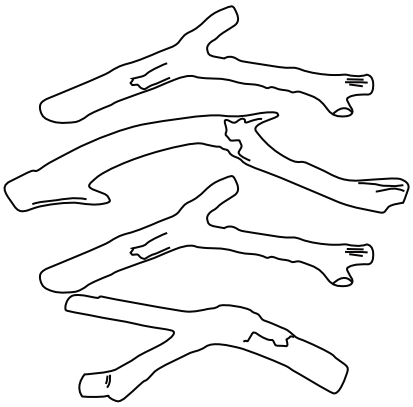

**1BAG**

# ASSEMBLY INSTRUCTIONS

1

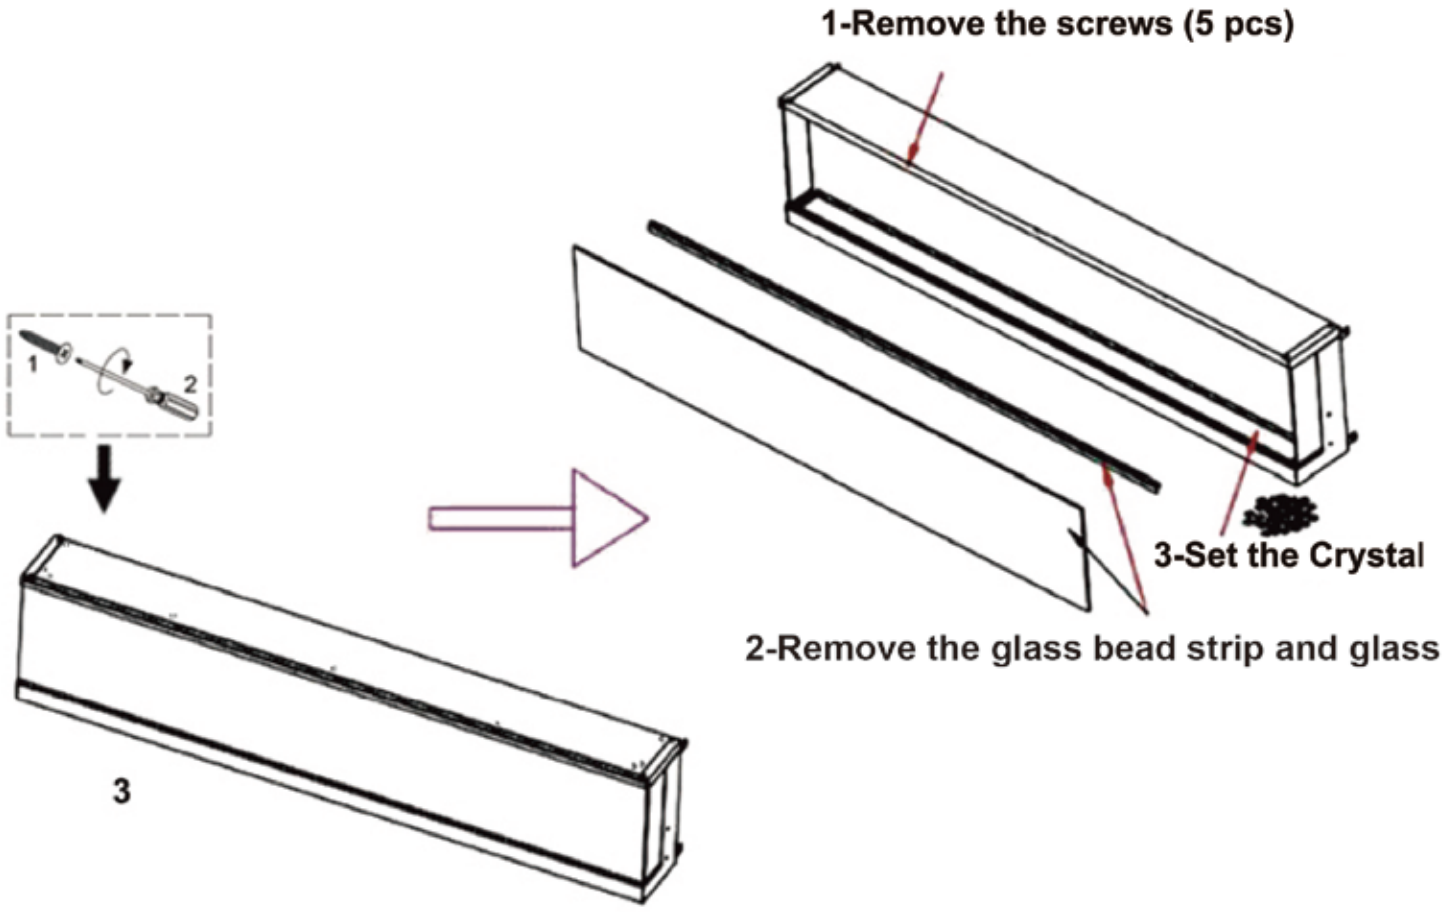



**Open the 3D flame simulator insert box and evenly distribute the crystals**


# ASSEMBLY INSTRUCTIONS

2

Finish:



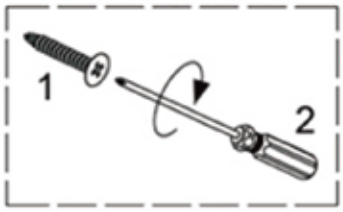

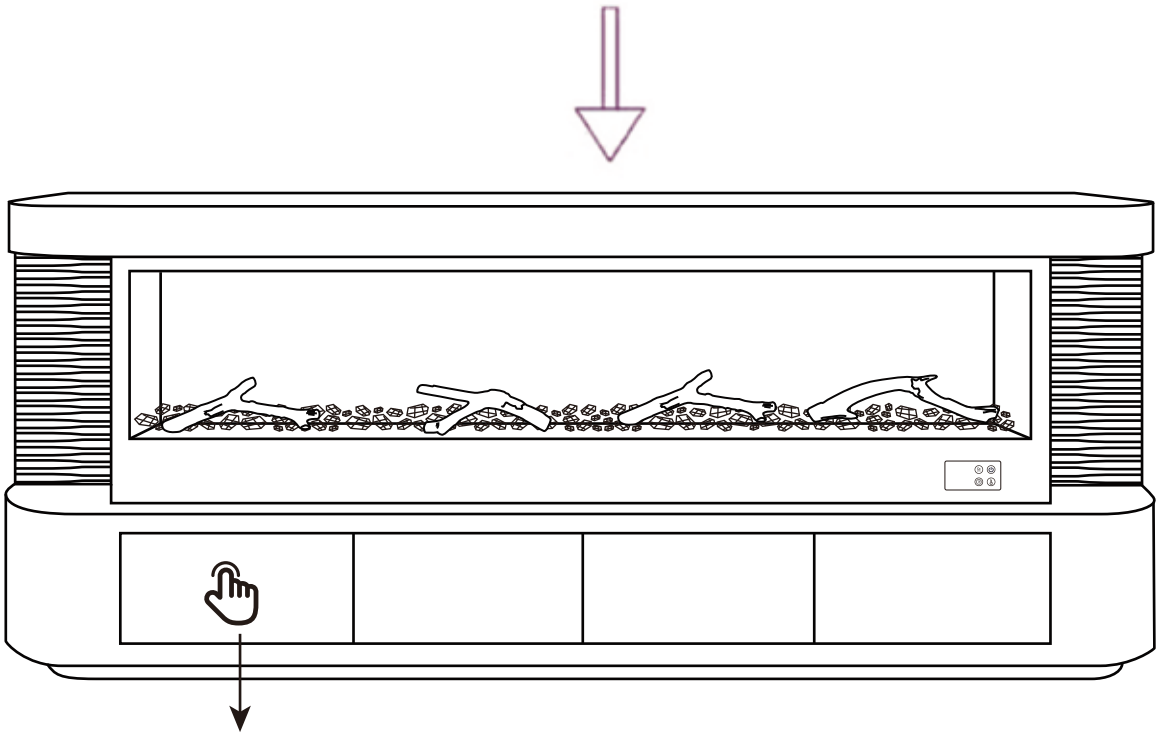**Drawer is spring runner ,touch then open**

**ASSEMBLY COMPLETED**

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

**Keep this handy!**

Please retain this instruction manual and any order-related information for future reference.

**Lift, don't drag!**

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

NOTE: SCREW DRIVER IS NOT INCLUDED

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.

# ANTI-TIPPING INSTALLMENT INSTRUCTIONS

# FURNITURE TIPPING RESTRAINT


## WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


## STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

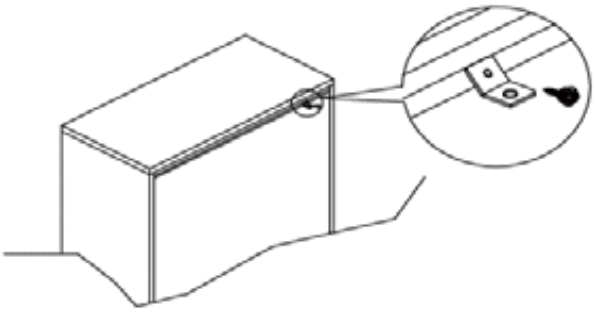


## STEP 2

Locate the other bracket on the wall over stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

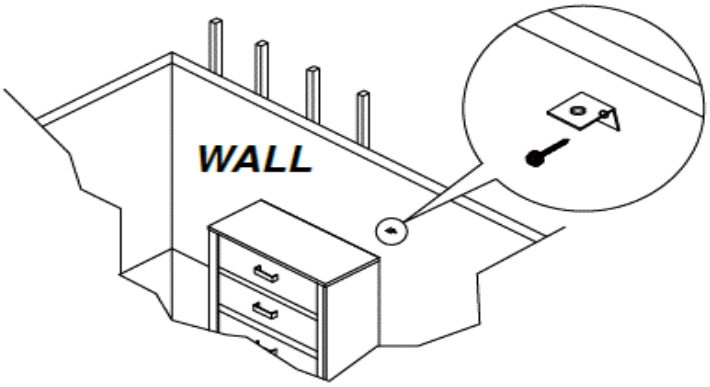


## STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

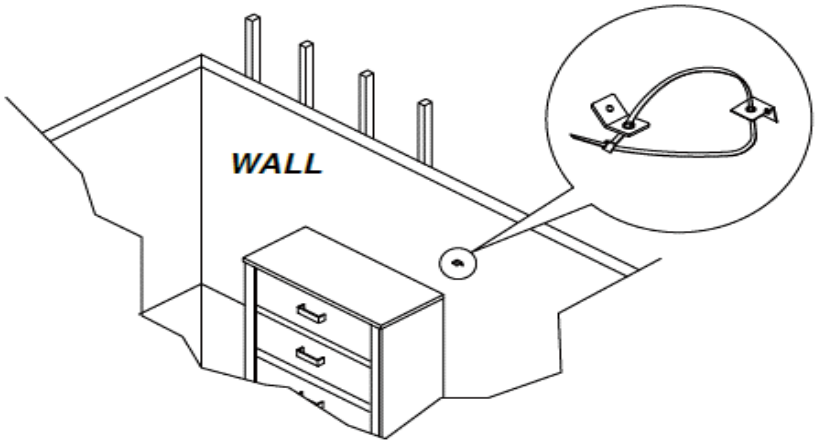





# USER INSTRUCTIONS

## Bluetooth Speaker Instruction

**CONTROL PANEL MENU:**

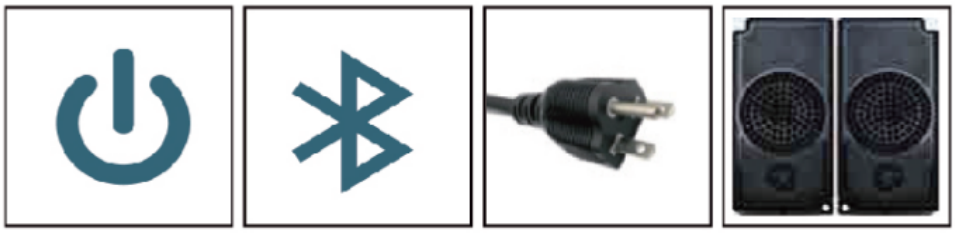

ON/OFF | Bluetooth Speaker | DC POWER | SPEAKERS


**INSTRUCTION STEPS AS FOLLOWED:**

1. Connect the DC power adapter to wall socket
2. Turn the switch ON
3. Enable the bluetooth function in your digital device
4. Search for bluetooth speaker name "RS01"
5. Pair with the bluetooth speaker name "RS01"
6. Start playing your audio


To use the Auxiliary function, switch from Off to On.
Connect the Auxiliary Audio cable to the input on your furniture.
Once the connections are secure, start playing.

**Flame Simulator Keypad Function Instructions:**

## *Keyboard operation of electric fireplace.

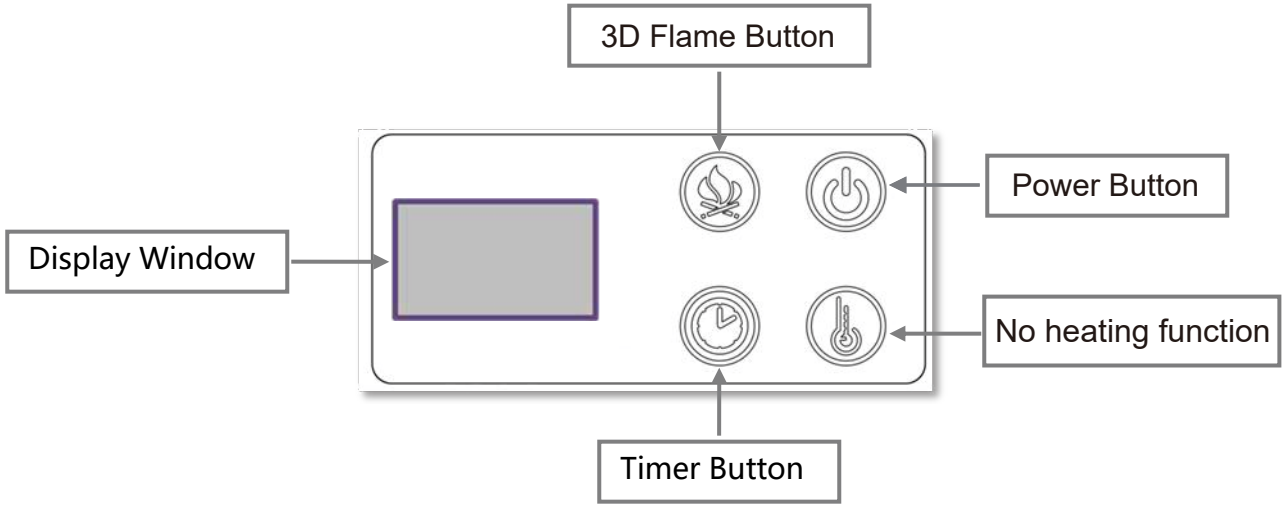


| BUTTON | Operation | Function |
|---|---|---|
|  **Power** | When the Power is turned on, the display shows the ambient temperature and the flame is turned on. | |
|  **Flame** | 1)Short press the flame button to turn on the flame color change;<br>2)Long press to open the child lock, and all key plates cannot be operated; Long press the child lock to unlock, and press the key plate to use normally. | 1)There are L1-L12 color changes, and L13 is the first 12 colors of the loop |
|  **Heater** | No heating function | No heating function |
|  **Timer** | Long press the timer to turn on or off the timer function, the default is 0.5H (timer can reach 8H). | Press timer to select time 0.5H, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H;<br>After 15 seconds of no operation, the setting will be automatically locked, the timer will be displayed, and the screen will be off after 5 seconds;<br>When the timer ends, it will automatically shut down |
|  **Display Window** | Display the numbers flame, carbon bed, heating and timing | |

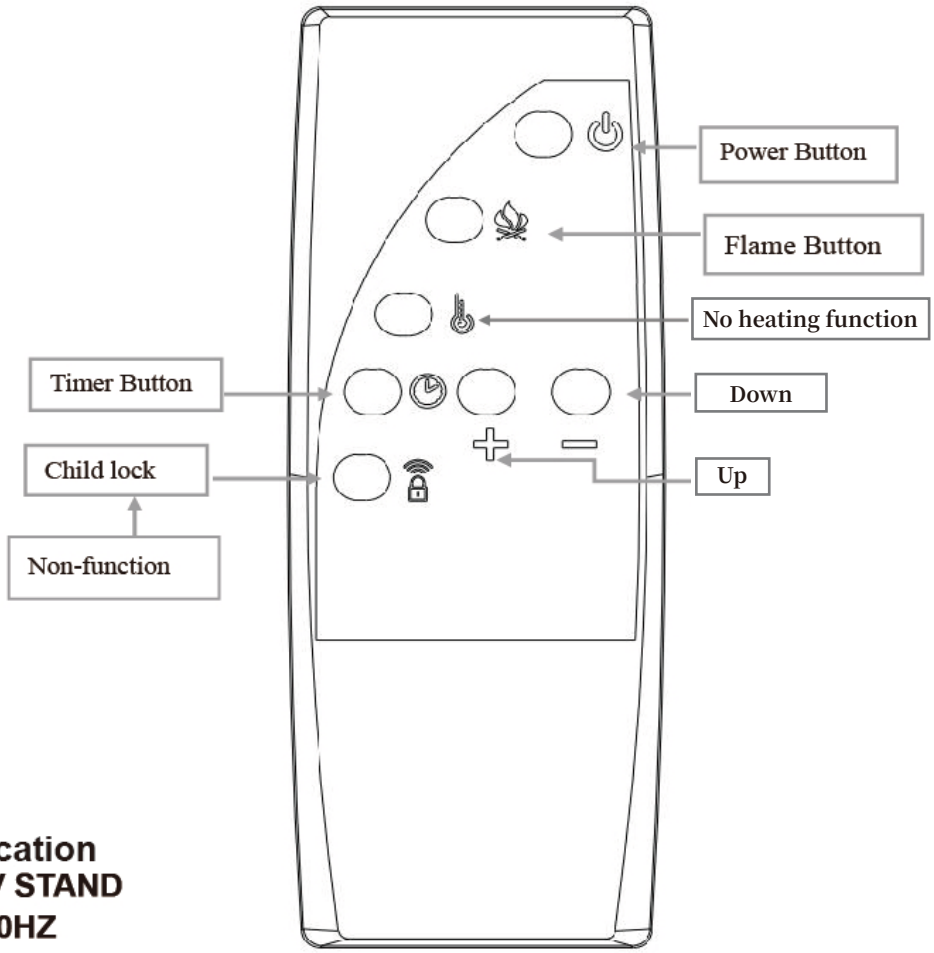


**Technical Specification**
**Product name : TV STAND**
**Supply: 120V AC 60HZ**
**Rared power: 50W**
**Bluetooth: The phone connects to RS01 to play music**

**Press to turn on/off the lights.**

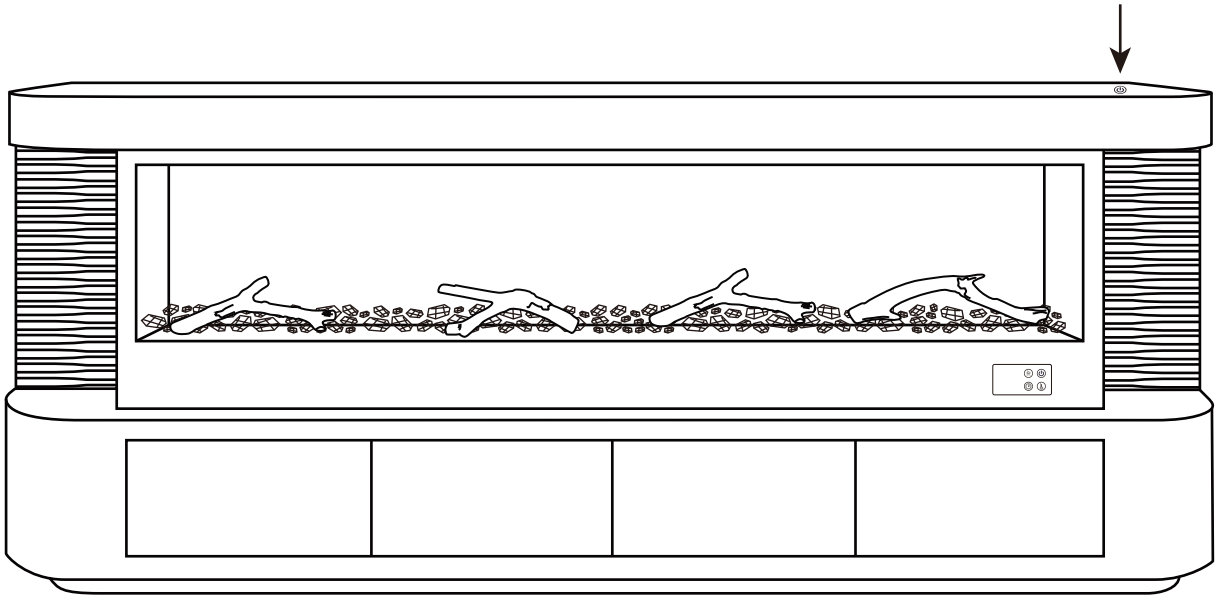

**Note Dimension tolerance ±5%**

# MAINTENANCE

Clean the metal trim using a water-dampened soft, clean cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim.

The motors used on the fan and the flame generator assembly are prelubricated for extended bearing life and require no further lubrication. However, periodic cleaning/vacuuming of the fan/heater and air intake/output vents is recommended. The heater should be cleaned and inspected regularly, depending on conditions, and at least at yearly intervals.

WARNING: Any electrical repairs of this unit should be carried out by a licensed electrician in accordance with national and local codes.

WARNING: Disconnect power by unplugging the power and allowing heater to cool before attempting any maintenance or cleaning to reduce the risk of fire, electric shock, or injury.


NOTE: When the heater is not in use, the heater should be stored in a dry location, away from possible damage. The power cord should be stored properly to avoid contact with hot or sharp objects.

# REMOTE CONTROL

The battery compartment is located on the back end of the remote control.

1. Press and slide the battery cover open.
2. Insert two 1.5V (AAA) batteries (NOT INCLUDED) ensuring they are installed correctly with regard to the polarities (+ and -) marked on the inside of the battery compartment.
3. Replace the battery cover.

NOTE: The battery should be removed if the product is to be left unused for a long time.

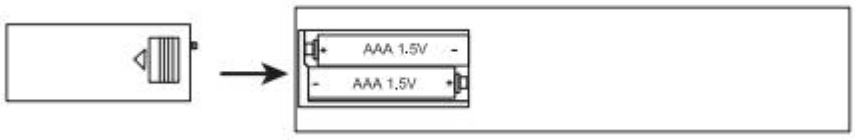


When replacing the batteries, replace both batteries at the same time with new batteries of the correct type.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nicad, Nimh, etc) batteries.