# Assembly Instructions

**Caution : You must read this before you proceed**

## Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.

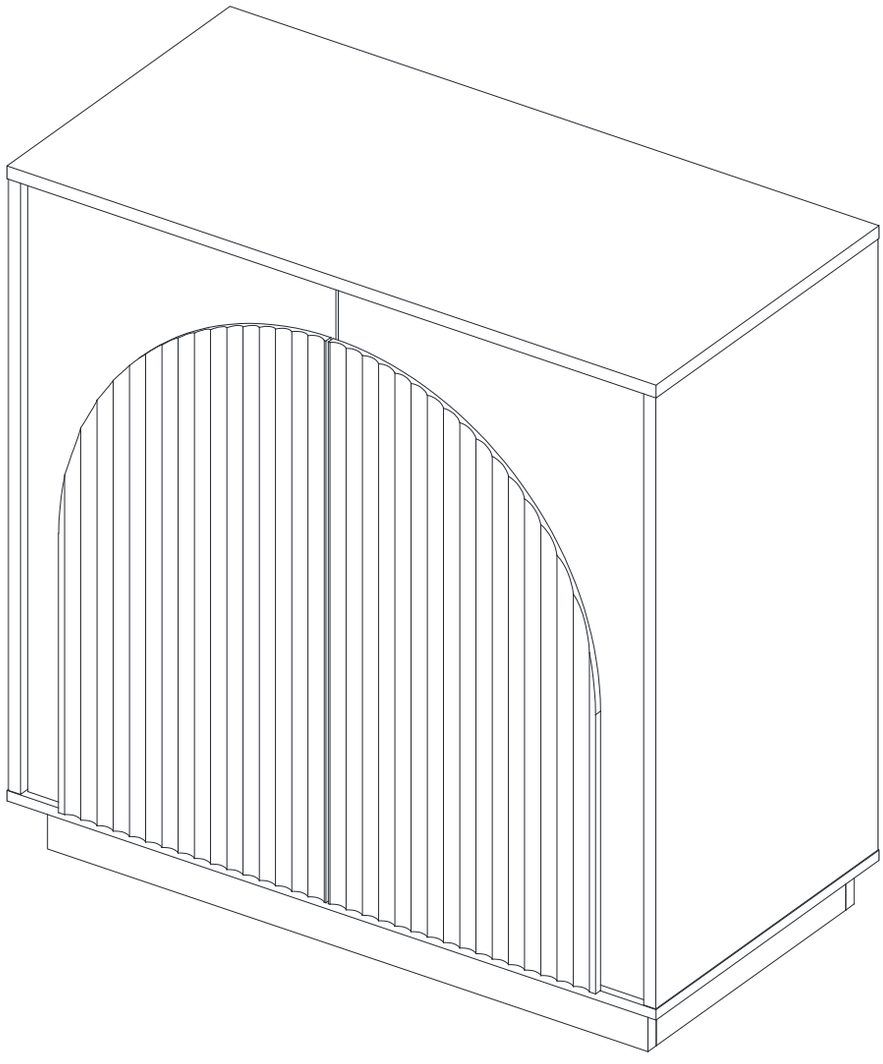


- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

# ASSEMBLY INSTRUCTION
# N767P470555



**WARNING**




This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

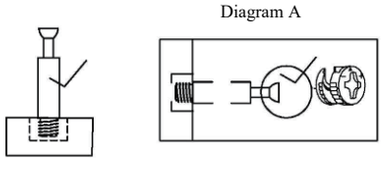
# Before Installation

Important-Please read these instructions fully before starting assembly

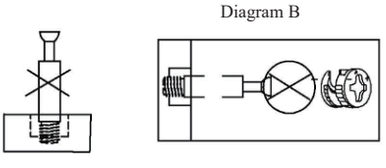
Thank you for purchasing this quality product.Be sure to check all packing materials carefully for small parts,which may have come loose inside the carton during shipment.Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below.Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person;this will make the assembly easier,and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area,small parts could choke if swallowed.·Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

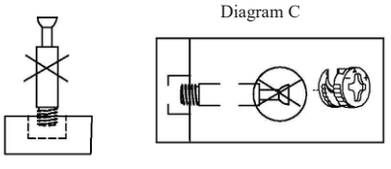
**Cam Lock Assembly Instructions**





Insert Cam Bolt into hole as shown in diagram A.



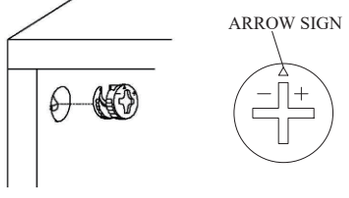

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.



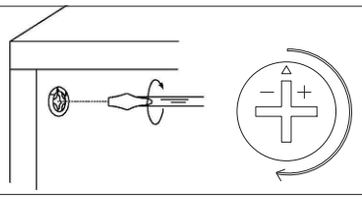

Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C,as this will cause the Cam Lock to be too loose,and not interlock properly.



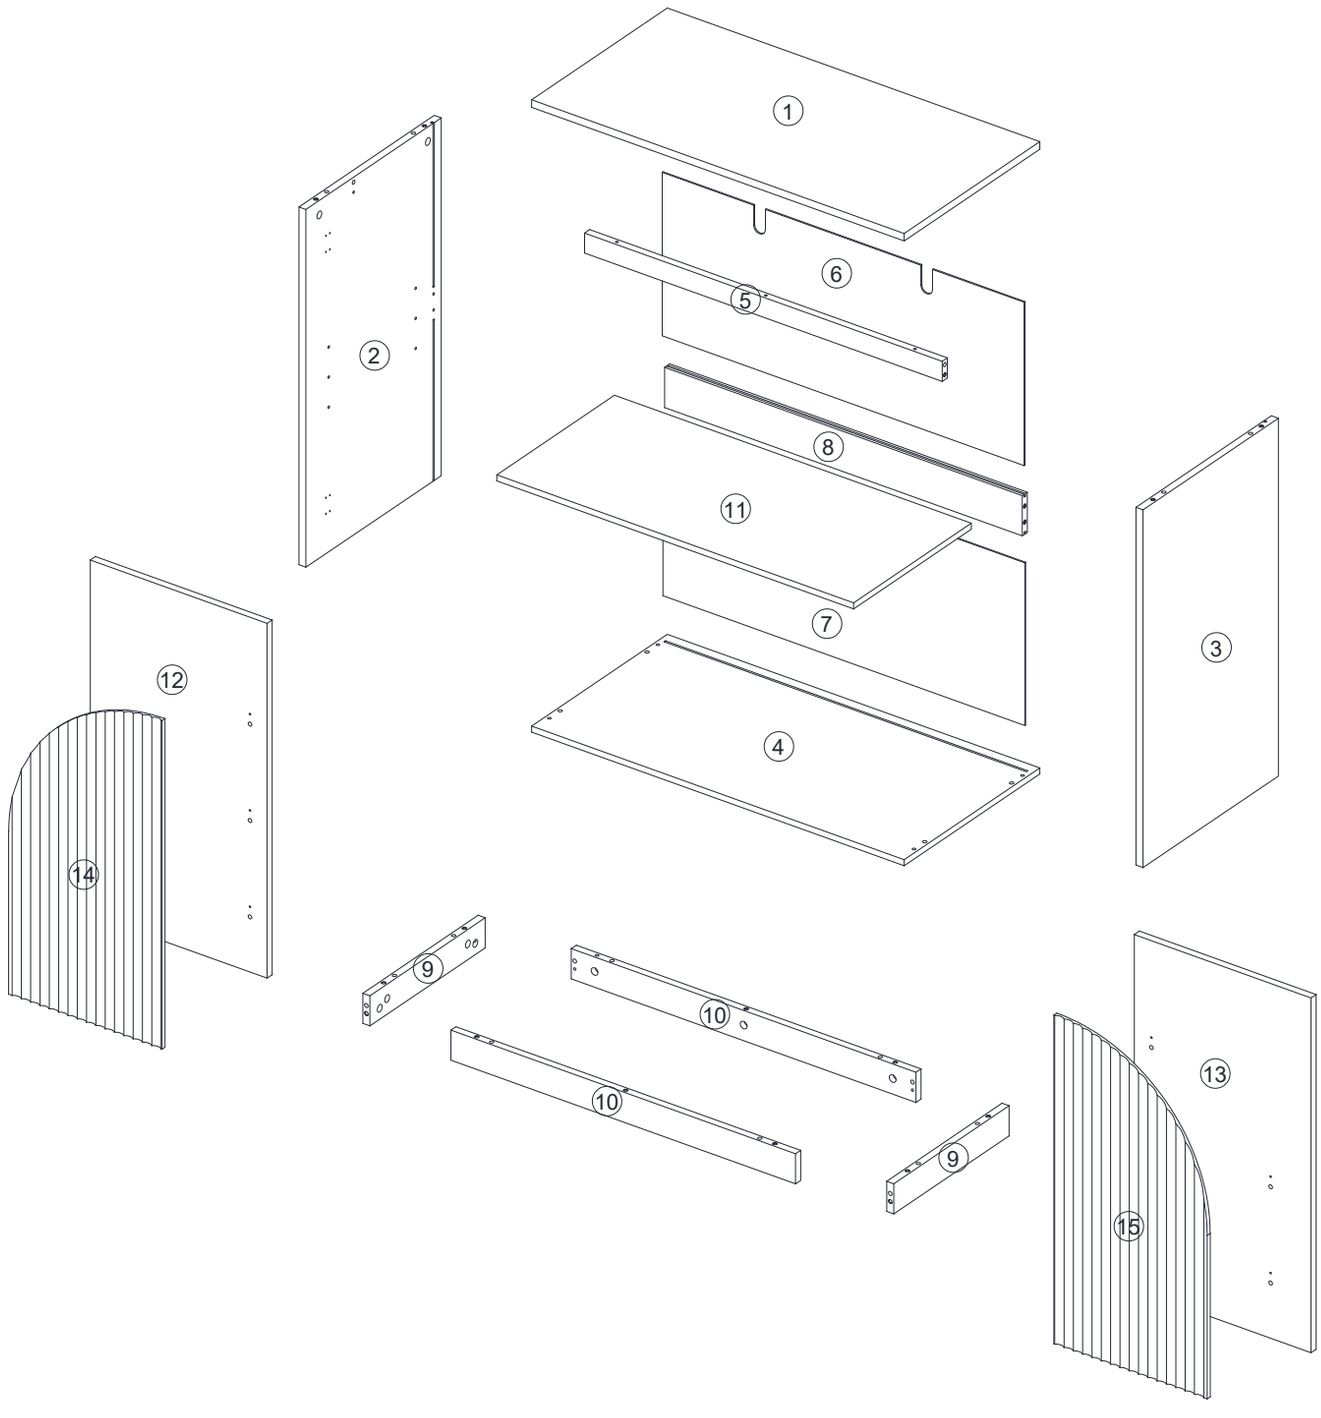
Connect the panels together.



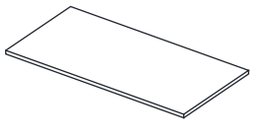


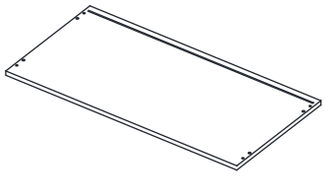
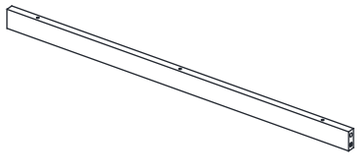
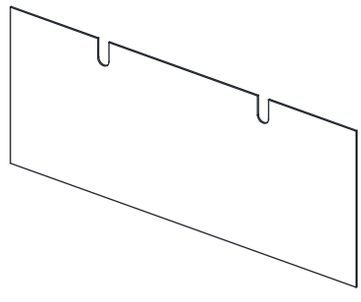
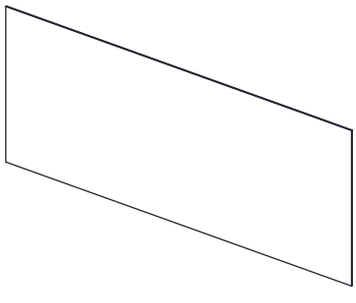
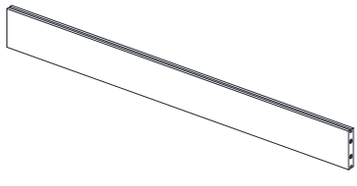
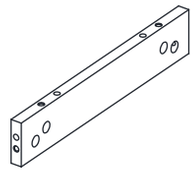
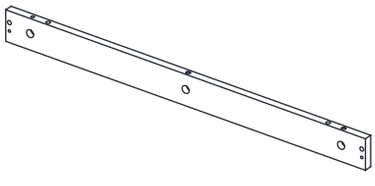
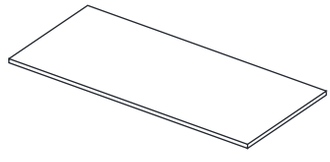
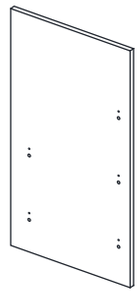
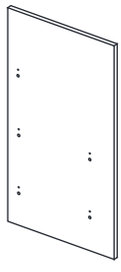


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.







To tighten the Cam Lock,turn it clockwise on half a turn with a flat screwdriver.
*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.


1
2
3
4
5
6
7
8
9
10
10
9
11
12
13
14
15

# Part list

| | | |
|---|---|---|
|  |  |  |
| ① x 1 | ② x 1 | ③ x 1 |
|  |  |  |
| ④ x 1 | ⑤ x 1 | ⑥ x 1 |
|  |  |  |
| ⑦ x 1 | ⑧ x 1 | ⑨ x 2 |
|  |  |  |
| ⑩ x 2 | ⑪ x 1 | ⑫ x 1 |
|  |  |  |
| ⑬ x 1 | ⑭ x 1 | ⑮ x 1 |

# Hardware list

| | | | | | |
|---|---|---|---|---|---|
|  M6x35 |  Ø15x10mm |  Ø8x30mm |  Ø4x25mm |  |  Ø4x12mm |
| A x 24+2 | B x 24+2 | C x 22+2 | D x 10+1 | E x 2 | F x 2 |
|  Ø3x12mm |  |  Ø4x40mm |  Ø7x40mm |  M4 |  |
| G x 2 | H x 1 | I x 5 | J x 4 | K x 1 | L x 4 |
|  |  Ø3.5x14mm |  |  |  |  Ø8x20mm |
| M x 8 | N x 24+2 | O x 2 | P x 2 | Qx 4 | Rx 10+1 |
|  Ø3x16mm |  | | | | |
| S x 10+1 | T x 4 | | | | |

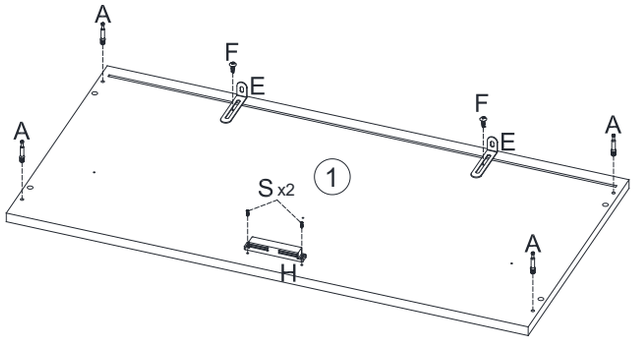
## Step 1

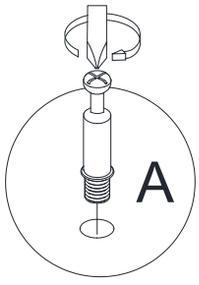
1. Attached Eccentric rod A*4 with Part(1)

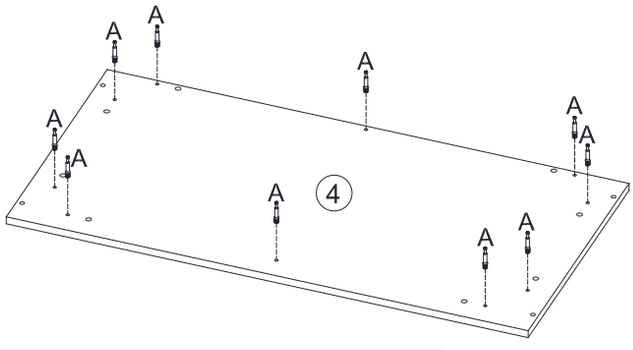
2.Attached L-Bracket E *2 and fix it by Screws F* 2.



3.Attached Doorstop H and fix it by Screws S*2.

4.Attached Eccentric rod A*10 with Part(4)



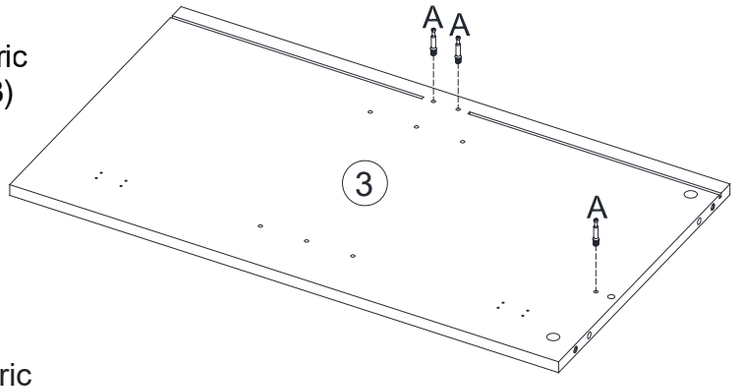



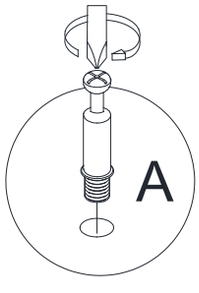




| A x14 | E x2 | F x2 | S x2 | H x1 |
|---|---|---|---|---|
|  |  |  |  |  |

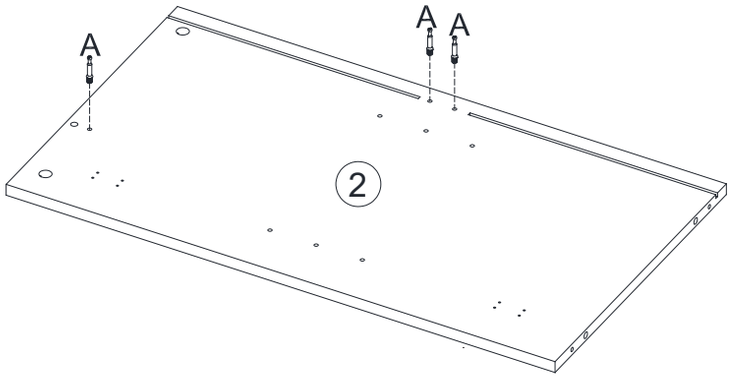
## Step 2


1.Attached Eccentric rod A*3 with Part(3)



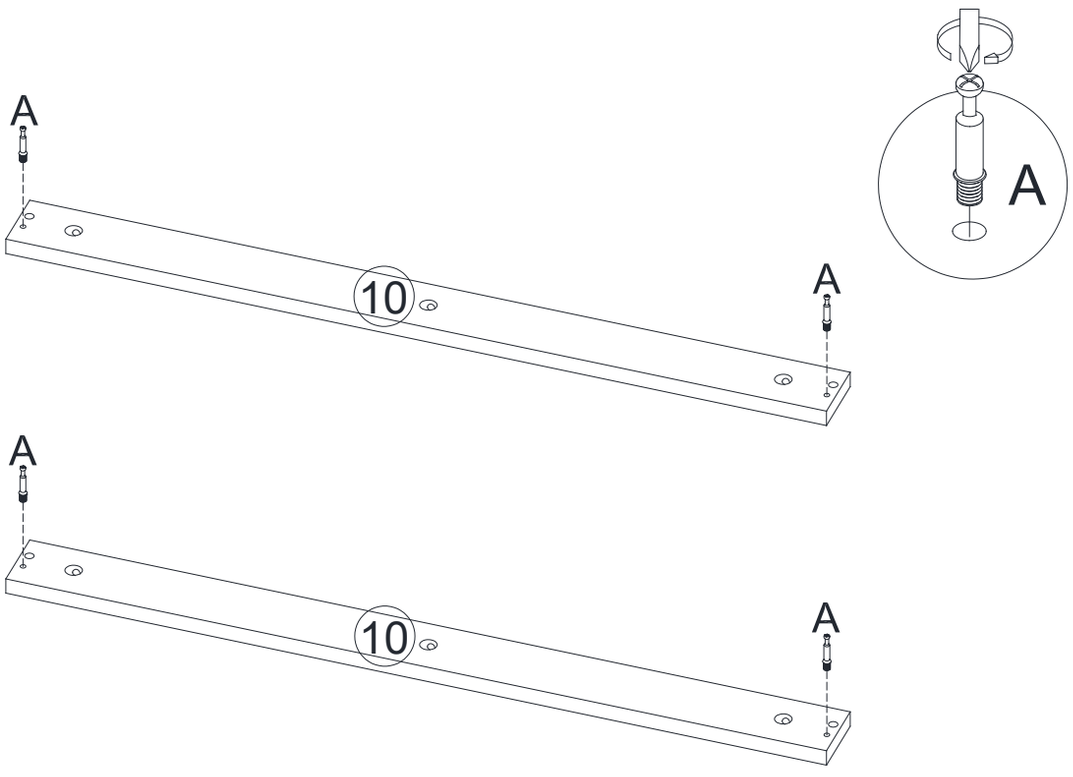




2.Attached Eccentric rod A*3 with Part(2)





| A x6 |
|---|
|  |

## Step 3

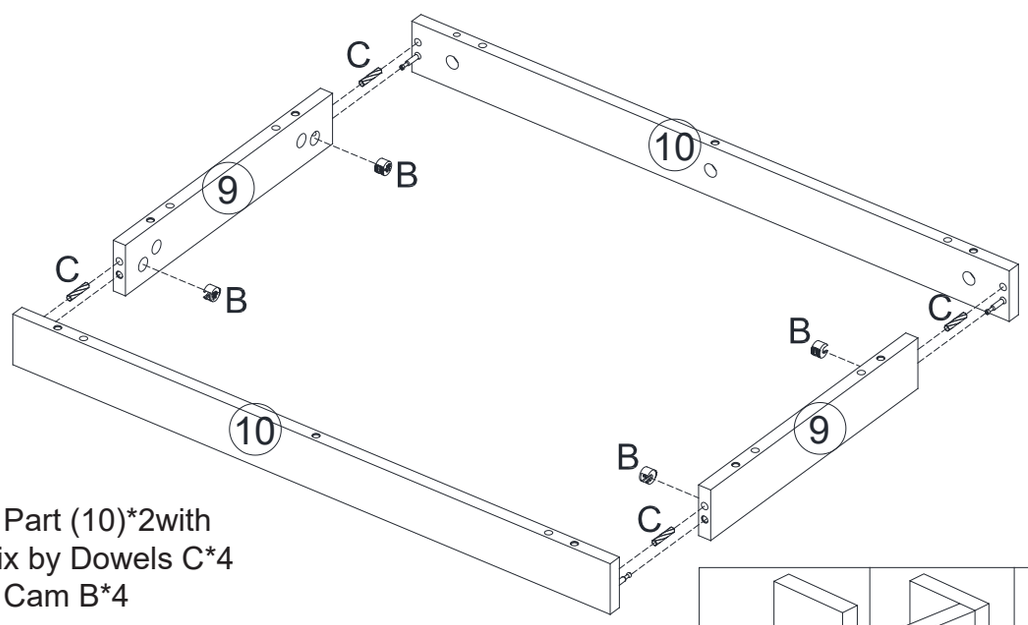



| A | x4 |
|---|---|

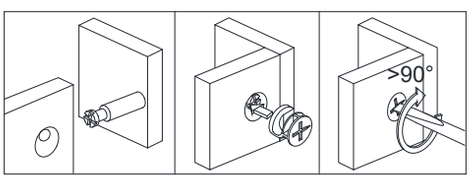


1.Attached Eccentric rod A*2 with Part(10)
2.Repeat the above step.


## Step 4



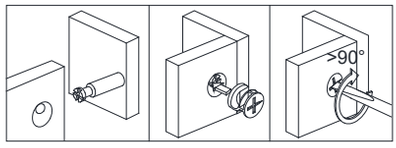

1.Attached Part (10)*2with
Part (9)*2,fix by Dowels C*4
&Eccentric Cam B*4

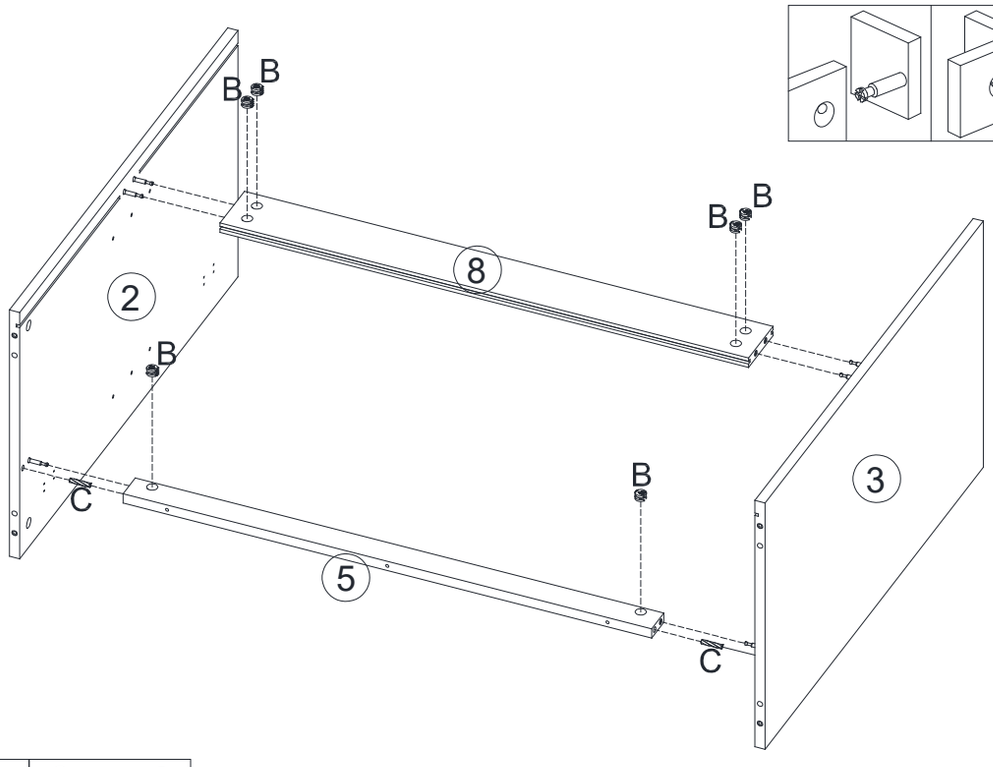



| B | x4 | C | x4 |
|---|---|---|---|



## Step 5

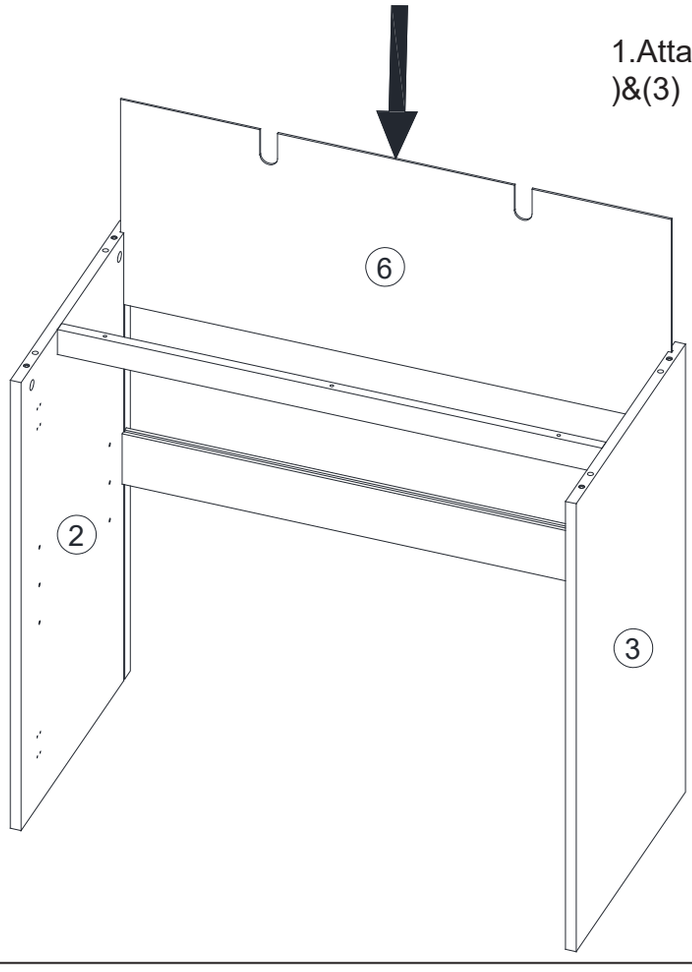



| B x6 | C x2 |
|---|---|
|  |  |

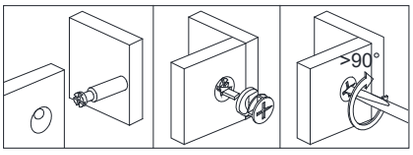
1.Attached Part (2)&(3)with Part (5)(8),fix by Dowels C*2&Eccentric Cam B*6

## Step 6

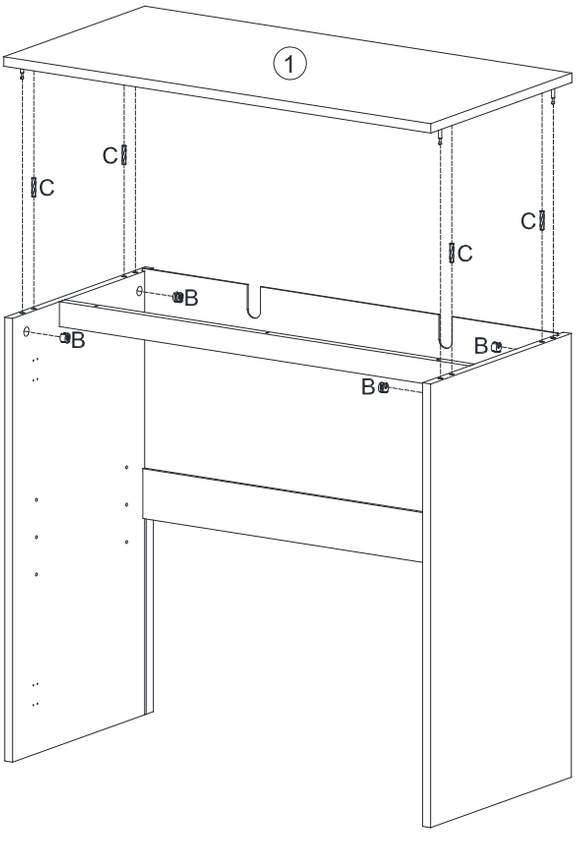


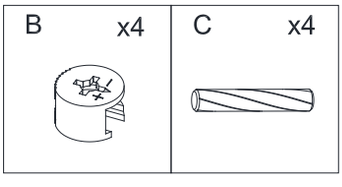

1.Attached Part (6)with Part(2 )&(3)

## Step 7



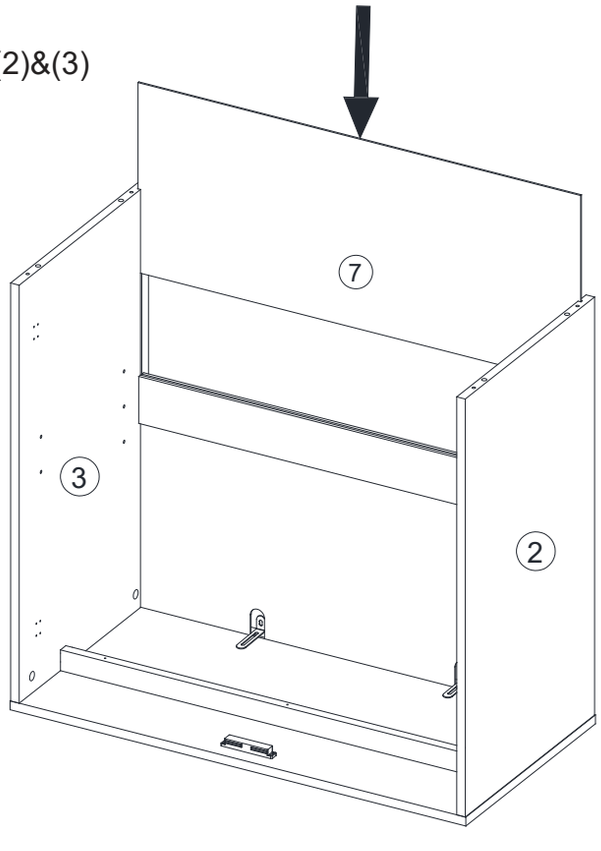

1.Attached Part (1)with Part(2)&(3),fix by Dowels C*4&Eccentric Cam B*4




## Step 8

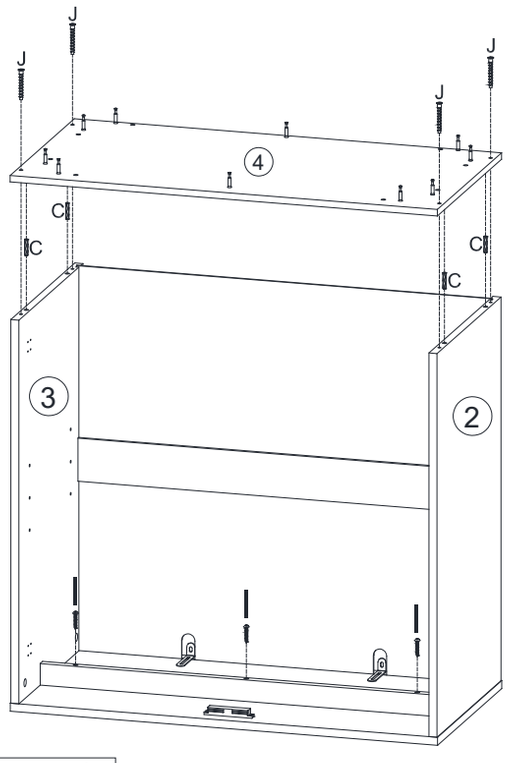
1.Attached Part (7)with Part(2)&(3)

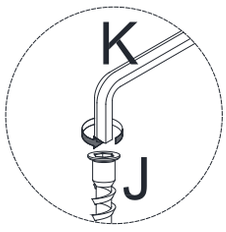




## Step 9

1.Attached pre-assembly Part(2)&(3) with Part(4)and fix them by Dowels C*4& Bolts J*4 .

2.Attached Screws I*3 with Part(5)

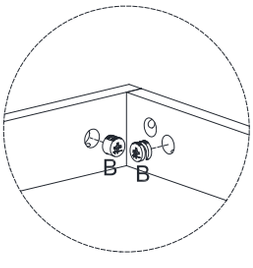


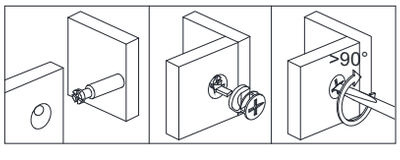



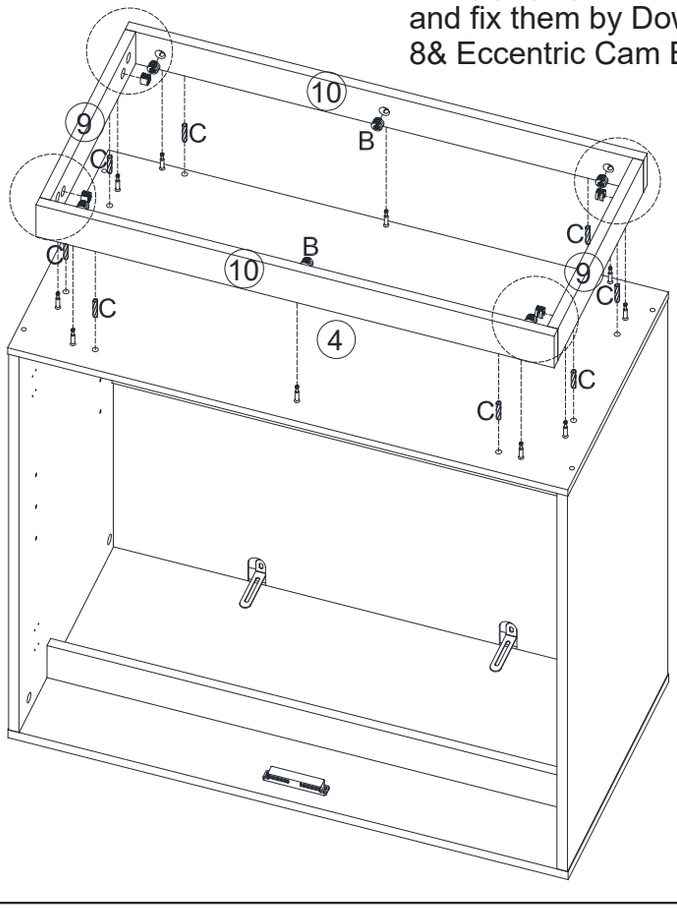

| C x4 | J x4 | I x3 | K x1 |
|---|---|---|---|
|  |  |  |  |

## Step 10

1.Attached pre-assembly Part(9)&(10) with Part(4) and fix them by Dowels C* 8& Eccentric Cam B*10



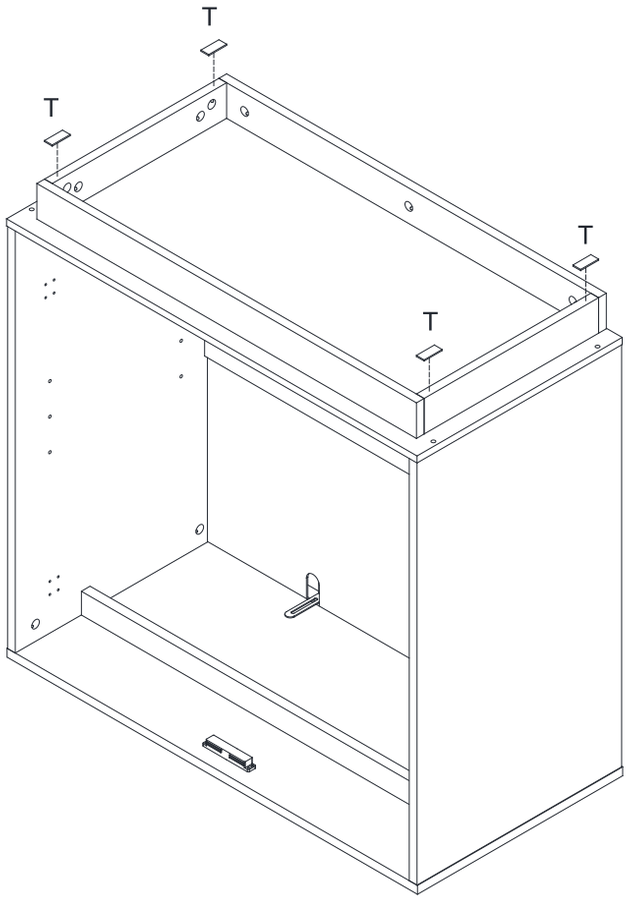



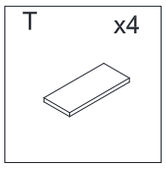




| B x10 | C x8 |
|---|---|
|  |  |

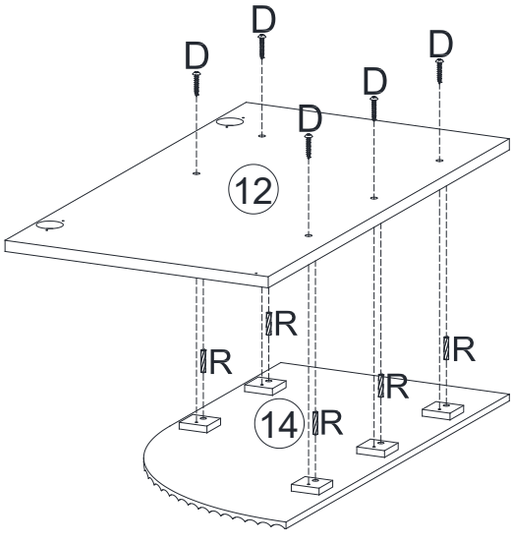
## Step 11

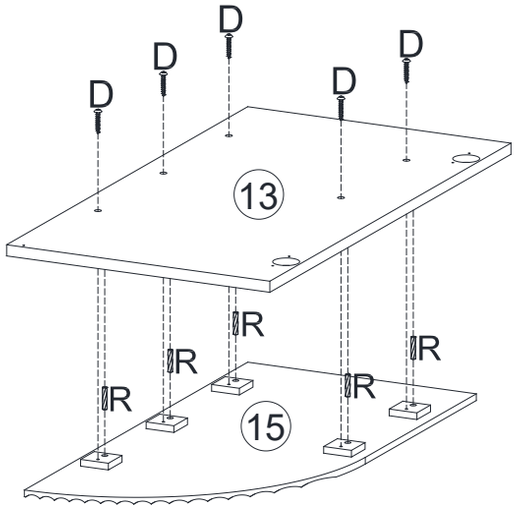
1.Attached
Sponge Pad T*4



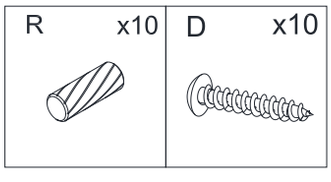




## Step 12

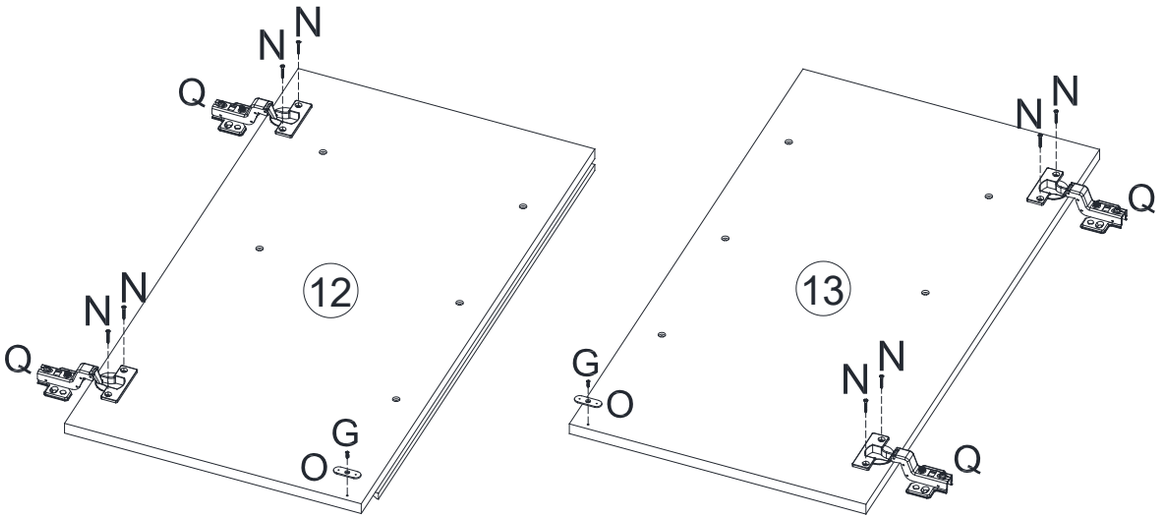



1.Attached Part (14)with Part(12),fix
by Dowels R*5 & ScrewsD*5
2.Attached Part (13)with Part(15),fix
by Dowels R*5 & ScrewsD*5



## Step 13

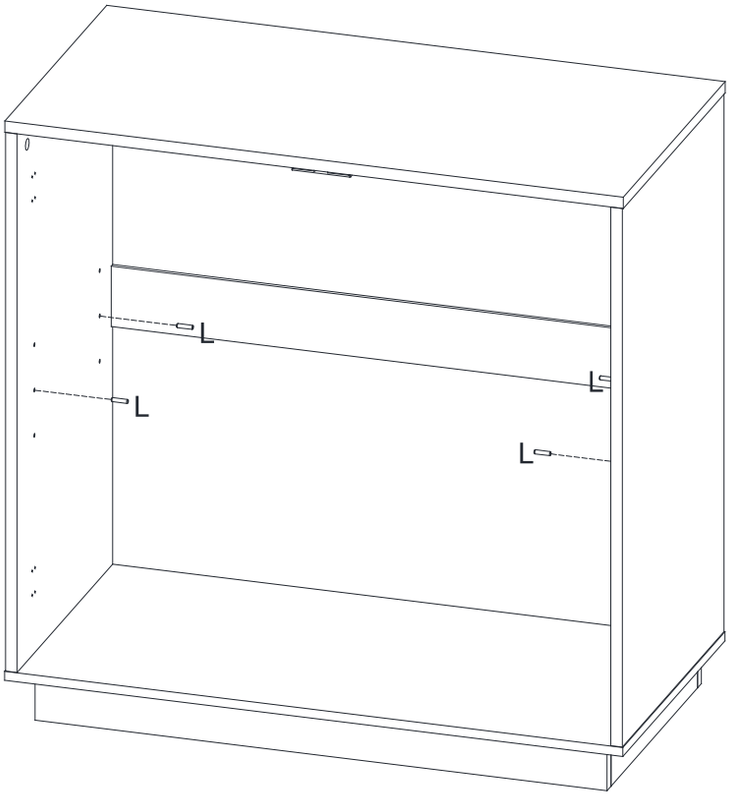



| N x8 | G x2 | O x2 | Q x4 |
|---|---|---|---|
|  |  |  |  |

1.Attached Hinge Q*2 with Part (12), fix by Screws N*4.
2.Attached Hinge Q*2 with Part (13), fix by Screws N*4.
3.Attached washer O*2 with Part( 12 ) &Part (13) and fix them by Screws G*2

## Step 14

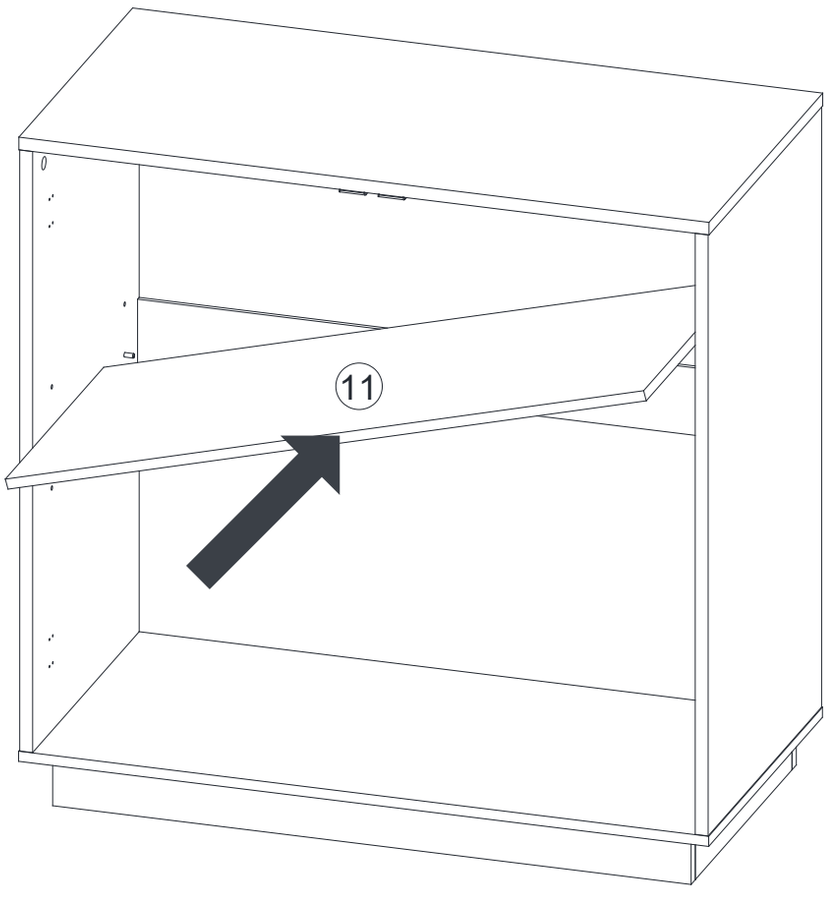
1.Attached Shelf Support L*4.




| L x4 |
|---|
|  |

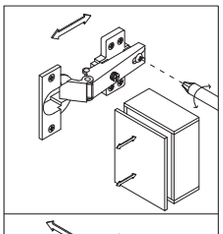
## Step 15

1.Place Part ( 11 )

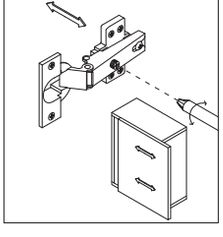



## Step 16

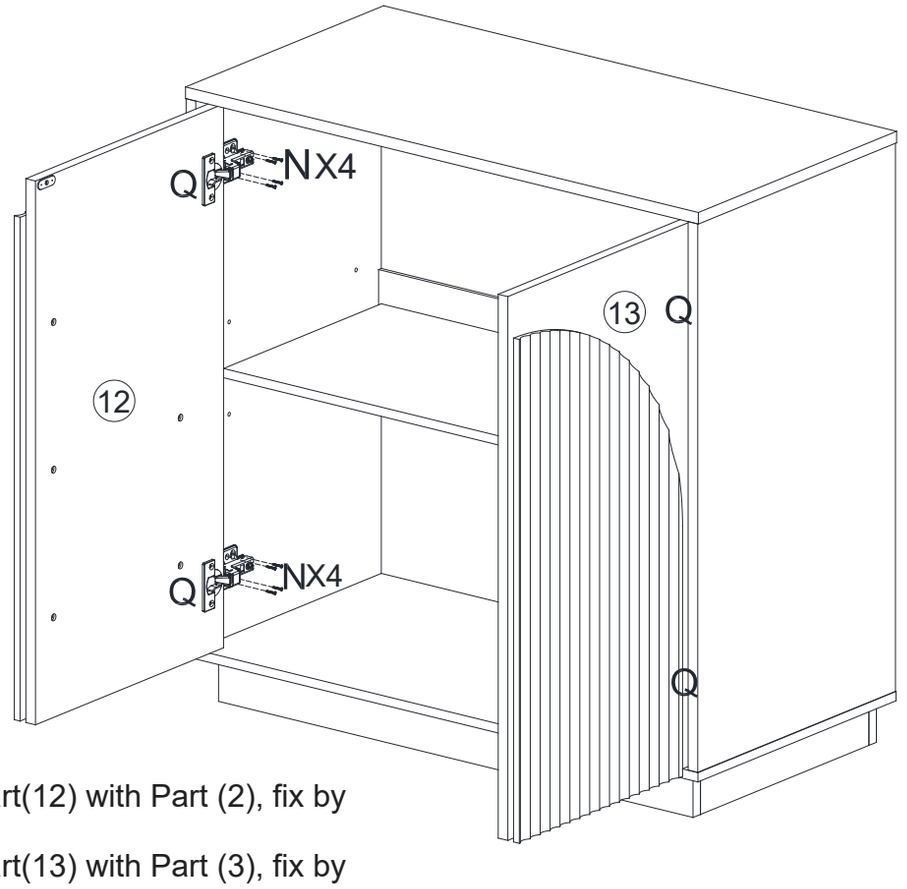
SETTINGS
DOORS



If the hinge holes are not aligned, you can try adjusting the front and rear hinges.



If the door gap is large, you can adjust the hinges left and right

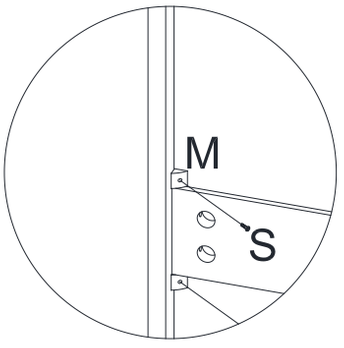



| N | x16 |
|---|---|

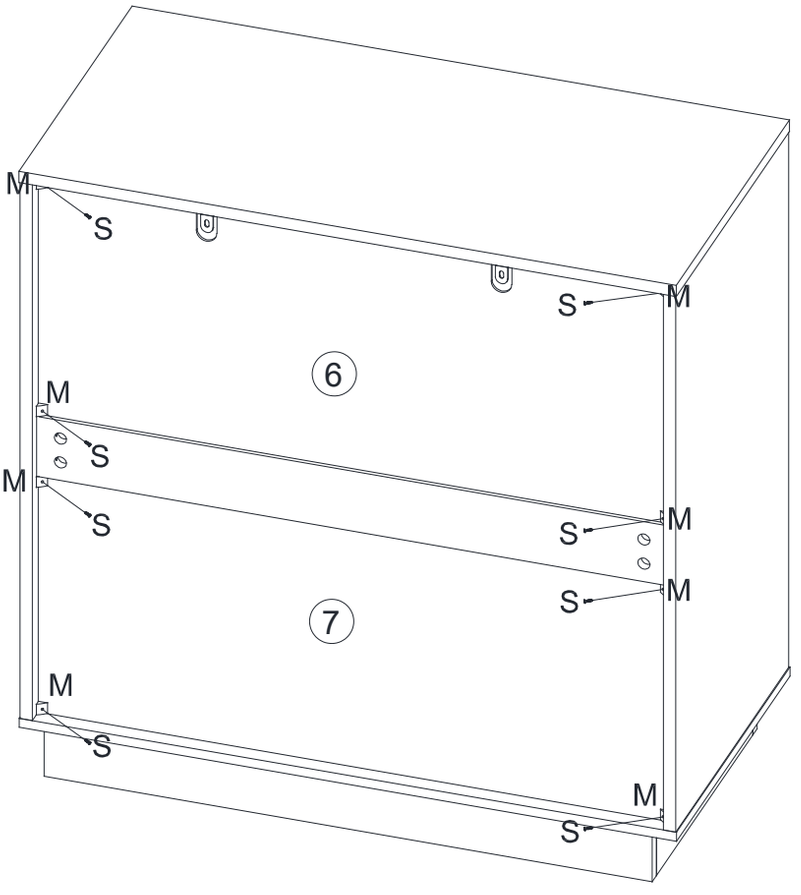


1.Attached Part(12) with Part (2), fix by Screws N*8.
2.Attached Part(13) with Part (3), fix by Screws N*8.

## Step 17

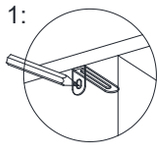


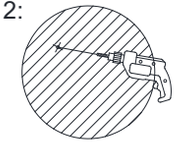

1.Fix Back Clips M*8
by Screws S*8.

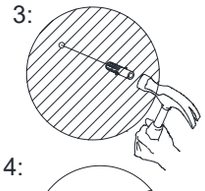


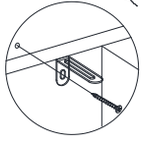

| S x8 | M x8 |
|---|---|
|  |  |

## Step 18

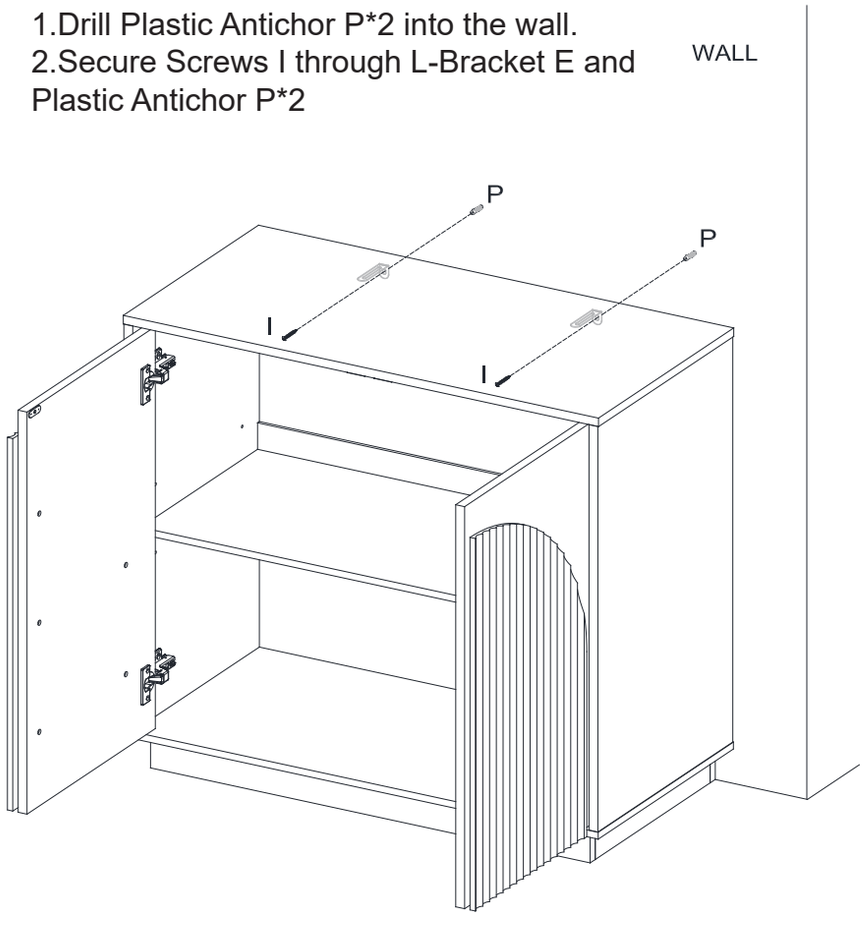







1.Drill Plastic Antichor P*2 into the wall.
2.Secure Screws I through L-Bracket E and
Plastic Antichor P*2




| I x2 | P x2 |
|---|---|
|  |  |