
Barber Chair

OWNER'S MANUAL

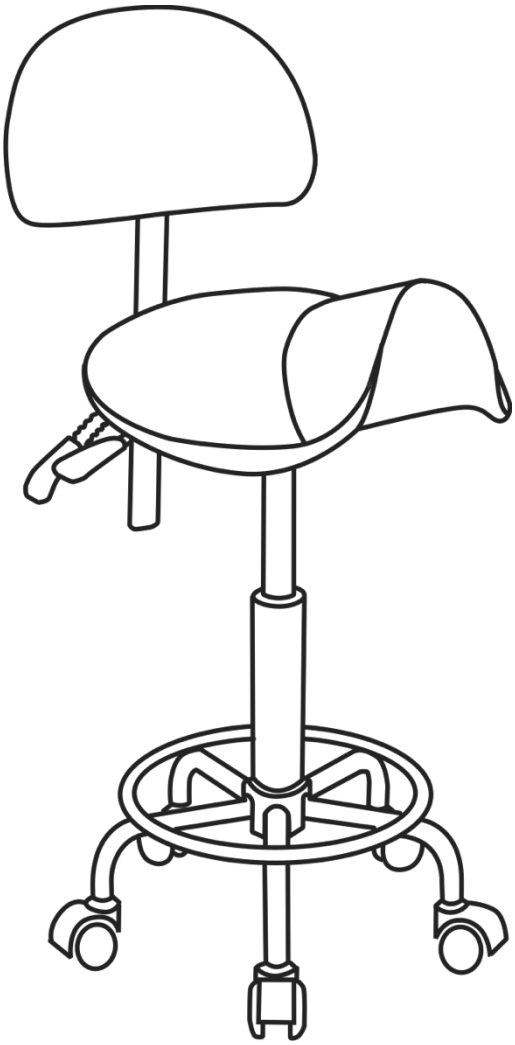

CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Table of Contents

Parts ----------03




Tools ---------- 03

Installation Diagram ----------04

Instructions for Use ---------- 07

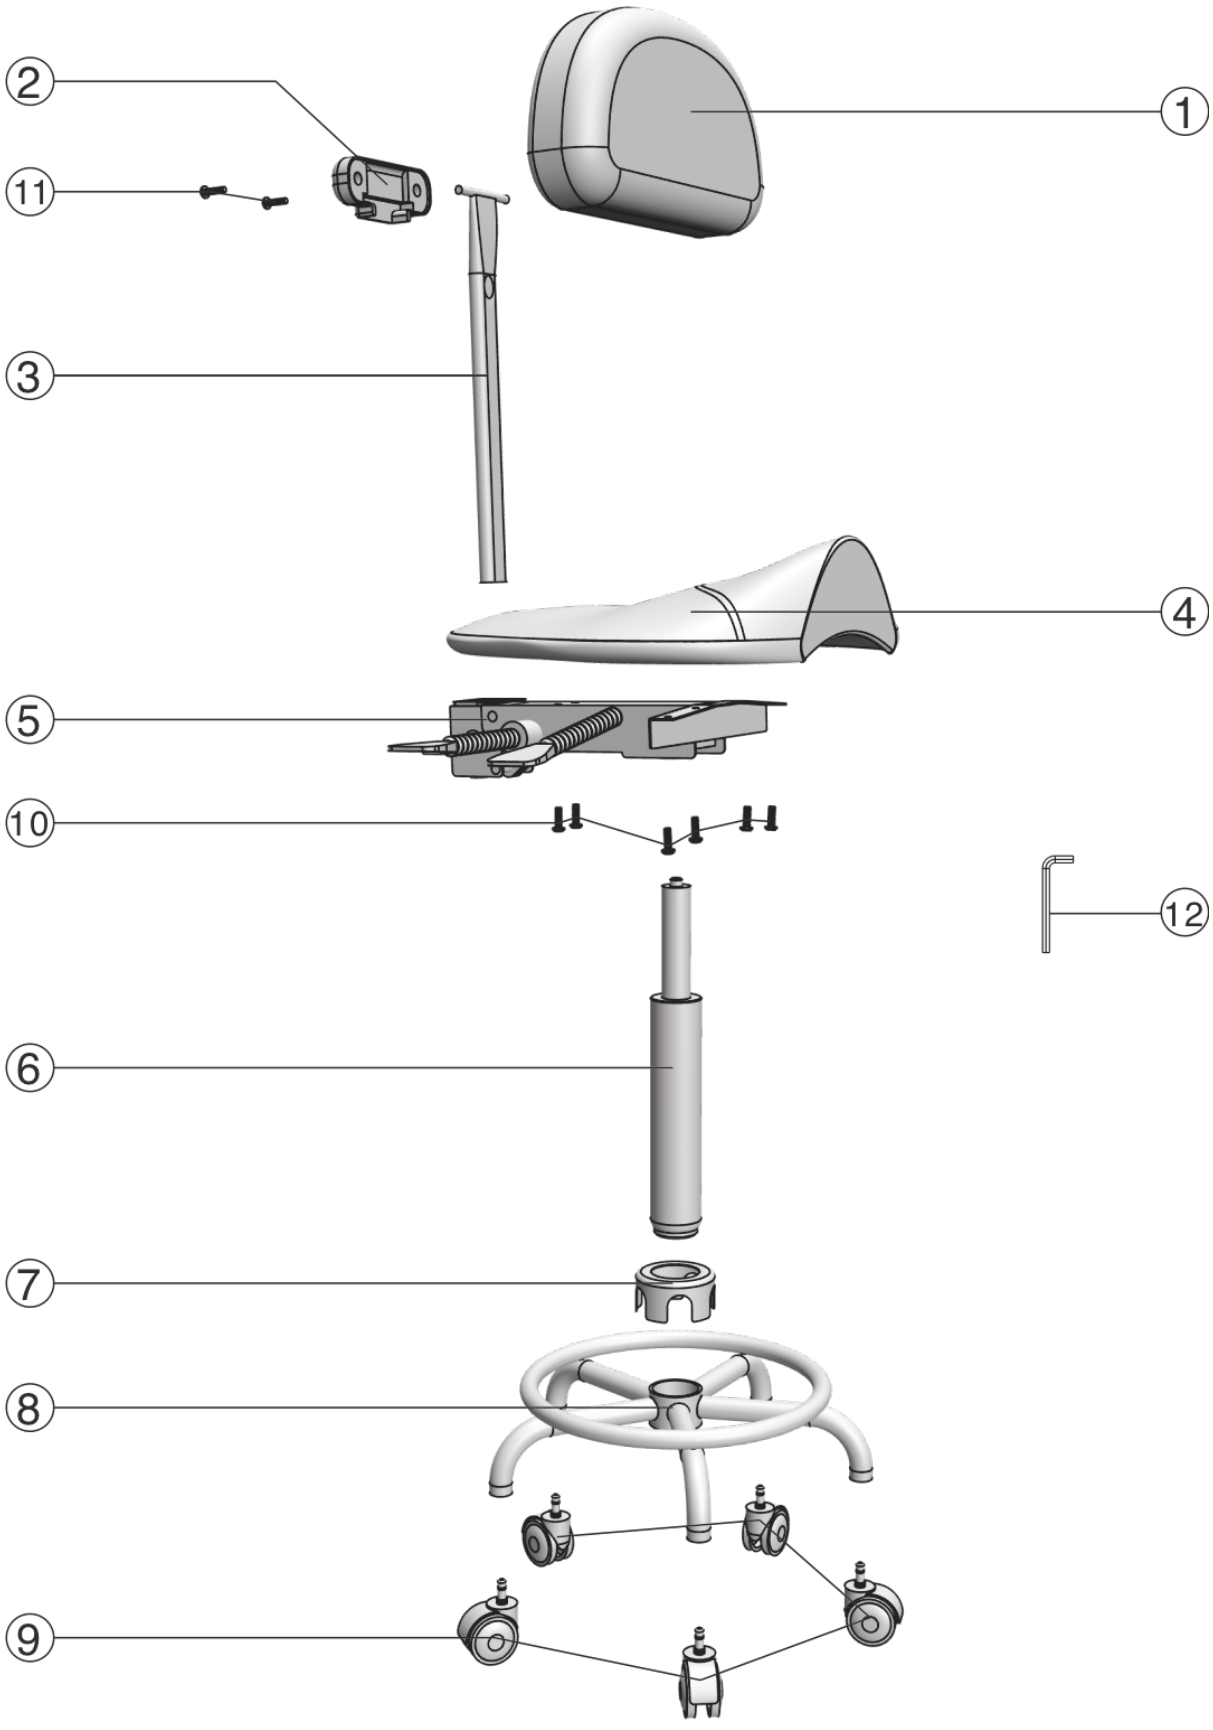
2
1
11
3
4
5
10
12
6
7
8
9

Parts

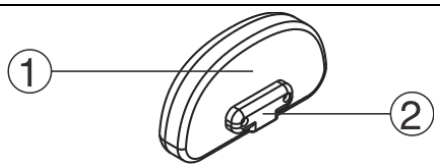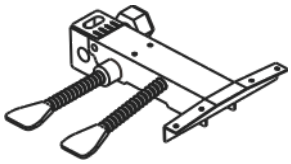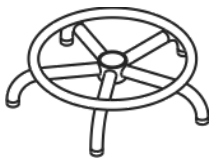Code	Image	Parts Name	Qty(Pcs)
1、2		① Backrest & ② Backrest Cover	1
3		Backrest Rod	1
4		Seat	1
5		Tray	1
6		Aerobar	1
7		Base Cover	1
8		Base	1
9		Caster	5
10		Allen Socket Screw M6*20 (Preinstalled)	6
11		Allen Socket Screw M6*25 (Preinstalled)	2


Tools

Code	Image	Tools Name	Qty(Pcs)
12		Allen Key	1

Installation Diagram


Step One:

Install five Casters ⑨ to the Base ⑧.

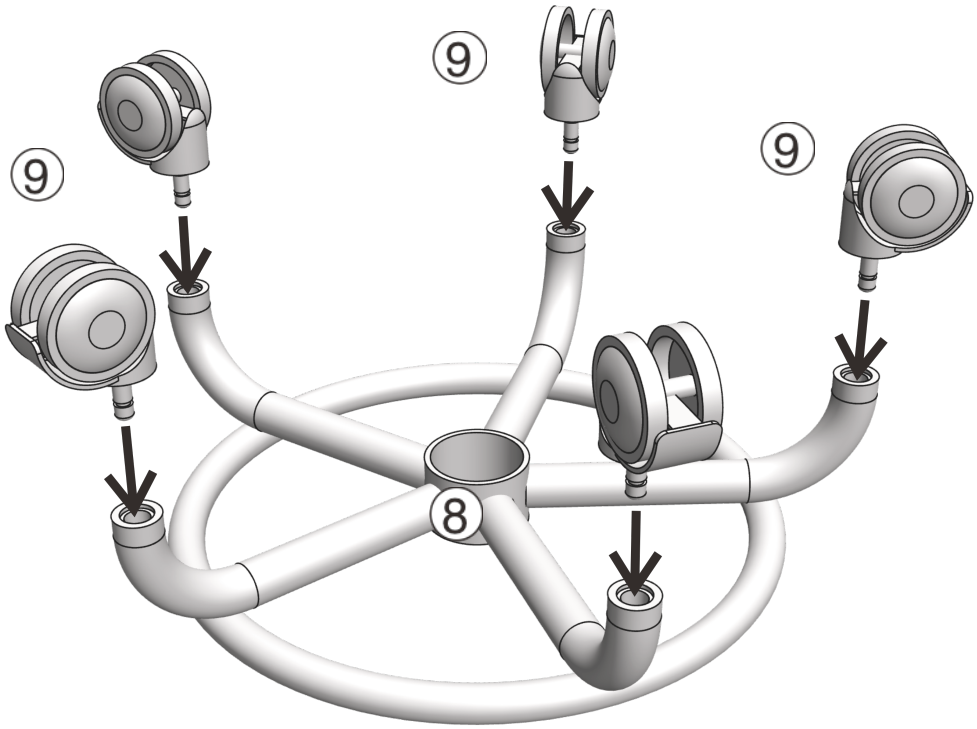

Step Two:


Insert the Aerobar ⑥ into the Base ⑧ and put on the Base Cover ⑦.

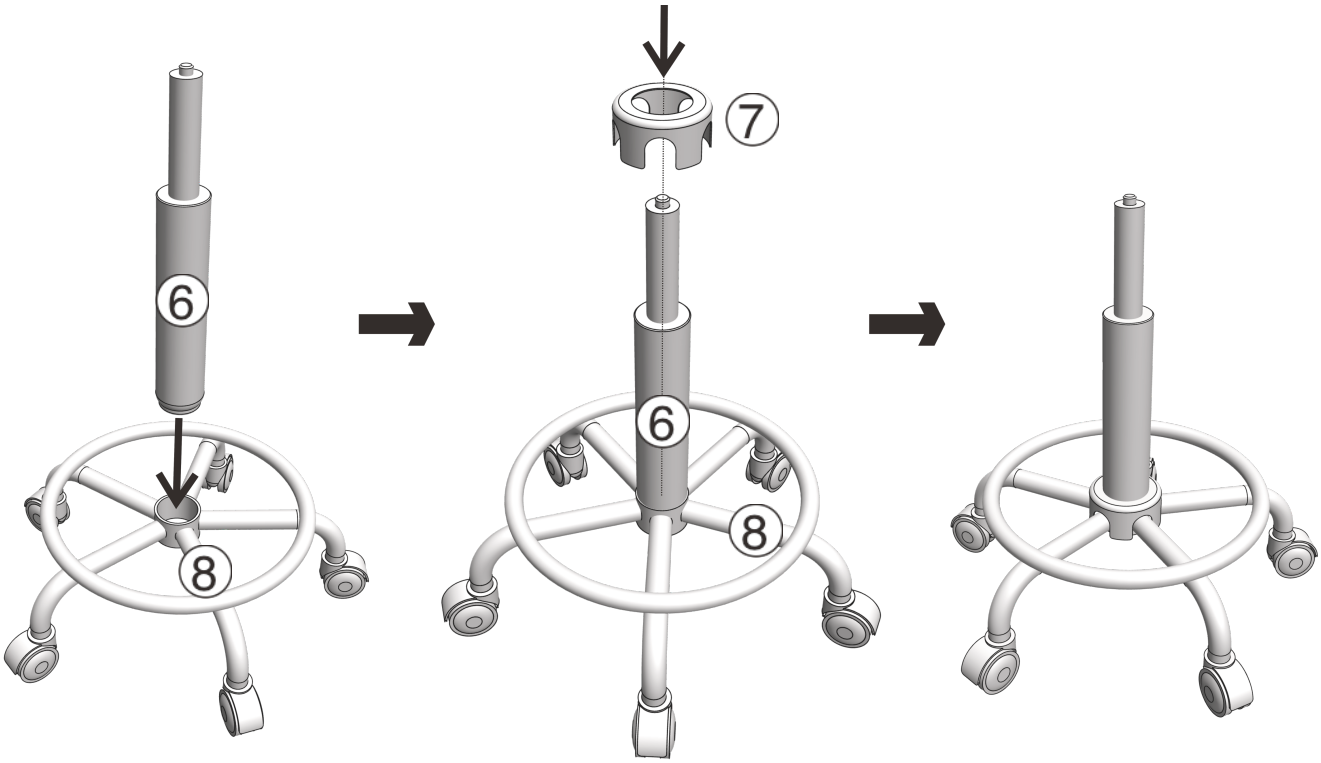

Step Three：

Unscrew the six Allen Socket Screws M6*20 ⑩ from the back of Seat ④.


Install the Tray ⑤ to the back of Seat ④ and fix it with six Allen Socket Screws M6*20 ⑩.

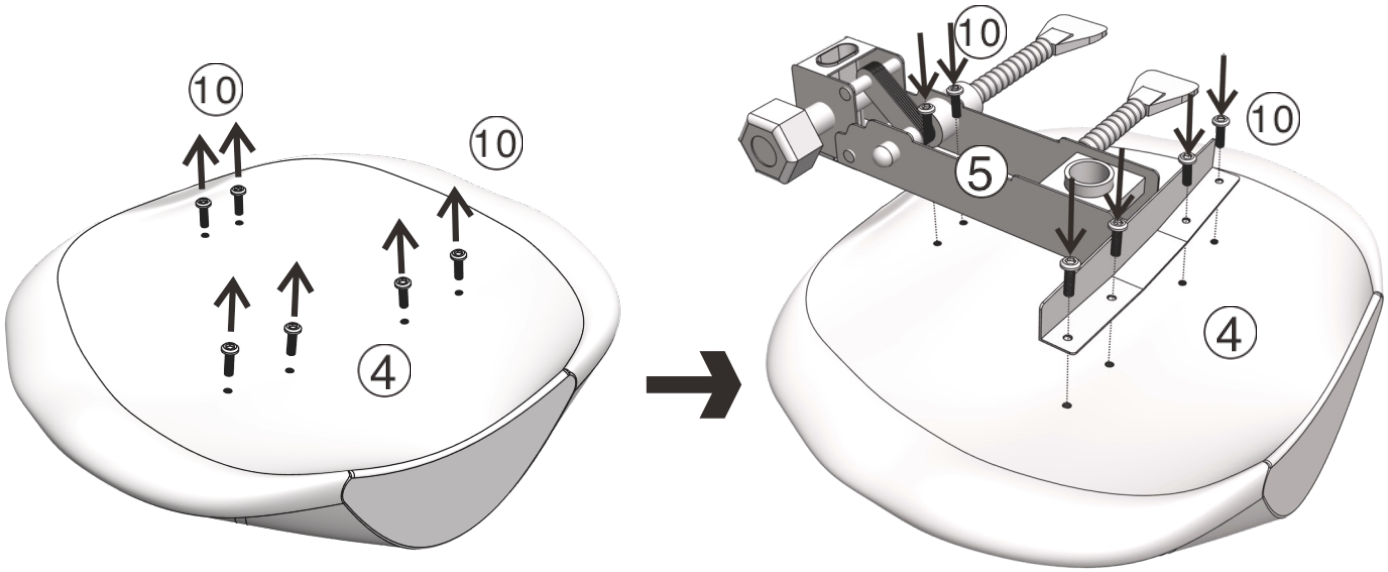

Six Allen Socket Screws M6*20 ⑩ were preinstalled on the back of the Seat ④.

Step Four：

Attach the assembled seat to the Aerobar ⑥.

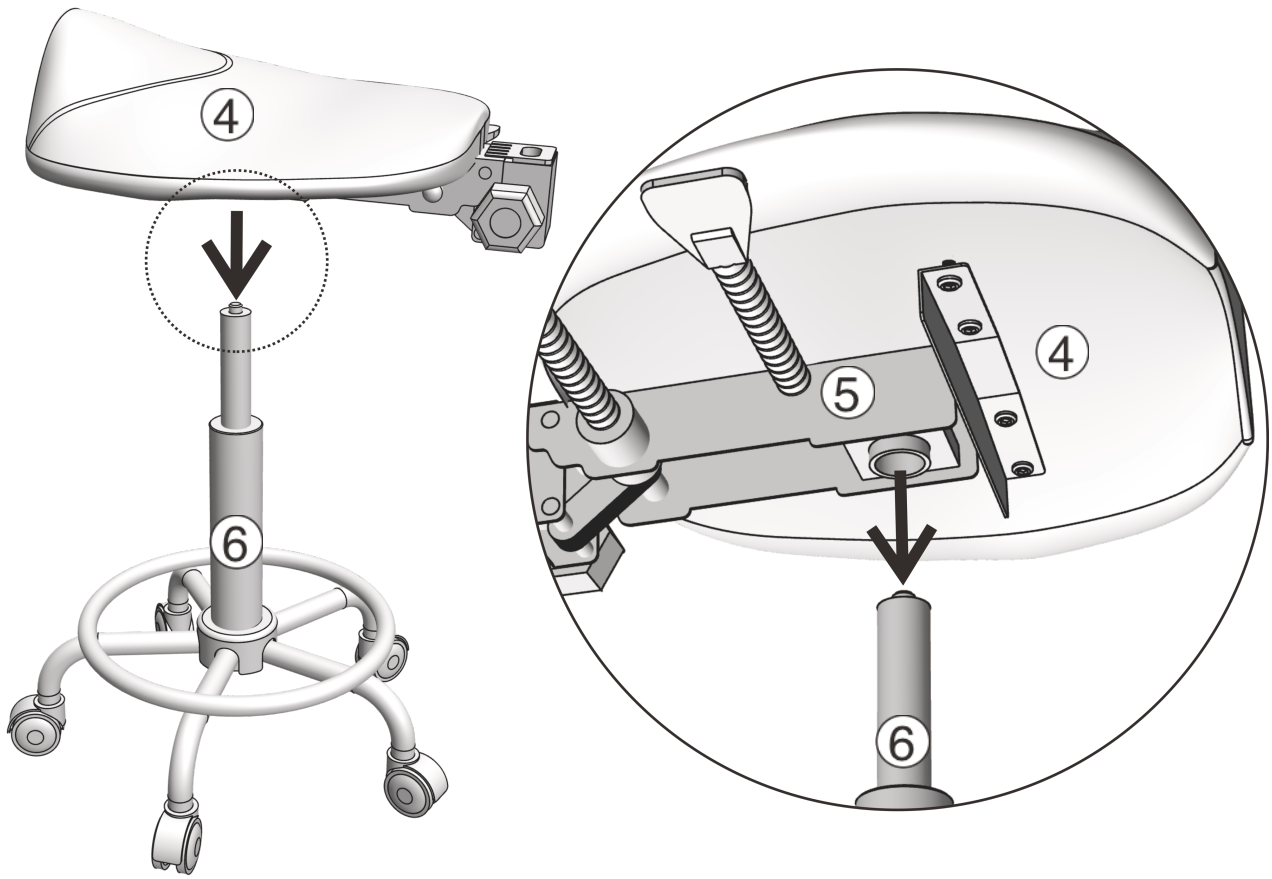


Step Five:

Unscrew the two Allen Socket Screws M6*25 ⑪ from the back of Backrest ① to release the Backrest Cover ②.

Insert the Backrest Rod ③ into the slot of the back of Backrest Cover ②.


Attention to the facing direction of the side with circular indentation on the Backrest Rod.

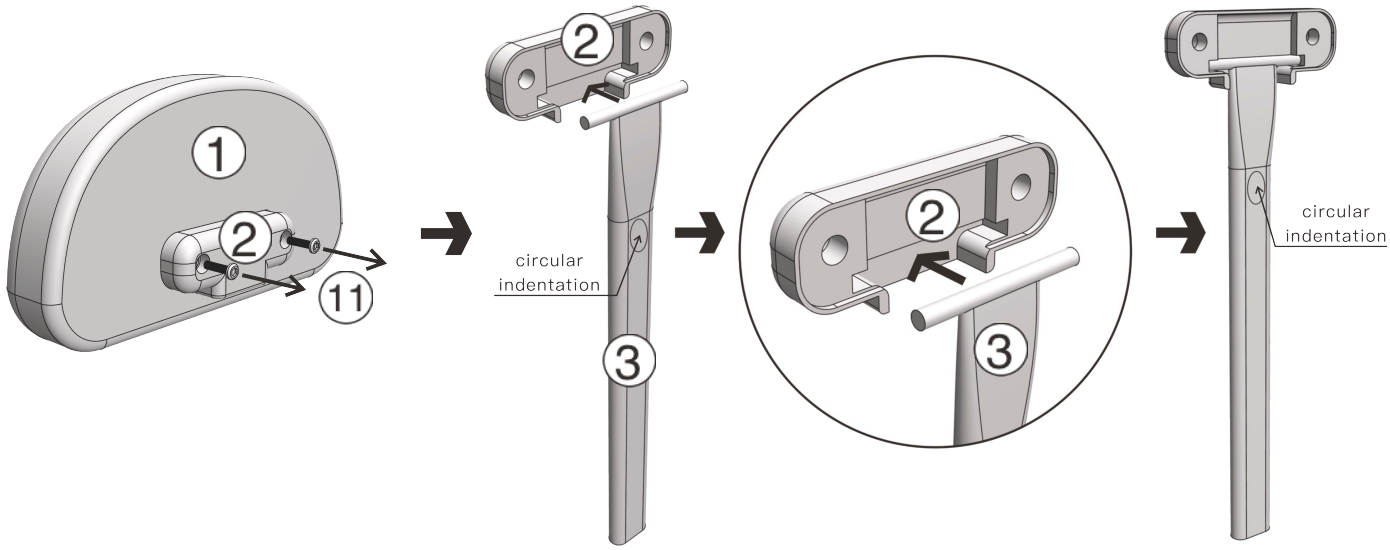

Two Allen Socket Screws M6*25 ⑪ were preinstalled on the back of Backrest ①.

Step Six:


Install the Backrest Cover ② with Backrest Rod ③ to the back of Backrest ① and secure them with two Allen Socket Screws M6*25 ⑪.

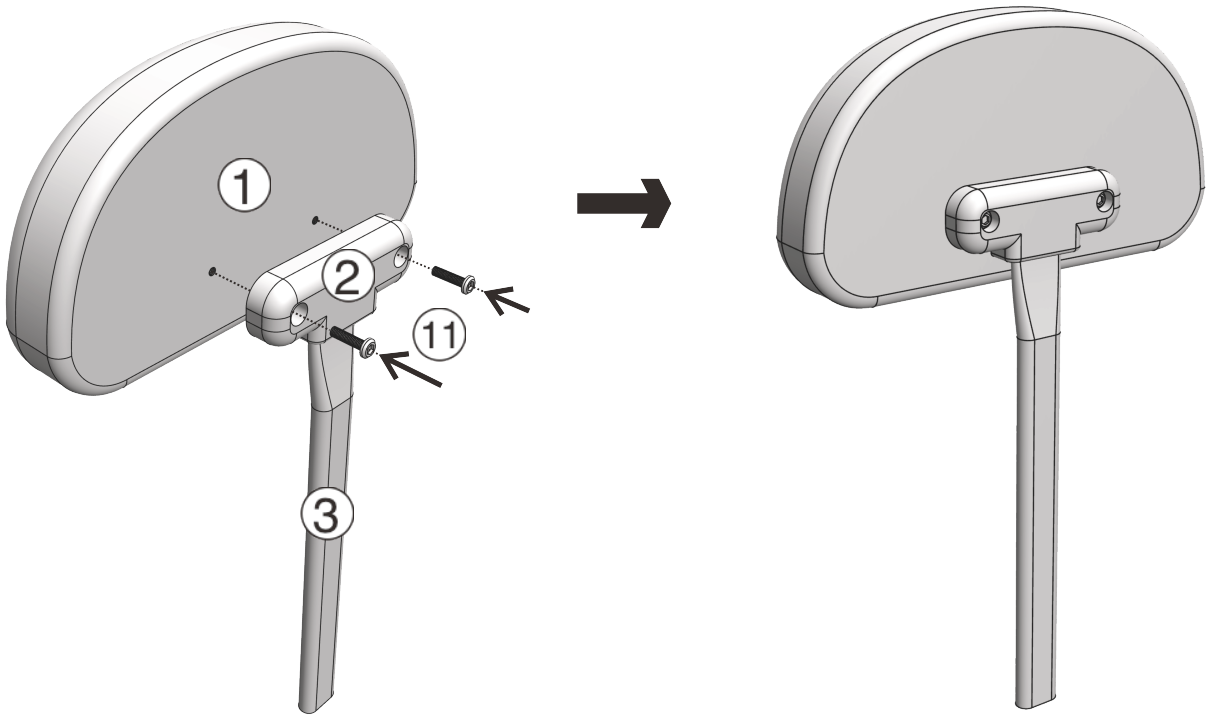


Two Allen Socket Screws M6*25 ⑪ were preinstalled on the back of Backrest ①.

Step Seven：

Insert the Backrest Rod ③ to the Tray ⑤ and fix it by rotating the knob on the Tray.

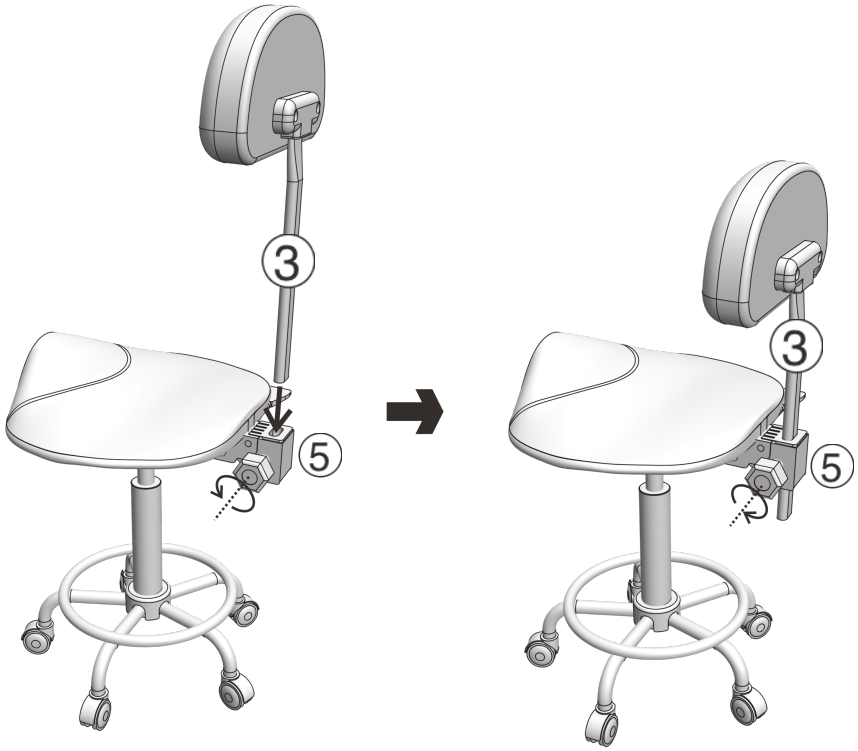


Instructions for use

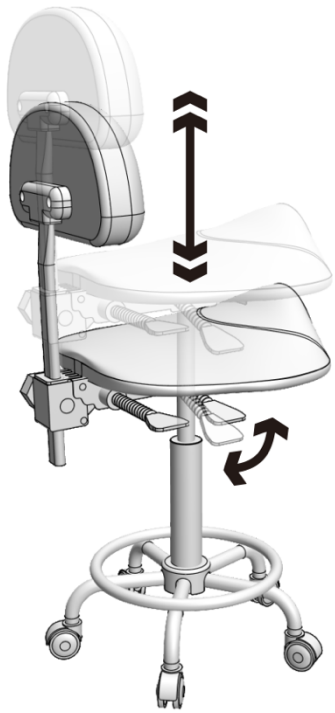

Height of Seat can be adjusted by toggle the handle in the diagram.



Angle of backrest can be adjusted by toggle the handle in the diagram.

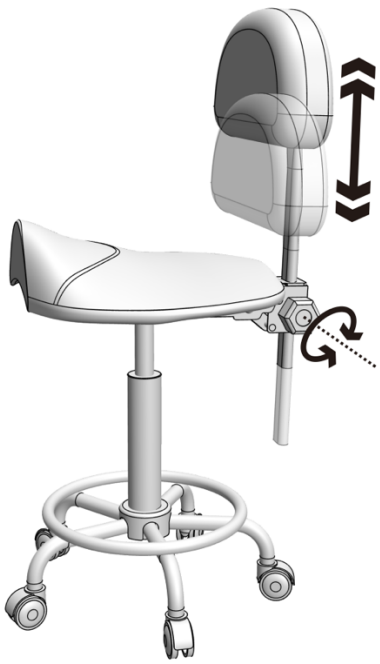

Height of backrest can be adjusted by rotating the knob on the tray.