Assembly Instructions

Sofa	Arm	SPACER	Pillow	Metal Leg	Wrench	Screw
				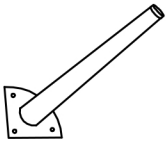		
Ax1	Bx2	Cx12	Dx2	Ex4	Fx1	Gx12

Step 1

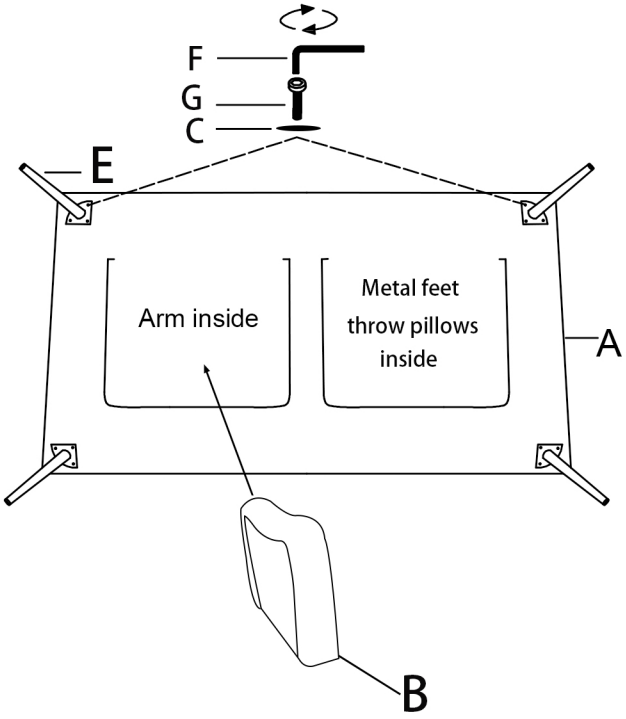

Step 2

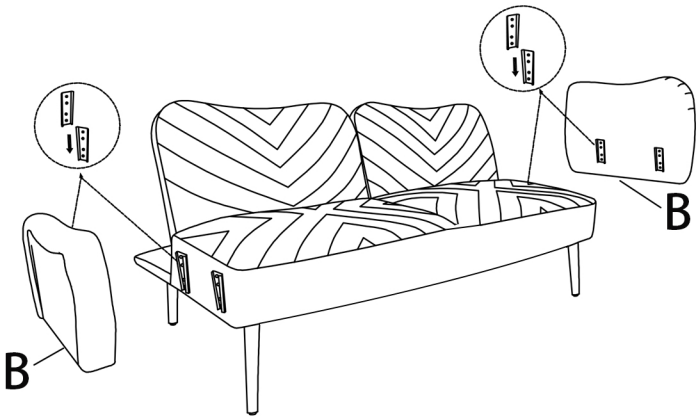

Step 3

