Warm Tips:
If the telescopic rod gets stuck in part B,you can install the finial to adjust the length more easily.



Step1 : Screw on the end caps of the B rod

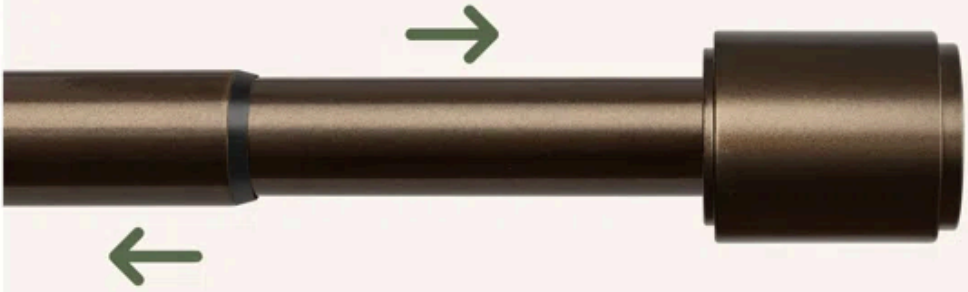

Step2:Pull out the telescoping rod B to ajustment the rod length