壓榨機工作原理:

壓榨機利用千斤頂與框架之間的壓距，擠壓壓盤大面積接觸食材，通過物理壓榨方式獲取汁液，適用於葡萄酒等發酵後汁渣分離。

壓榨機可用來做什麼:

1. 葡萄酒，可以將葡萄發酵後產物的汁渣分離。葡萄發酵好後，裝入網桶後壓榨就可以獲取葡萄發酵液.

2. 還可以用於做辣椒油、醃制鹹菜去水等。

壓榨機如何保養:

使用完畢後需要清洗乾淨，或長時間不使用，則用合適的毛刷等清洗乾淨或者直接用水清洗乾淨並擦幹，所有的活動部件需要定期潤滑，使用食用植物油潤滑即可。

Instructions



安 裝 如 圖(Installation instruction)



客戶須知

1．手動壓榨機純手工，真正做到無噪音，真安全、好清洗、
保留汁液營養成分，做到渣液分離。

2．本產品用於葡萄酒發酵後汁渣分離，榨汁只適合軟水果壓榨，
壓榨硬水果或用力過大造成產品損壞非品質原因。
我們概不負責，特此專明。

3．特別注意：(1,使用前將千斤頂頂端黑色螺絲擰出頂在架子上安裝，錯誤使用引起的千斤頂損壞，我們概不負責。2,增压前，必须逆时针转动一圈,泄压后回收顶杆顺时针拧紧以防漏油。)

NOTE:1，Before using JACK, you must first loosen the bolt.
Special attention: Screw out the black screw at top of the jack before use,then install the jack on the bracket.
We are not responsible for the damage to the jack caused by misuse.
2，Oil return vale Before boosting, it is necessary to turn counterclockwise once.

How the press works

The press uses the pressure between the jack and the frame,massive extrusion plate contact inredients, acquisition ofsap by physical pressing,suitable for separation of fermented juice residue.

What can a press do

1．Wine

The slag juice of fermented wine can be separated.When the grapes are ready,Grape ferment can be obtained by loading it in a barrel:

2.It can also be used to make chili oil,pickle pickle to water,Etc;

How to maintain the press

Clean up after use,for long periods,clean it with the appropriate brush or wash it with water.All moving parts need regular lubrication,use vegetbie oil to lubricate.

Assembly completed





壓榨機安裝步驟 Installation steps

第一步：準備好所有配件

Step 1: Prepare all accessories.



第二步：將外桶放入支架內，再將網格桶放到外桶內

Step 2: Put the outer barrel into the bracket,And then put the grid barrel in to the barrel into the barrel.




第三步：將壓盤放入網格桶內（示範暫不帶料）

Step 3: Put pressure plate into the grid barrel (Demonstration without materials).



第四步：託盤放在壓盤上方，柱體上面
Step 4: Place the tray on the column of the pressure plate.

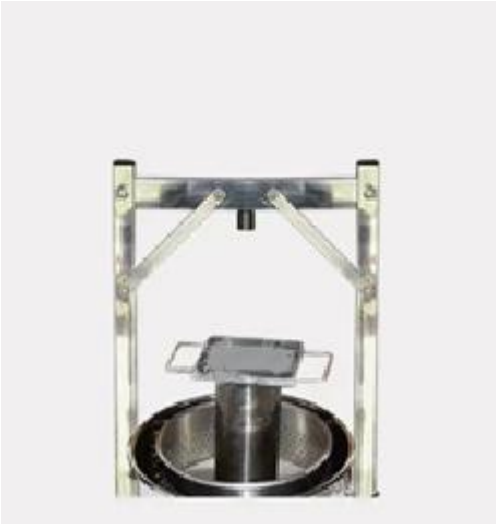

第五步：託盤上面放上千斤頂,安裝完畢。
Step 5: Put the Jack on the tray,assembly completed.



備註：千斤頂要與架子頂部孔對好，上升才能使用。
NOTE:The jack has to match the top hole of the shelf, up and ready to go.

配件明細 （Accessories Details）



Jack



注油方法:
将千斤顶放倒，让塞子口朝上，打开橡胶塞注入液压油，注油量的多少是将千斤顶直立，油面刚好与油塞平齐即可。
千斤顶所用的液压油为:32 号液压油

注意:
本千斤顶在使用过程中，请直立使用，不能侧置或者倒立使用。
液压油少量流出不影响千斤顶使用。

Jack use method

Tighten the fuel valve at one end,then insert quick connector with a pressurerod,Push up the piston rod, upgrade if not high enough,you need to turn the oil return valve about 1 lap,(Don't twist multiple loops to avoid oil leakage) There's pressure to keep you alive the bar is pressed as a jack.

Jack introduced





Before using JACK, you must first loosen the bolt.




Jack shaft



NOTE:1，Before using JACK, you must first loosen the bolt.


2，Oil return vale Before boosting, it is necessary to turn counterclockwise once.

1.Release valve lever
2.Base
3.O-Ring
4.Hydraulic cylinder
5.Ram
6.Hydraulic oil
7.Oil-tight tank
8.Extension screw
9.Top cap
10.Pump plunger
11.Pump Body
12.O-Ring

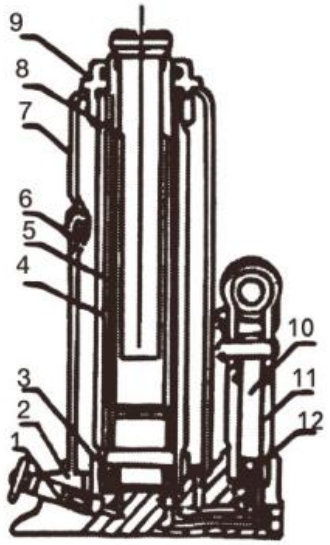



Before using JACK, you must first loosen the bolt.

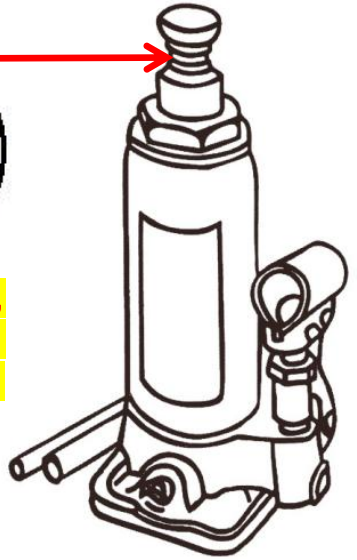

HYDRAULIC JACK

OPERATING INSTRUCTIONS

OPERATING INSTRUCTION

1. Before operating, estimate the weight of the load.
Do not overload the jack beyond its rated load.

2. Select point of action according to the gravitational center place the jack on the hard ground if necessary.
Place a hard plank under the jack so to avoid tottering or falling during operation.

3. Before operating the jacks,first,insert the notched end of the handle into the release valve.Tum the operating handle clockwise until release valve is closed.Do not over tighten the valve.

4. Insert operating handle into the scoket and the ram is steadily raised by the up and down movement of the handle and the load is raised.The ram will stop rising when the required height is reached.

5. Lower the ram by turning the release valve.Counter-clockwise with the notched end slacken it slowly when a load is applied or accidents can occur.

6. When more than one jack is used at the same time it is important to operate the different jacks at an equal speed with equal load.Otherwise,there is danger of falling the entire fixture.

7. At an ambient temperature from 27F to 113F use ma-Chine oil (GB443-84)N15At an ambient temperature from -4F to 27F use synthetic spindle oil (GB442-64) Sufficient filtered hydraulic oil should be maintained in the jacks. Otherwise,the rated hight cannot be reached.

8.Violent Shocks must be avoided during the operation.

9.User must operate the jack correctly according to operating instruction.If the jack has some quality problems it can not be operated.Oil injection method:
Place the jack upside down with the plug facing upwards, open the rubber plug and inject hydraulic oil. The amount of

10.Oil injected should be the same as when the jack is upright and the oil level is just level with the plug.
The hydraulic oil used for the jack is No. 32 hydraulic oil
Note:
During use, please use this jack upright and do not use it sideways or upside down.
A small amount of hydraulic oil flowing out does not affect the use of the jack.

NOTE:

1，Before using JACK, you must first loosen the bolt.

2，Oil return vale Before boosting, it is necessary to turn counterclockwise once.