COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

600570LLCPPP
LAF TRI POWER LOVESEAT

REVISION 0: 08/24/2026
REVISION 1: 09/08/2026

ITEM :600570LLCPPP

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.

WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME	2 MINUTES


PARTS IDENTIFICATION

A LEFT EAR		**1 PC**
B LEFT BACK		**1 PC**
C MIDDLE BACK		**1 PC**
D RIGHT BACK		**1 PC**
E BASE		**1 PC**
F PLUG-IN POWER SUPPLY		**1 PC**


STEP 1

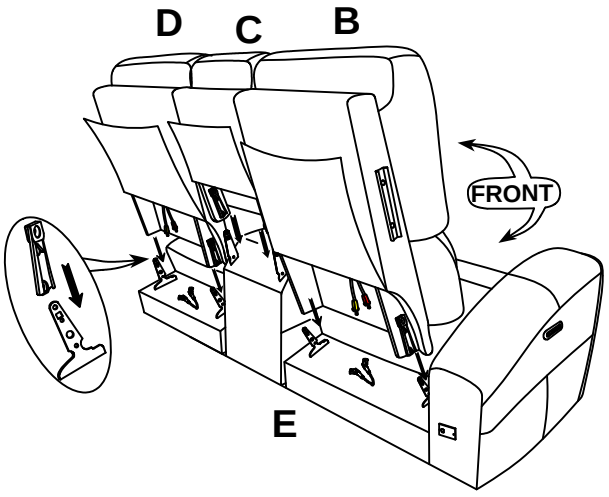

STEP 2

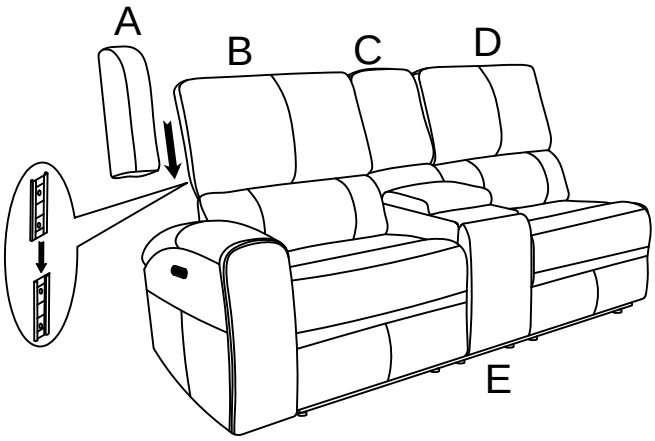


STEP 3

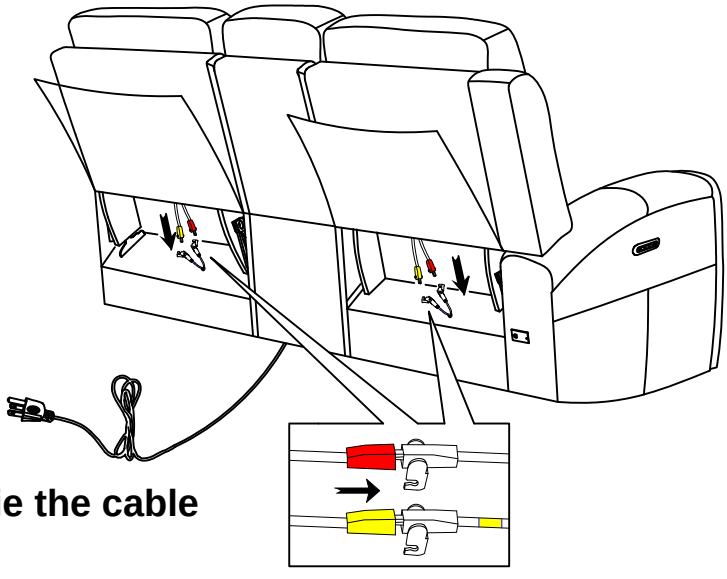


Untie the cable

STEP 4

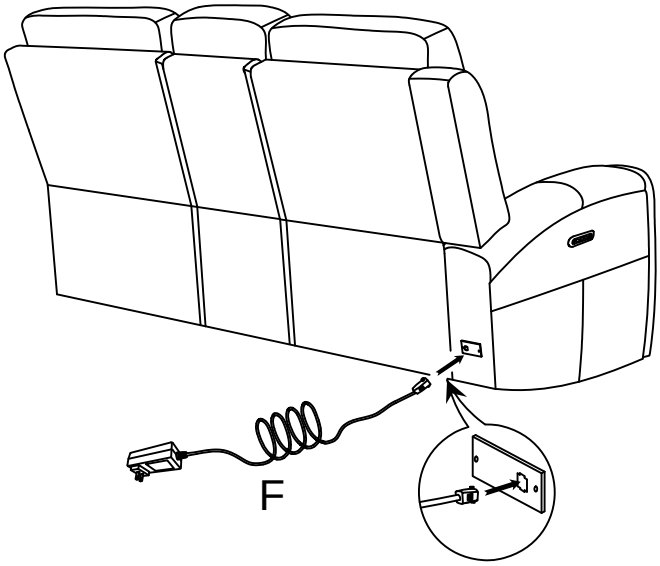


STEP 5
COMPLETE

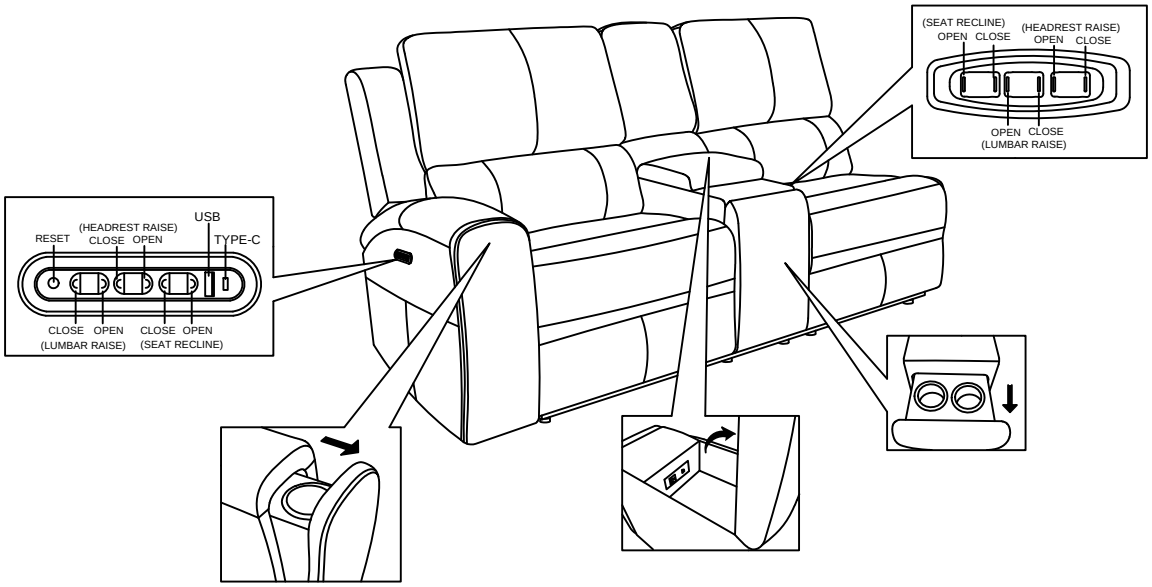




STEP 6


OPTION1:

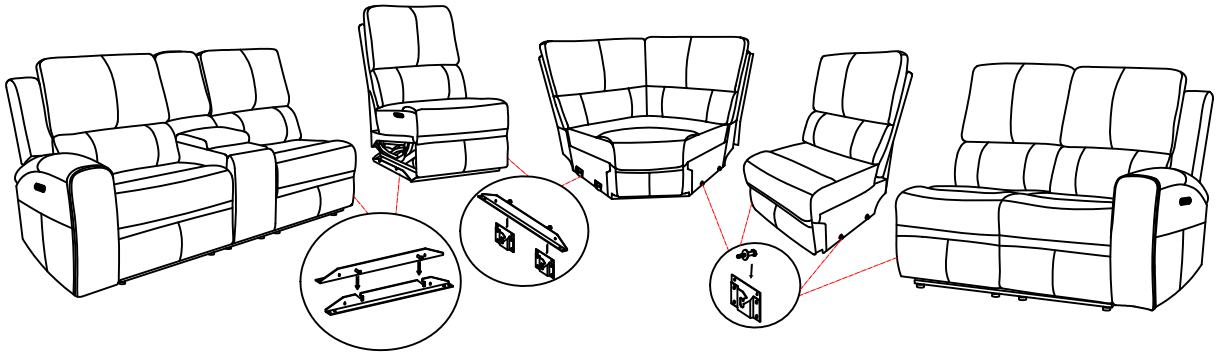

OPTION2:

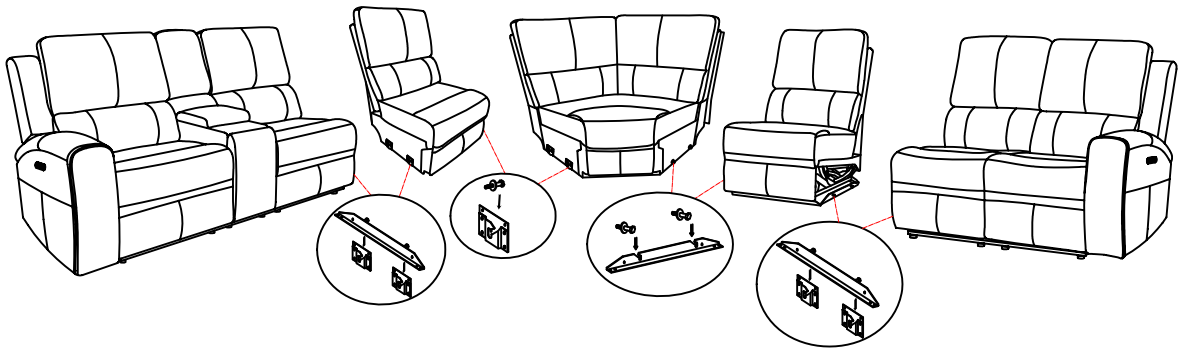

STEP 7

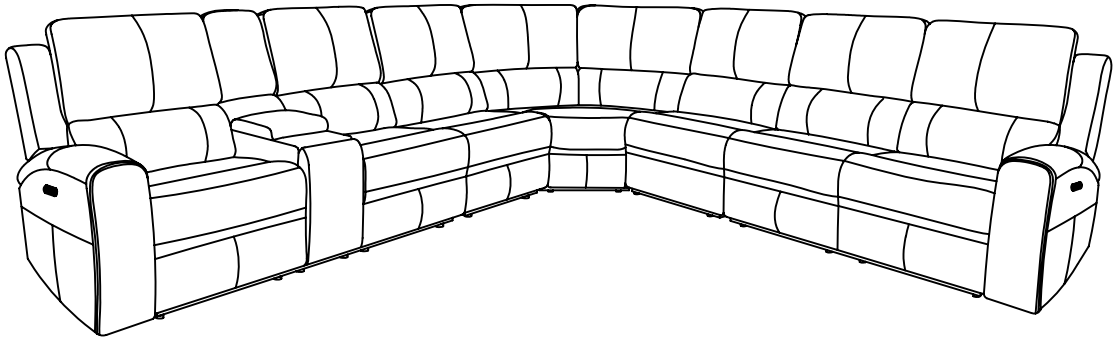


ITEM :600570LLCPPP

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

Open the marked battery door on the backup battery box.

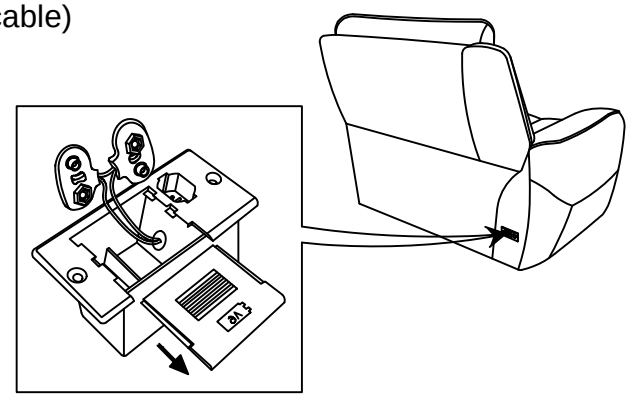


STEP 2

Install two 9V batteries in the backup battery box.(batteries are not included)

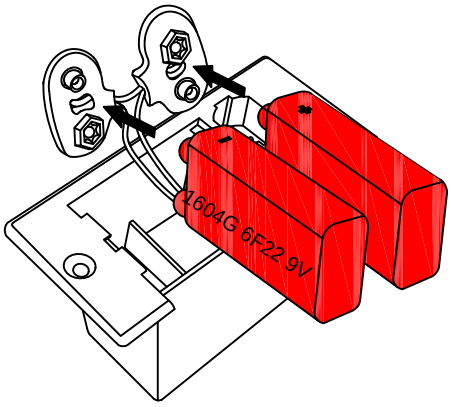

STEP 3


Push the batteries in.

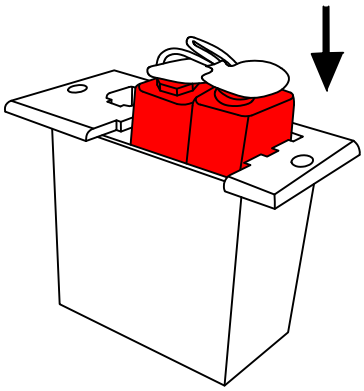


STEP 4


Close the box door.

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

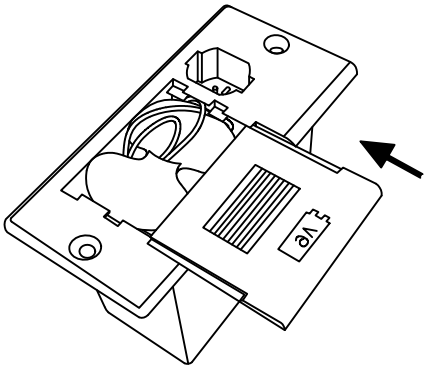

ITEM :600570LLCPPP

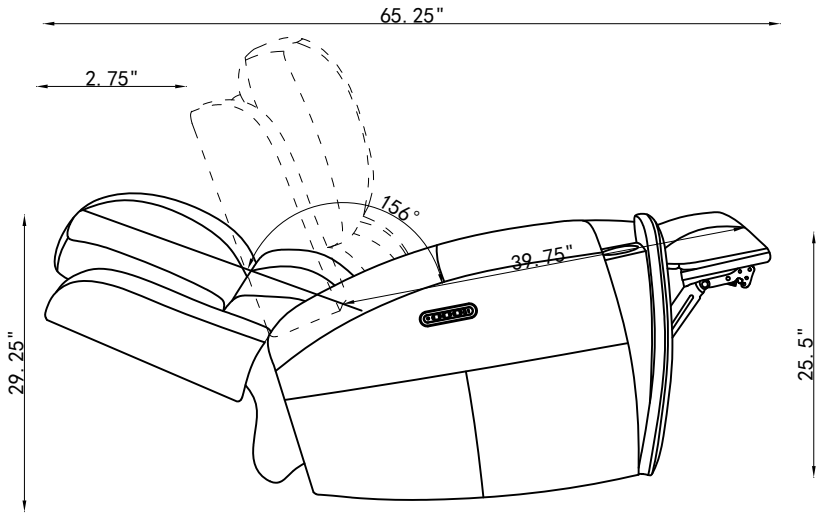

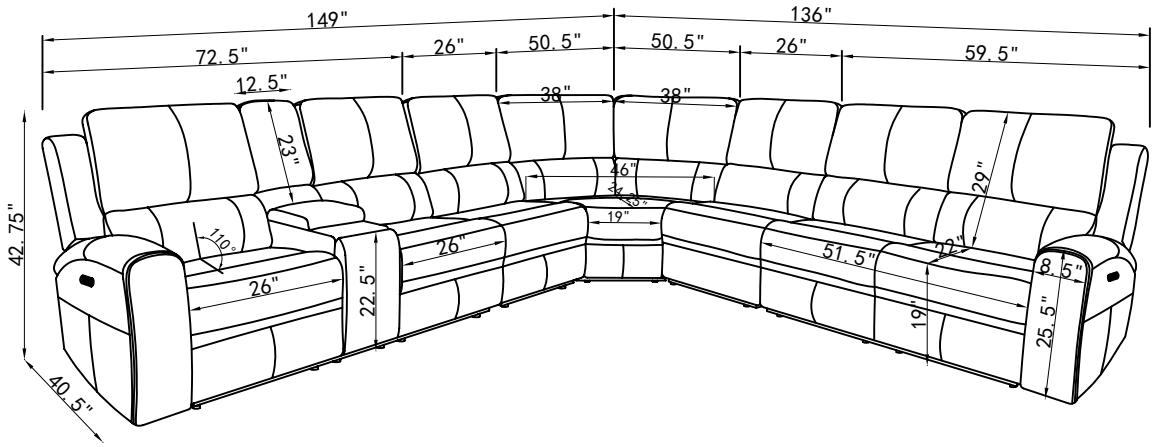

Note: Dimension tolerance +5%

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

600570AC
ARMLESS CHAIR

REVISION 0: 08/24/2026
REVISION 1: 09/08/2026

ITEM :600570AC

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.


WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME	2 MINUTES

PARTS IDENTIFICATION


A BACK  **1 PC**

B BASE OF ARMLESS CHAIR  **1 PC**

ITEM :600570AC


ASSEMBLY INSTRUCTIONS

STEP 1

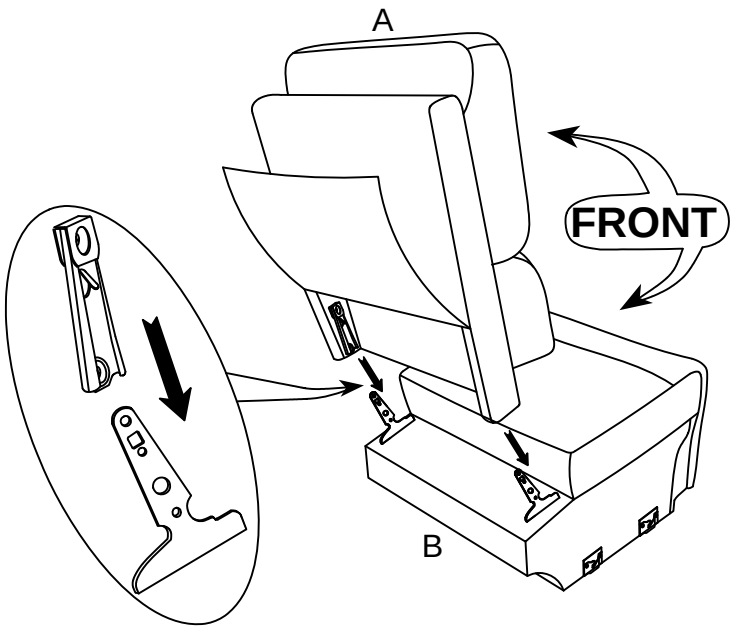


STEP 2

COMPLETE

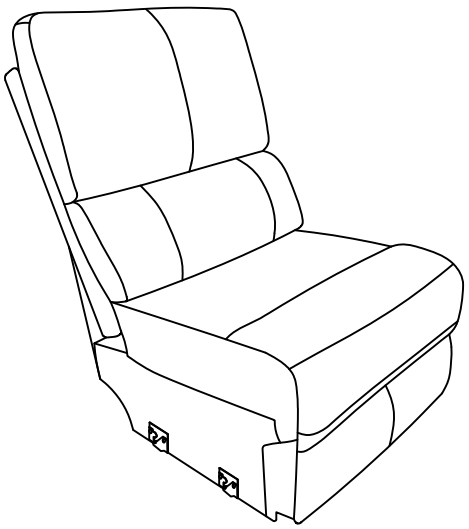


STEP 3


OPTION1:

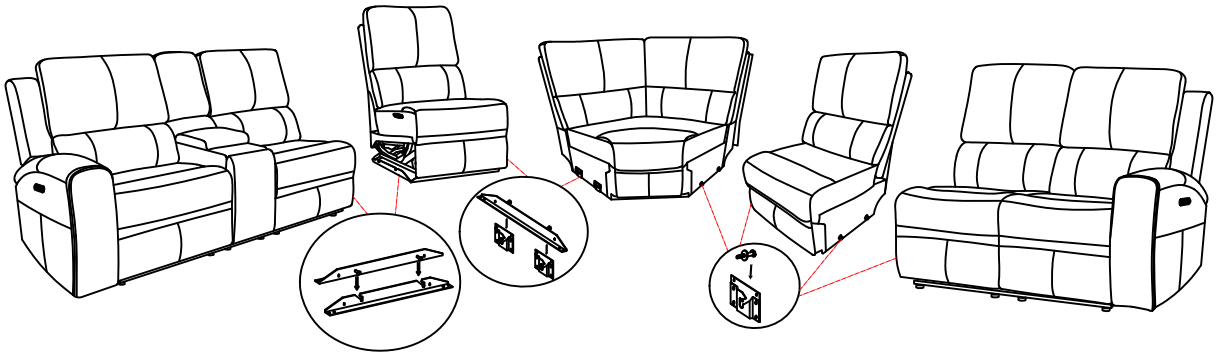


OPTION2:

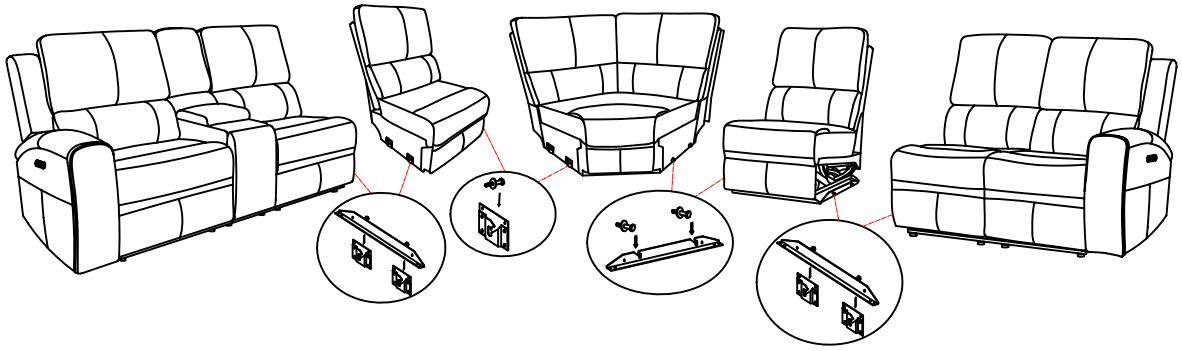


STEP 4

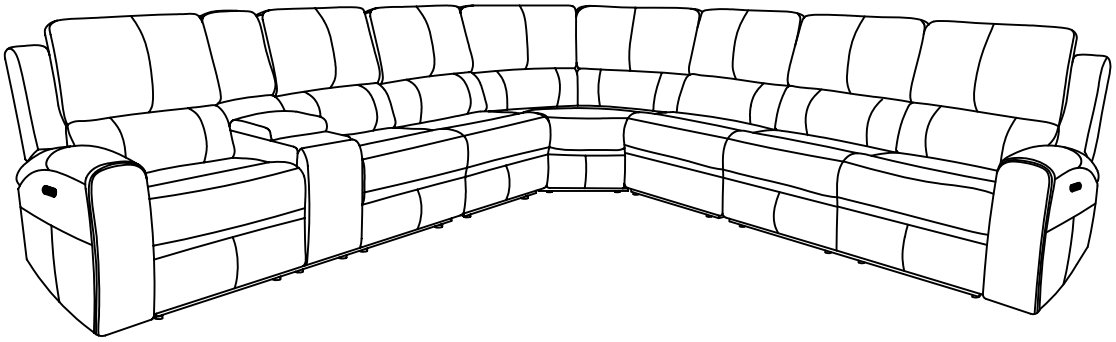

ITEM :600570AC

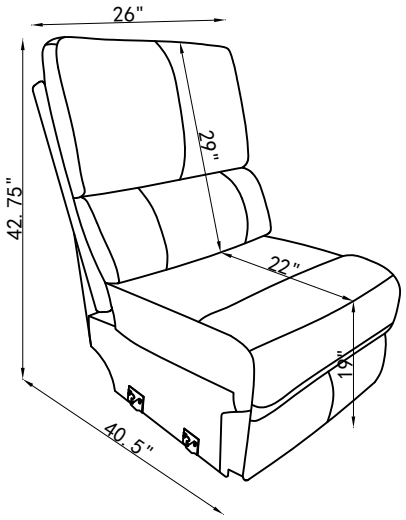

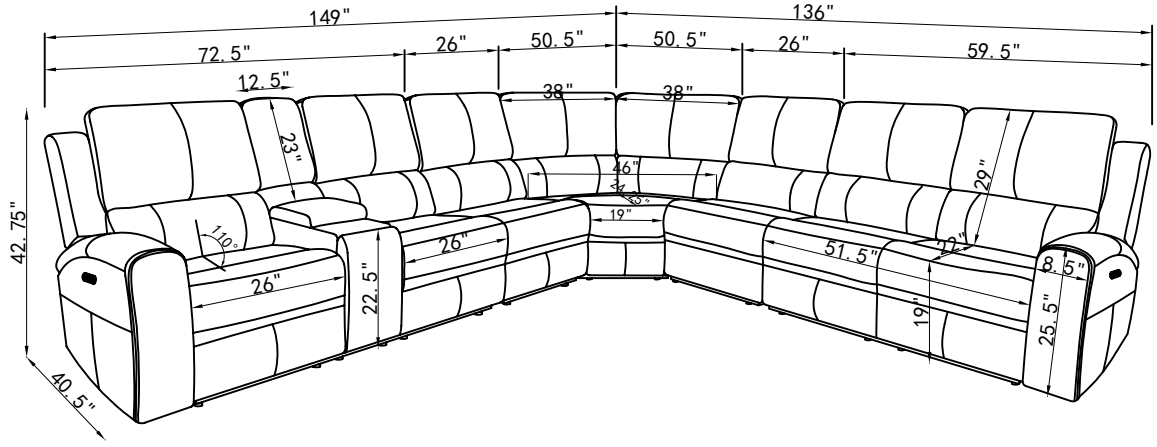

Note: Dimension tolerance +5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

600570WDG
WEDGE

REVISION 0: 08/24/2026
REVISION 1: 09/08/2026

ITEM :600570WDG

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.


WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME	2 MINUTES

PARTS IDENTIFICATION

A LEFT BACK  **1 PC**

B RIGHT BACK  **1 PC**


C BASE OF WEDGE  **1 PC**

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	QTY
1	THREADED RODS 5/16" * 100mm		4PCS
2	HEXAGON NUTS 5/16" * 13.5mm		4PCS
3	LOCK WASHER 5/16" * 13mm		4PCS+1PC SPARE
4	FLAT WASHER 5/16" * 19mm		4PCS+1PC SPARE
5	WRENCH 5/16"		1PC

ITEM :600570WDG


ASSEMBLY INSTRUCTIONS

STEP 1

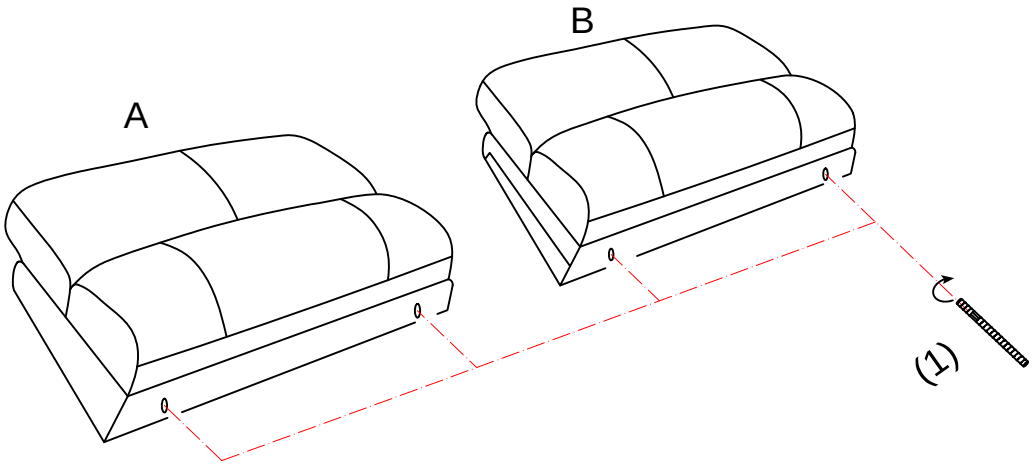

STEP 2


COMPLETE

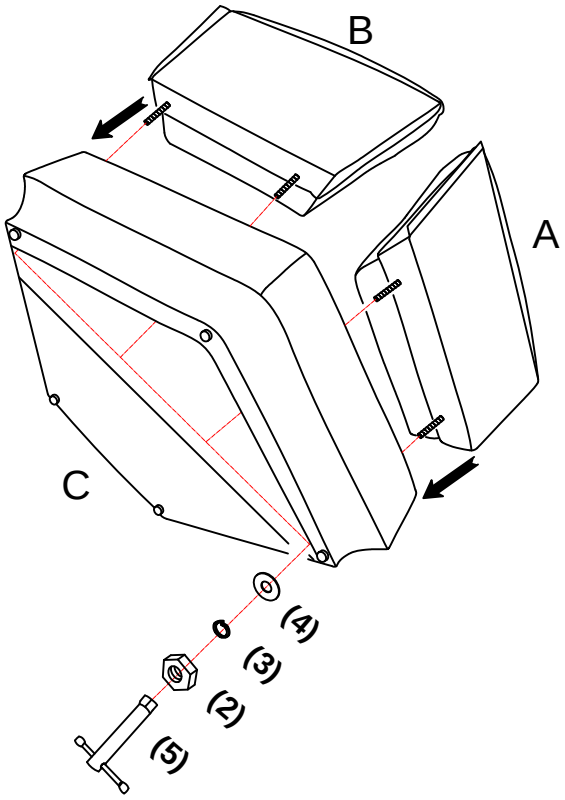




STEP 3


OPTION1:

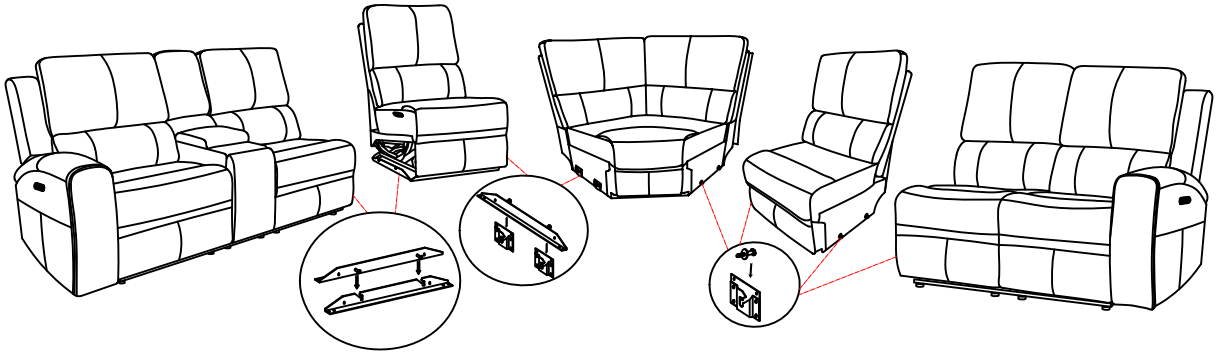



OPTION2:

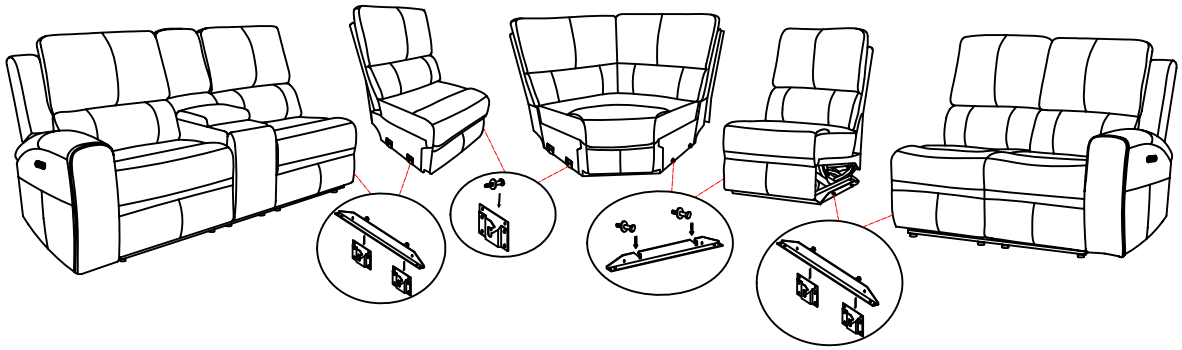

STEP 4

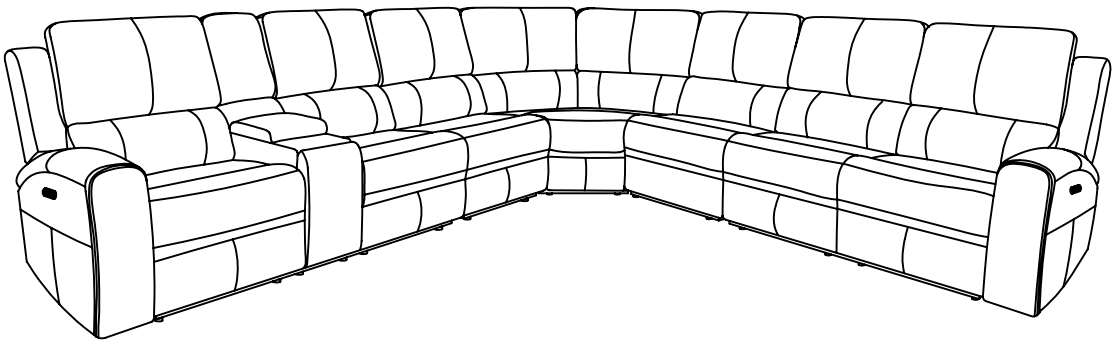

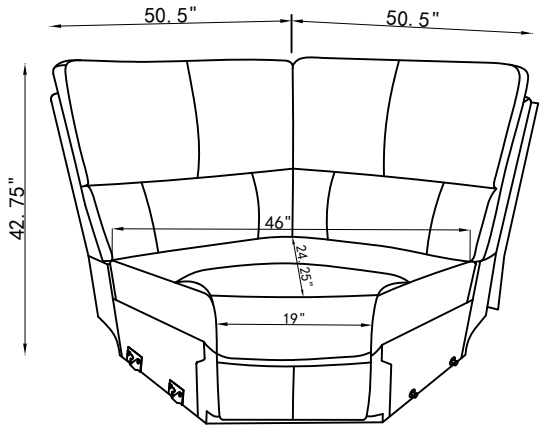

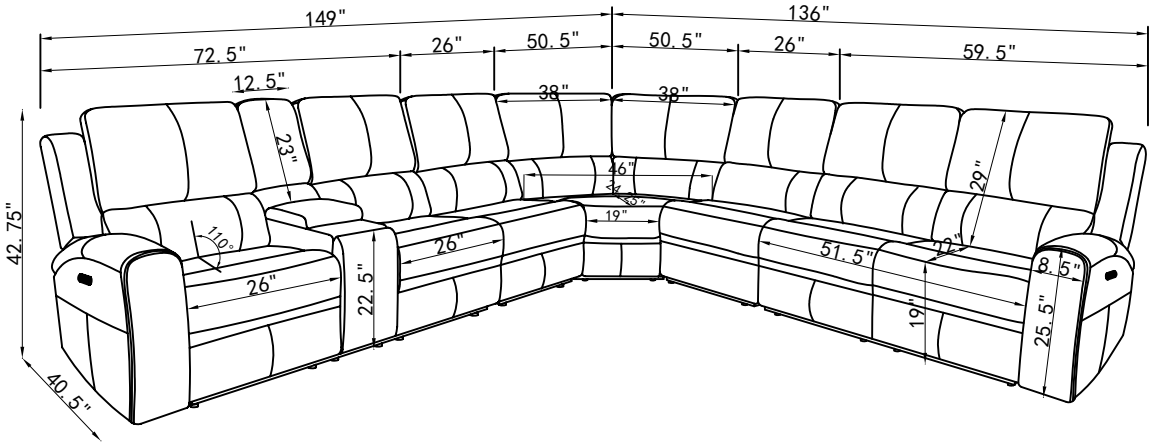

Note: Dimension tolerance +5%

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

600570ARPPP
TRI POWER ARMLESS RECLINER

REVISION 0: 08/24/2026
REVISION 1: 09/08/2026

ITEM :600570ARPPP

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.


WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME	2 MINUTES

PARTS IDENTIFICATION

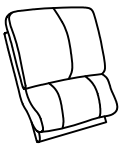A BACK  **1 PC**

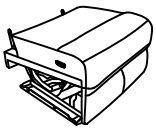
B BASE  **1 PC**

C PLUG-IN POWER SUPPLY  **1 PC**


ITEM :600570ARPPP

ASSEMBLY INSTRUCTIONS

STEP 1

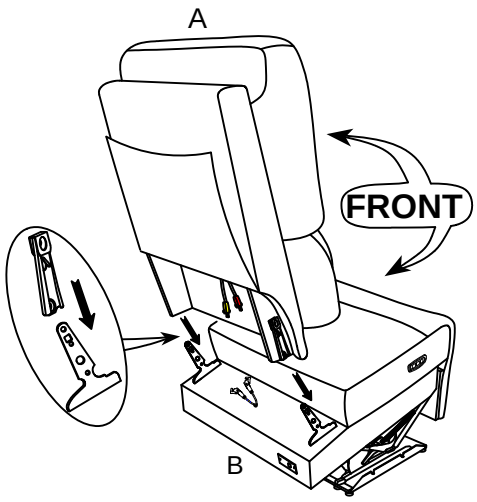


STEP 2

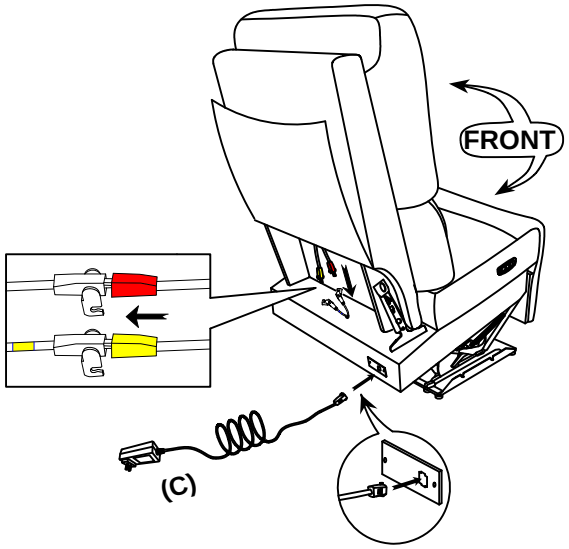

STEP 3


COMPLETE

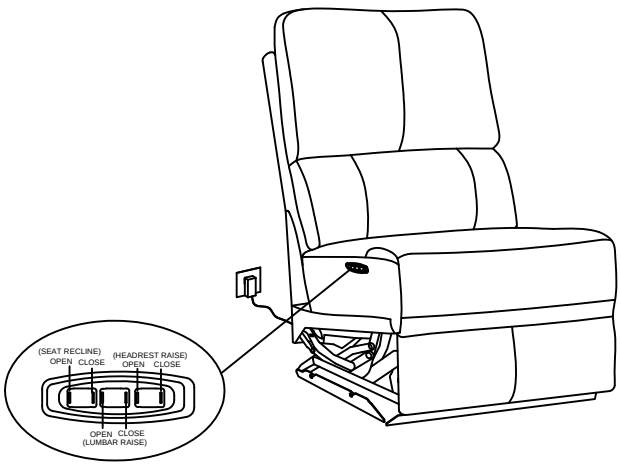




STEP 4


OPTION1:

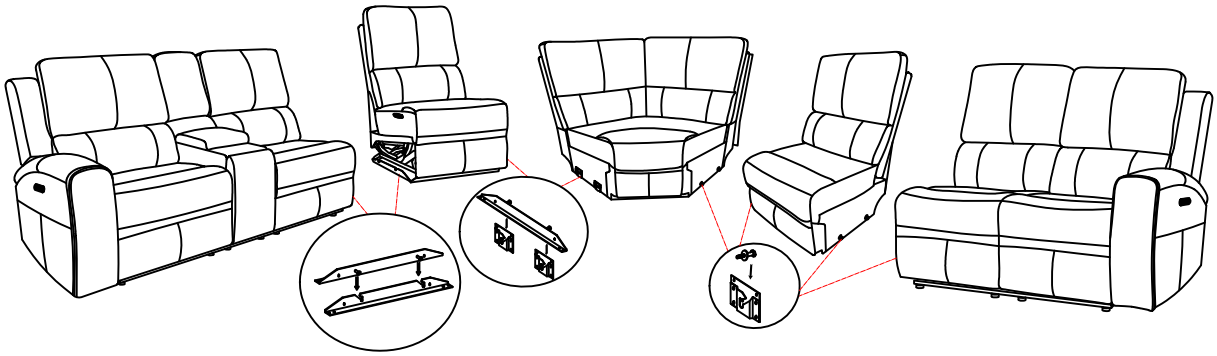

OPTION2:

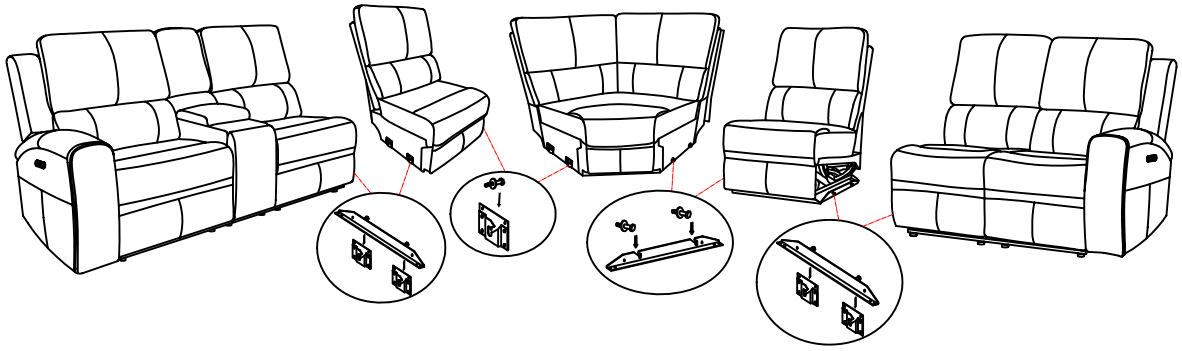

STEP 5

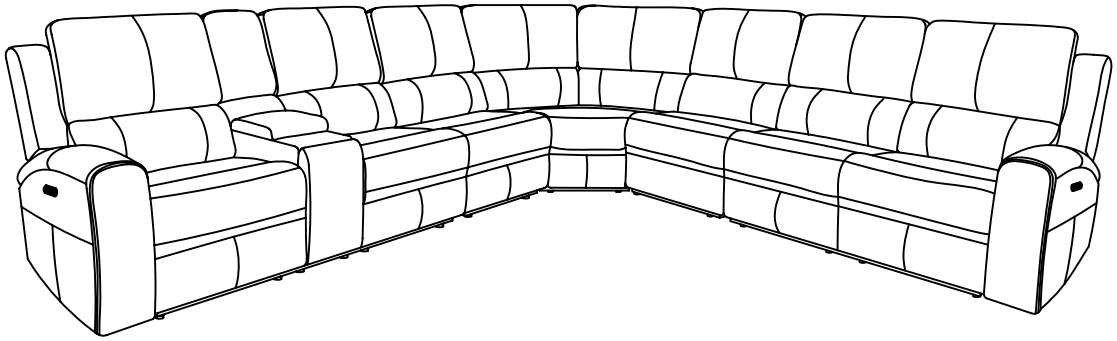


ITEM :600570ARPPP

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

Open the marked battery door on the backup battery box.

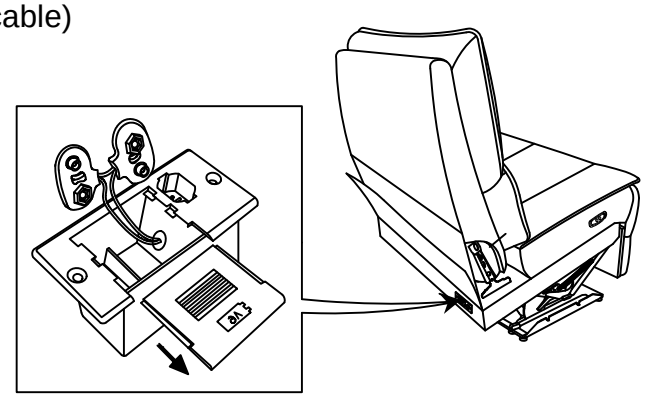


STEP 2

Install two 9V batteries in the backup battery box.(batteries are not included)

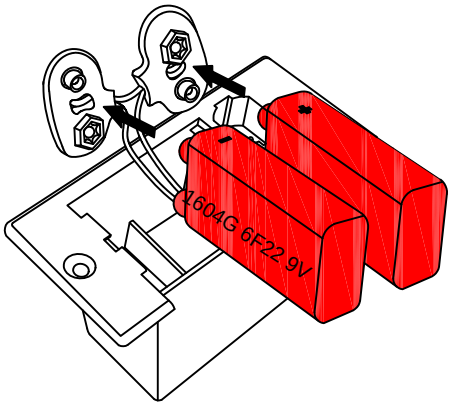

STEP 3


Push the batteries in.

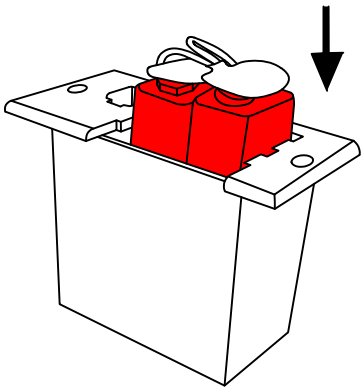



STEP 4

Close the box door.

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

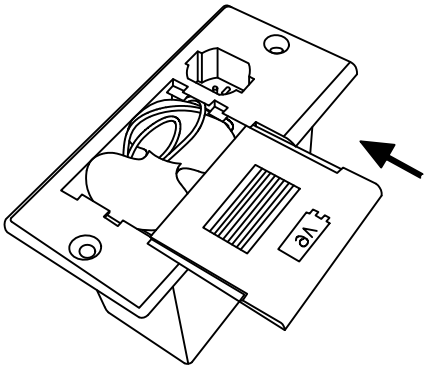

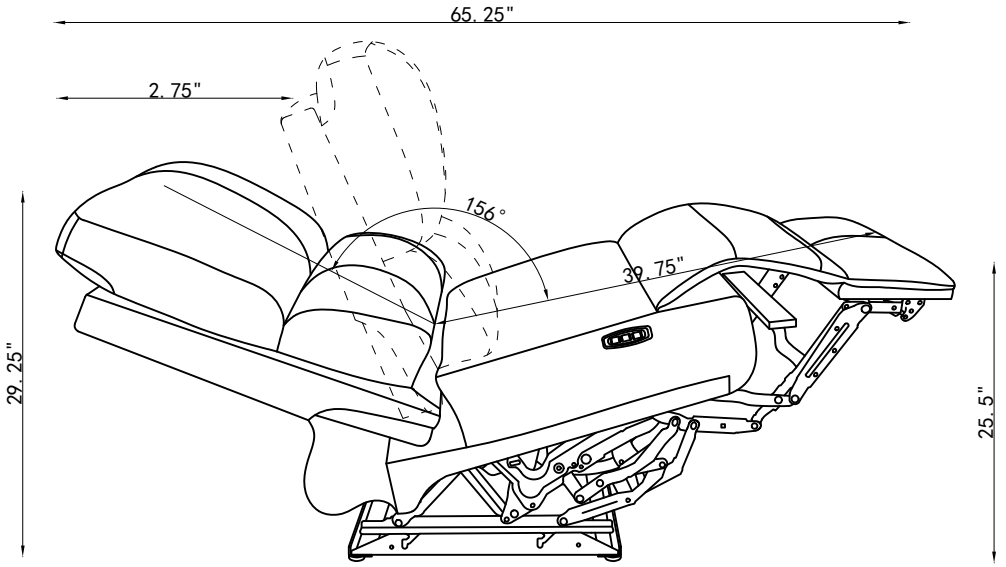

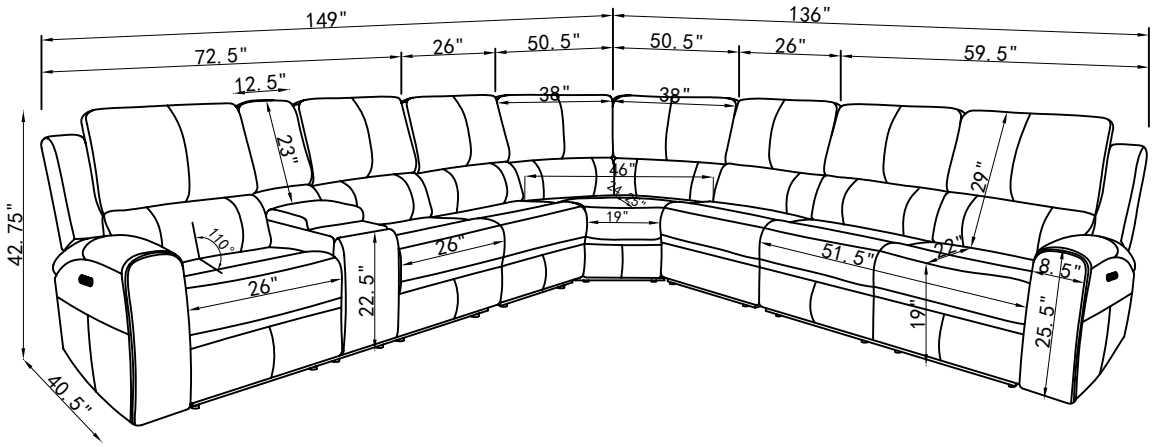

Note: Dimension tolerance +5%

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

600570RLPPP
RAF TRI POWER LOVESEAT

REVISION 0: 08/24/2026
REVISION 1: 09/08/2026

ITEM :600570RLPPP

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.

WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME	2 MINUTES


PARTS IDENTIFICATION

A RIGHT EAR		**1 PC**
B RIGHT BACK		**1 PC**
C LEFT BACK		**1 PC**
D BASE		**1 PC**
E PLUG-IN POWER SUPPLY		**1 PC**


STEP 1

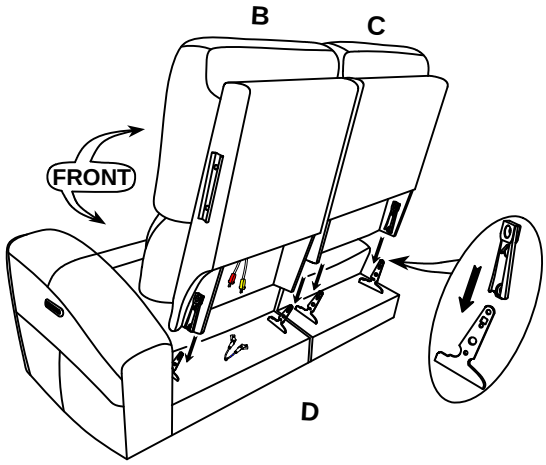


STEP 2

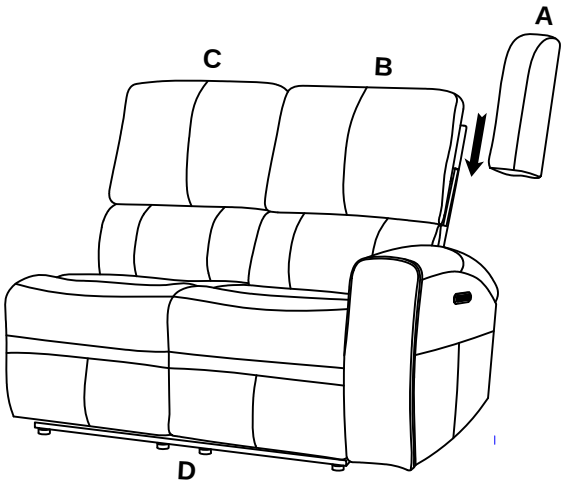


STEP 3

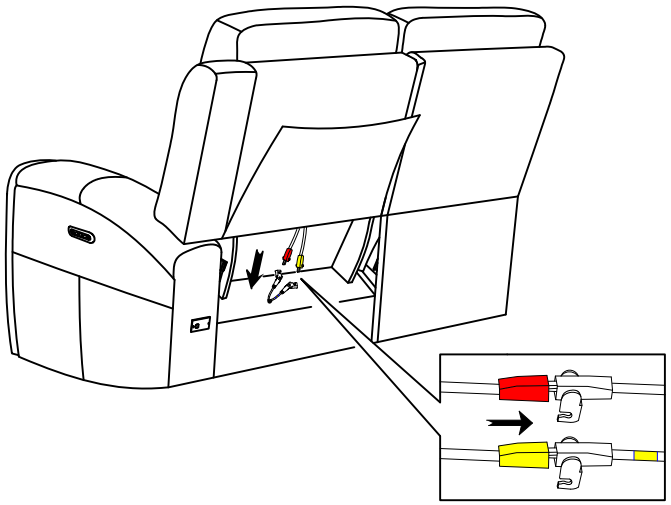

STEP 4

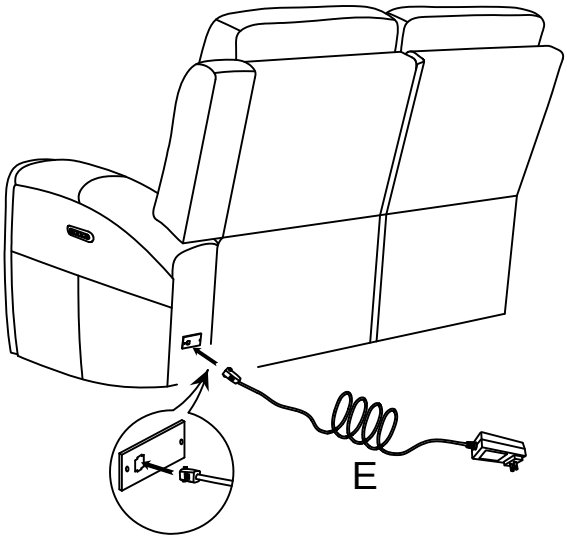


STEP 5
COMPLETE

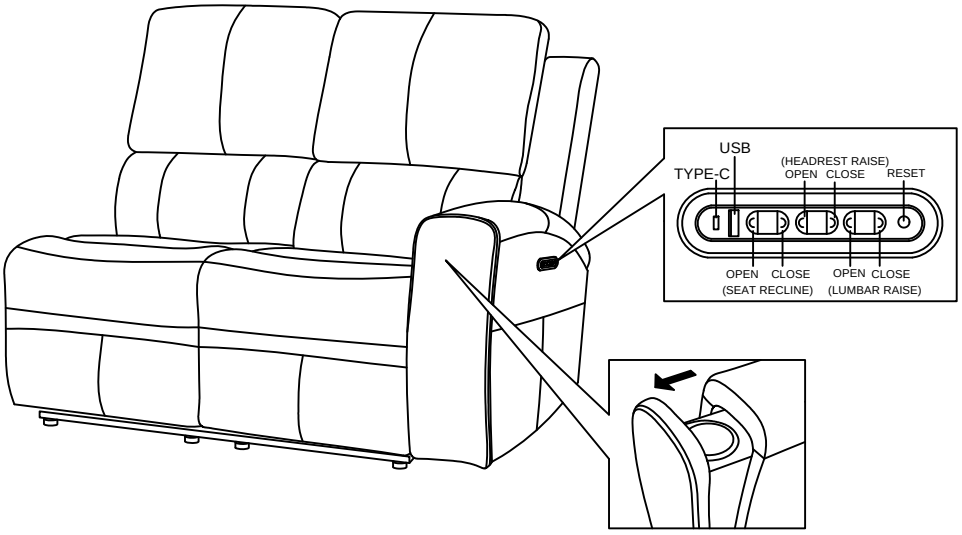




STEP 6


OPTION1:

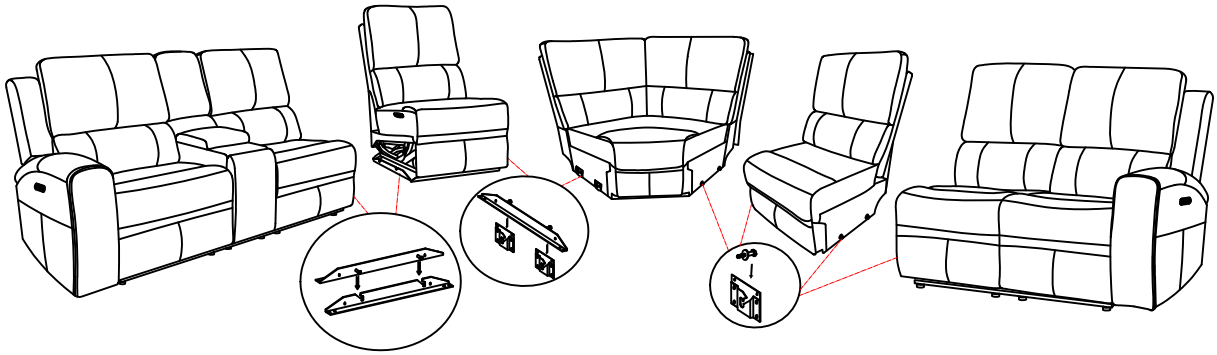

OPTION2:

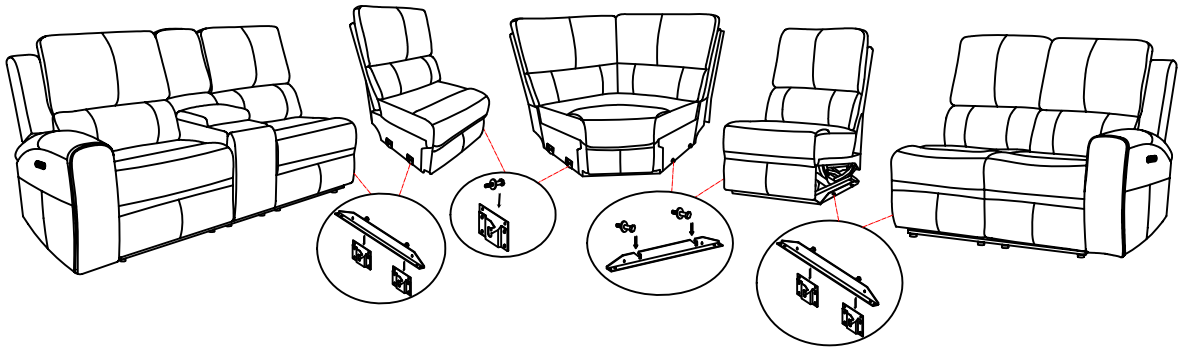

STEP 7

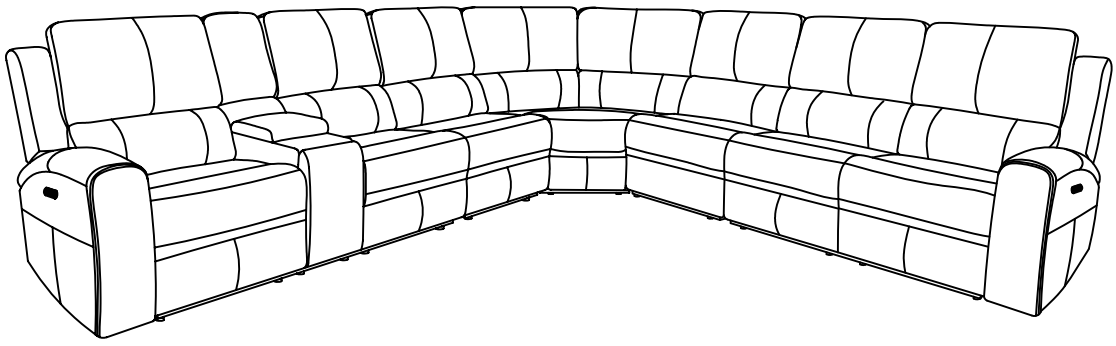


ITEM :600570RLPPP

Please follow below steps to install the 9V batteries when there is no power to operate the motion sofa.(Any model of 9V battery is applicable)


STEP 1

Open the marked battery door on the backup battery box.

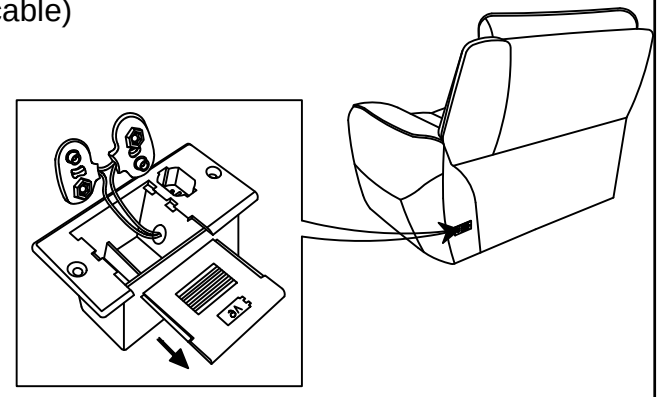


STEP 2

Install two 9V batteries in the backup battery box.(batteries are not included)

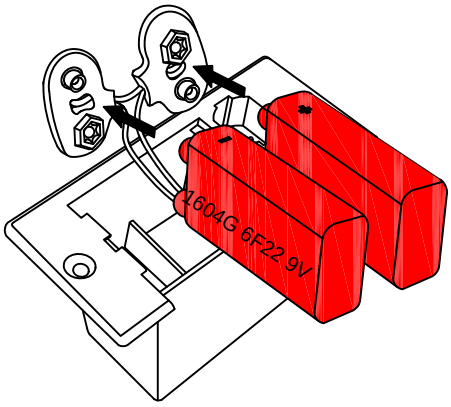

STEP 3


Push the batteries in.

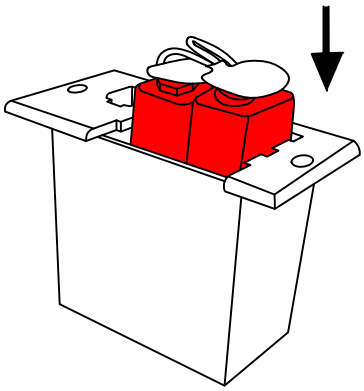



STEP 4

Close the box door.

Notice: Please don't keep the battery in the box when the power motion sofa is under daily use with power supply.

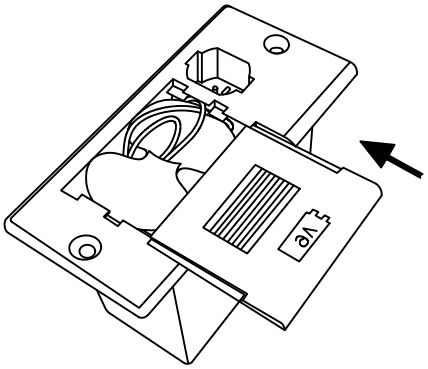

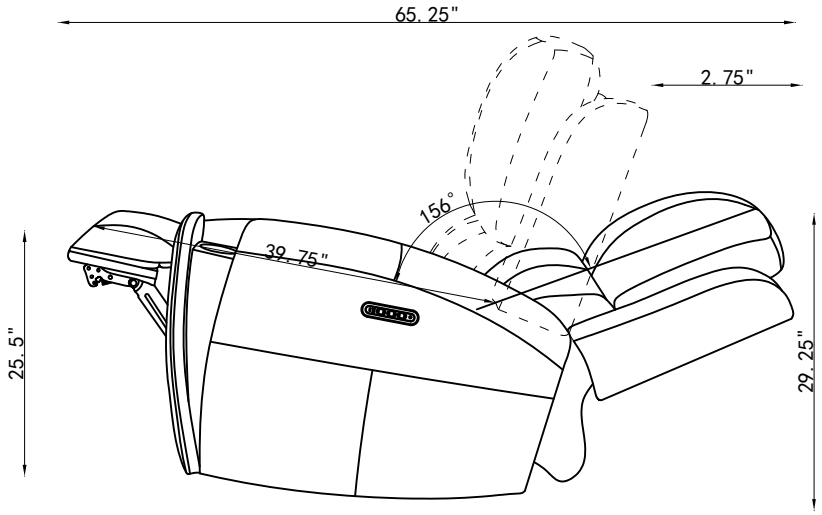

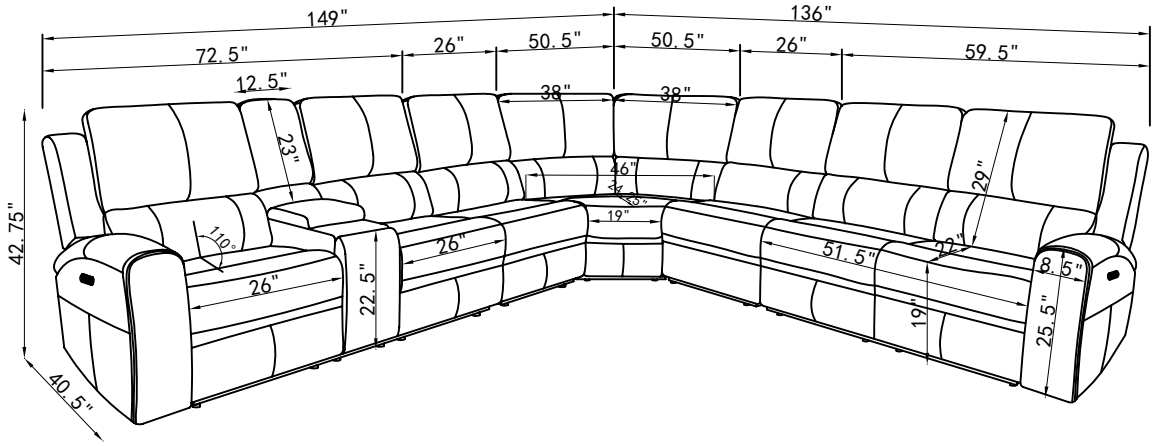

Note: Dimension tolerance +5%