



ASSEMBLY INSTRUCTIONS

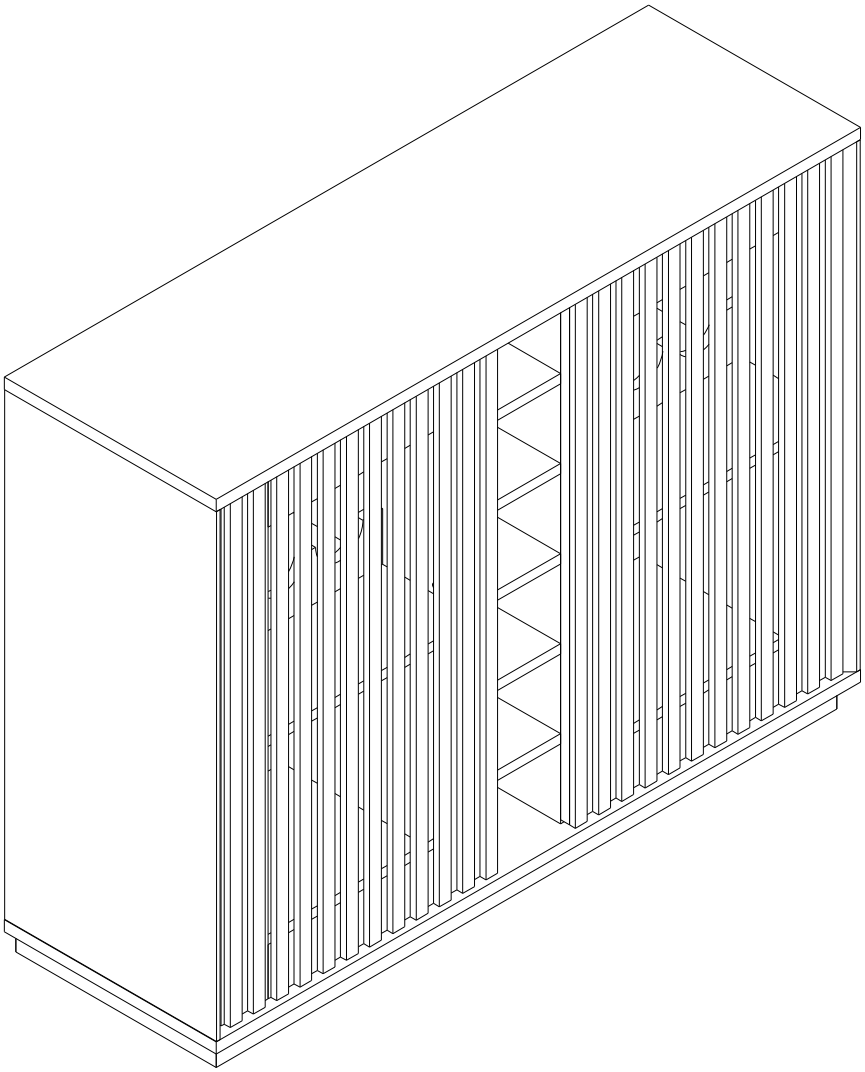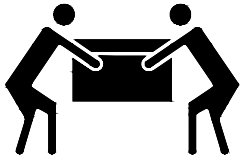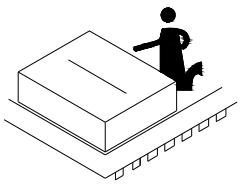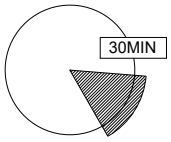







Notice:








1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

		
Recommended installers:2	**Put a carpet on the floor before unpacking**	**Estimate installation time: 30minutes**

ASSEMBLY INSTRUCTIONS




PART LIST

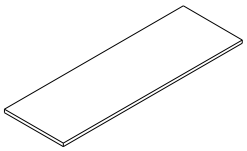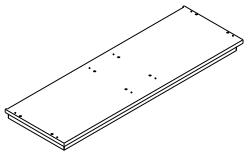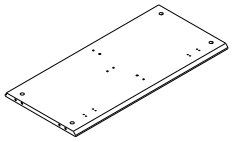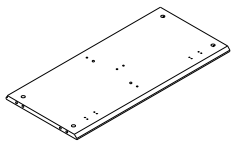
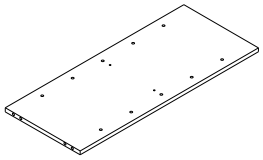
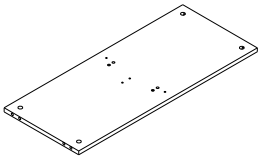
Item no.	Reference Image	Qty
A		X1
B		X1
C		X1
D		X1
E		X1
F		X1

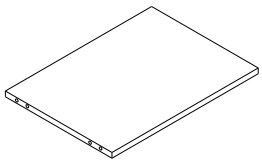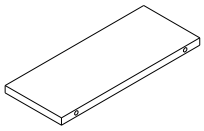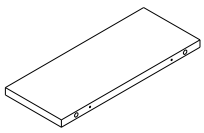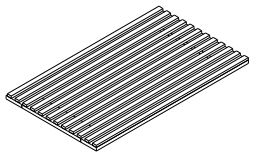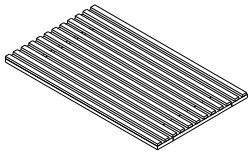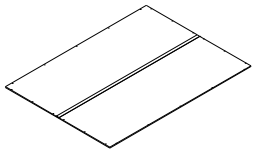Item no.	Reference Image	Qty
G		X2
H		X2
I		X4
J		X1
K		X1
L		X1
M		X1


ASSEMBLY INSTRUCTIONS

HARDWARE LIST

Item no.	Reference Image	Qty
1	 Ø8*30mm	X44+4
2		X32+3
3		X32+3
4	 Ø4*38mm	X4


Item no.	Reference Image	Qty
5		X4
6	 Ø3*14mm	X24+2
7	 Ø3*15mm	X24+2
8		X4
9		X2


ASSEMBLY INSTRUCTIONS

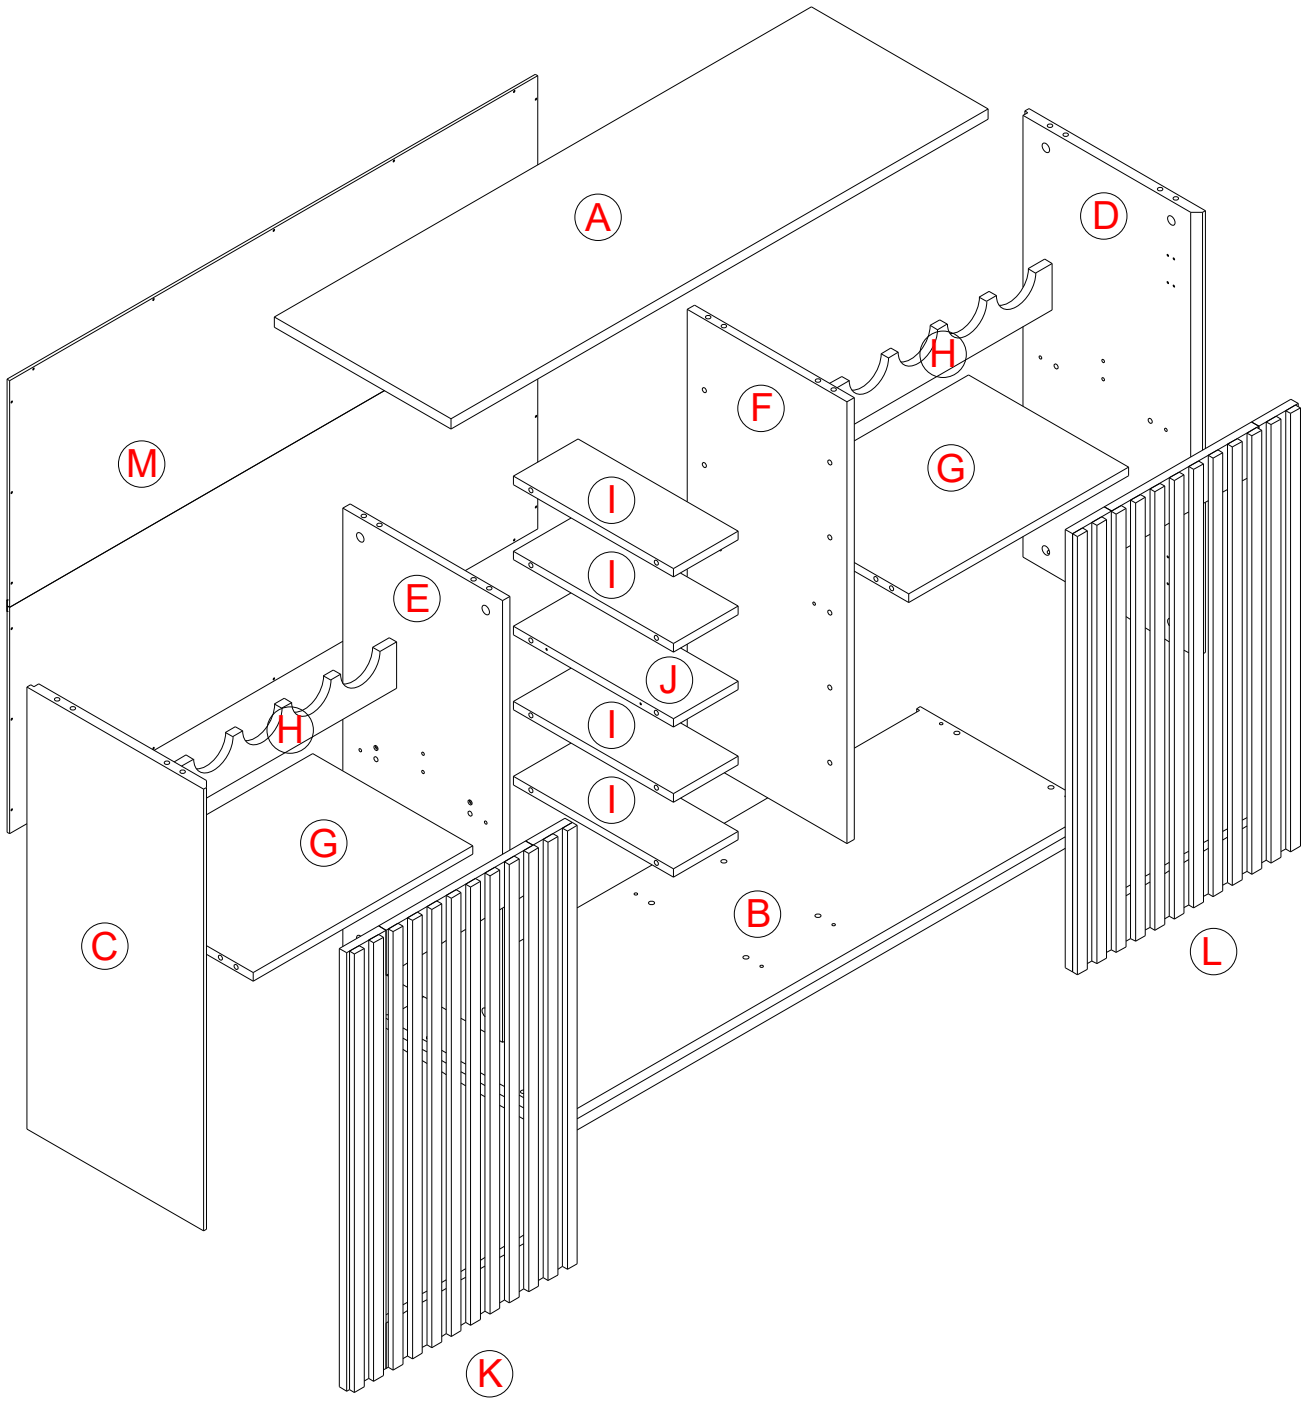

ASSEMBLY INSTRUCTIONS


1

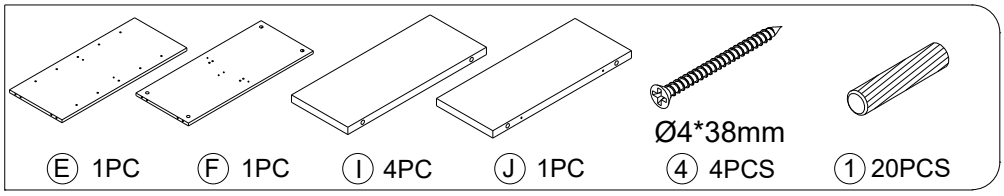

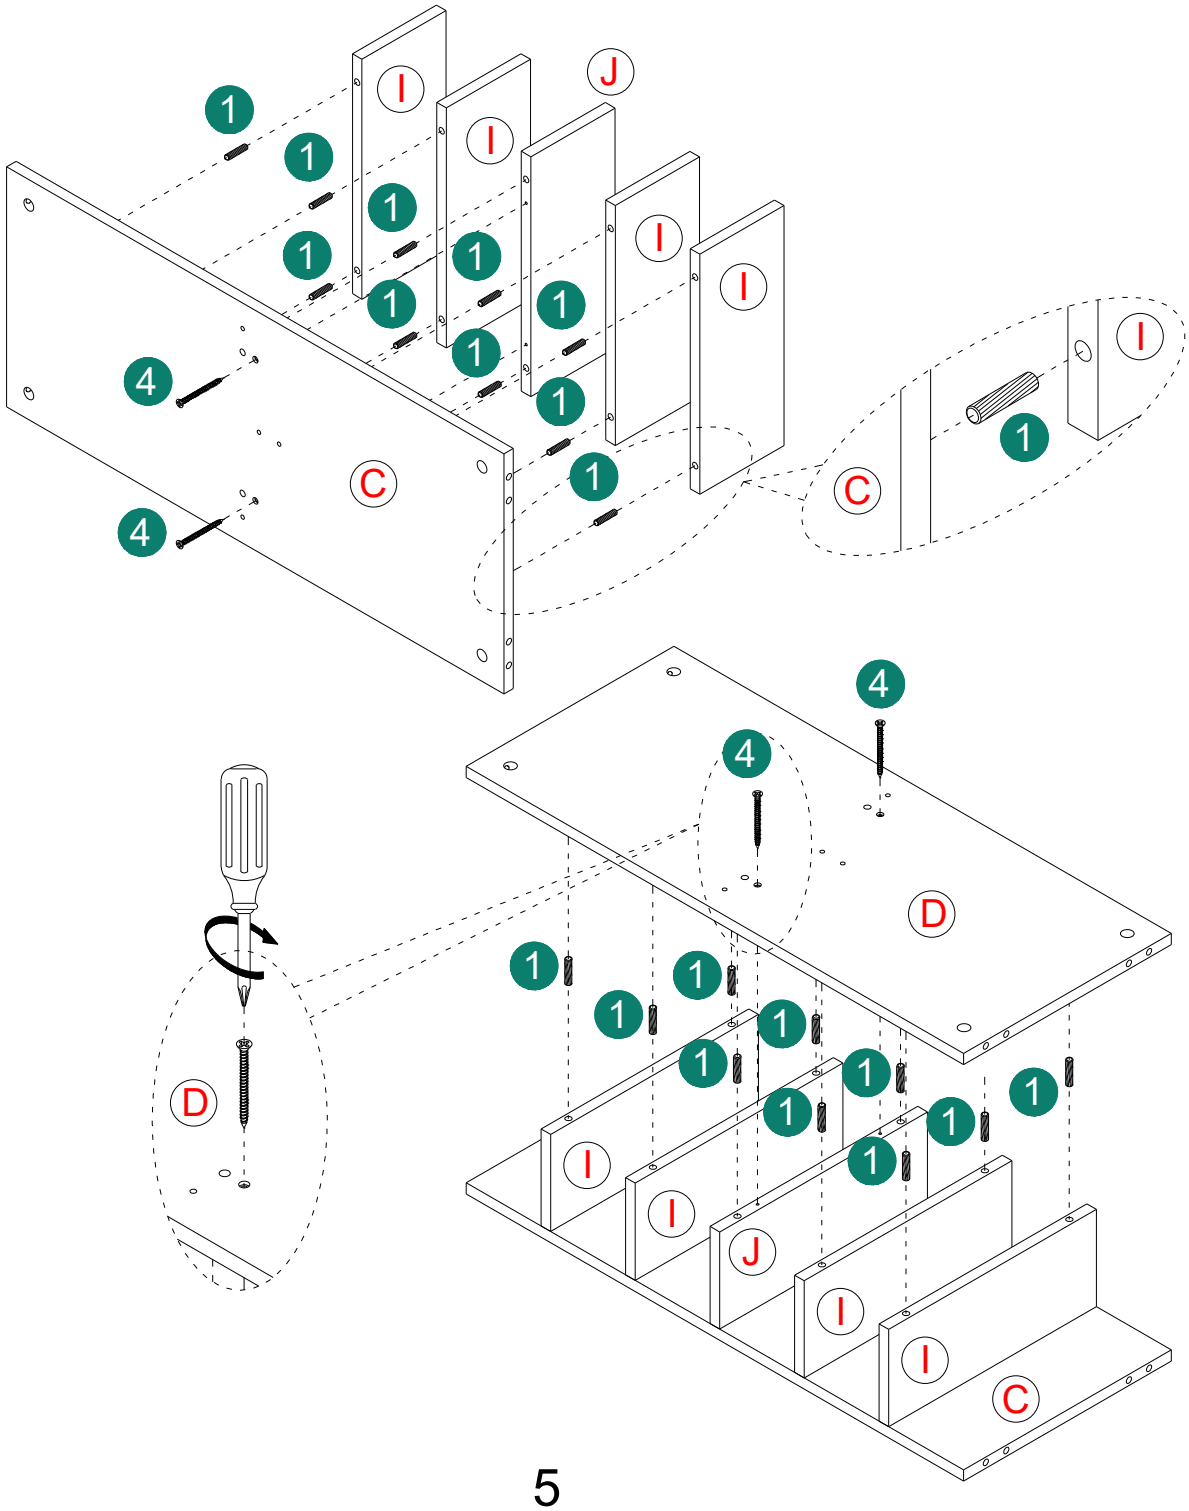



ASSEMBLY INSTRUCTIONS

2




② 8PCS

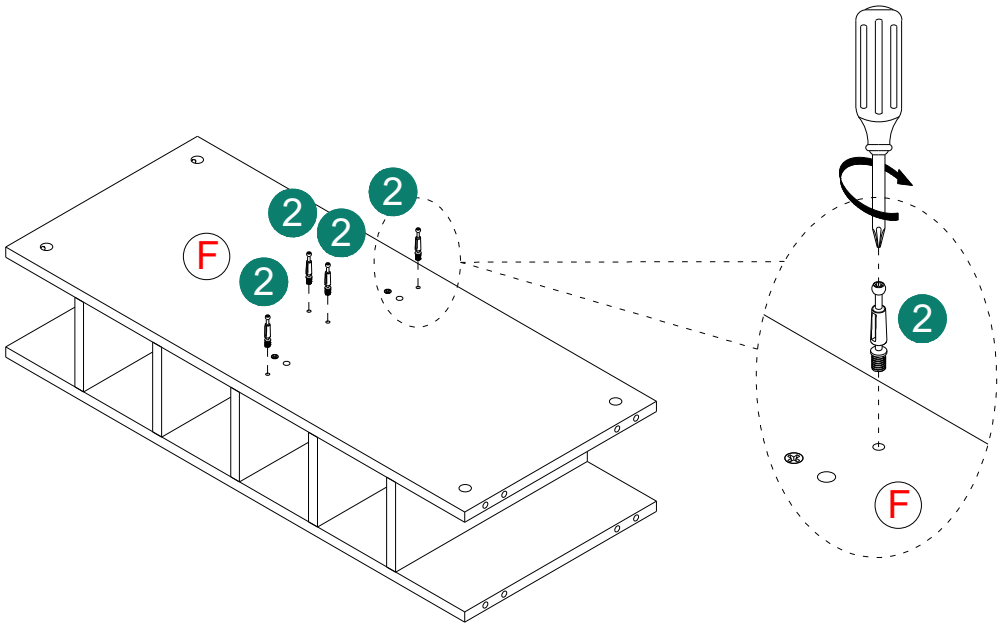


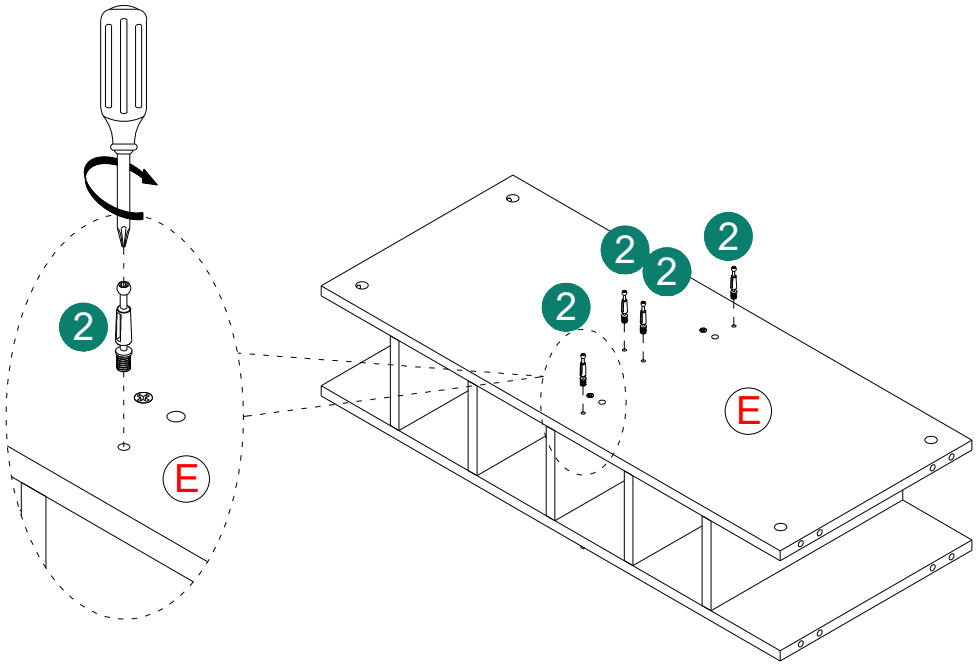


ASSEMBLY INSTRUCTIONS

3

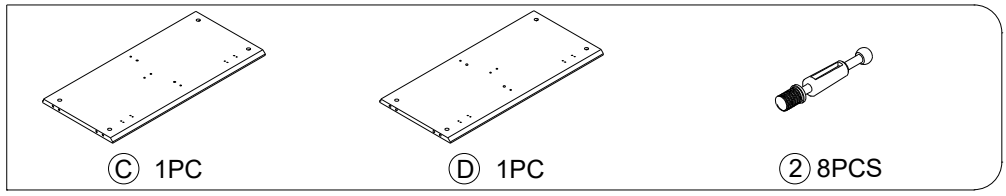


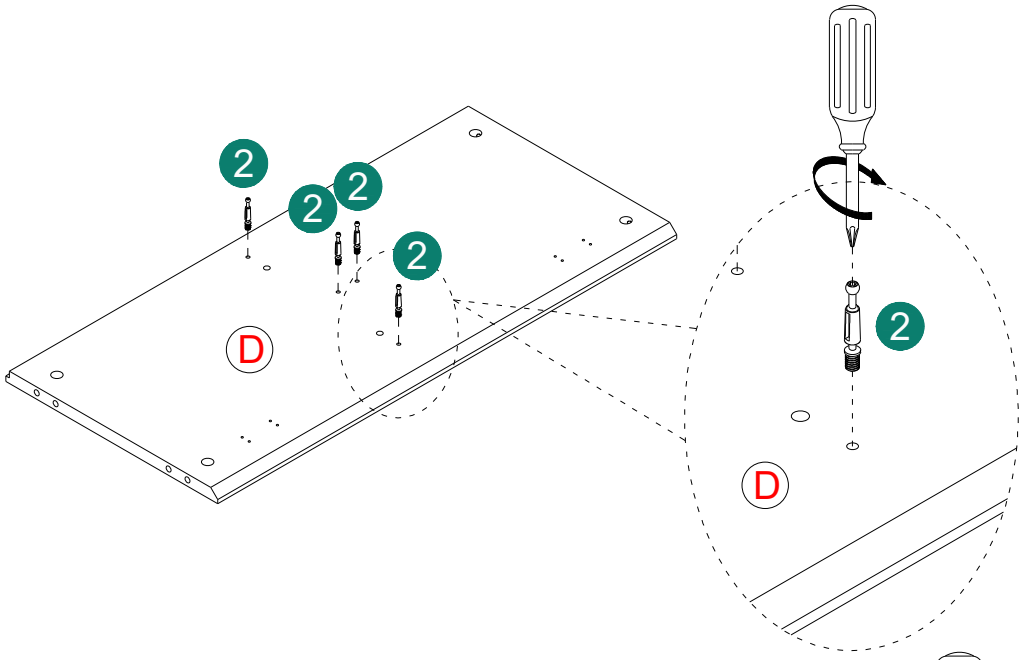


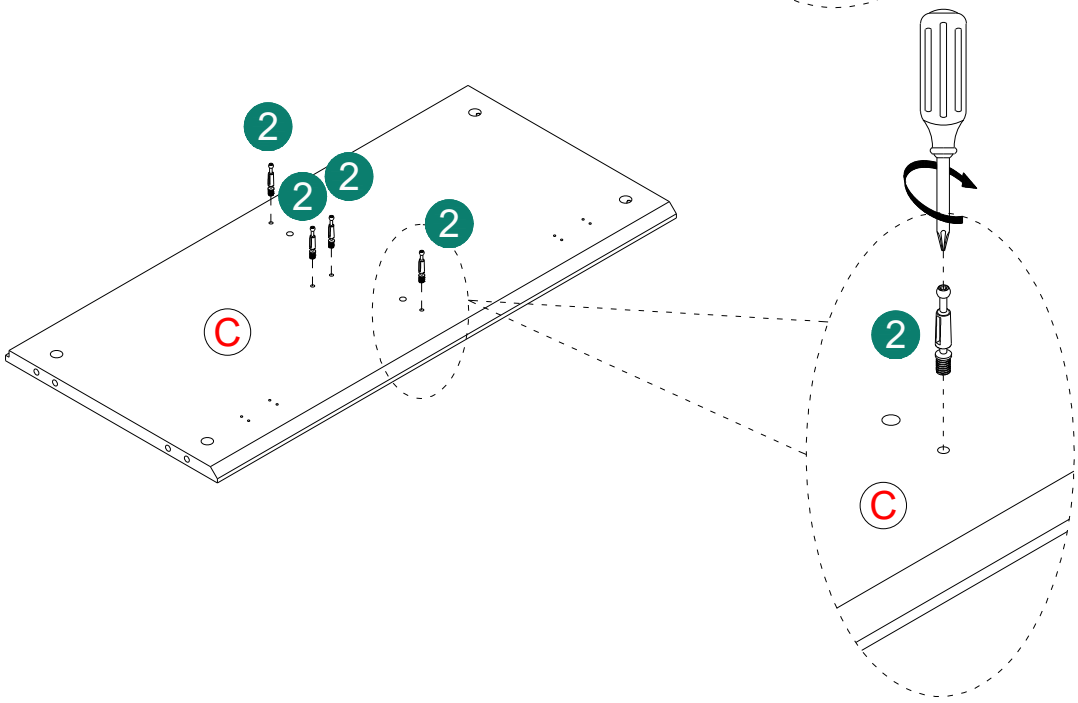

ASSEMBLY INSTRUCTIONS


4

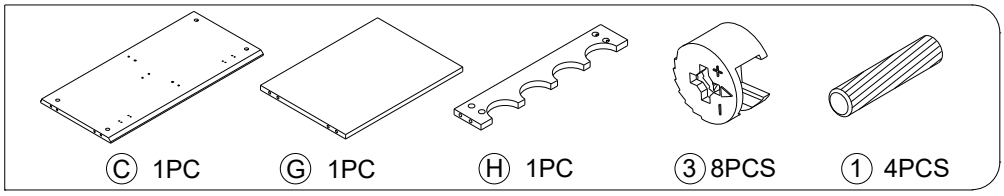


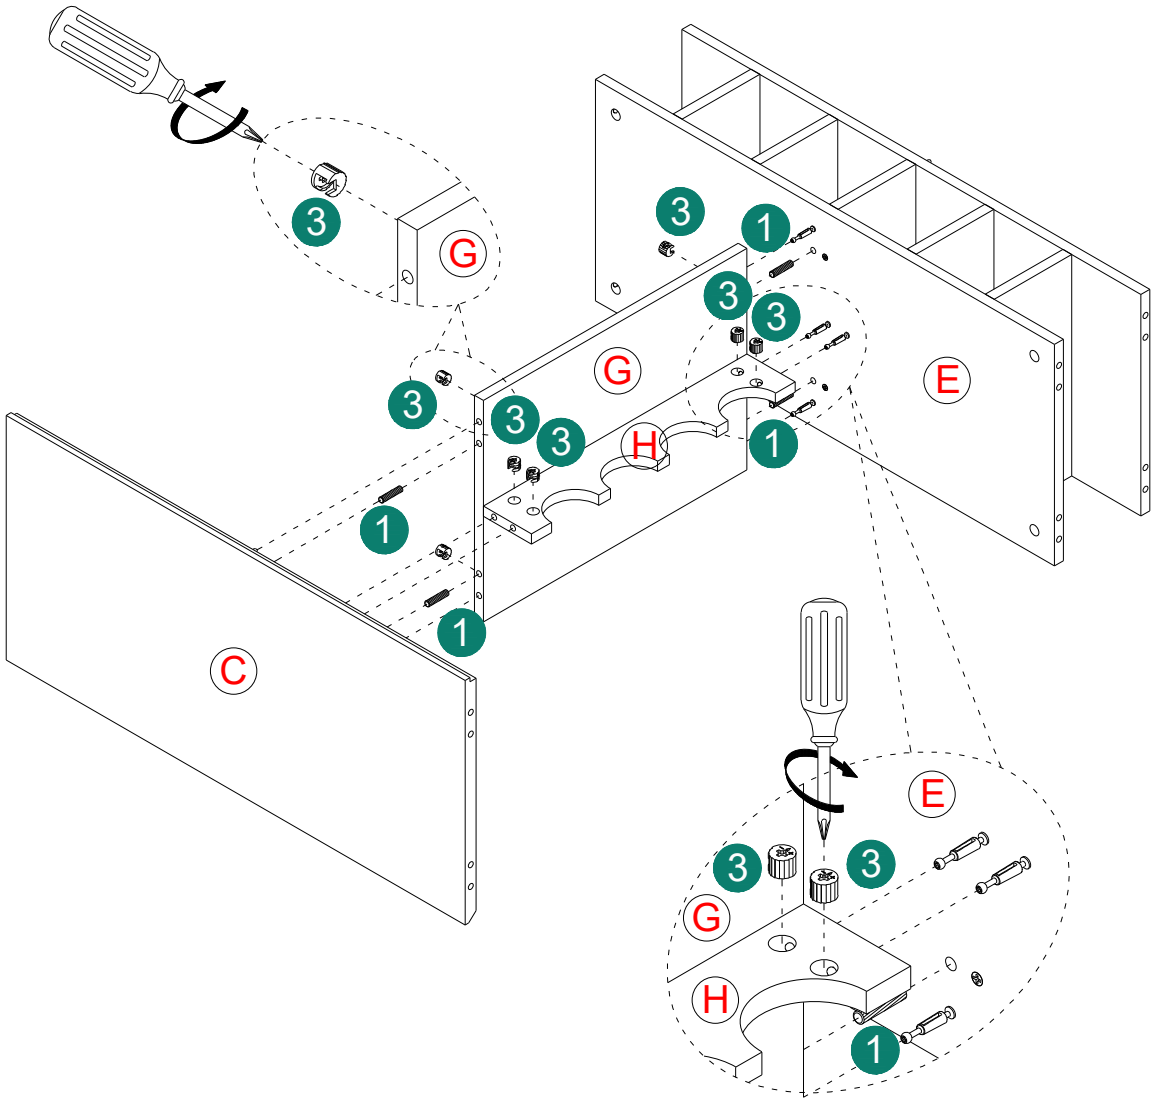

ASSEMBLY INSTRUCTIONS


5

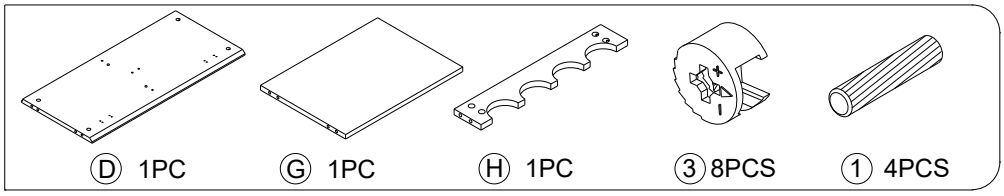


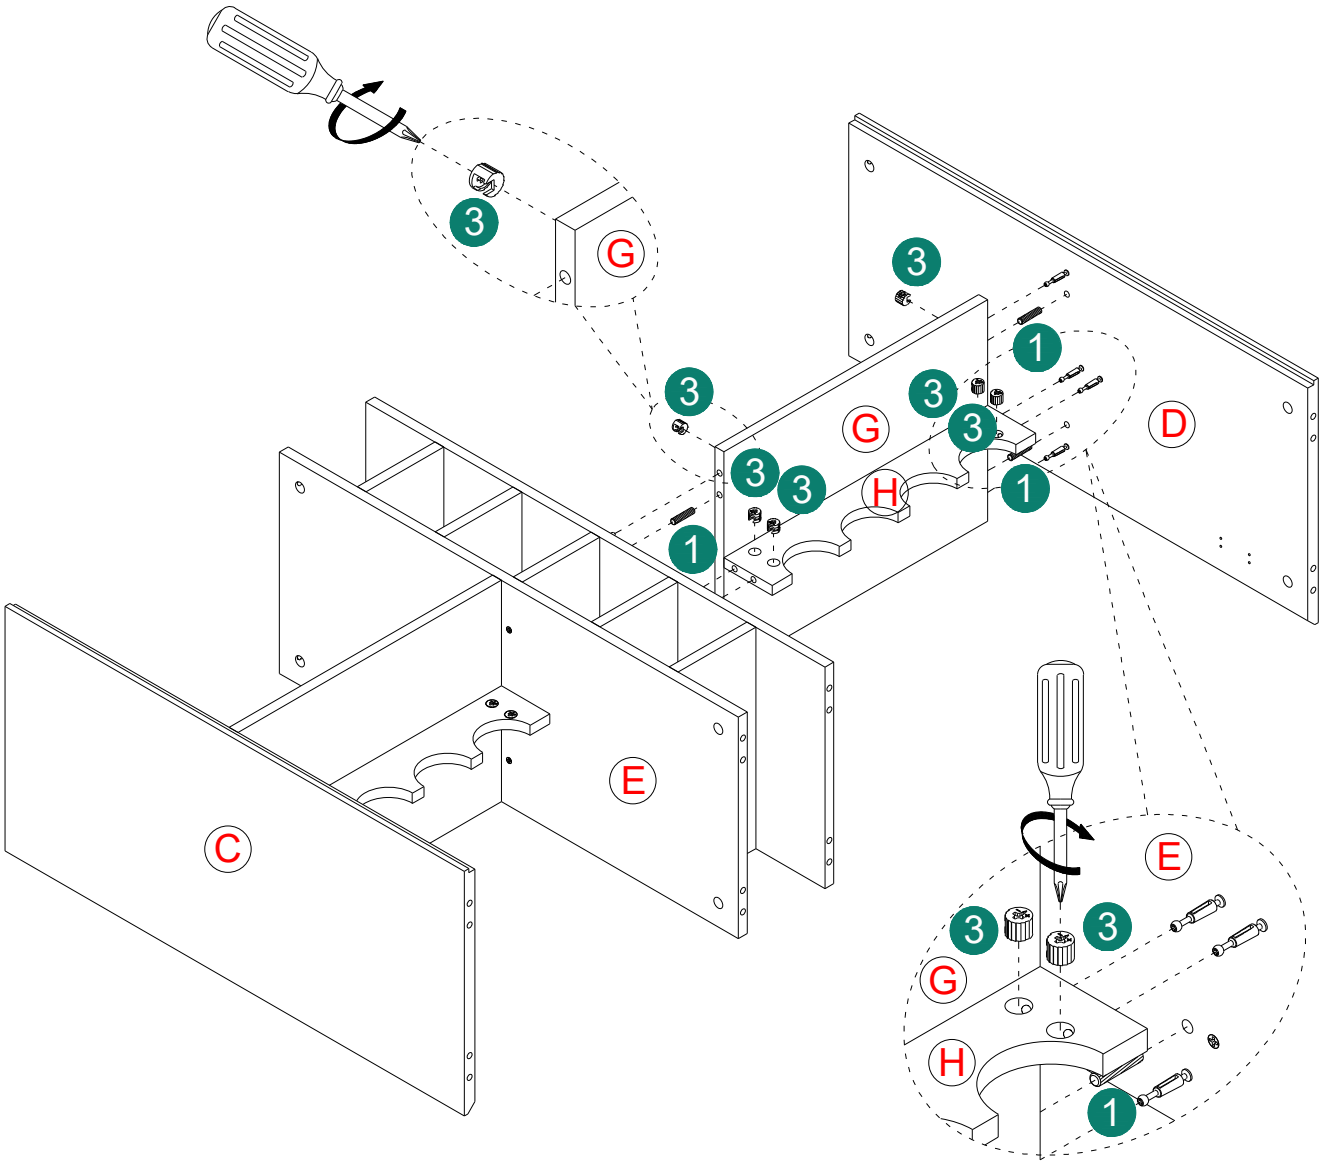

ASSEMBLY INSTRUCTIONS


6

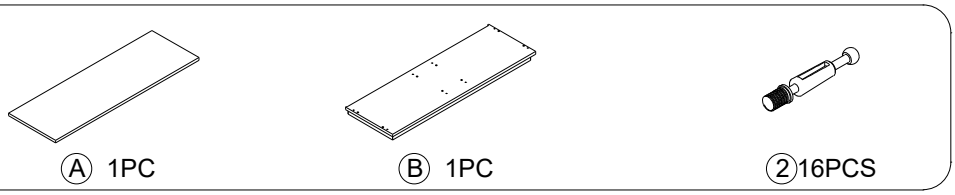

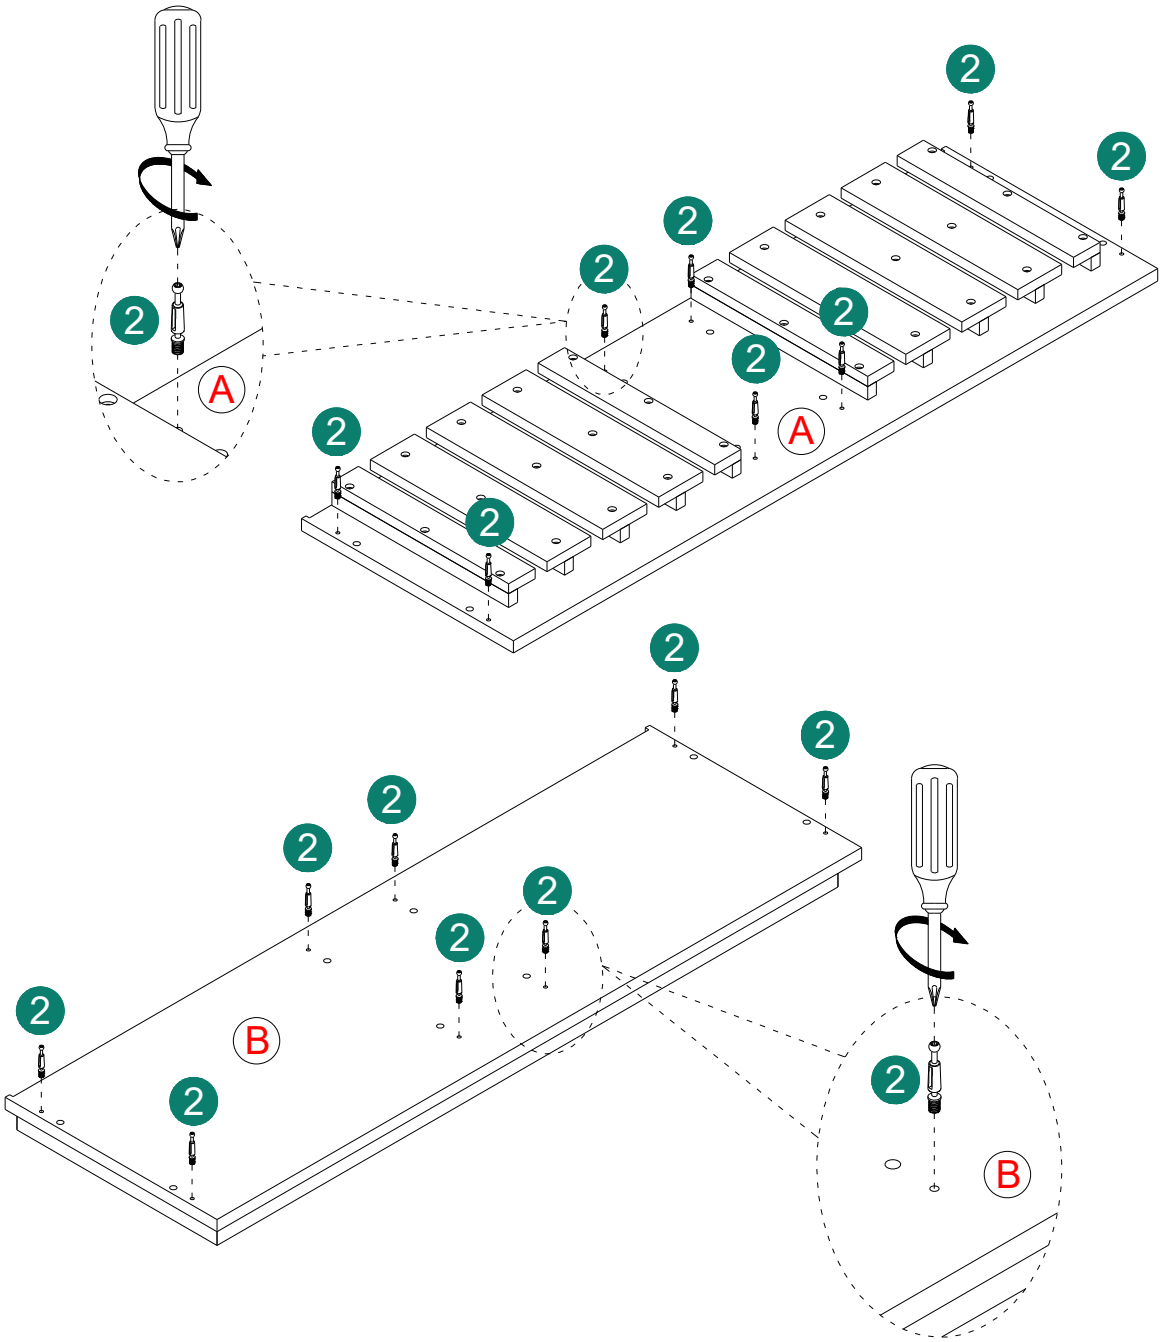


ASSEMBLY INSTRUCTIONS


7

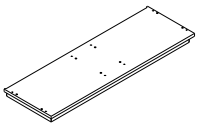


Ⓑ 1PC



① 8PCS




③ 8PCS

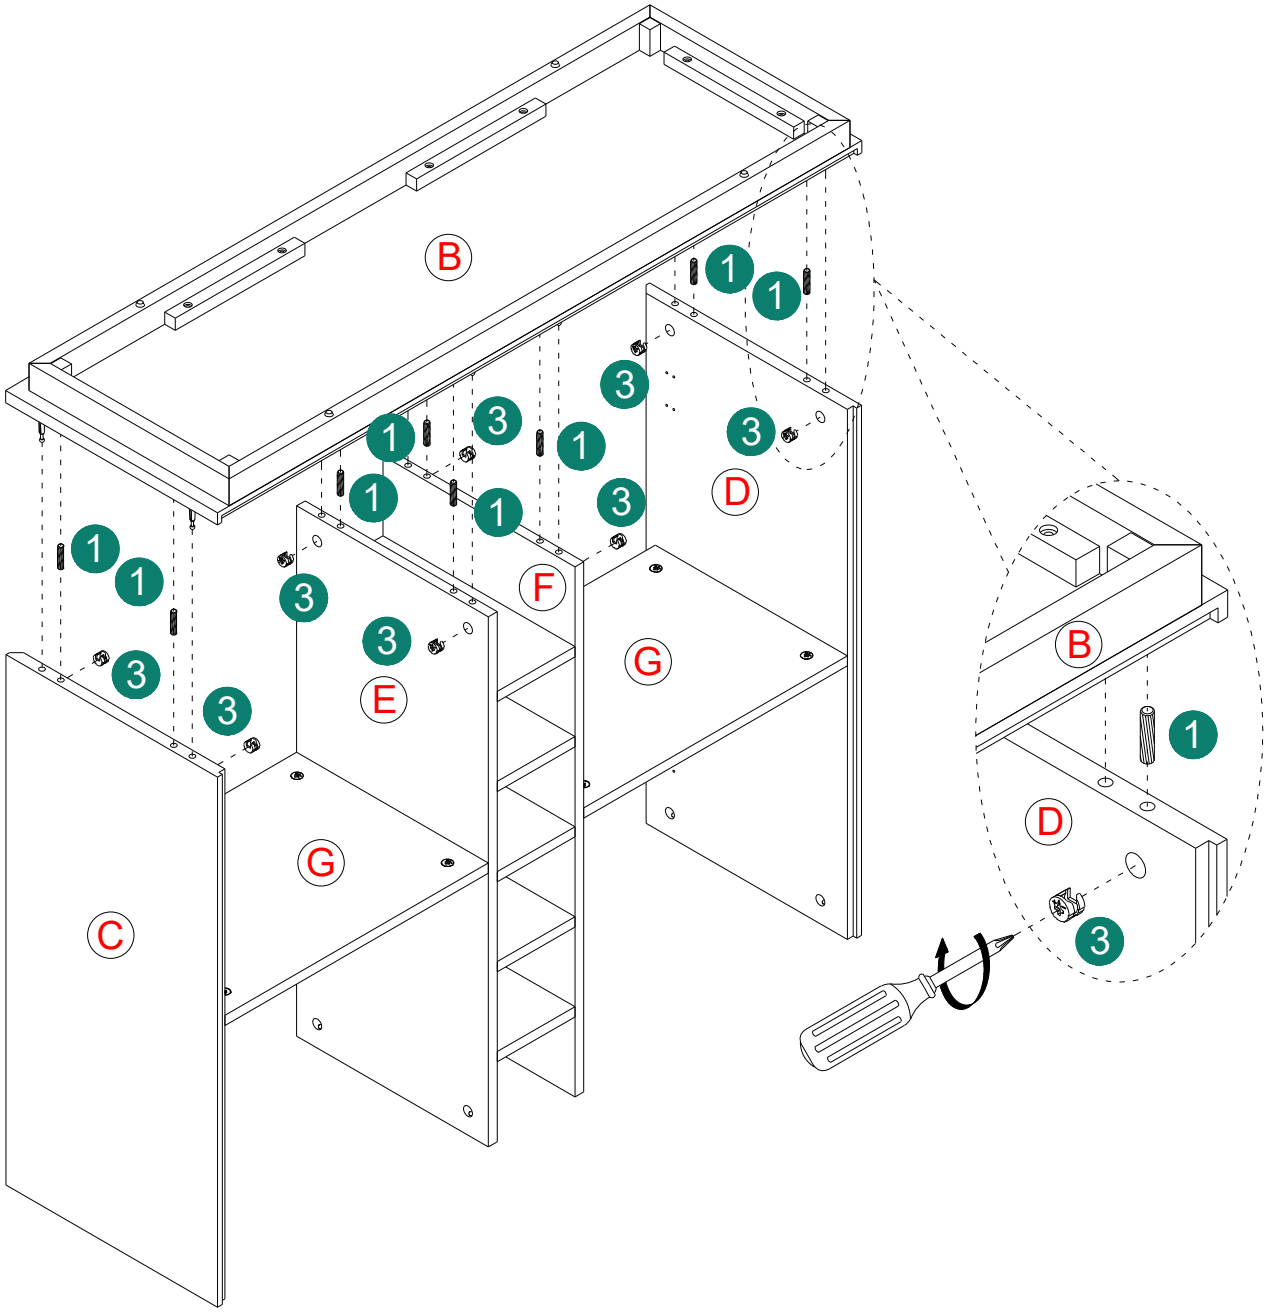


ASSEMBLY INSTRUCTIONS


8

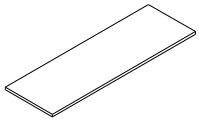


Ⓐ 1PC



① 8PCS




③ 8PCS

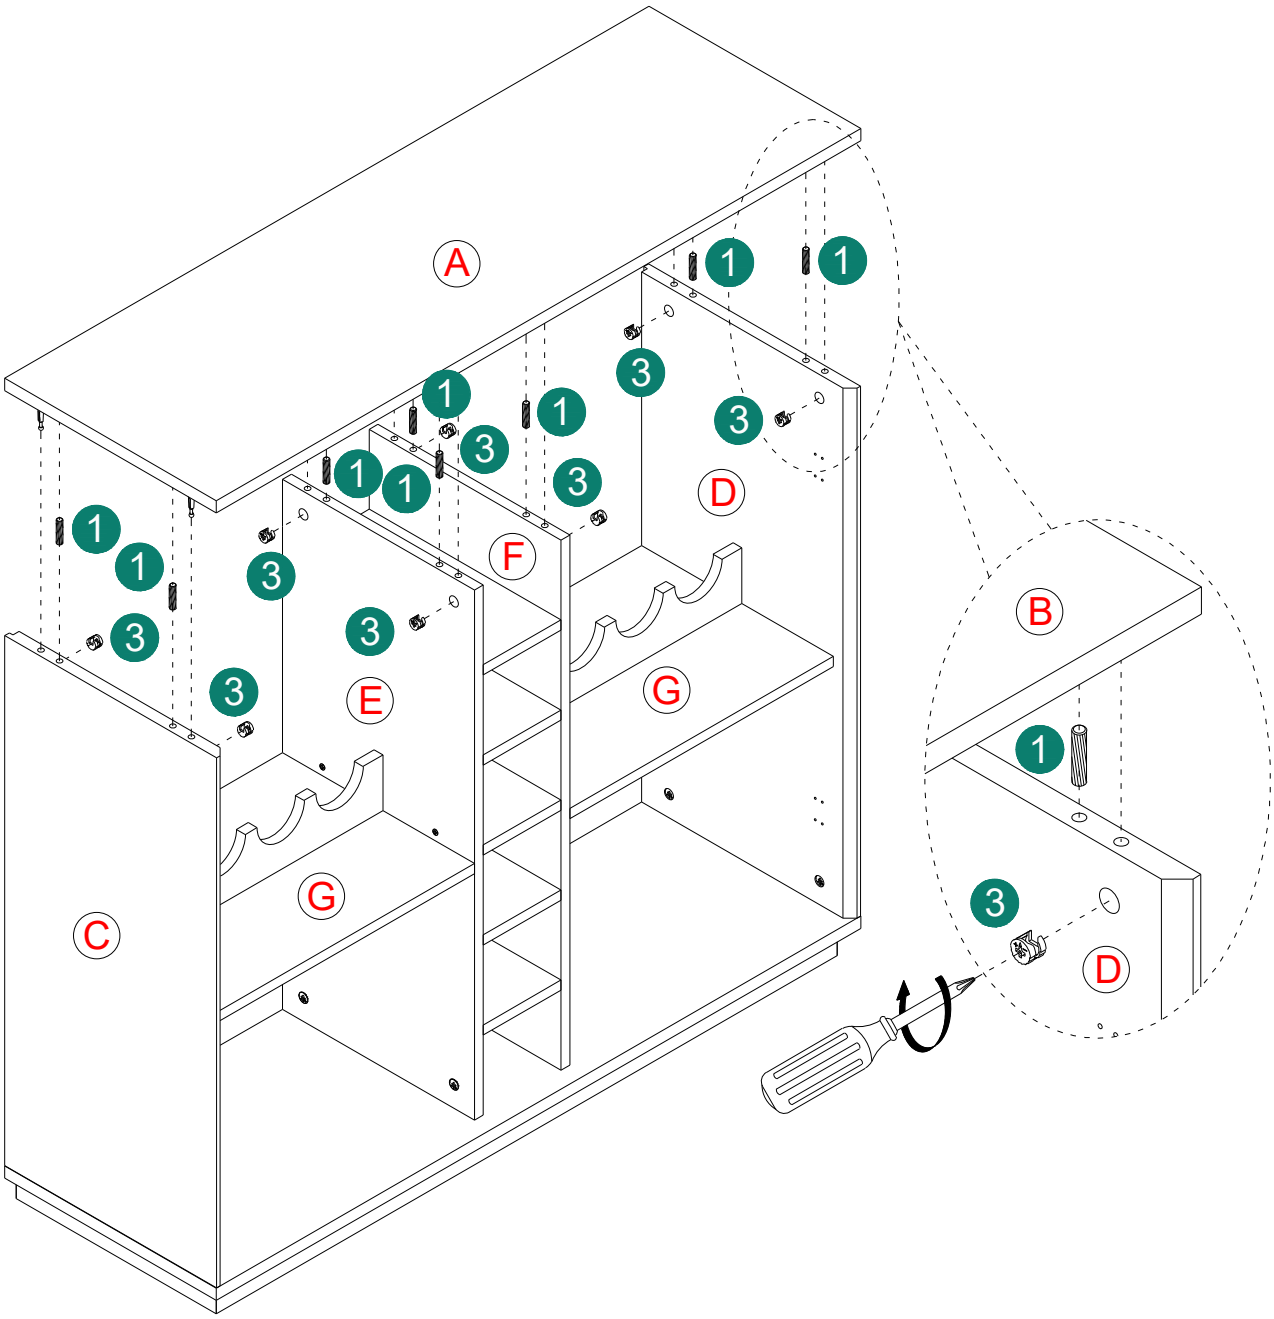


ASSEMBLY INSTRUCTIONS


9

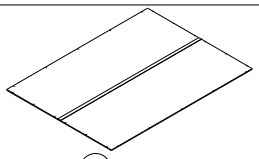

Ⓜ 1PC




Ø3*15mm
⑦ 24PCS

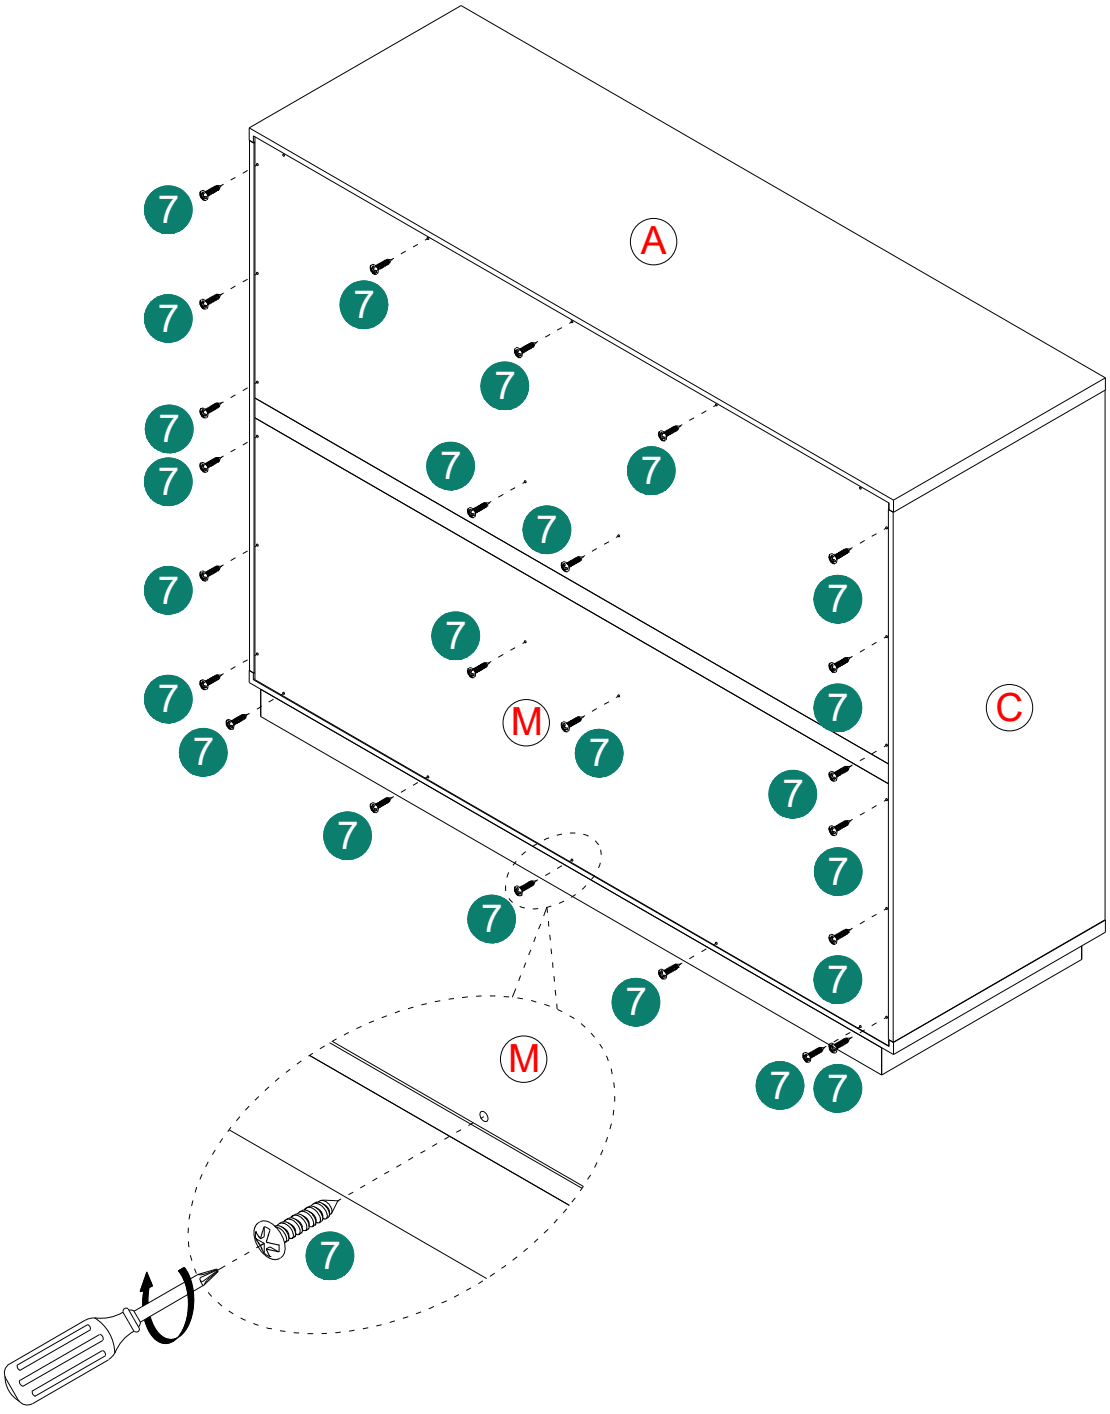



ASSEMBLY INSTRUCTIONS

10

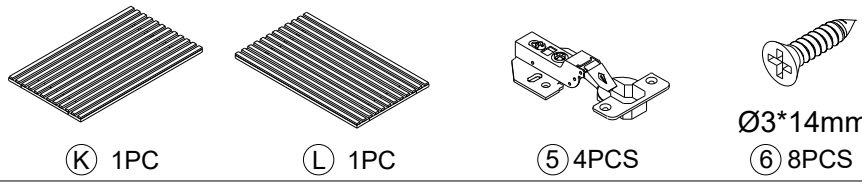


Ⓚ 1PC Ⓛ 1PC ⑤ 4PCS ⑥ 8PCS

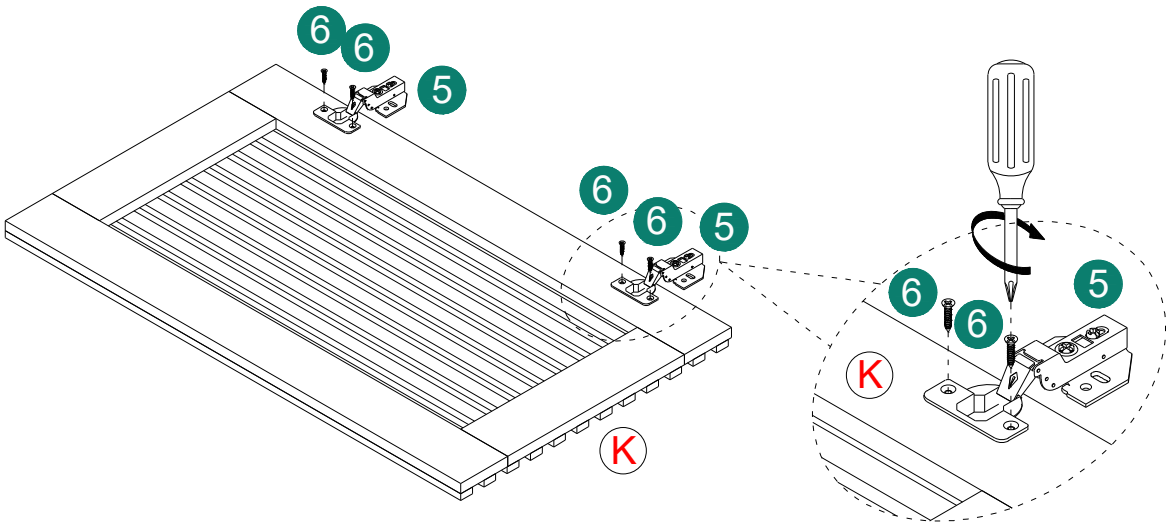

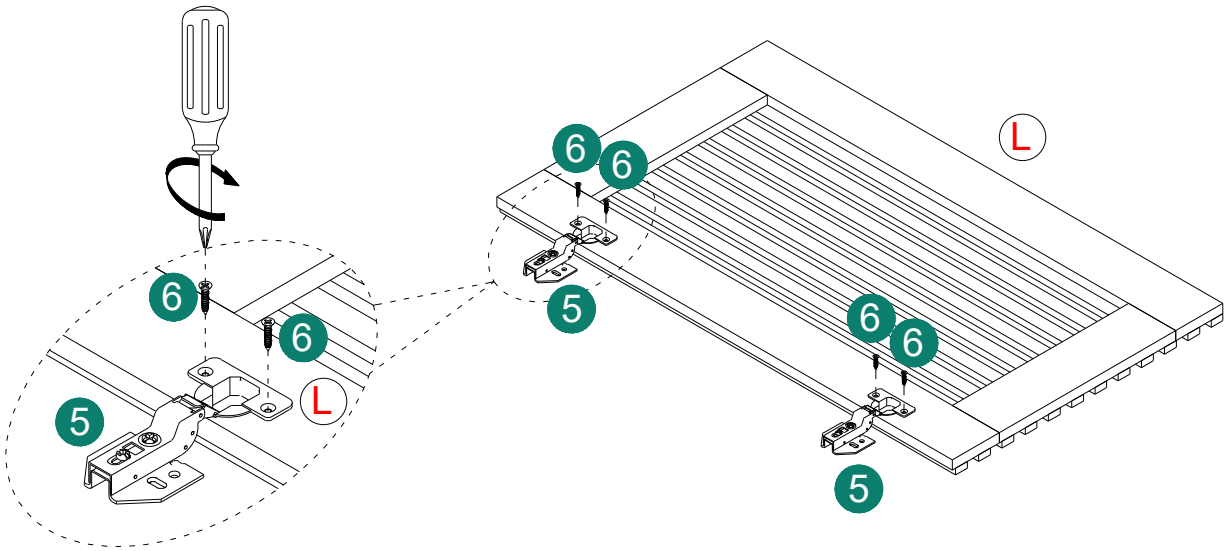

ASSEMBLY INSTRUCTIONS


11



Ø3*14mm
⑥ 16PCS




⑧ 4PCS

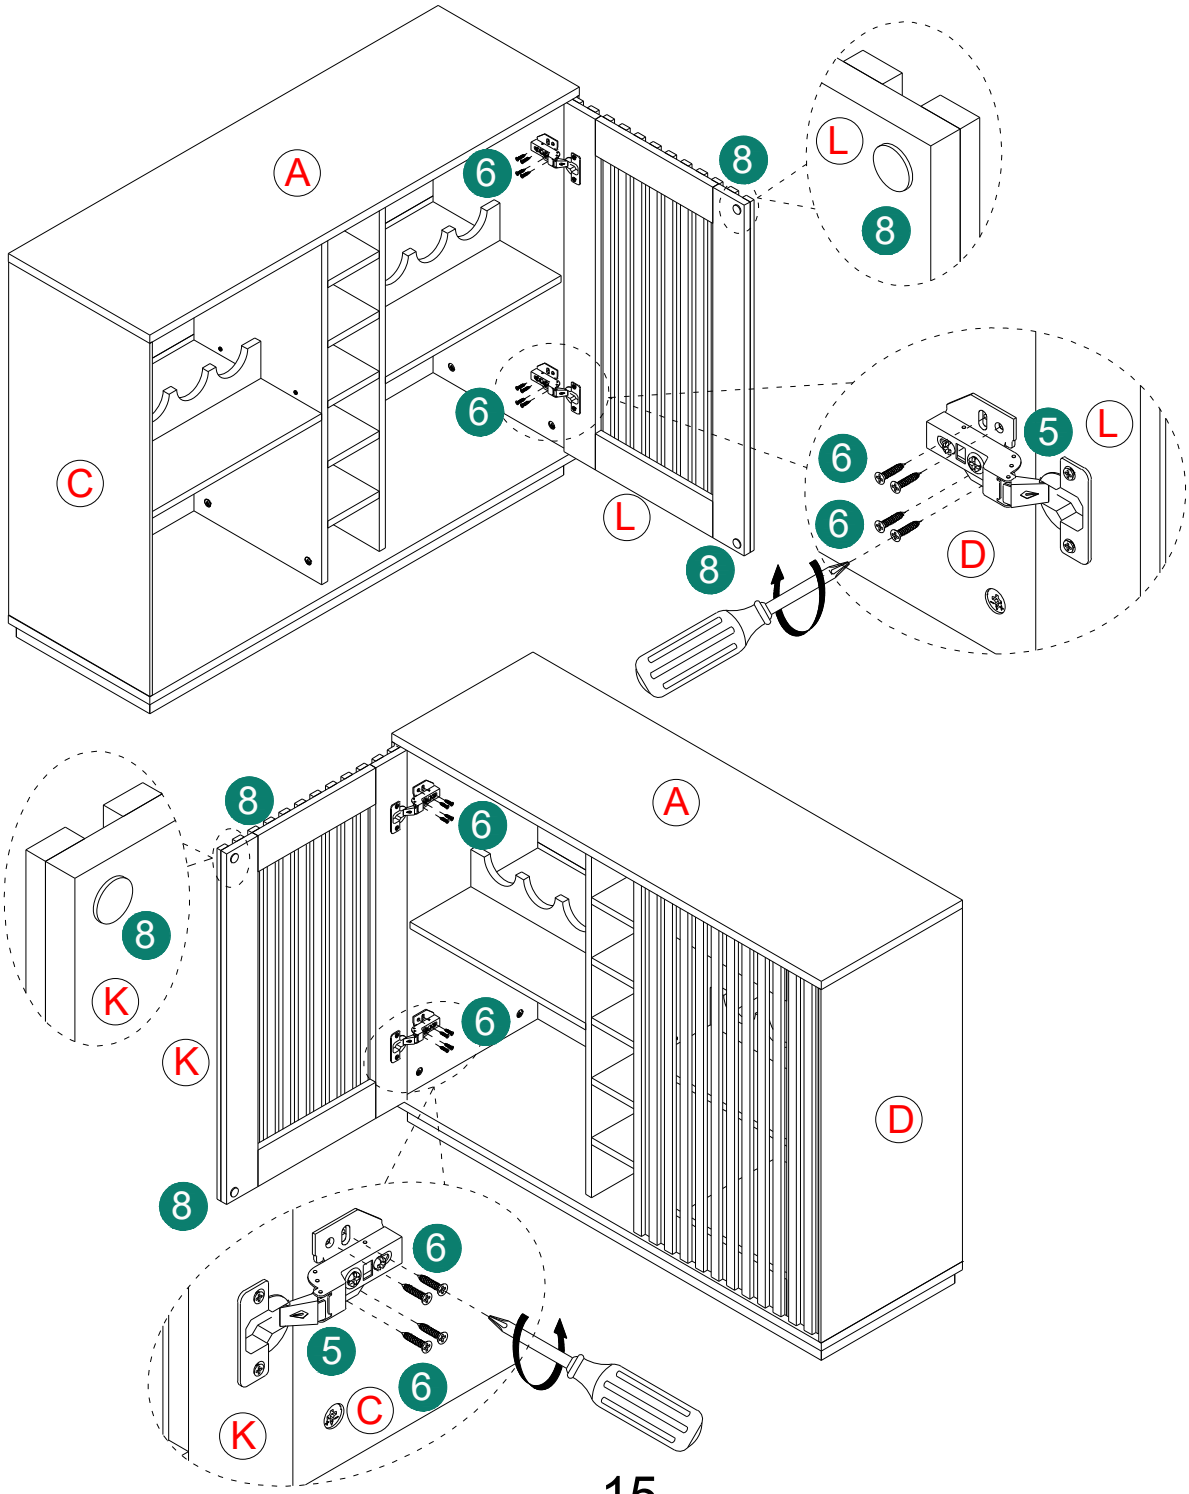


ASSEMBLY INSTRUCTIONS


12

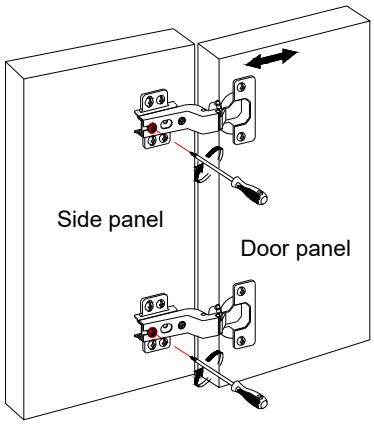

1

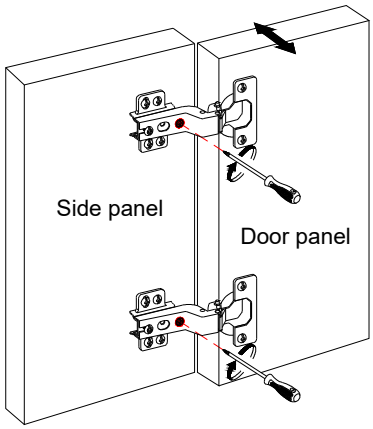

2

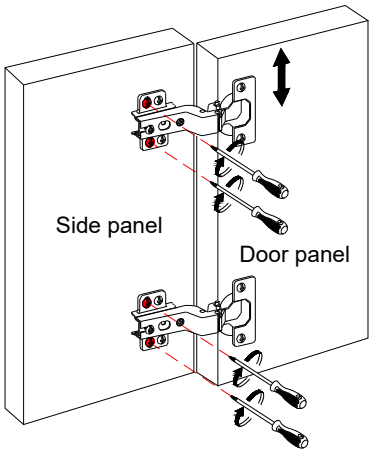

3

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

Adjustment range: 4mm

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm

Up-Down Direction Adjustment:


Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm

ASSEMBLY INSTRUCTIONS


13

Common Door Panel Issues:

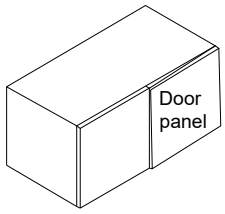



Door panel is not straight

Adjust the door hinges

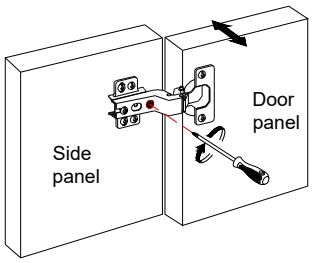


Finished

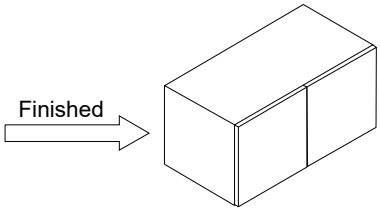

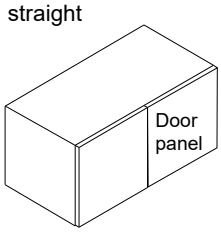


The gap between door panels is too large

Adjust the door hinges

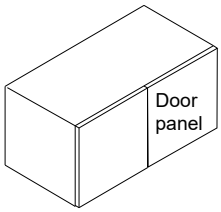



The door panels are not coplanar

Adjust the door hinges

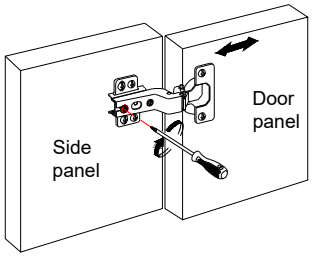


Finished

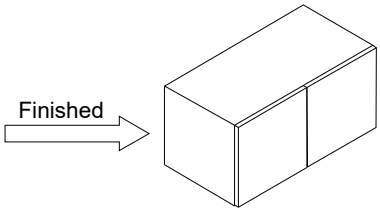

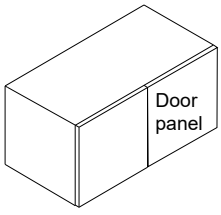


The two door panels are not at the same height

Adjust the door hinges

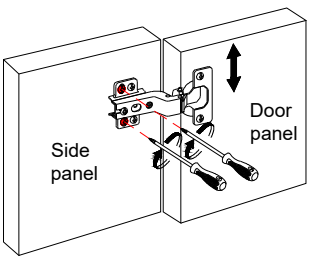


Finished





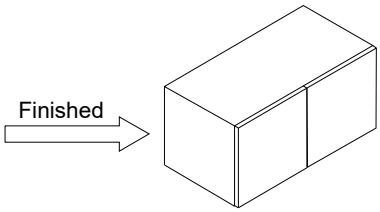


ASSEMBLY INSTRUCTIONS

14



⑨ 2set

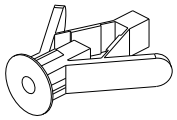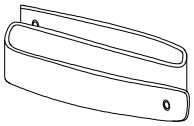A	B	C	D	E
				
2pcs	4pcs	Ø8*3/4" 2pcs	Ø8*1-1/2" 2pcs	2pcs

