# ASSEMBLY INSTRUCTIONS

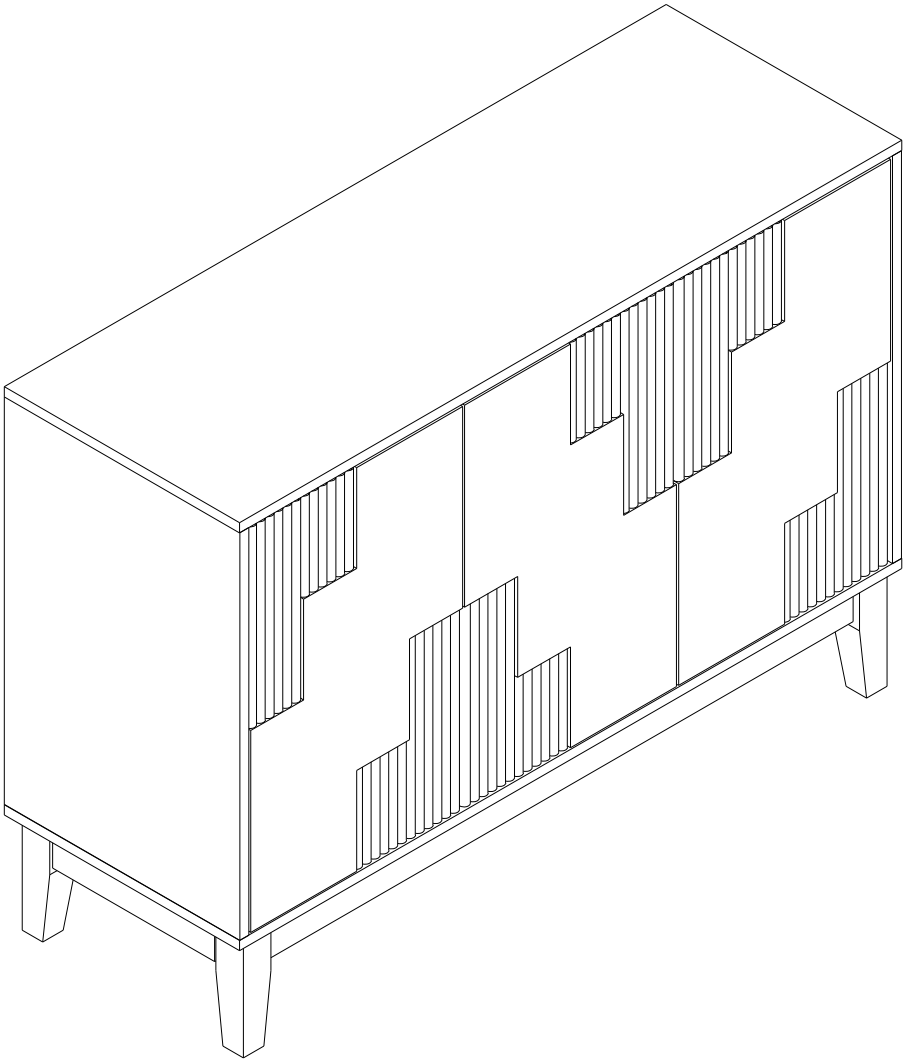

**Notice**:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

| | | |
|---|---|---|
| 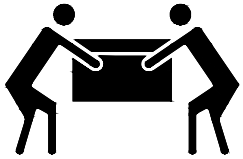 | 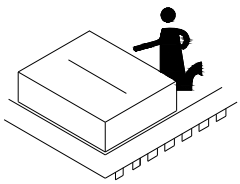 | 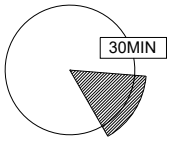 |
| **Recommended installers:2** | **Put a carpet on the floor before unpacking** | **Estimate installation time: 30minutes** |

# ASSEMBLY INSTRUCTIONS

## PART LIST

| Item no. | Reference Image | Qty | Item no. | Reference Image | Qty |
|---|---|---|---|---|---|
| A | 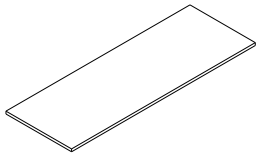 | X1 | G | 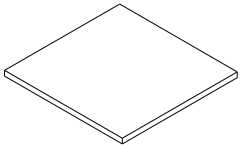 | X1 |
| B | 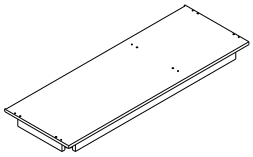 | X1 | H | 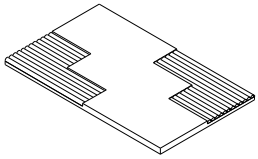 | X1 |
| C | 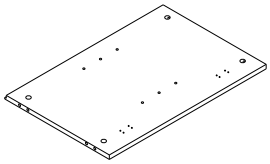 | X1 | I | 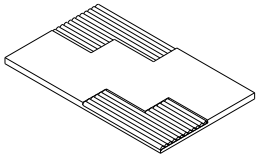 | X1 |
| D | 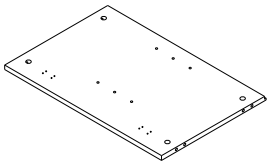 | X1 | J | 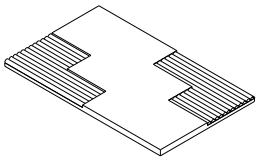 | X1 |
| E | 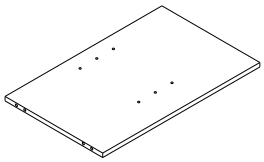 | X1 | K | 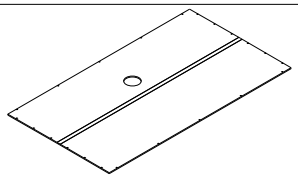 | X1 |
| F | 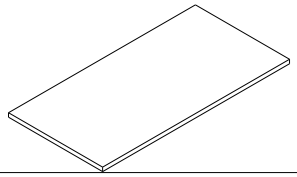 | X1 | L |  | X4 |
| | | | | | |
| | | | | | |

# ASSEMBLY INSTRUCTIONS

## HARDWARE LIST

| Item no. | Reference Image | Qty |
|---|---|---|
| 1 |  Ø8*30mm | X12+1 |
| 2 |  | X12+1 |
| 3 |  | X12+1 |
| 4 |  Ø1/4"*2" | X8 |
| 5 |  Ø1/4"*D12mm | X8 |
| 6 |  Ø1/4"*D16mm | X8 |
| | | |
| | | |
| | | |
| | | |

| Item no. | Reference Image | Qty |
|---|---|---|
| 7 |  | X4 |
| 8 |  | X2 |
| 9 |  Ø3*14mm | X36+3 |
| 10 |  Ø3*15mm | X22+2 |
| 11 |  | X8 |
| 12 |  | X1 |
| 13 |  | X2 |
| | | |
| | | |
| | | |

# ASSEMBLY INSTRUCTIONS

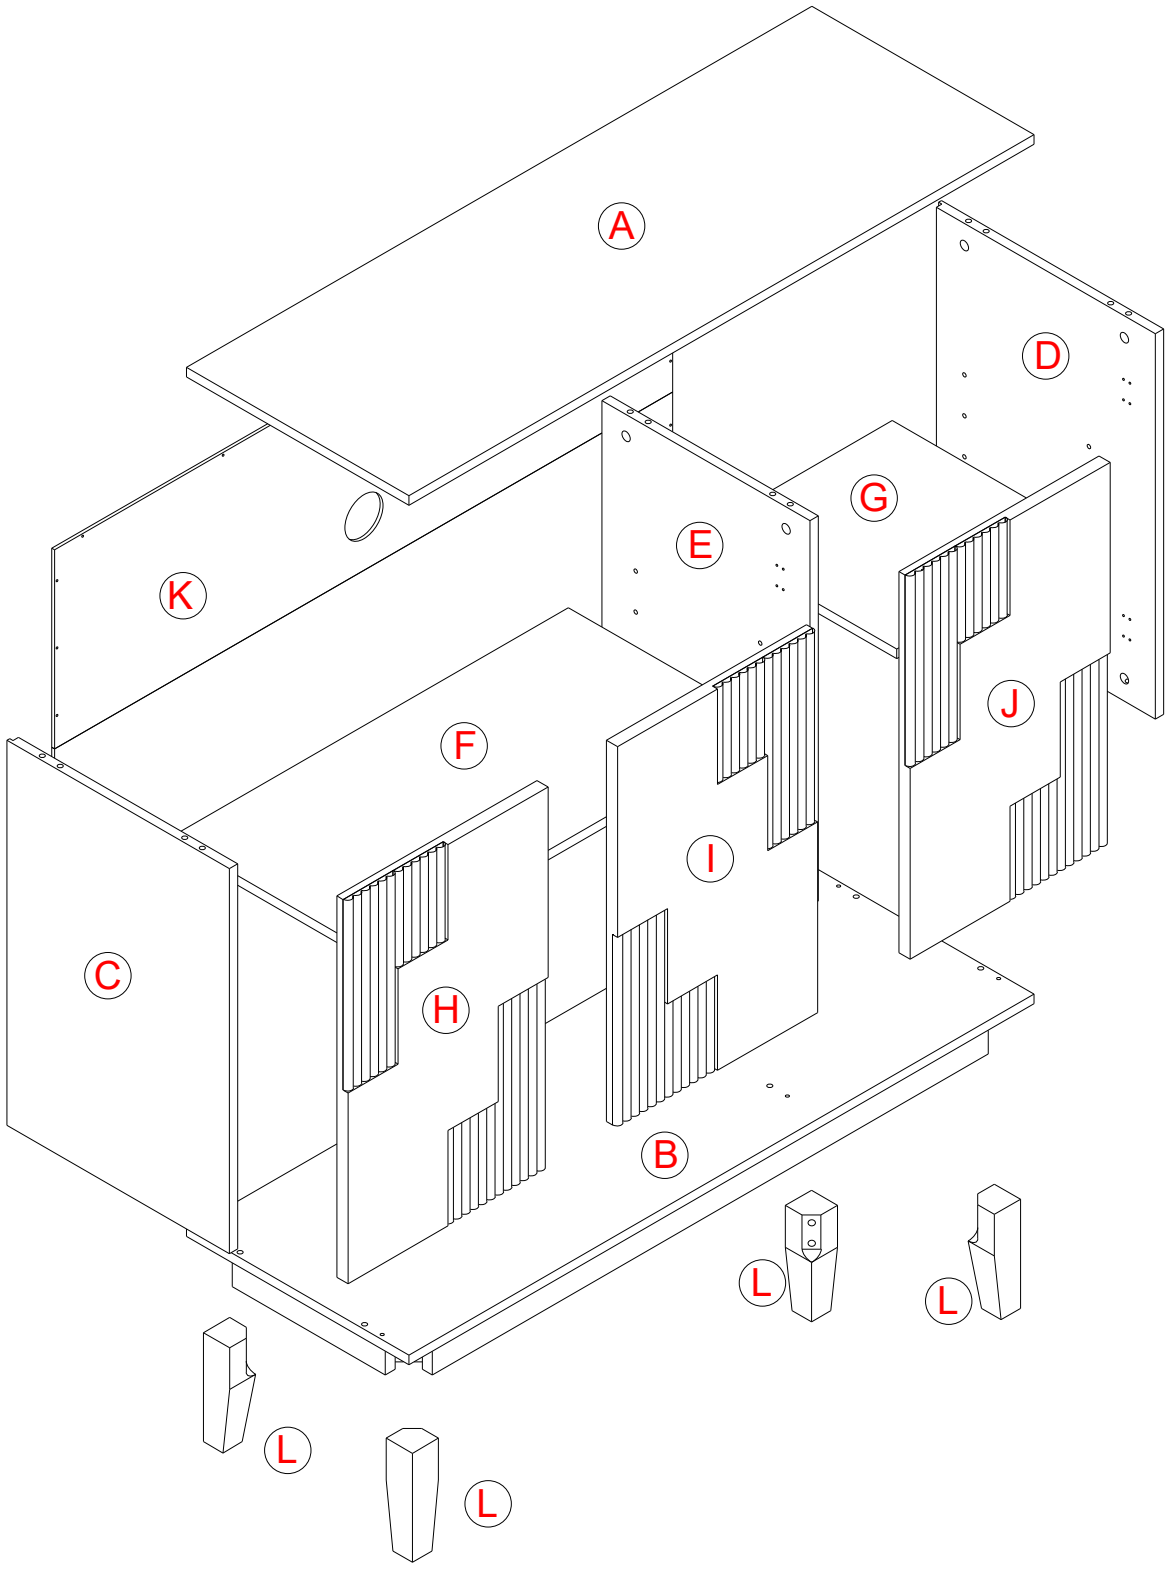

# ASSEMBLY INSTRUCTIONS

## 1

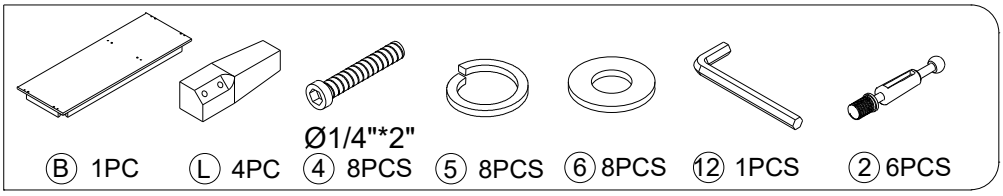


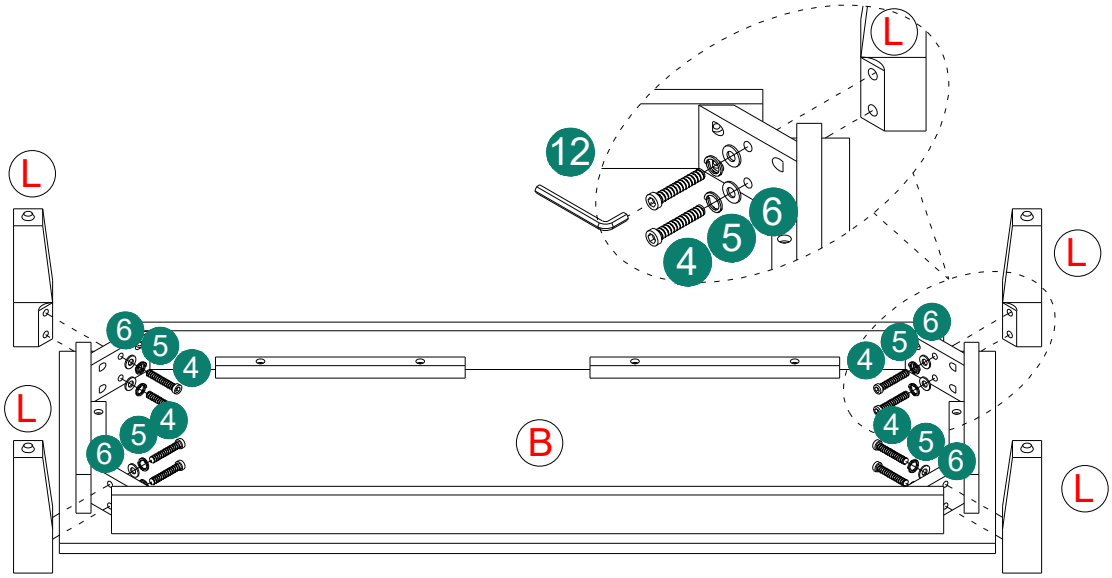


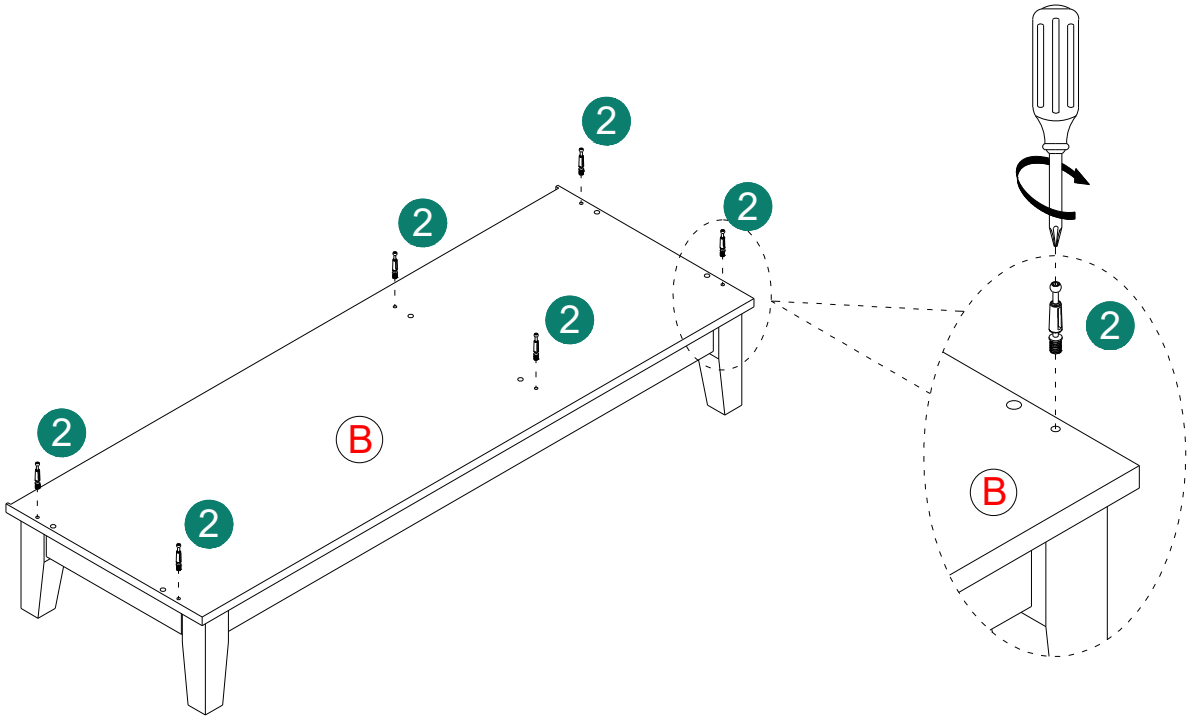

# ASSEMBLY INSTRUCTIONS

## 2

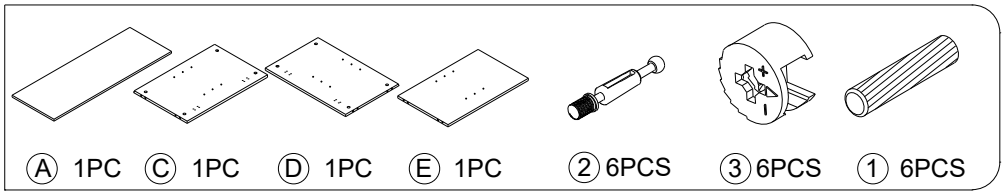


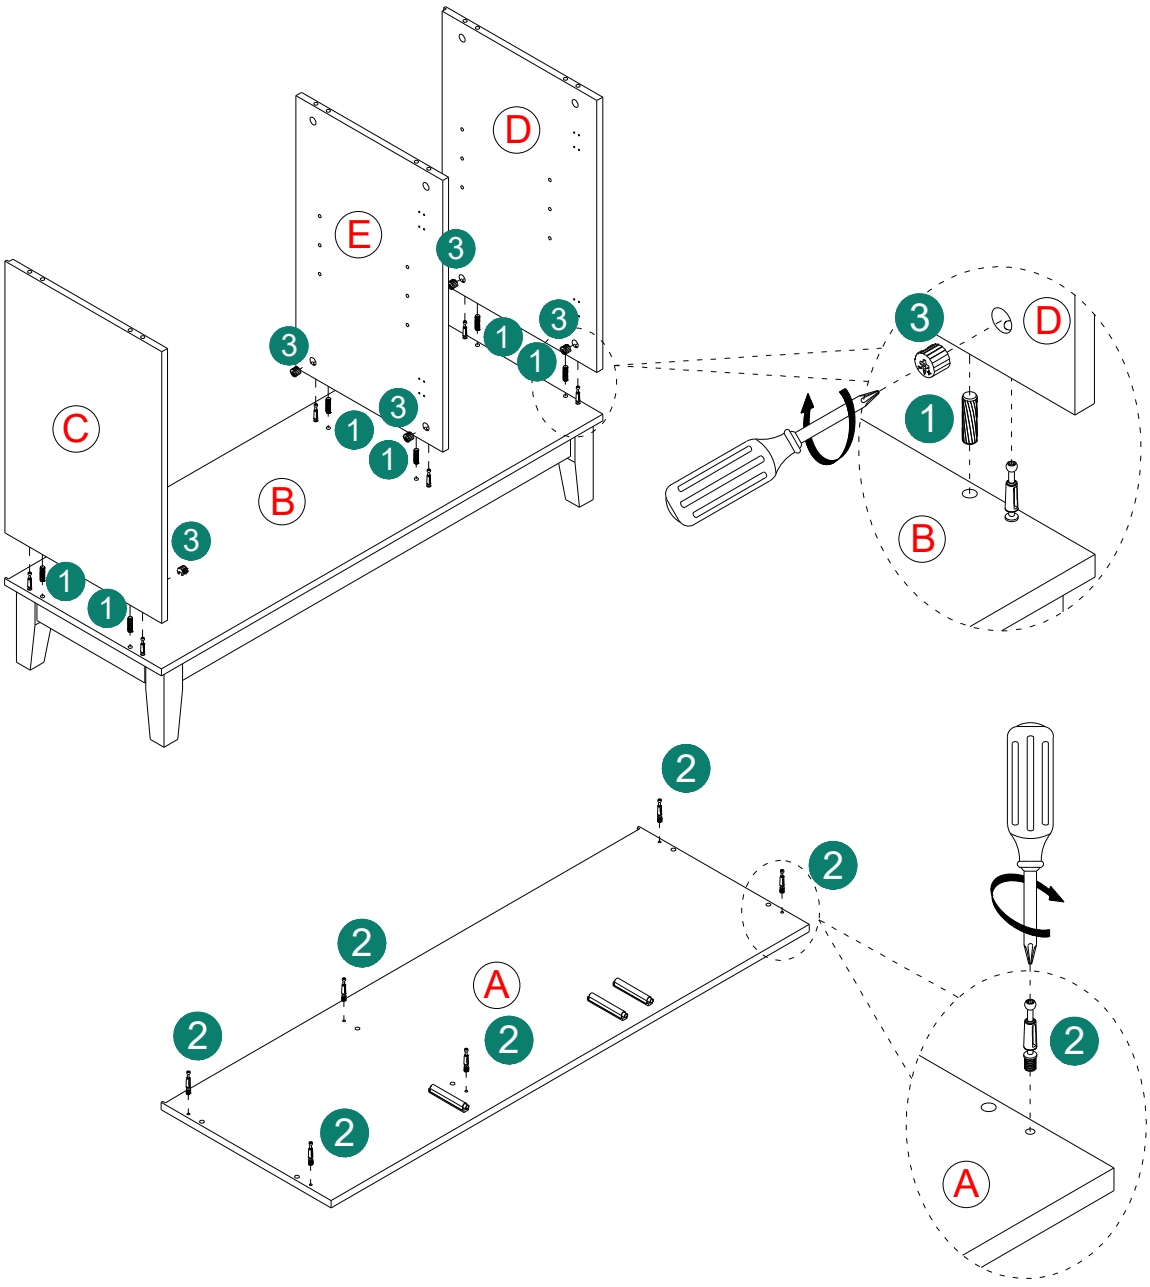

# ASSEMBLY INSTRUCTIONS

## 3

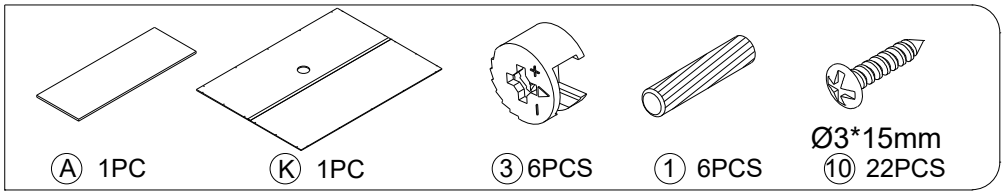


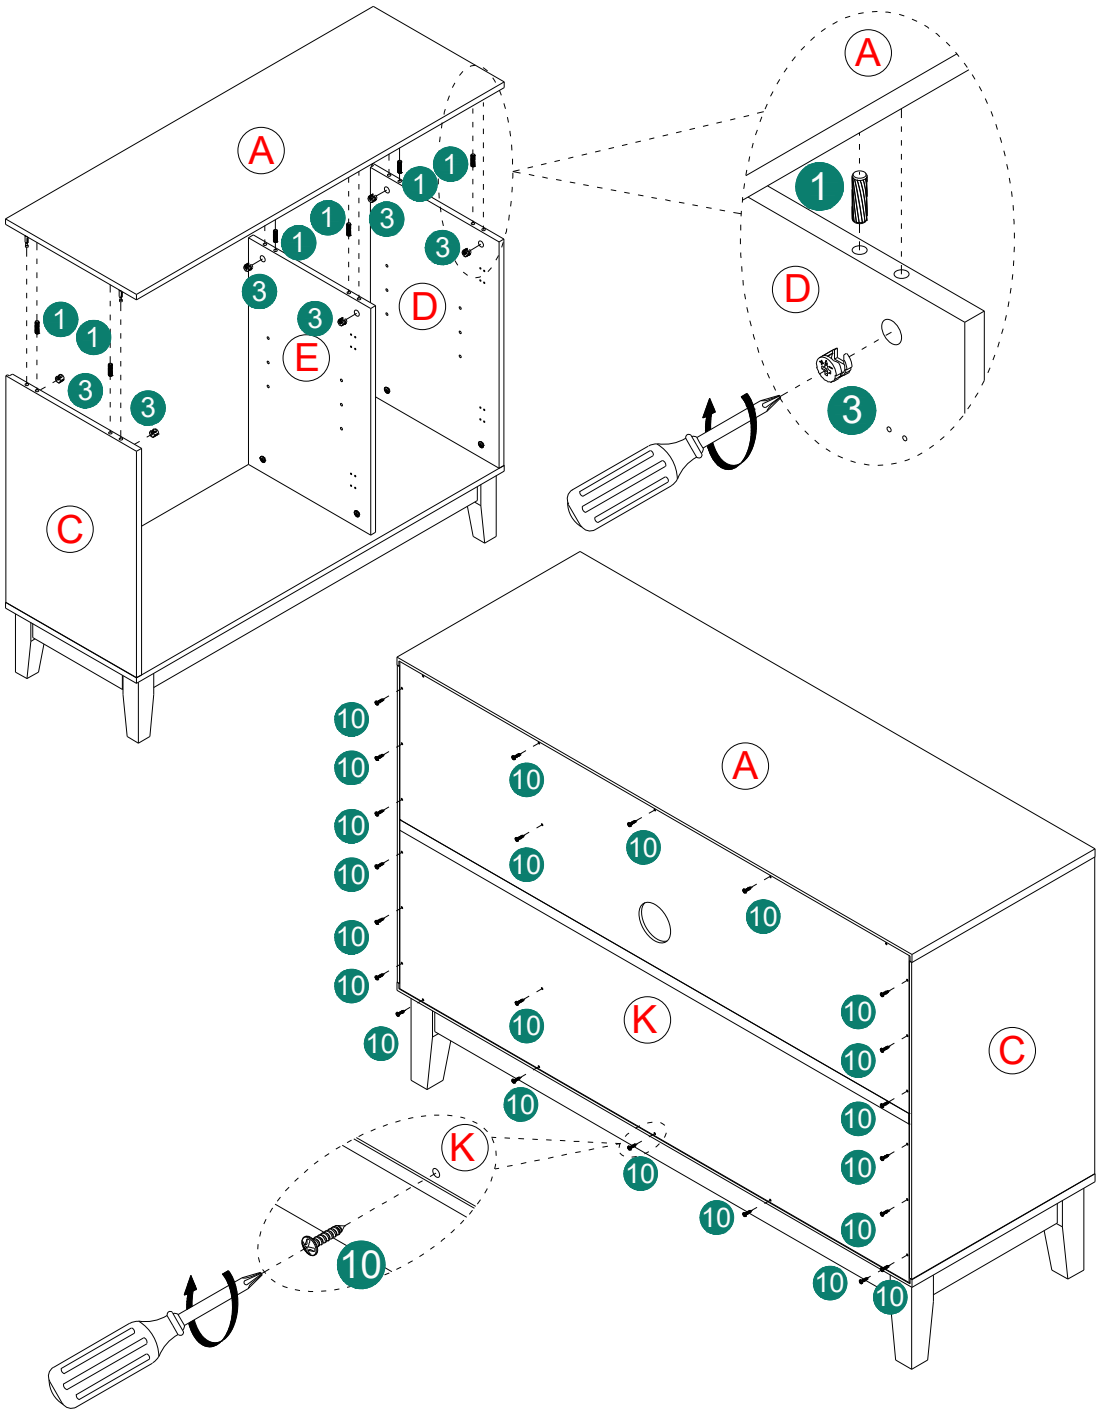

# ASSEMBLY INSTRUCTIONS

## 4

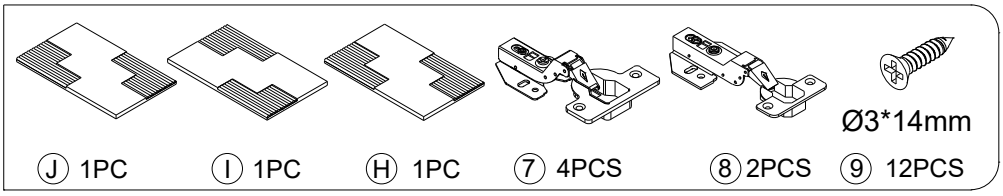


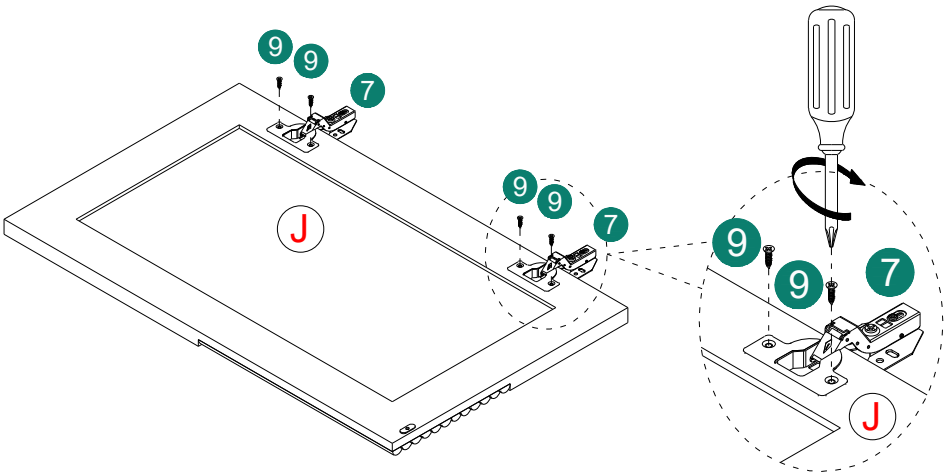


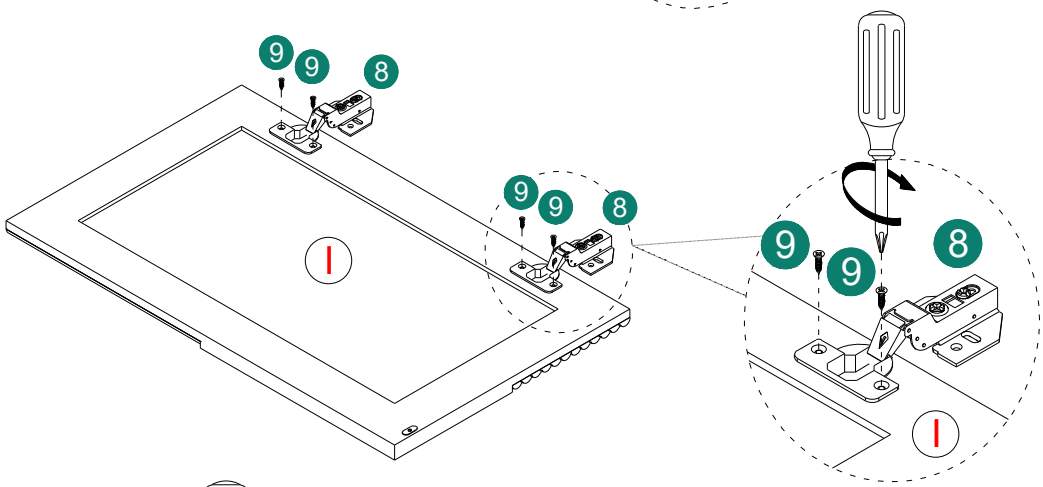


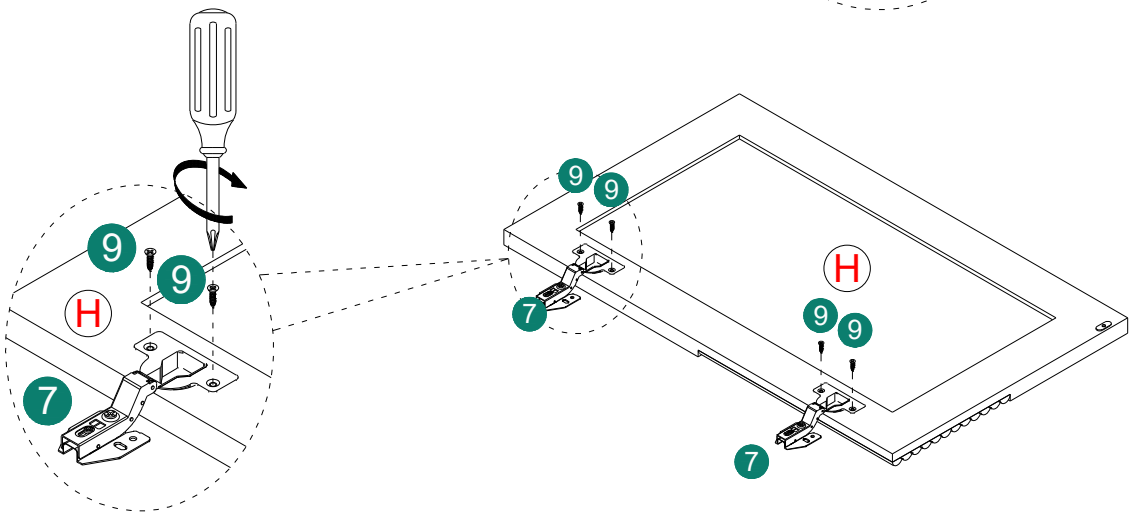

# ASSEMBLY INSTRUCTIONS

## 5

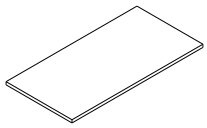

Ⓕ 1PC

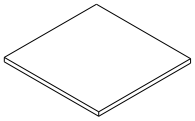

Ⓖ 1PC



⑪ 8PCS

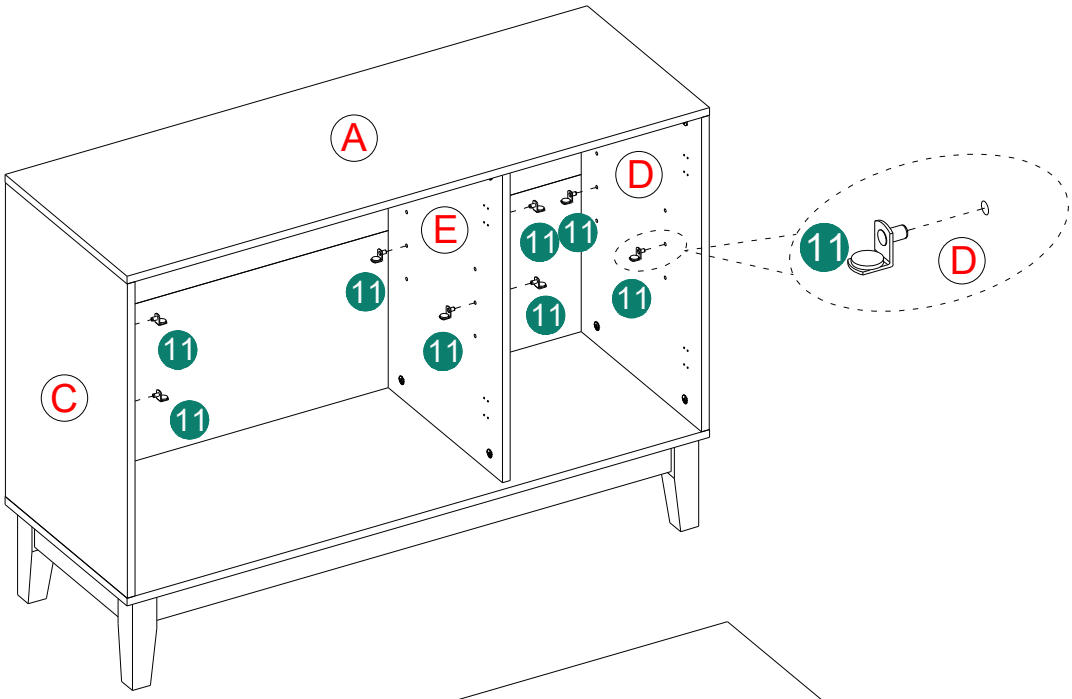


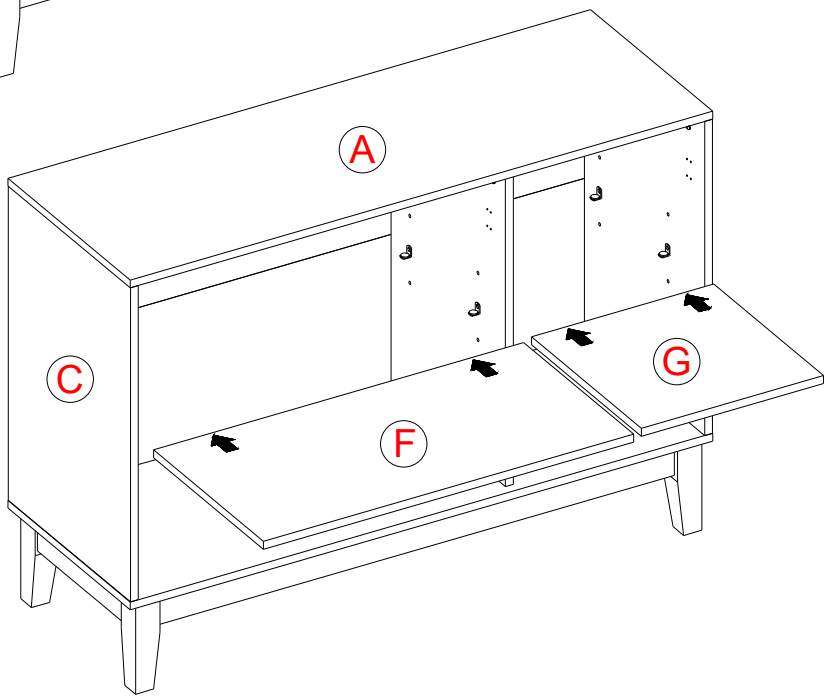

# ASSEMBLY INSTRUCTIONS

## 6

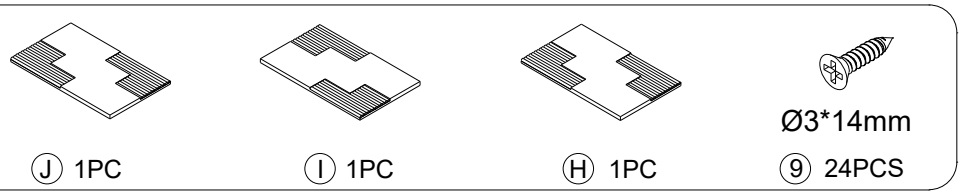


J 1PC　I 1PC　H 1PC　9 24PCS

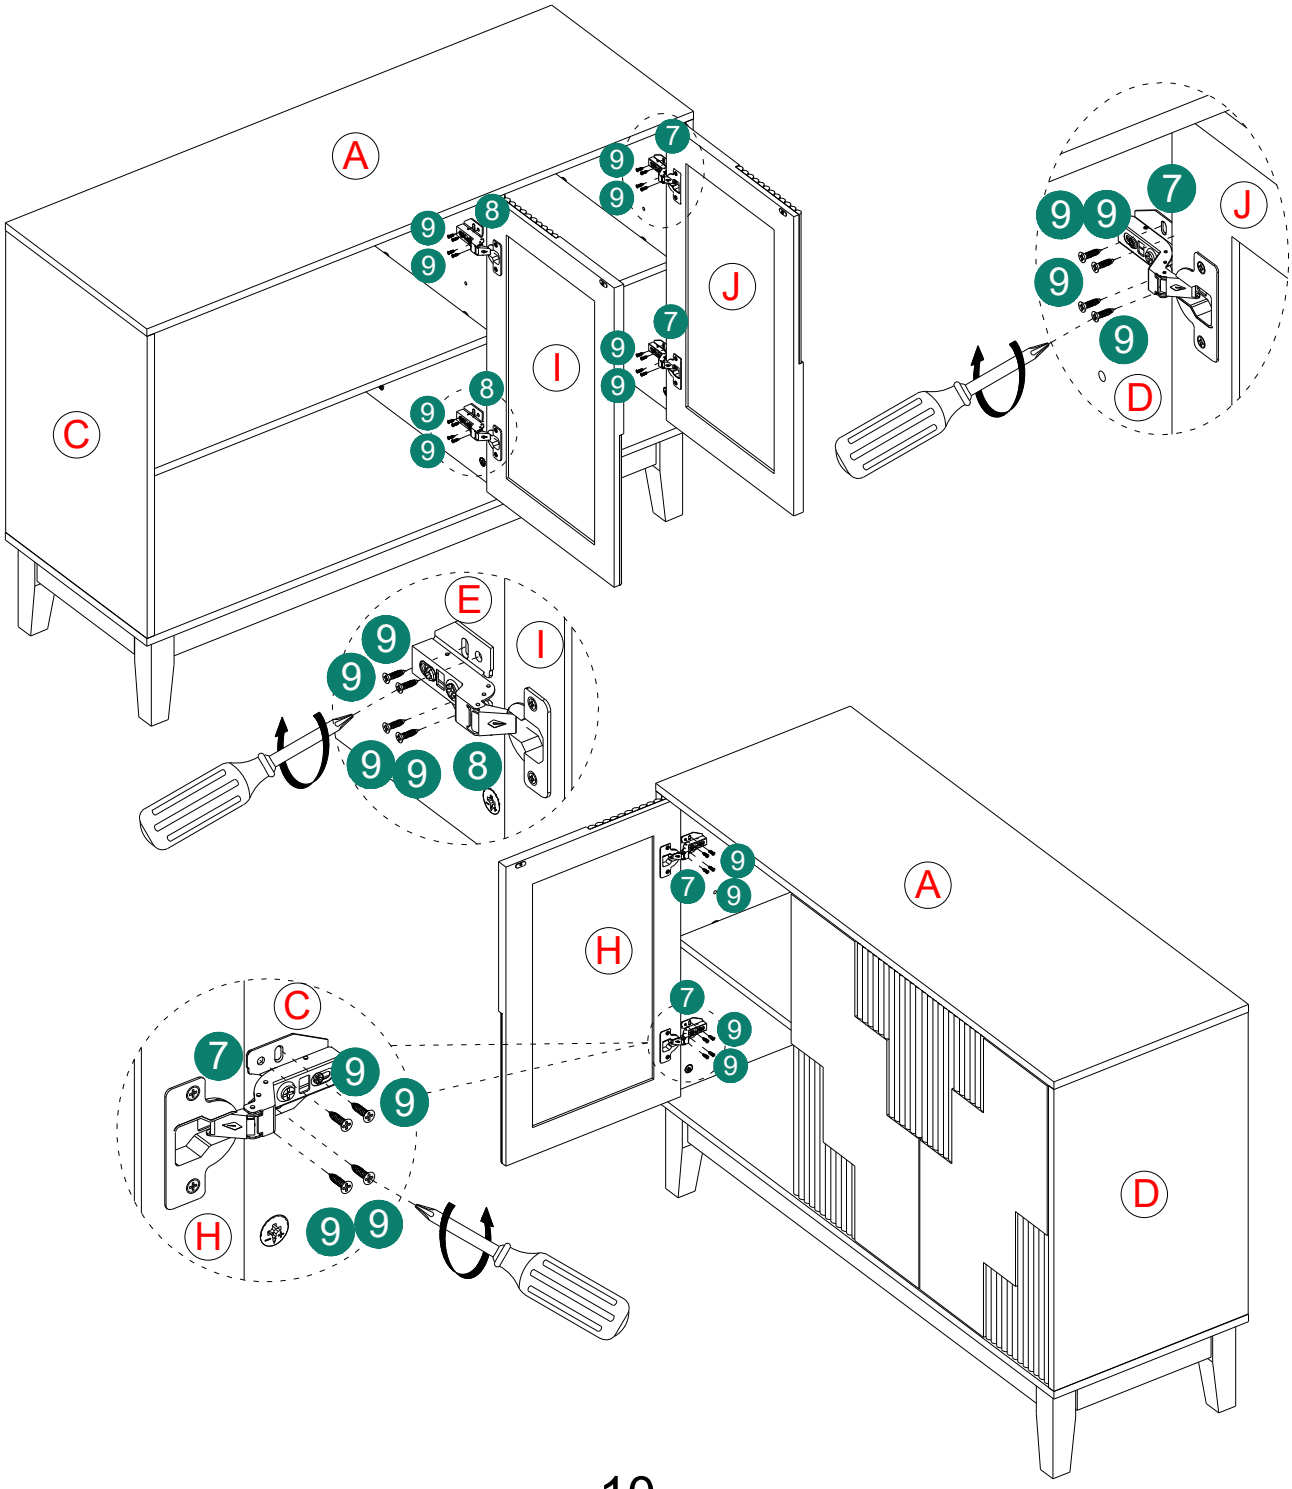

# ASSEMBLY INSTRUCTIONS

## 7

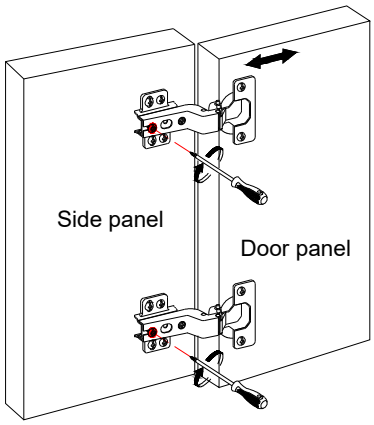


1

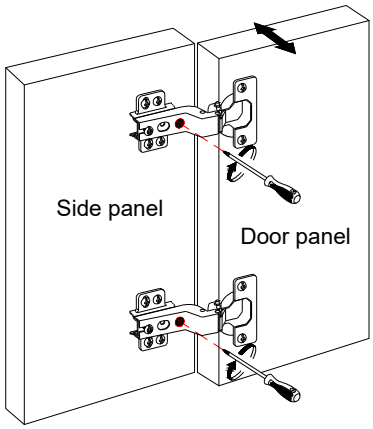


2

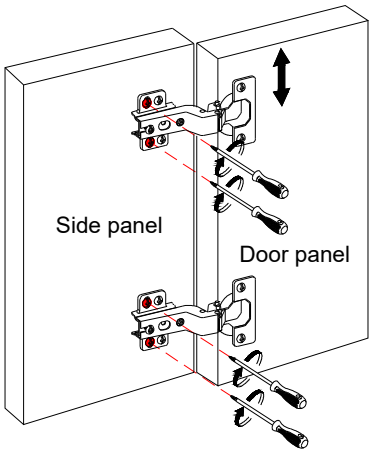


3

### Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

Adjustment range: 4mm

### Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm

### Up-Down Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm

# ASSEMBLY INSTRUCTIONS

## 8

**Common Door Panel Issues:**

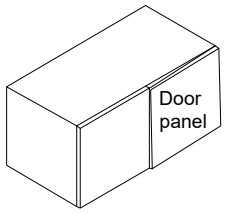


Door panel is not straight

Adjust the door hinges

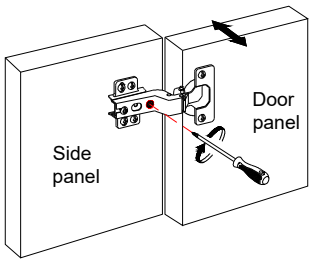


Finished

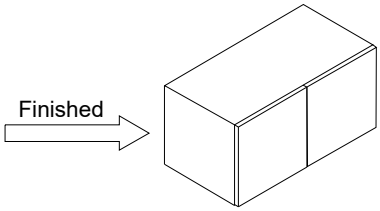

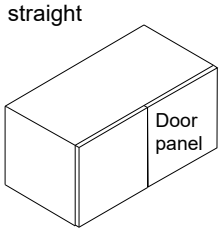


The gap between door panels is too large

Adjust the door hinges

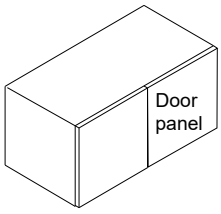


The door panels are not coplanar

Adjust the door hinges

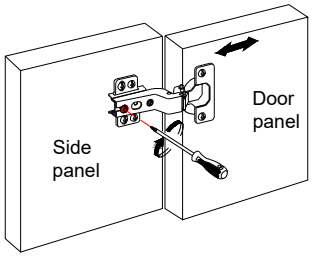


Finished

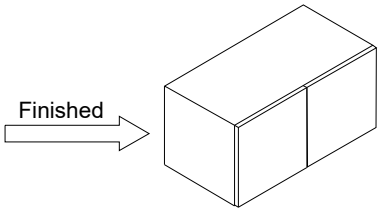

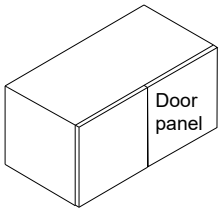


The two door panels are not at the same height

Adjust the door hinges

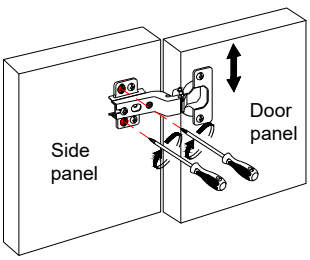


Finished

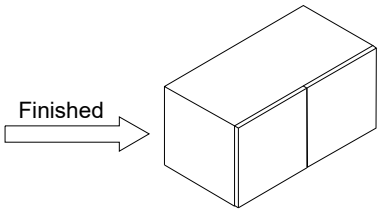

# ASSEMBLY INSTRUCTIONS

## 9



⑬ 2set

| A | B | C | D | E |
|---|---|---|---|---|
| 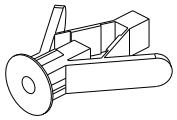 |  |  |  | 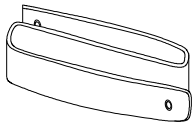 |
| 2pcs | 4pcs | Ø8*3/4"<br>2pcs | Ø8*1-1/2"<br>2pcs | 2pcs |

