

ASSEMBLY INSTRUCTIONS

Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand

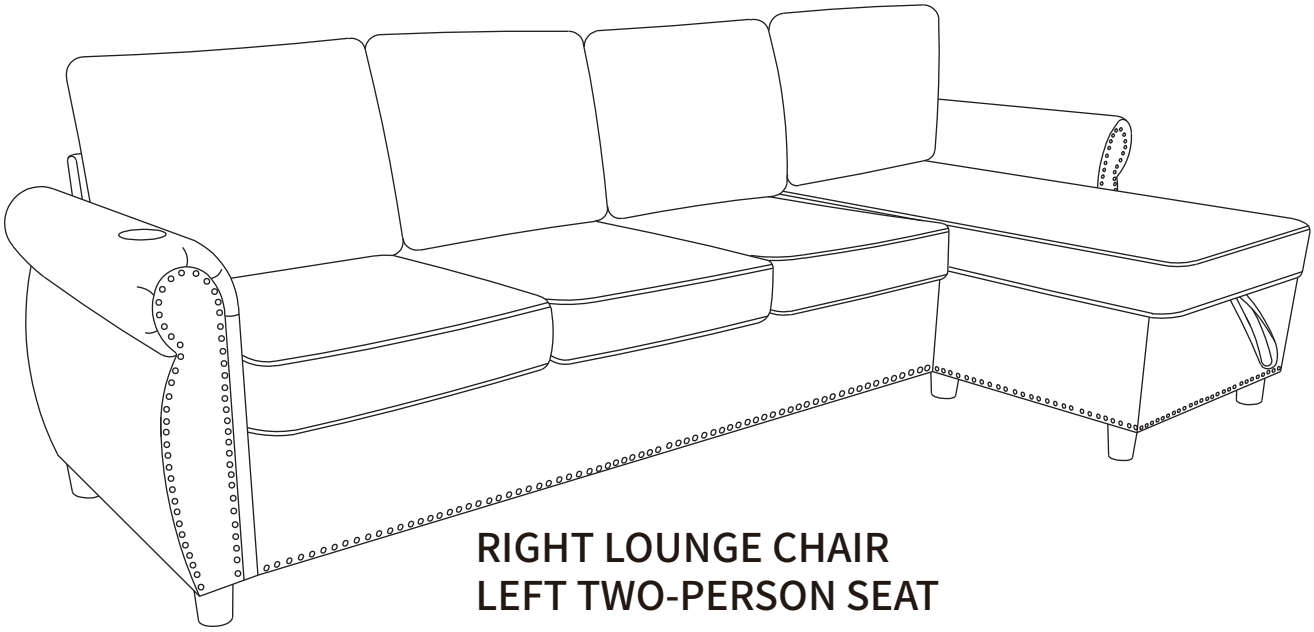

RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

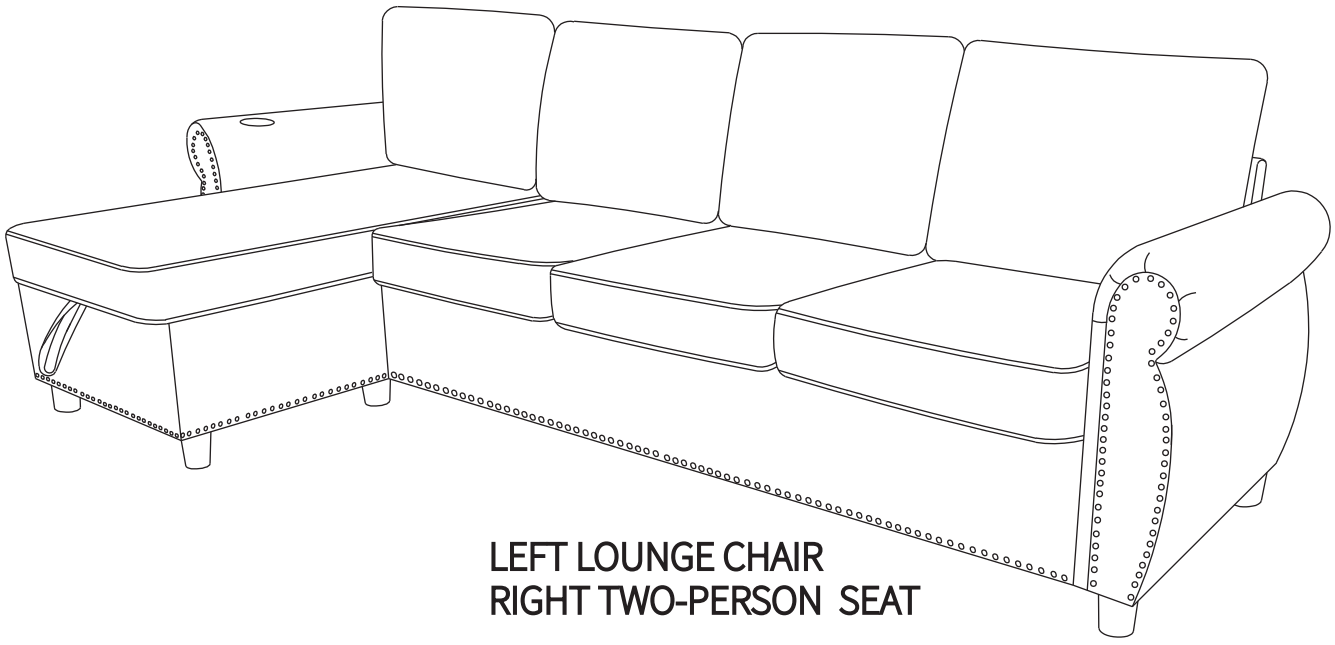

LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

W2108P448115/W2108P448206/W2108P448244
W2108P448248/W2108P448250/W2108P448251
W2108P448257/W2108P448258/W2108P448259
W2108P448260/W2108P448261/W2108P448262

1. Thank you for choosing ***our products.***

2. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

Recommendations Before Beginning Assembly

- Read instructions, cover to cover
- Have 2-4 adults on hand for assembly depending on product size
- Do not assemble directly on flooring or carpet
- Assemble on a clean non-marring surface (example: packing foam)
- Save all packaging until finished

3. Assembly Notice:

☒ If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the

parts of the product stored in a safe place and contact us immediately so we may assist you further.

- ☒ Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- ☒ Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- ☒ IMPORTANT: When setting up your product, DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- ☒ When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance

 Do not put hot items directly on furniture surface

 Do not clean furniture with harsh cleansers or polish

 Do not place furniture under direct sunlight

 Do not place furniture near heating or cooling vents

 Do not write on furniture without a padded barrier to protect the surface

 Do not place furniture outside. For indoor use only

 Not for commercial use. For residential use only

 Stains may be removed with mild soap solution and damp cloth


 Children should not climb or jump on the furniture

 Dust and pick-up spills using a clean, non-colored, lint-free cloth











Caution







● This product contains small components. Please ensure that they are kept away from small children.

● Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

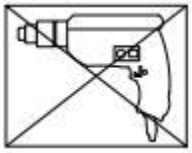

PART LIST:

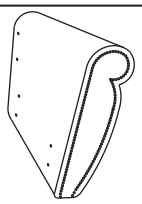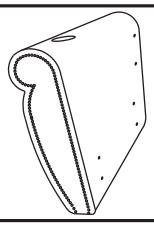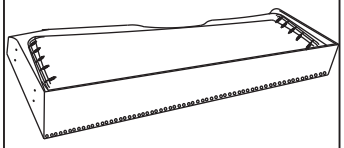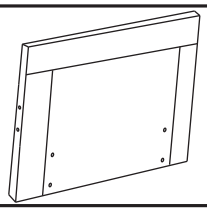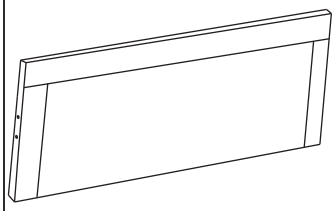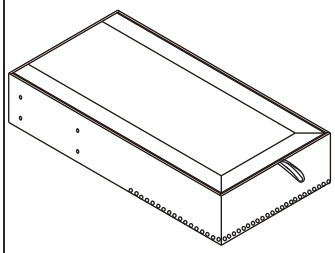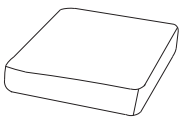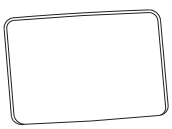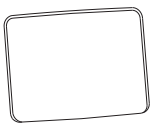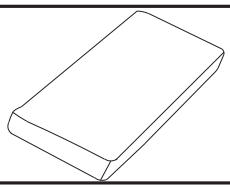A		1PC
B		1PC
C		1PC
D		1PC
E		1PC
F		1PC
H		3PCS
J		3PCS
K		1PC
L		1PC

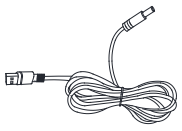
M		6PCS
N		6PCS
O		3PCS
P		3PCS
Q	 M6x20mm	36PCS
R	 M6x30mm	4PCS
S		1PC
T		4PCS
U		10PCS
V		10PCS
W		10PCS
X		1PC
Y		1PC

W2108P448115/W2108P448248/
W2108P448257/W2108P448260
：C x 1 E x 1 M x 6 N x 6 O x 3 P x 3
Q x 36 R x 4 S x 1 T x 4 U x 10 V x 10
W x 10 X x 1 Y x 1

W2108P448206/W2108P448250/
W2108P448258/W2108P448261
：A x 1 B x 1

W2108P448244/W2108P448251/
W2108P448259/W2108P448262
：A x 1 B x 1


①

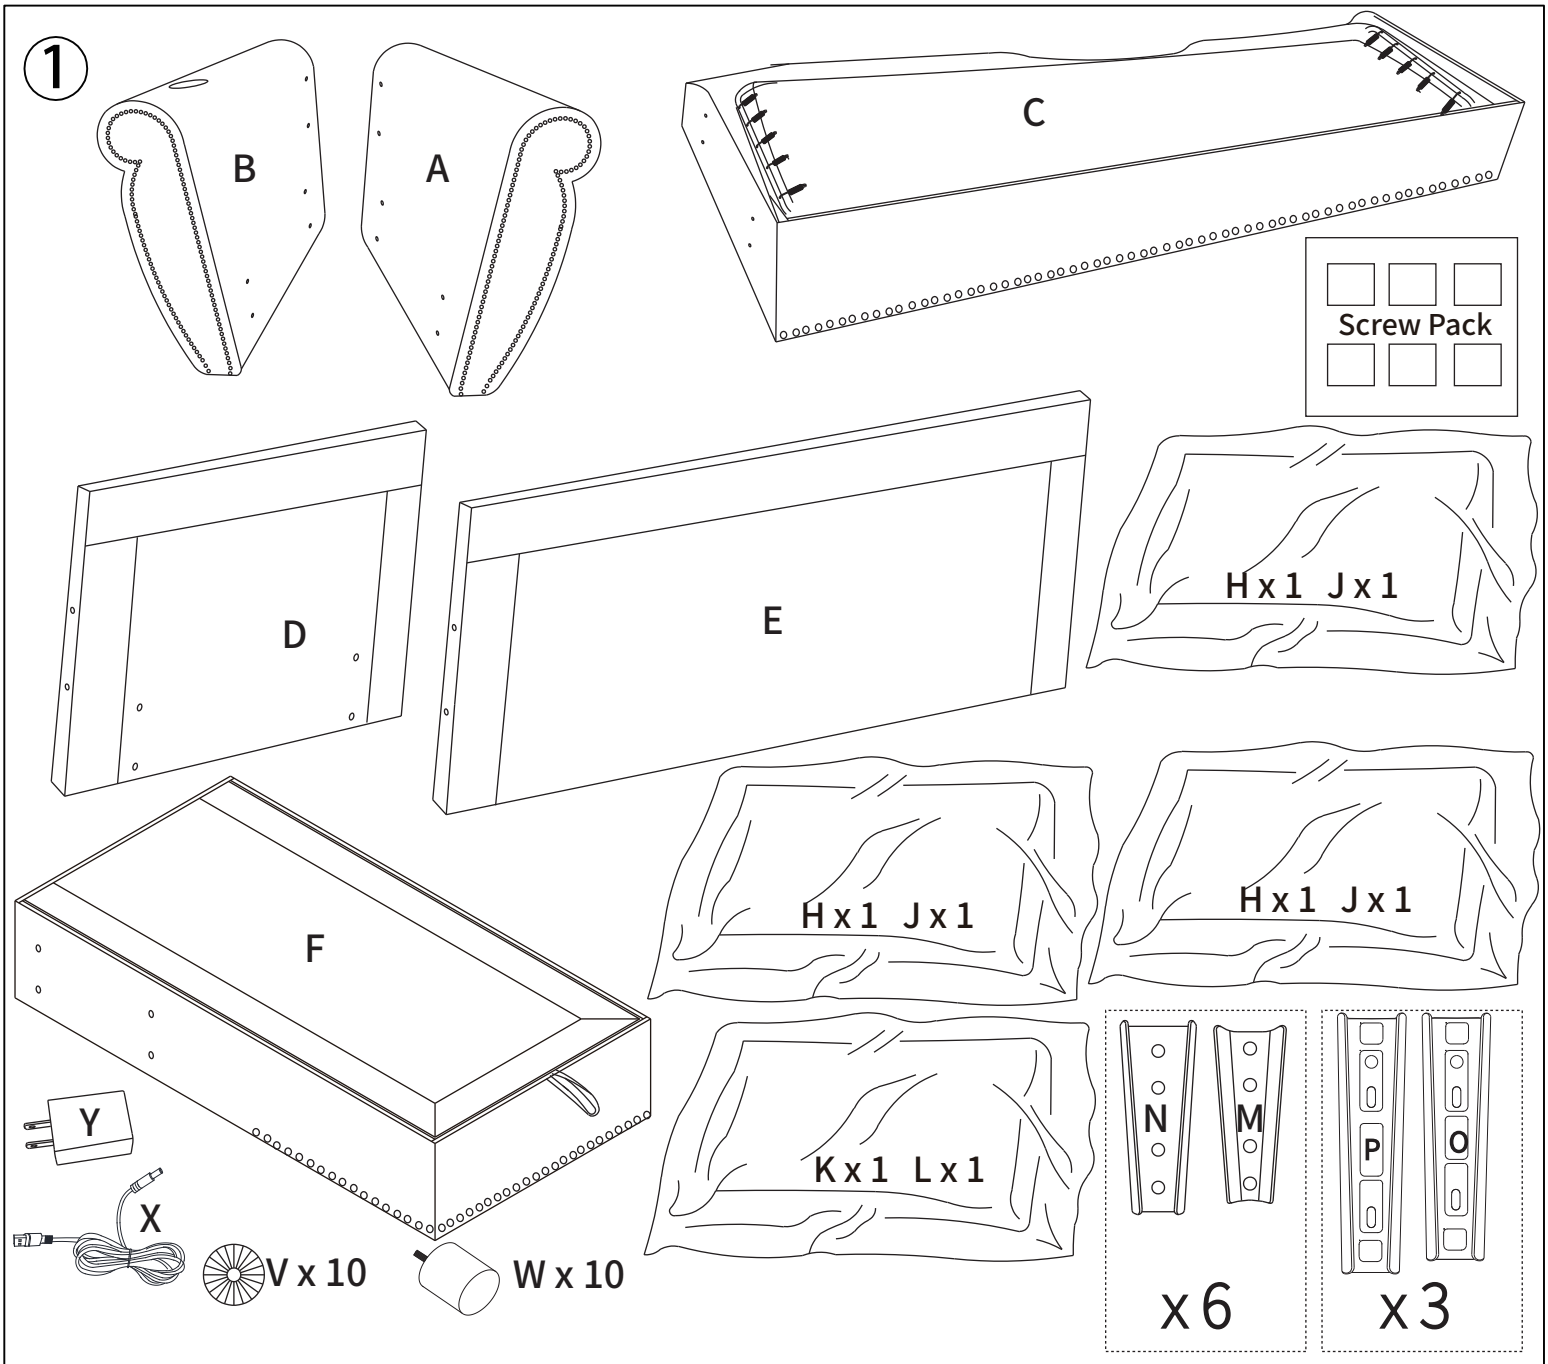


Open the vacuum bag and take the **cushions(H/J/K/L),**
To restore the original shape,follow the steps bellow.


Open the vacuum bag carefully.



Press and tap with both hands from the side to fully inhale air

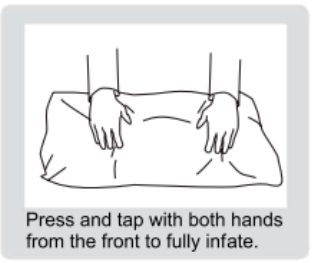

Press and tap with both hands from the front to fully infate.

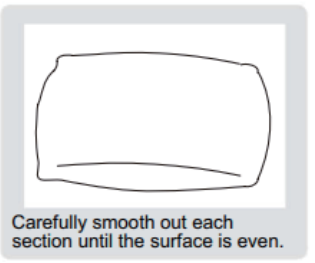
Carefully smooth out each section until the surface is even.


After packing up, place them in somewhere dry and venslated. After about 72-96 hours. It can be restored to the best use condition.


② RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

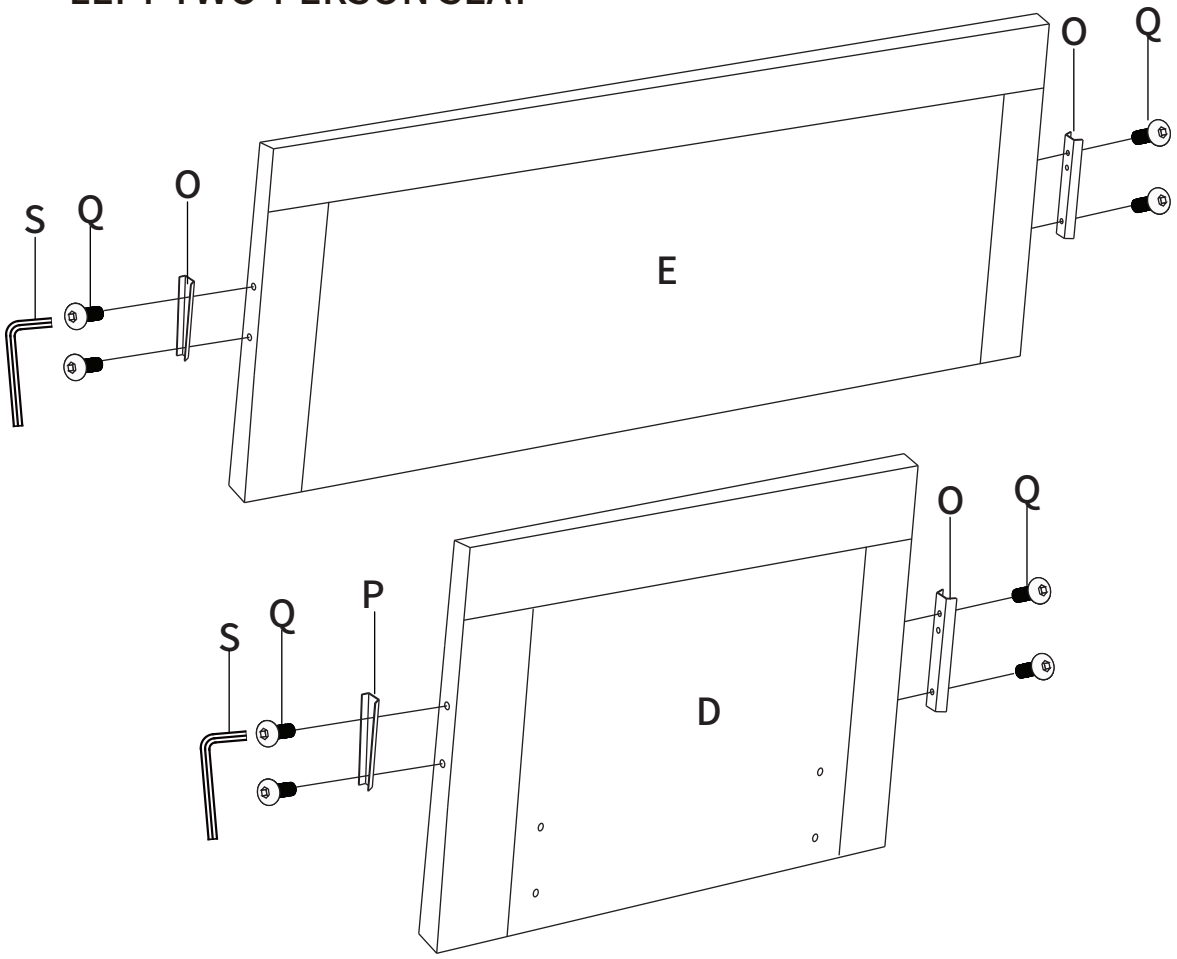


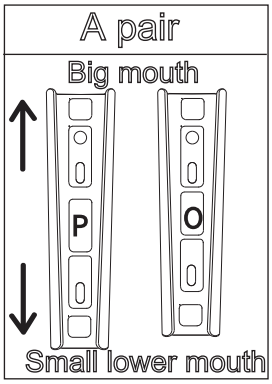


③ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

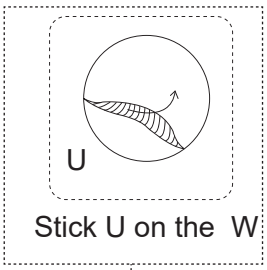


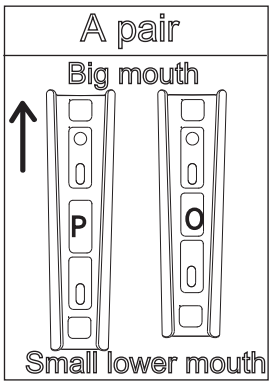


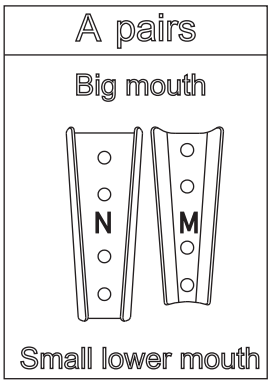


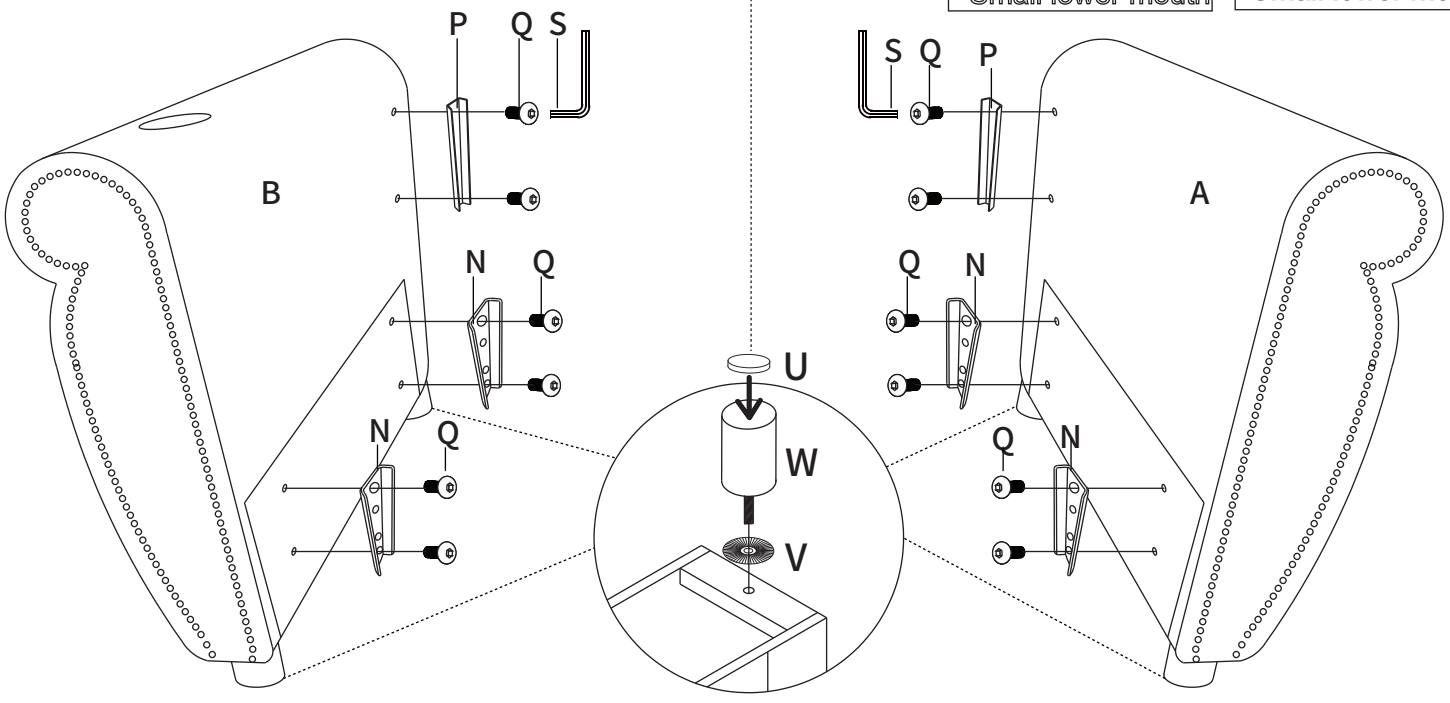


4 RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

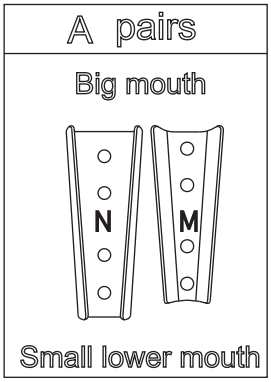


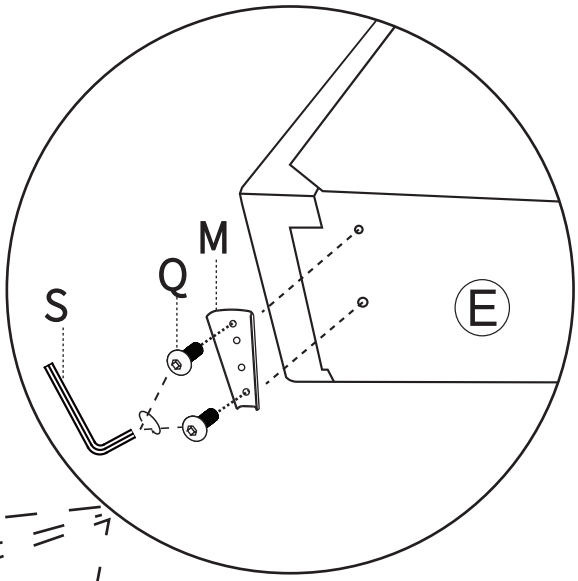


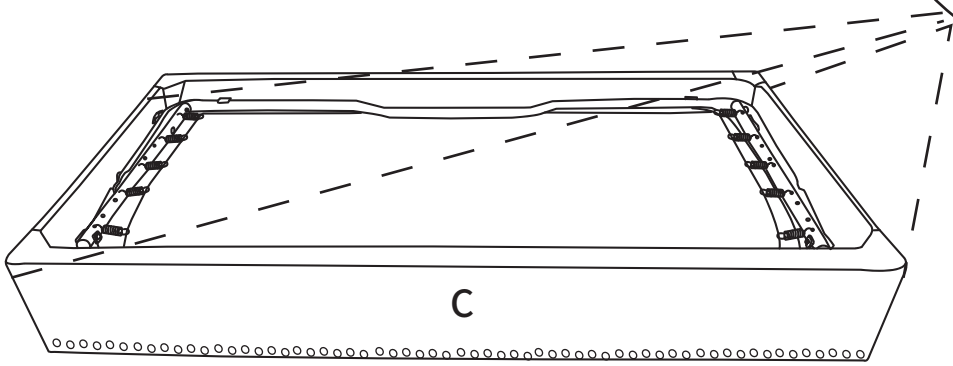


5 RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

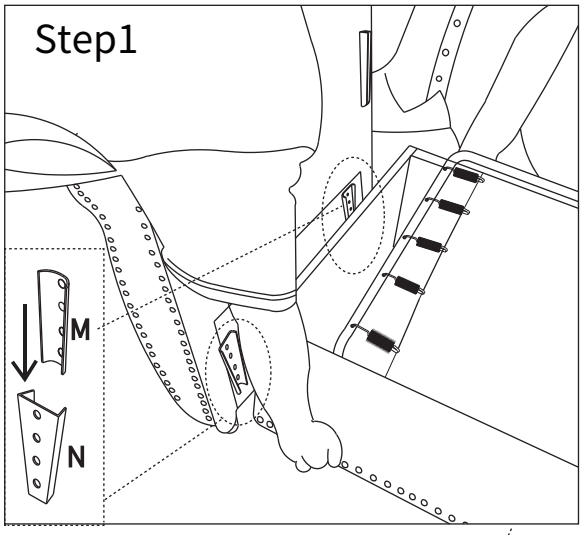


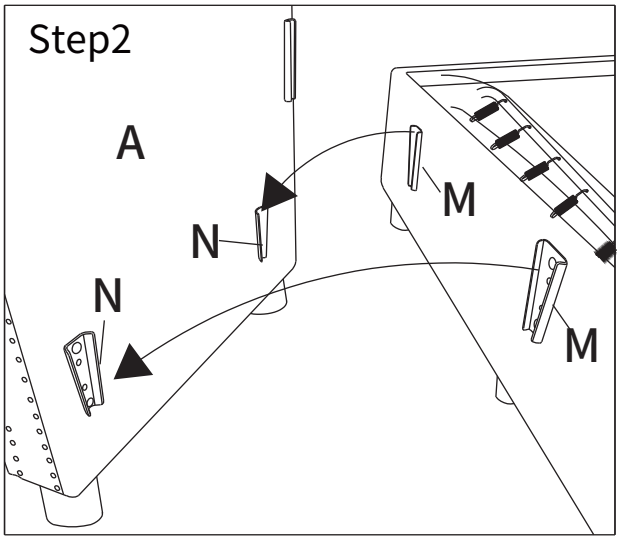

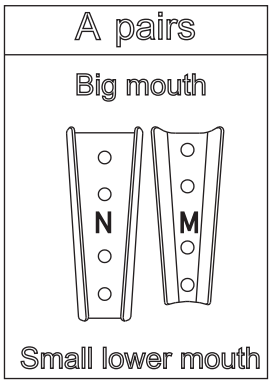


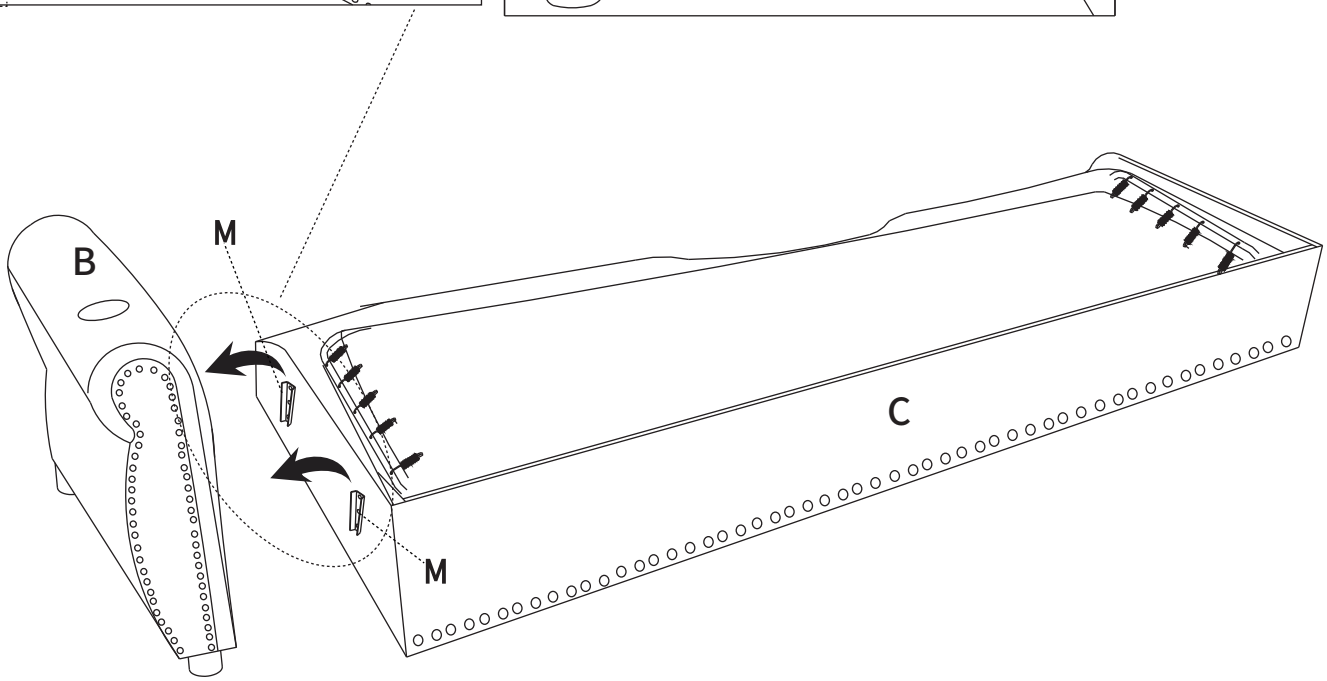


6 RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

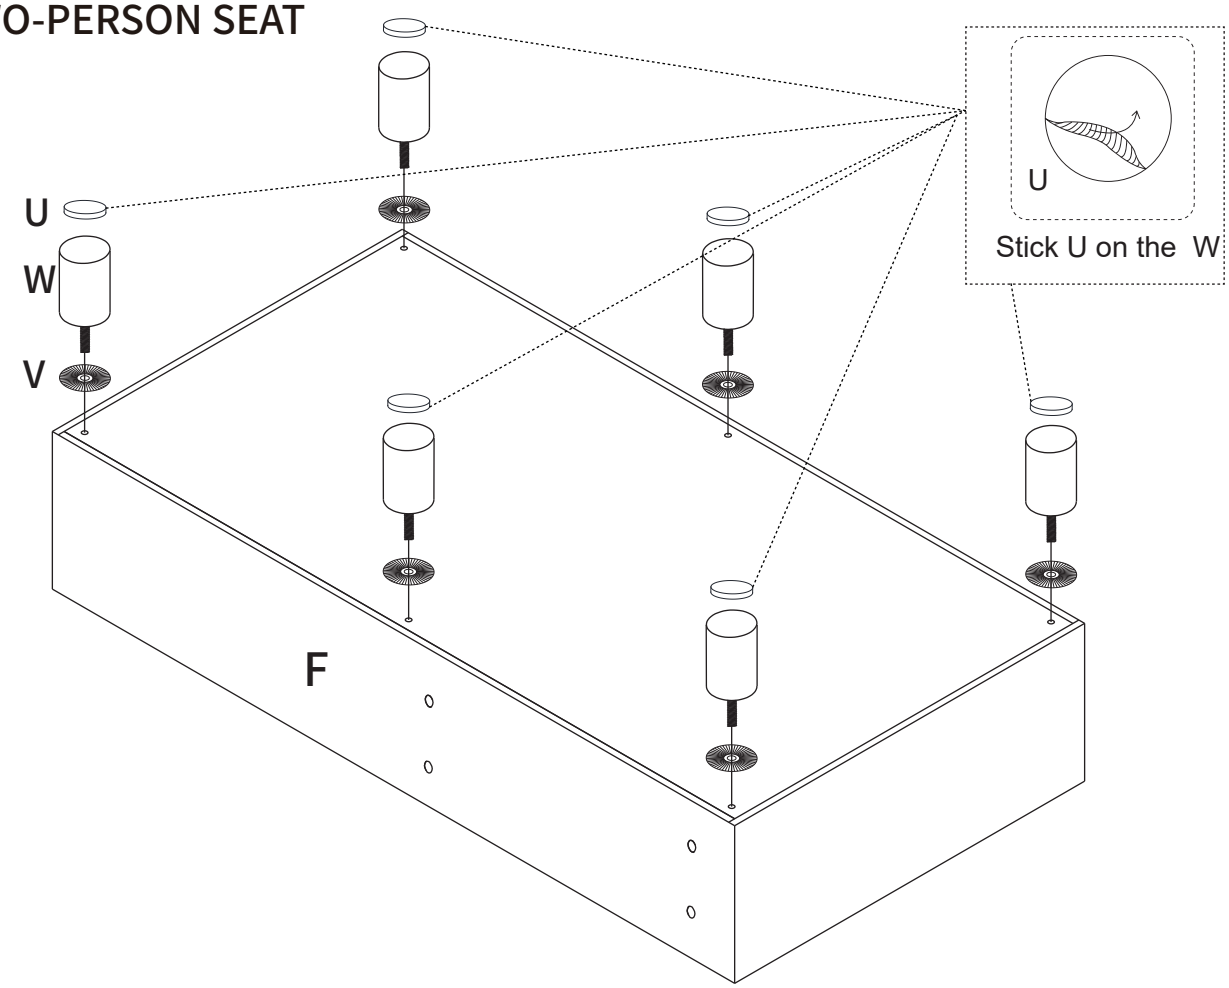



7 RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

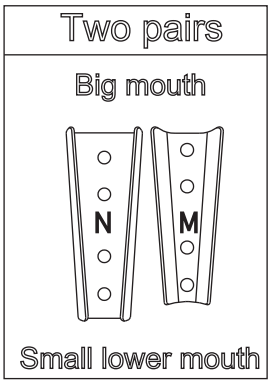


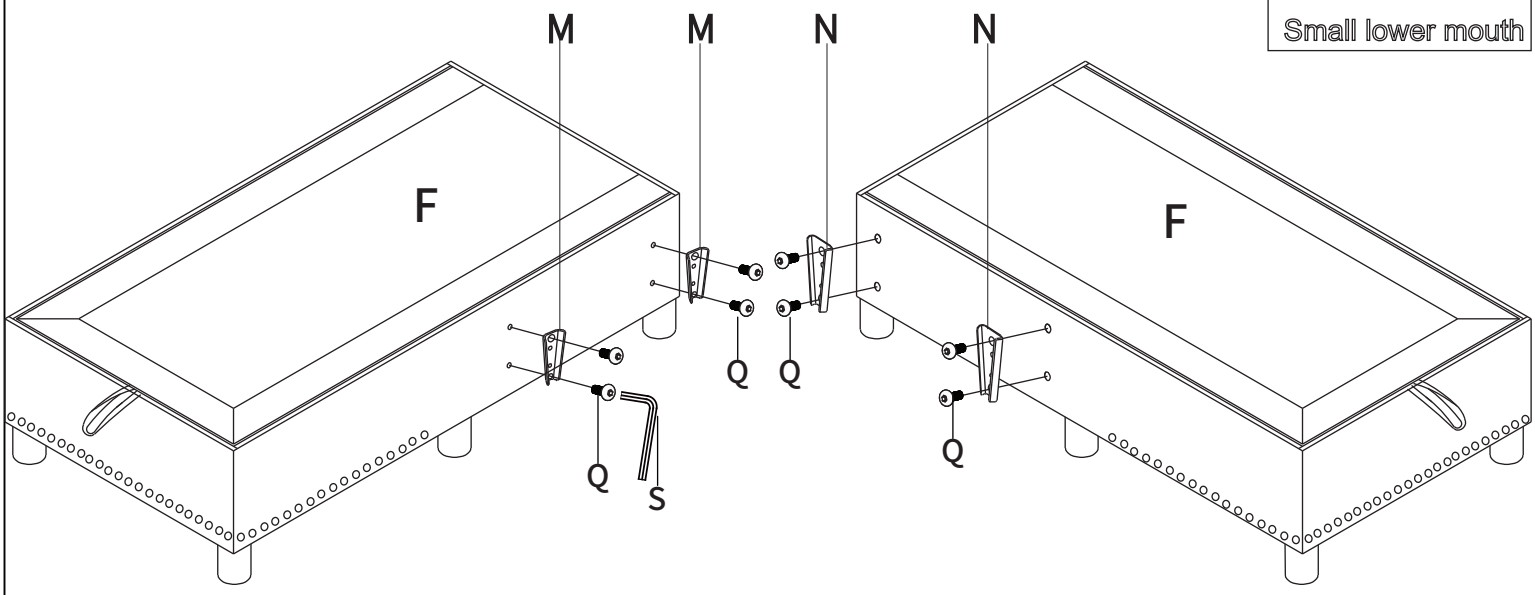


⑧ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

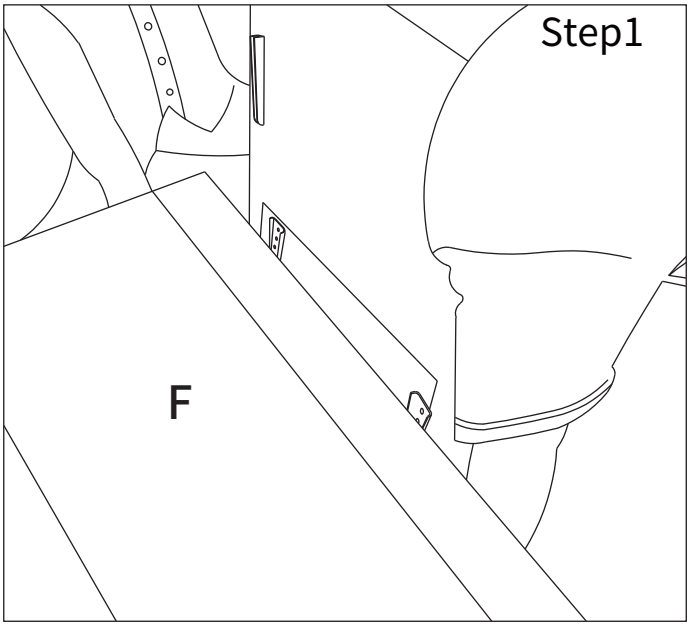


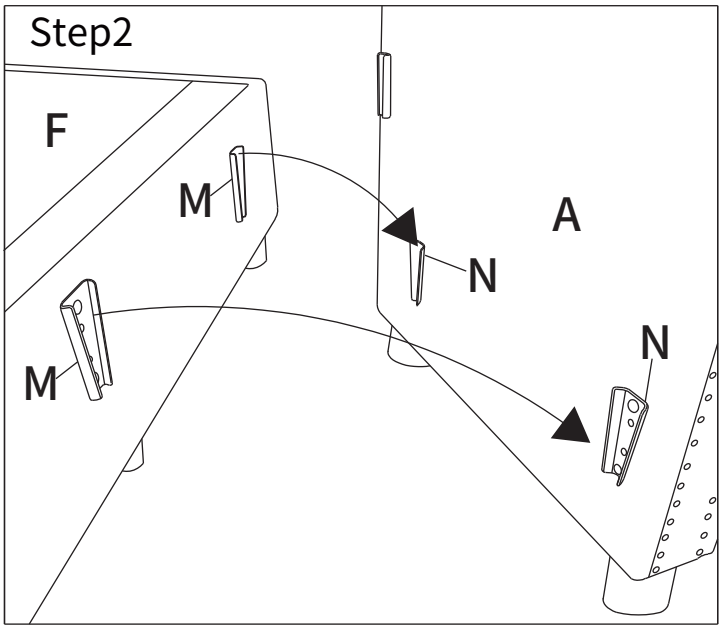


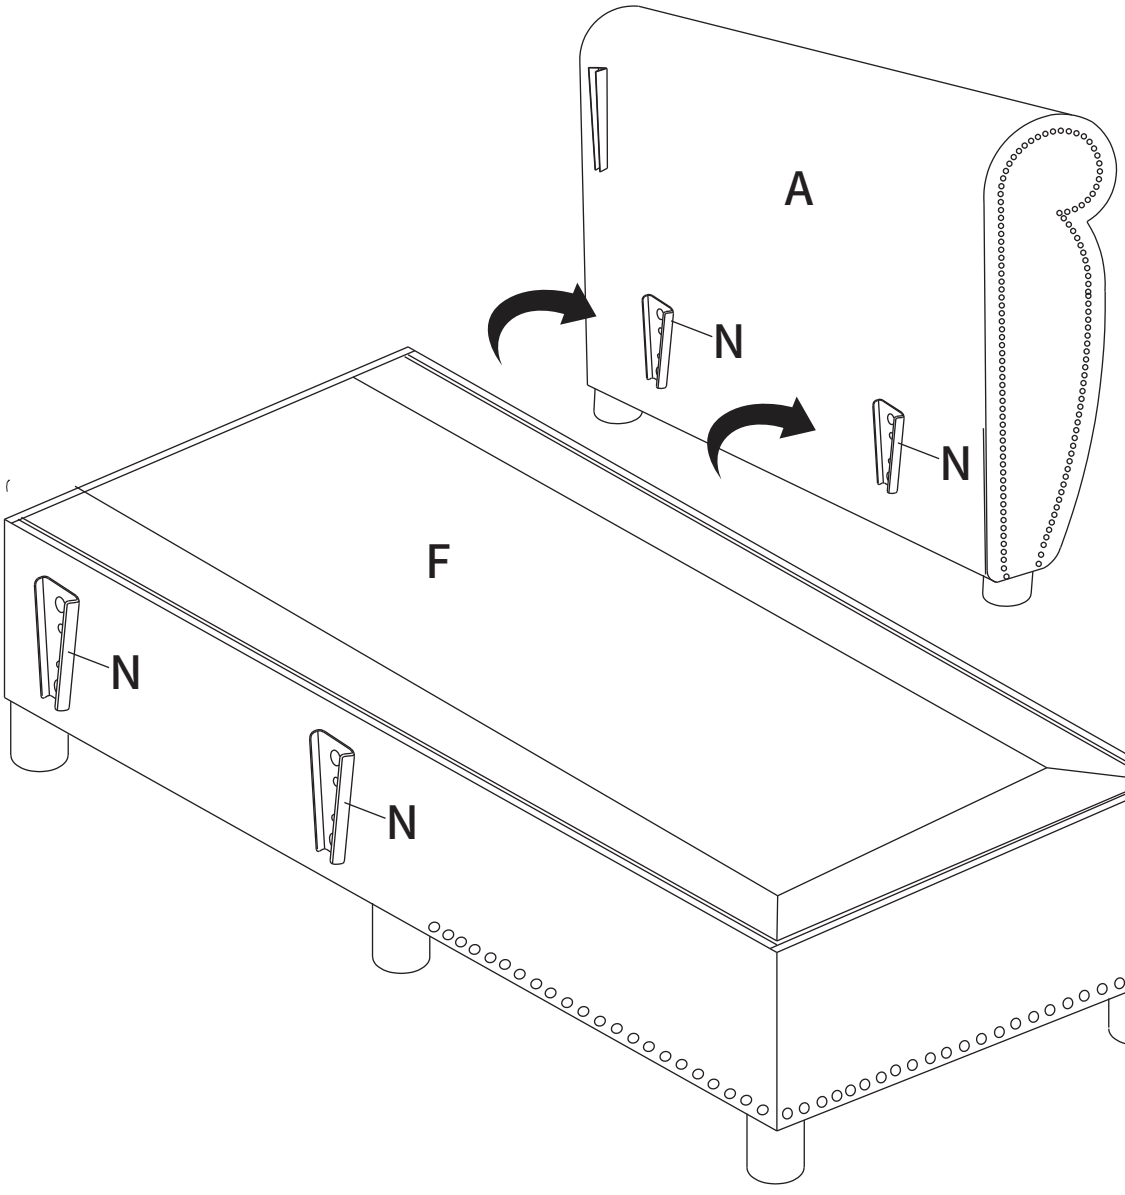


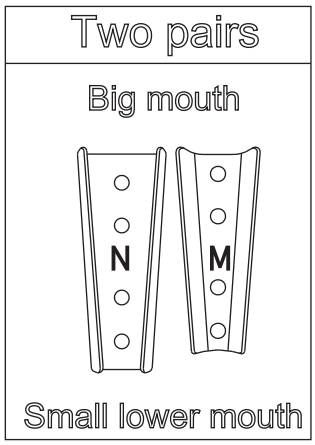


⑨ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

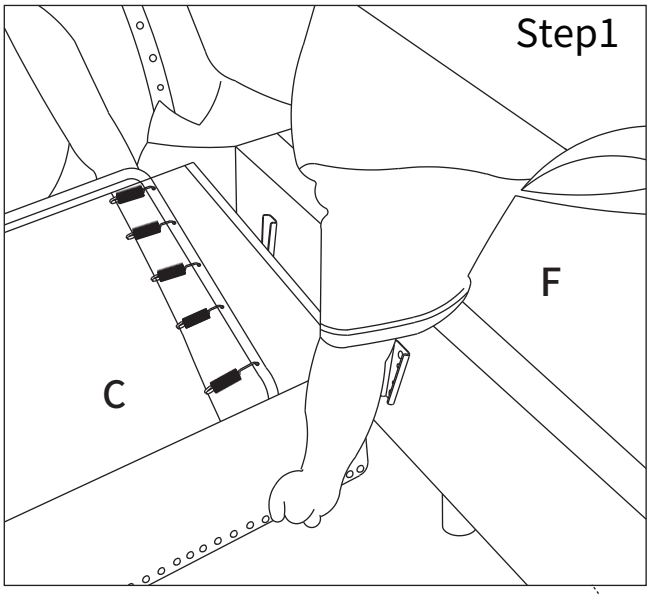

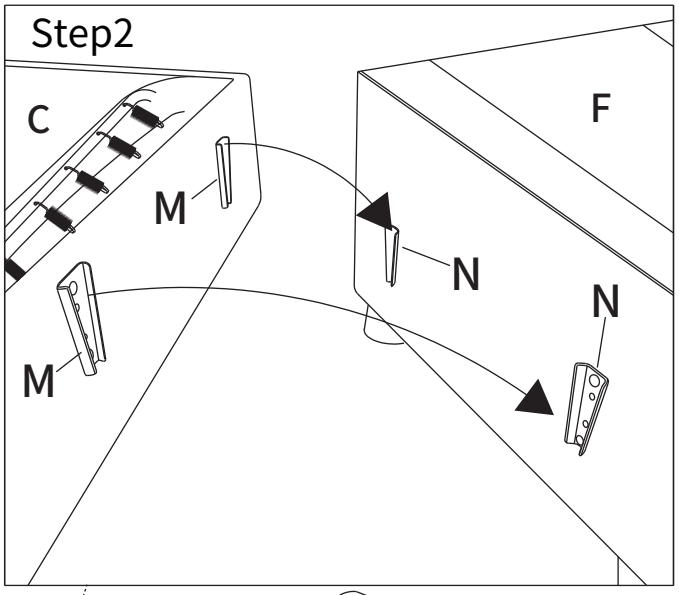


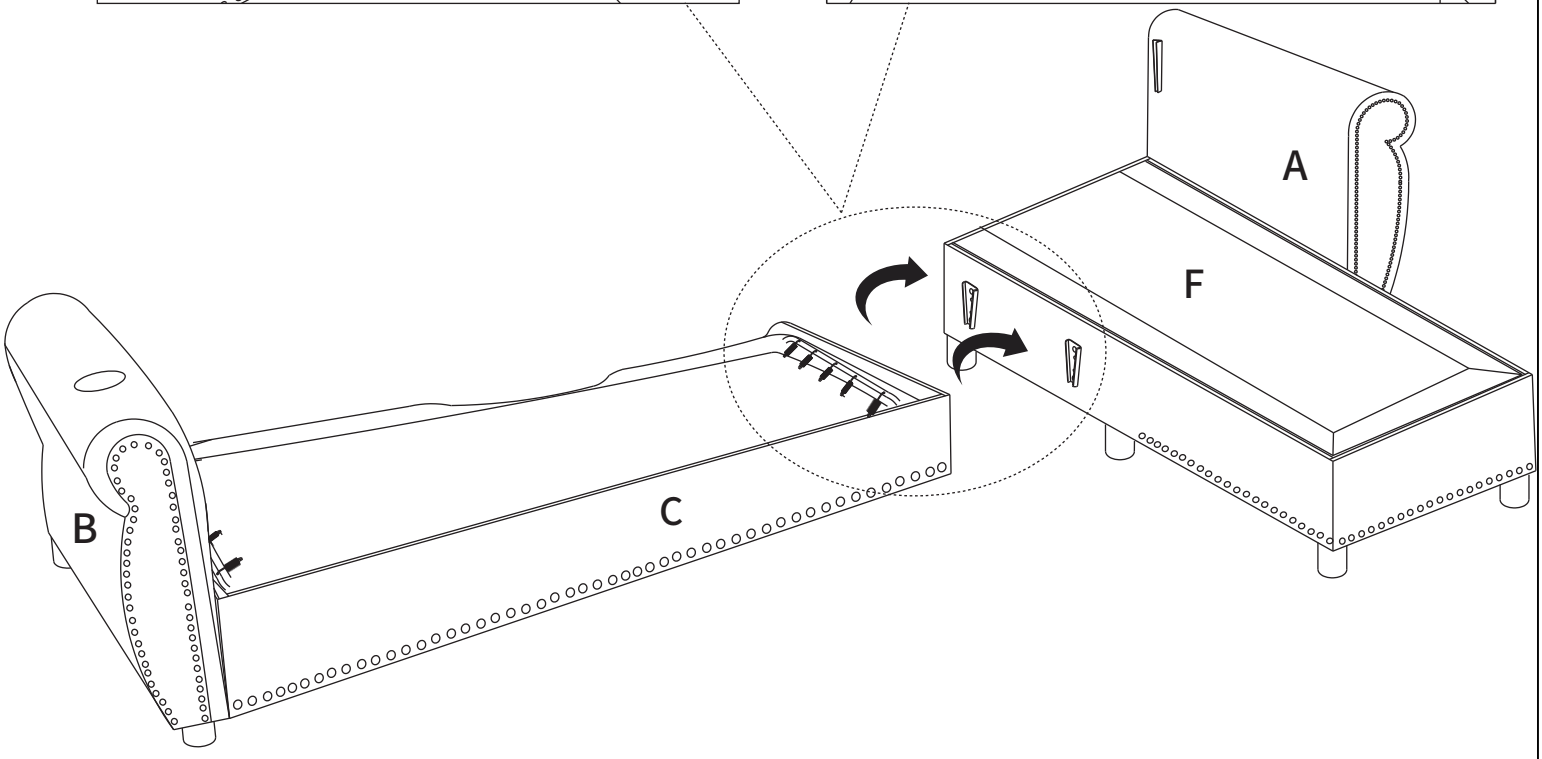


⑩ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

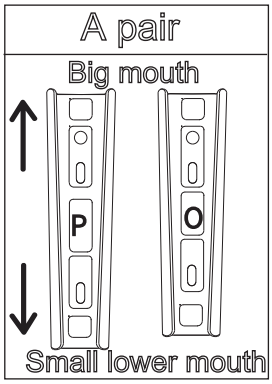


Step1

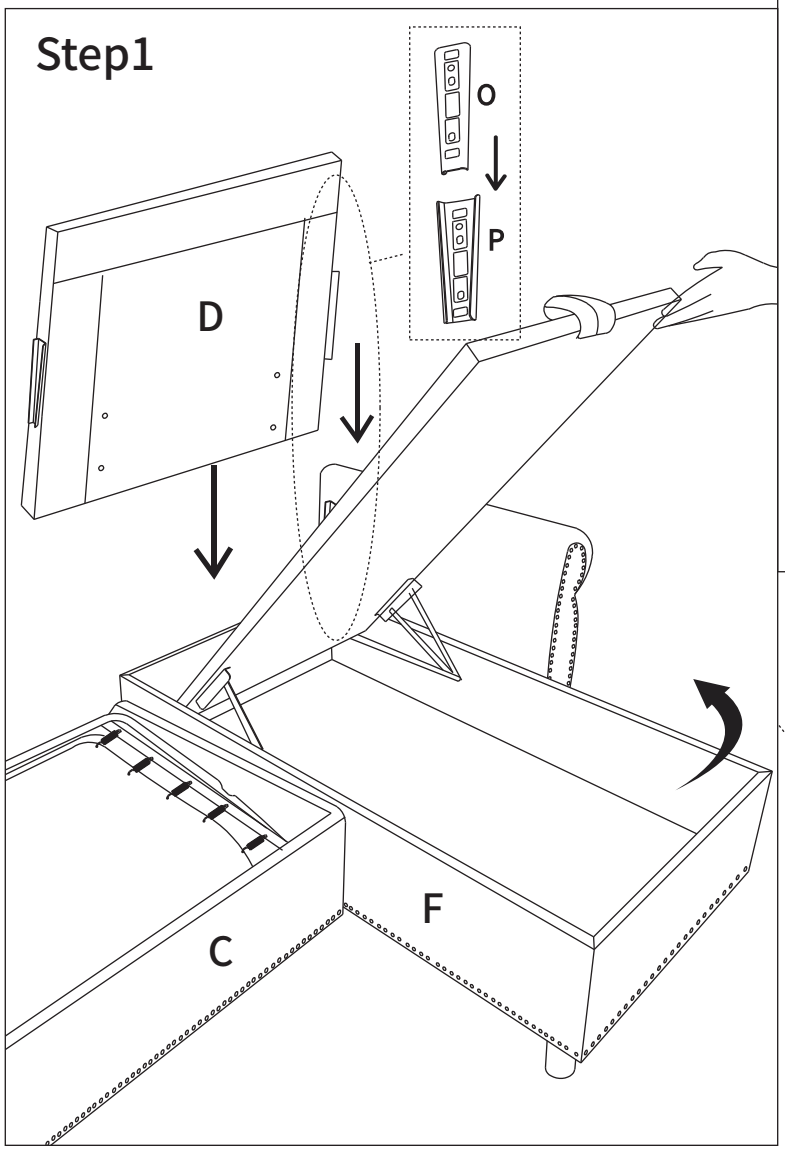



Step2

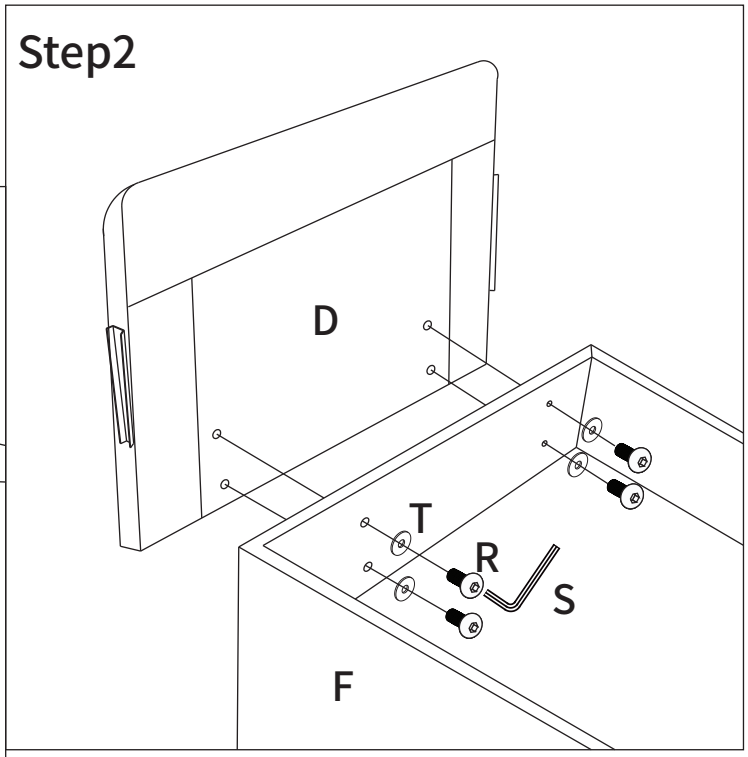

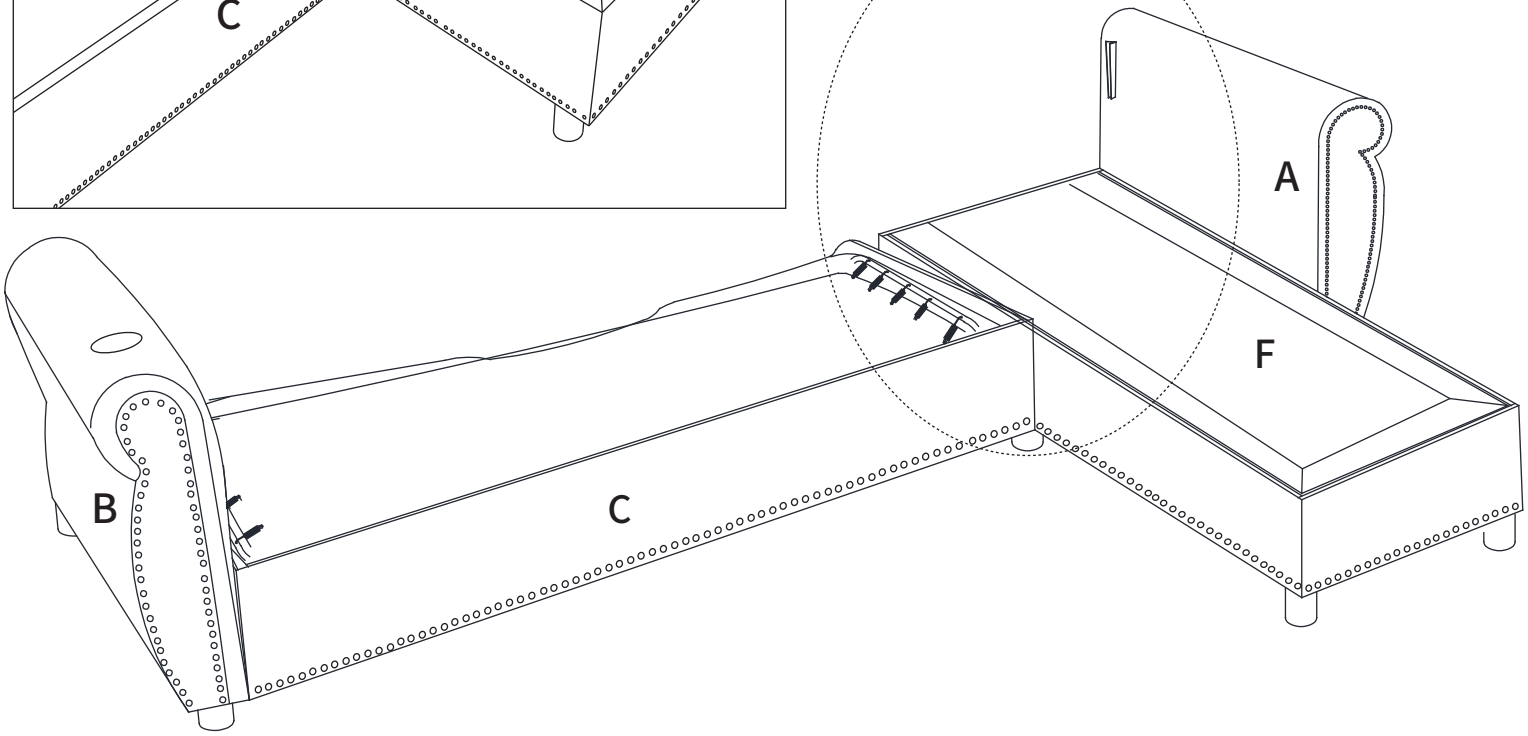


⑪ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

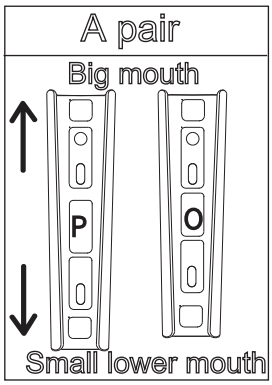


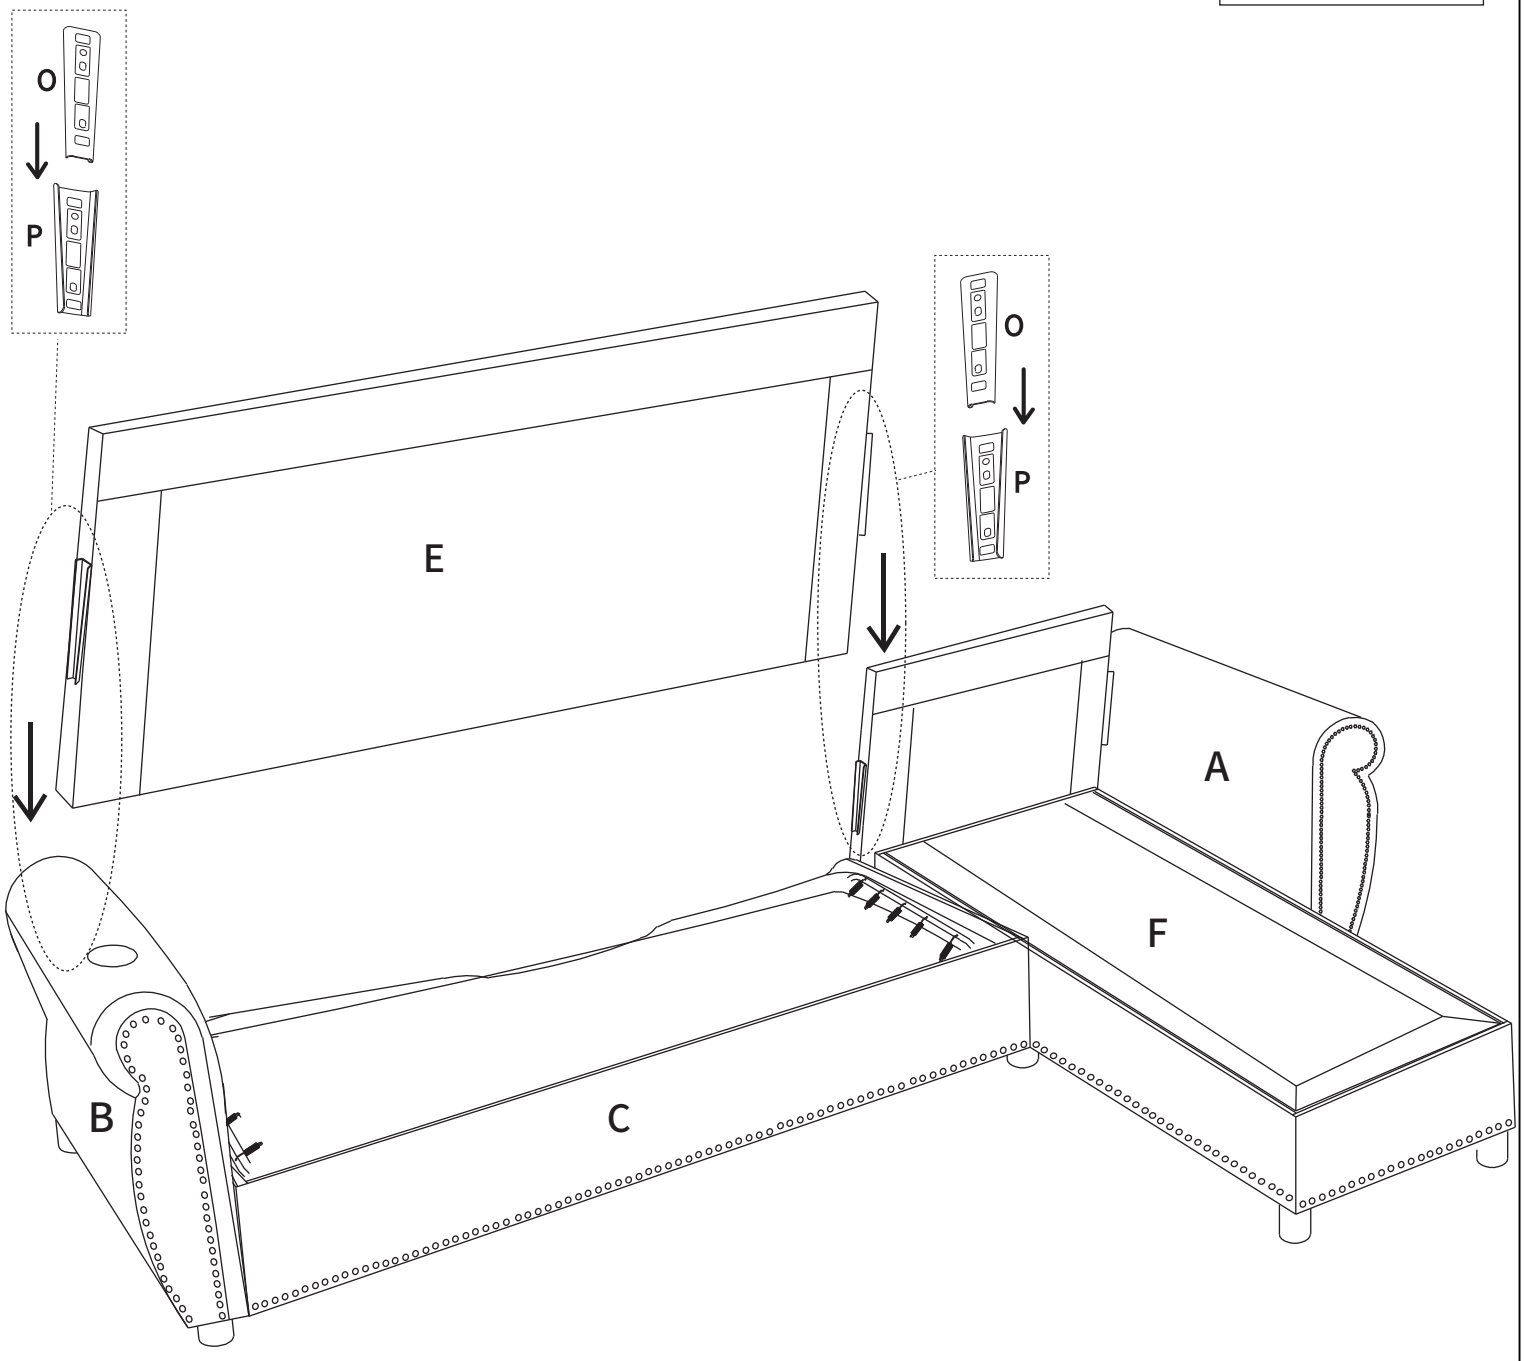

⑫ RIGHT LOUNGE CHAIR
LEFT TWO-PERSON SEAT

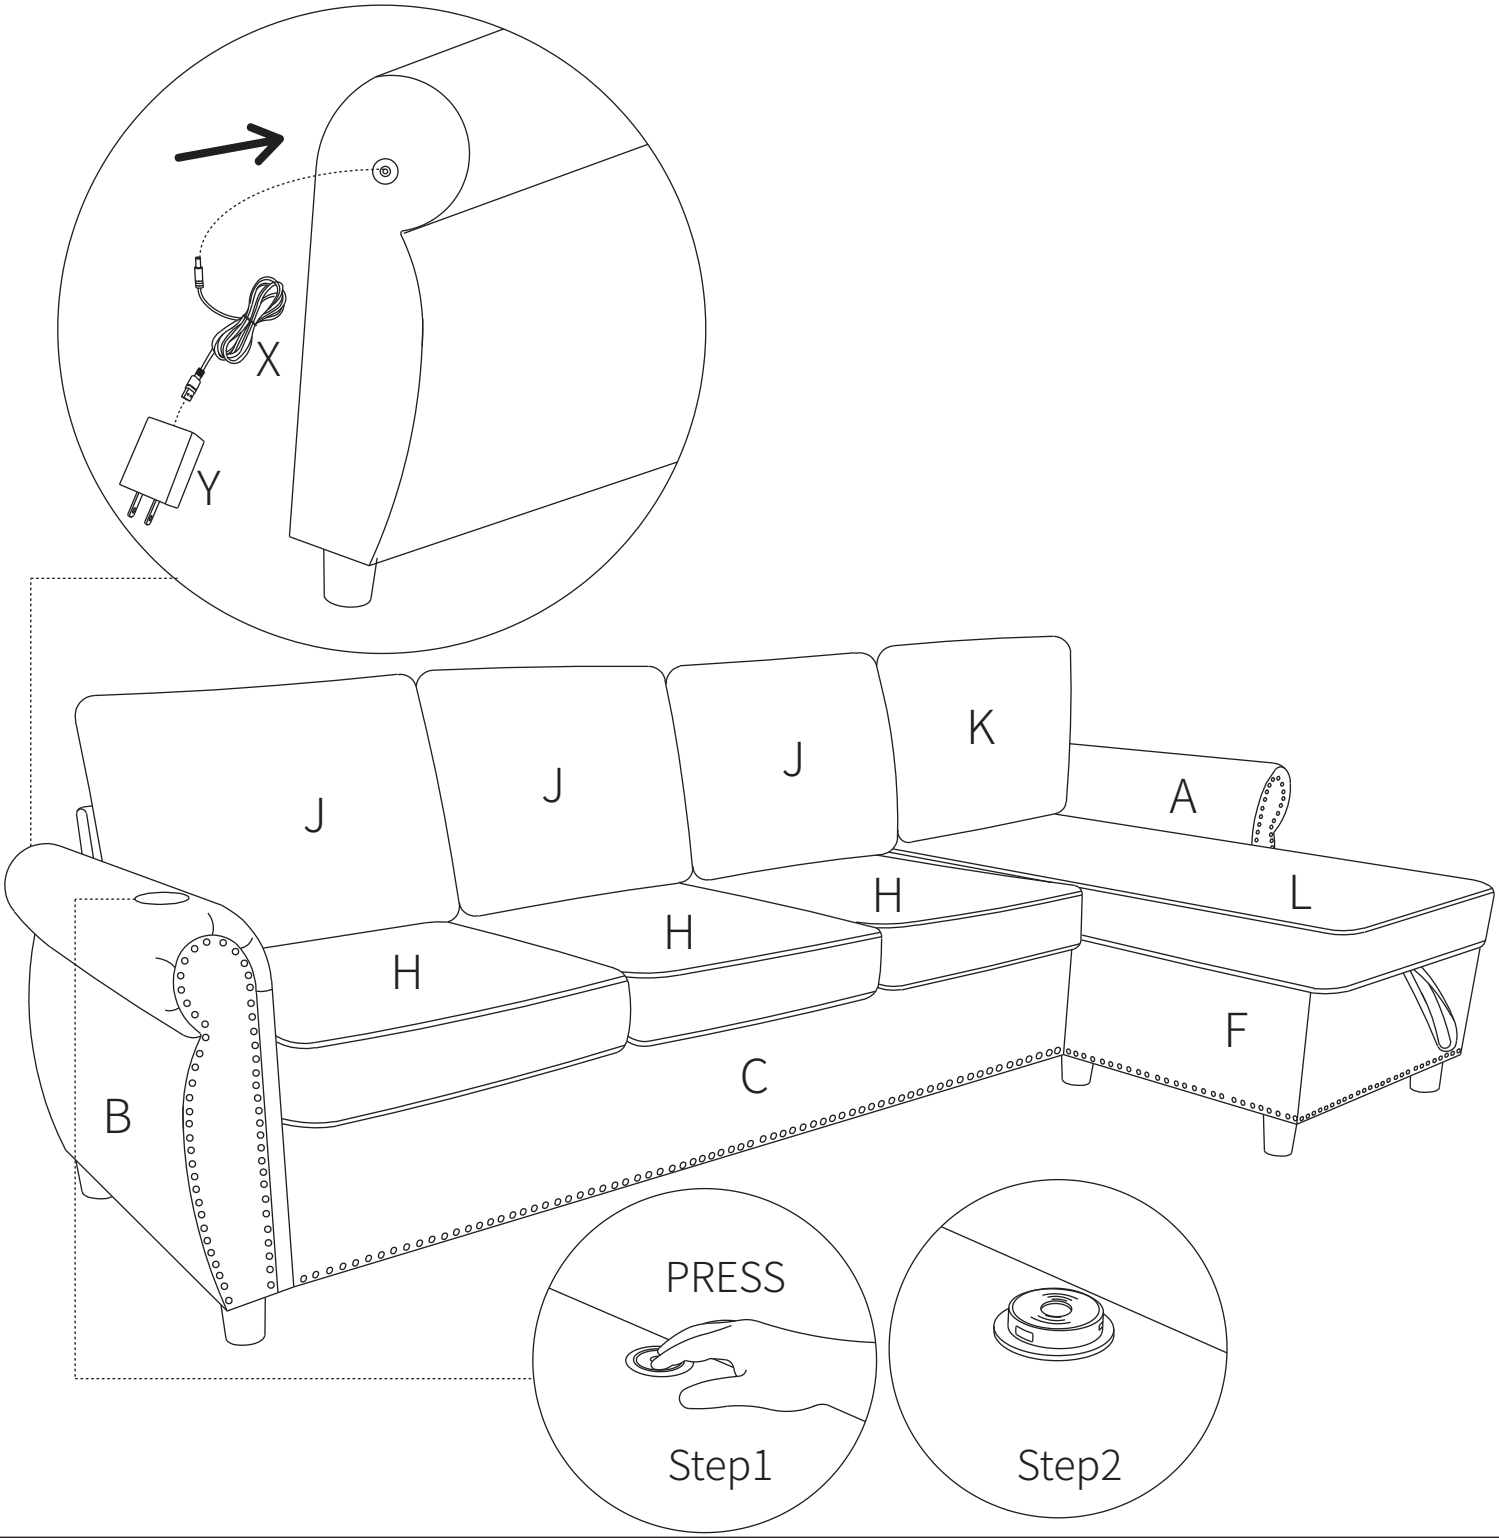



⑬

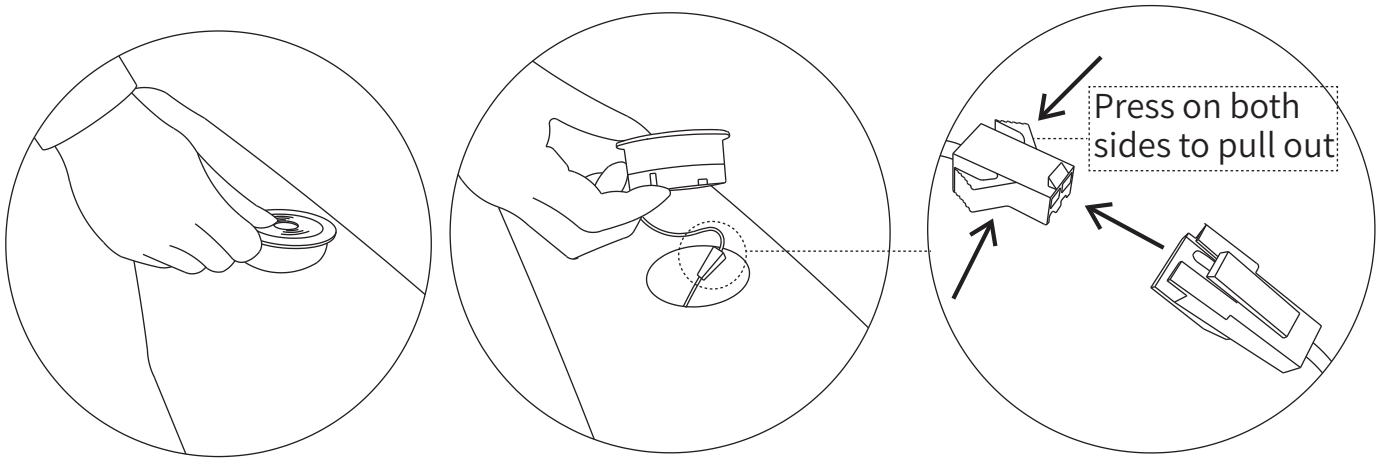


If you encounter the need for replacement parts, you can follow this procedure.


14 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

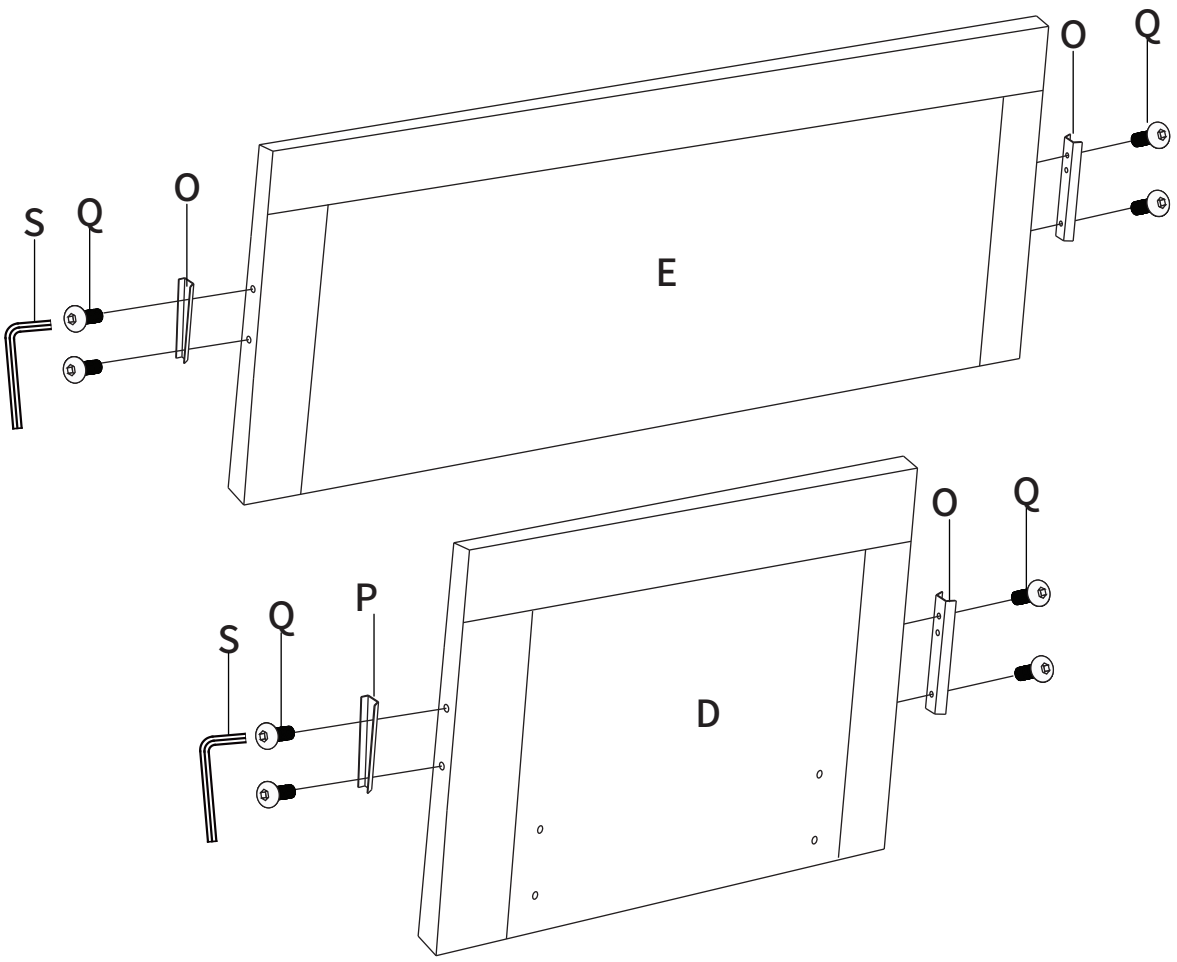


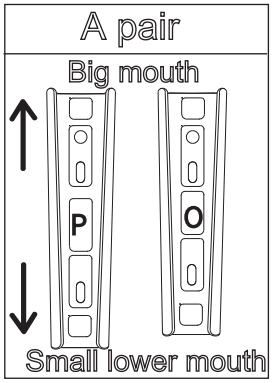


15 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

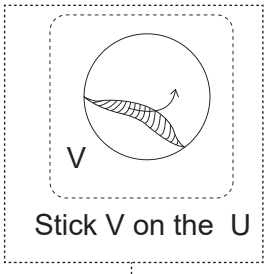


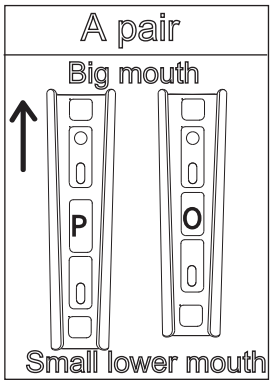


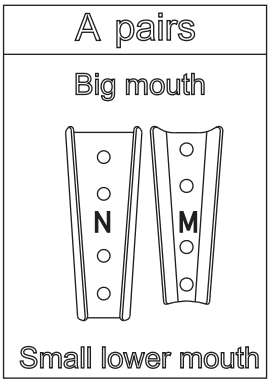


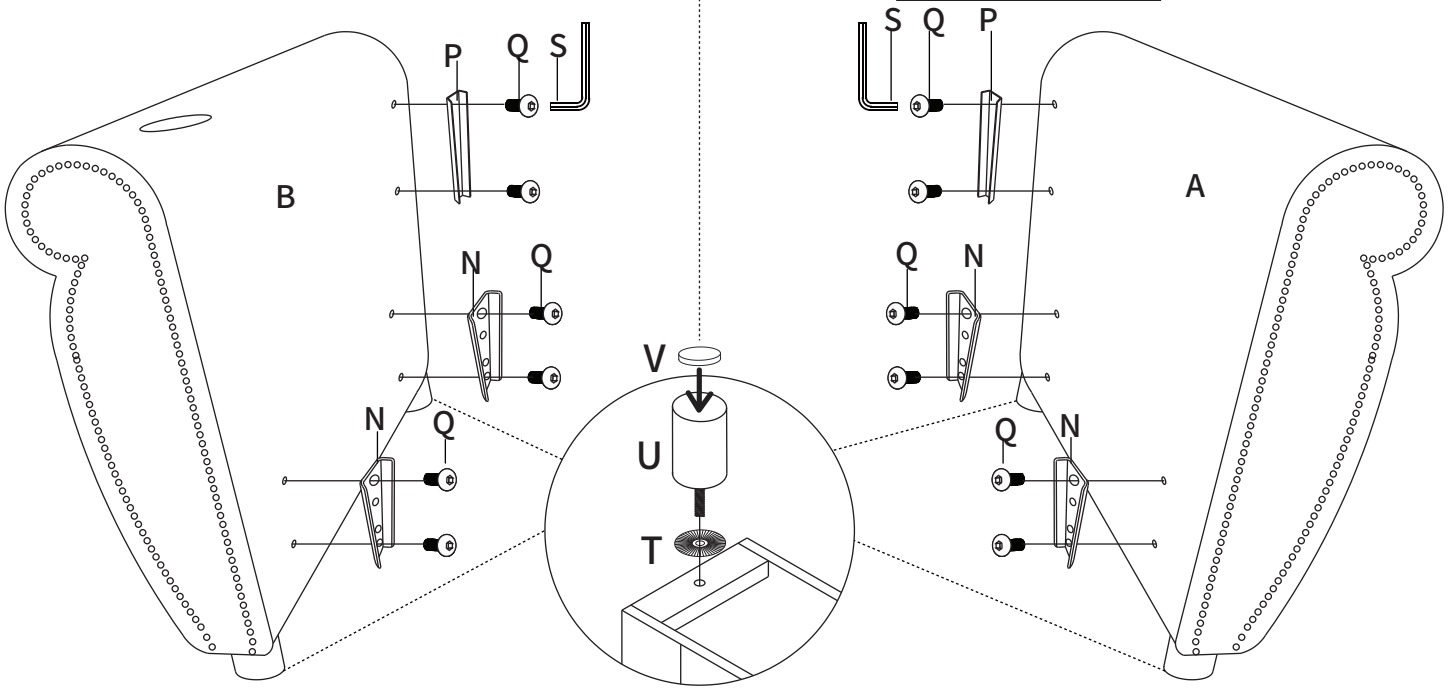


16 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

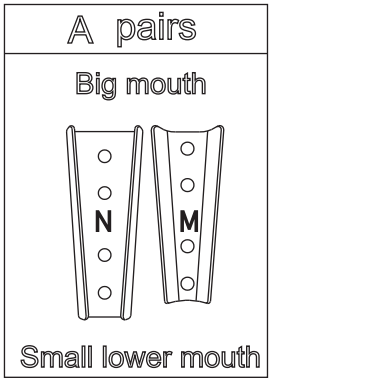


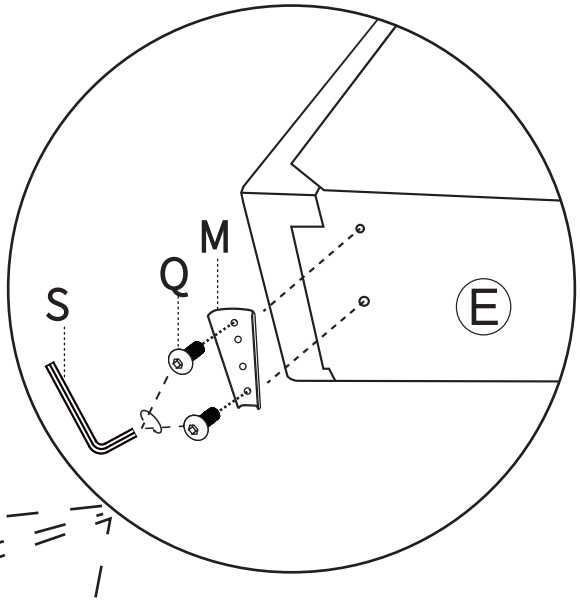


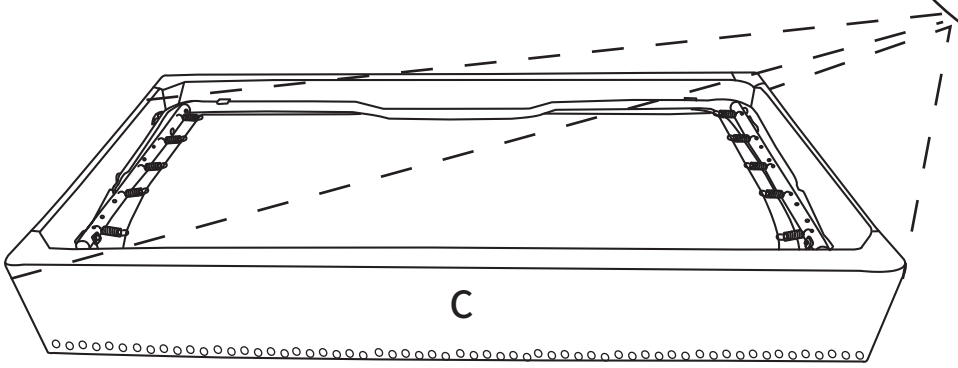


17 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

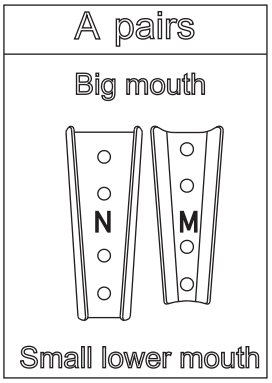


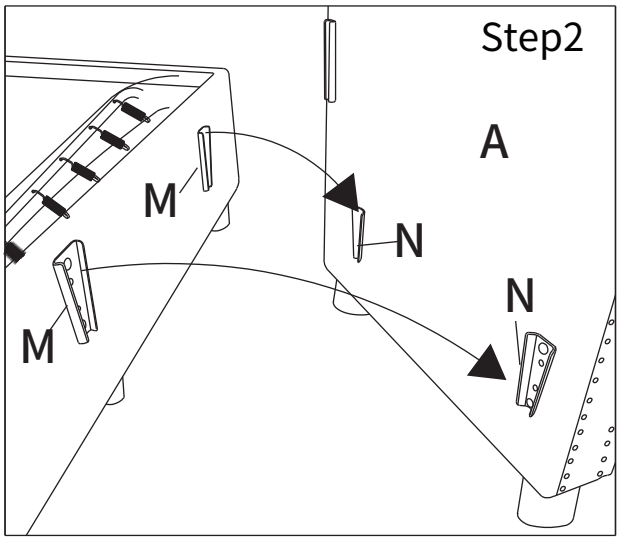

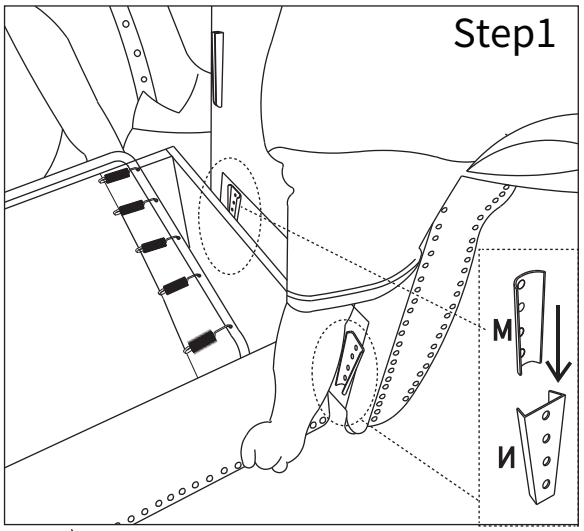


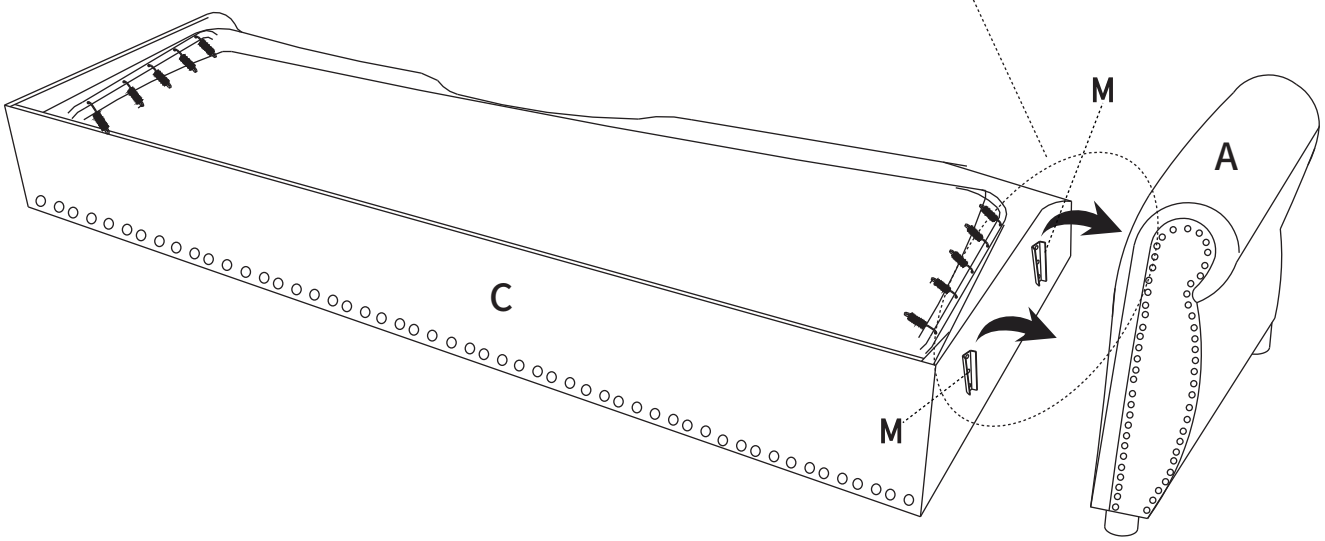


18 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

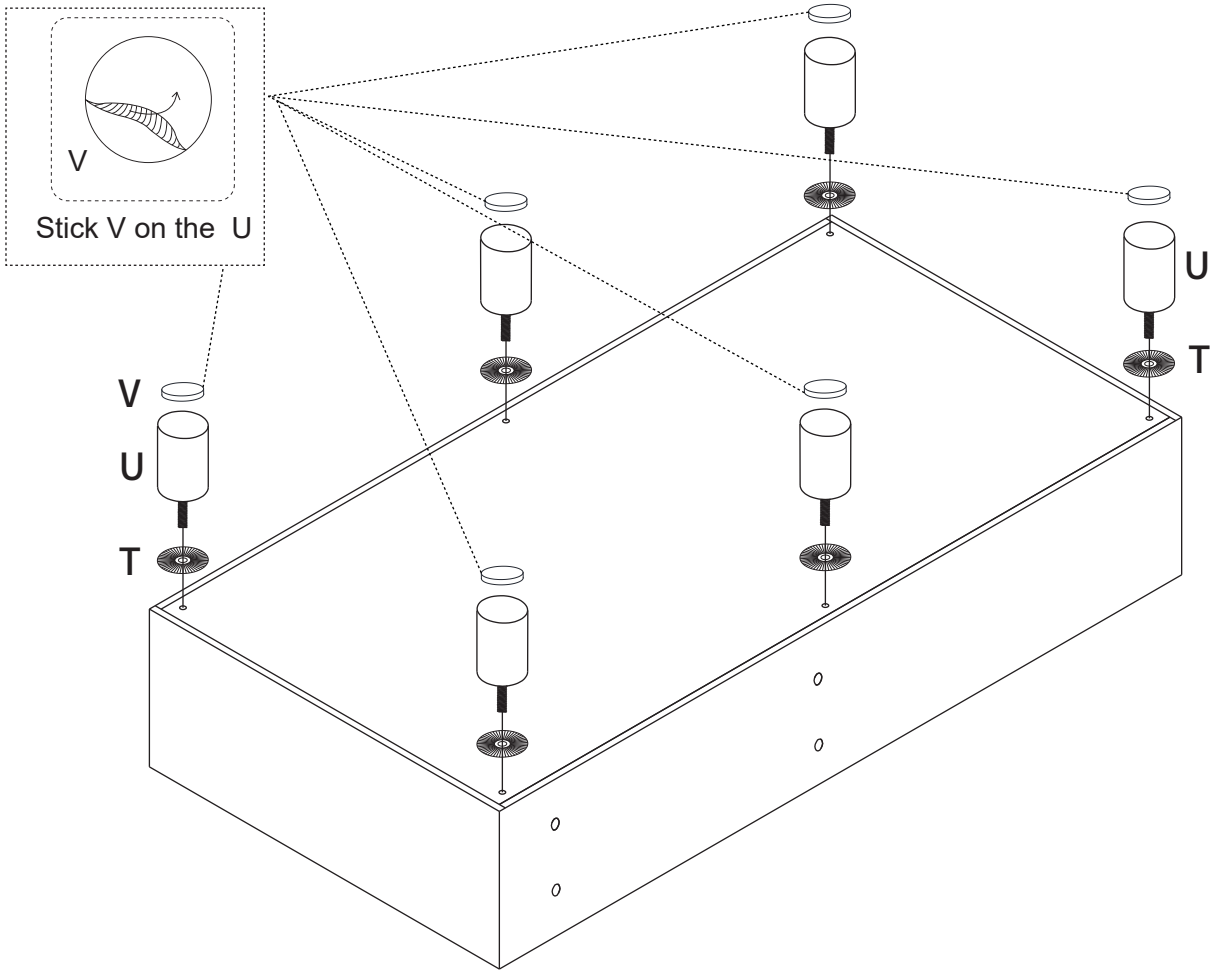



19 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

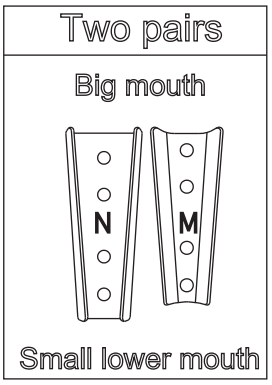


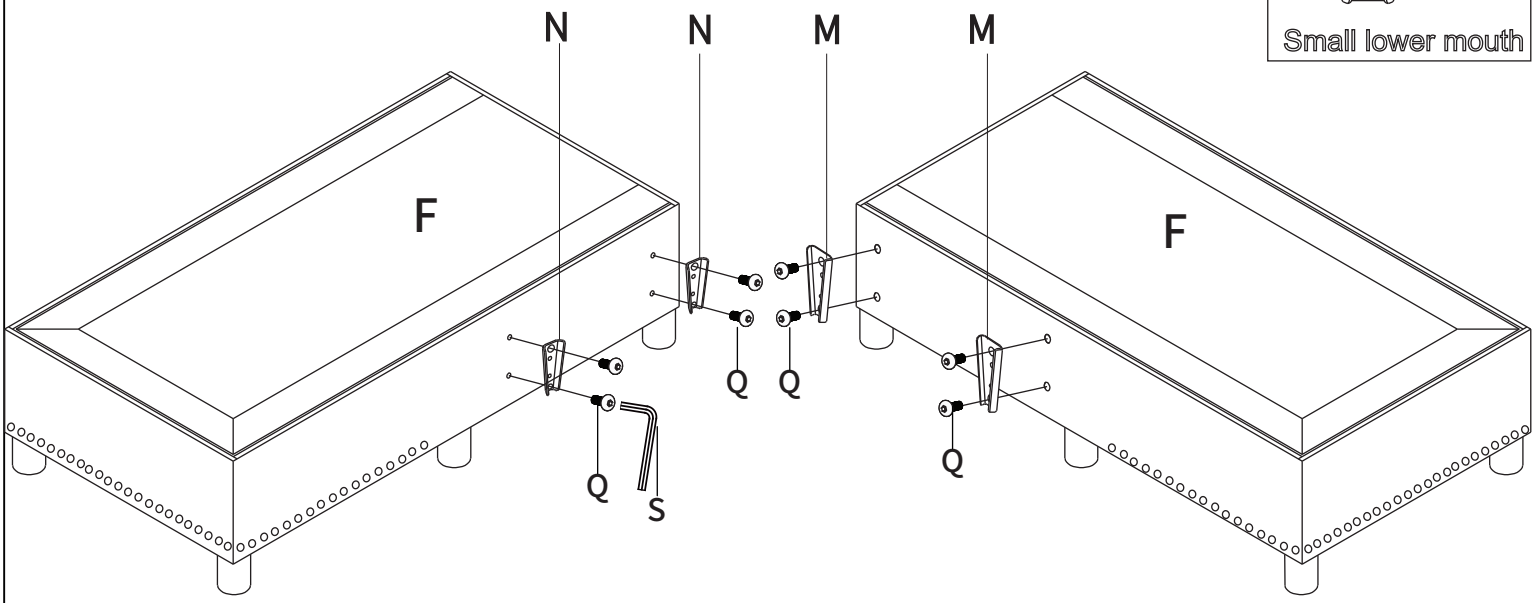


20 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

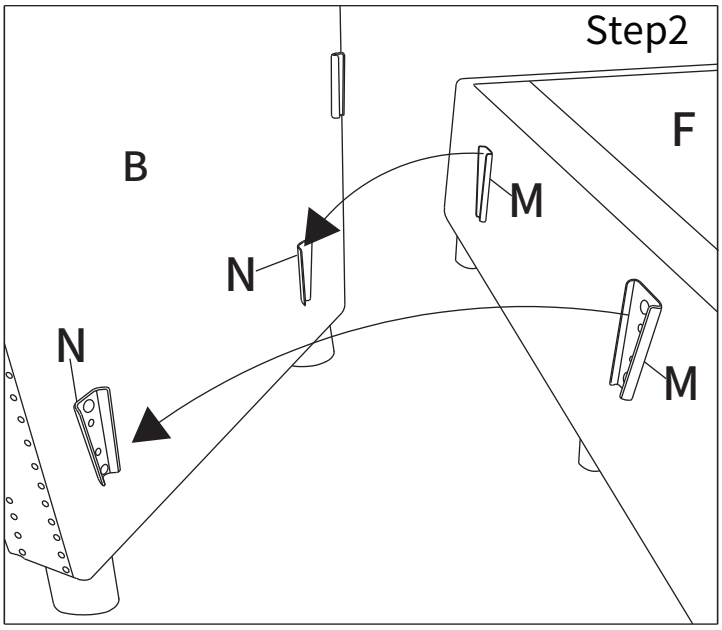


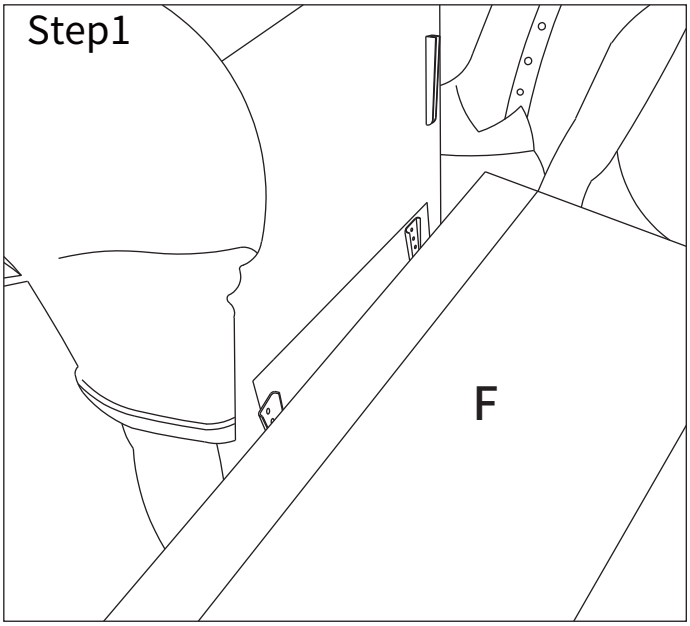


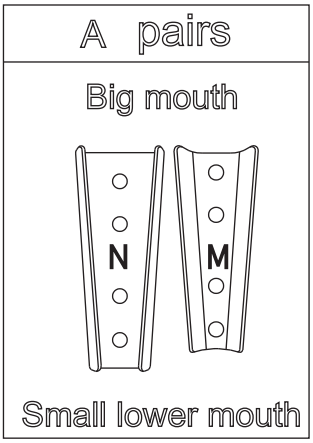


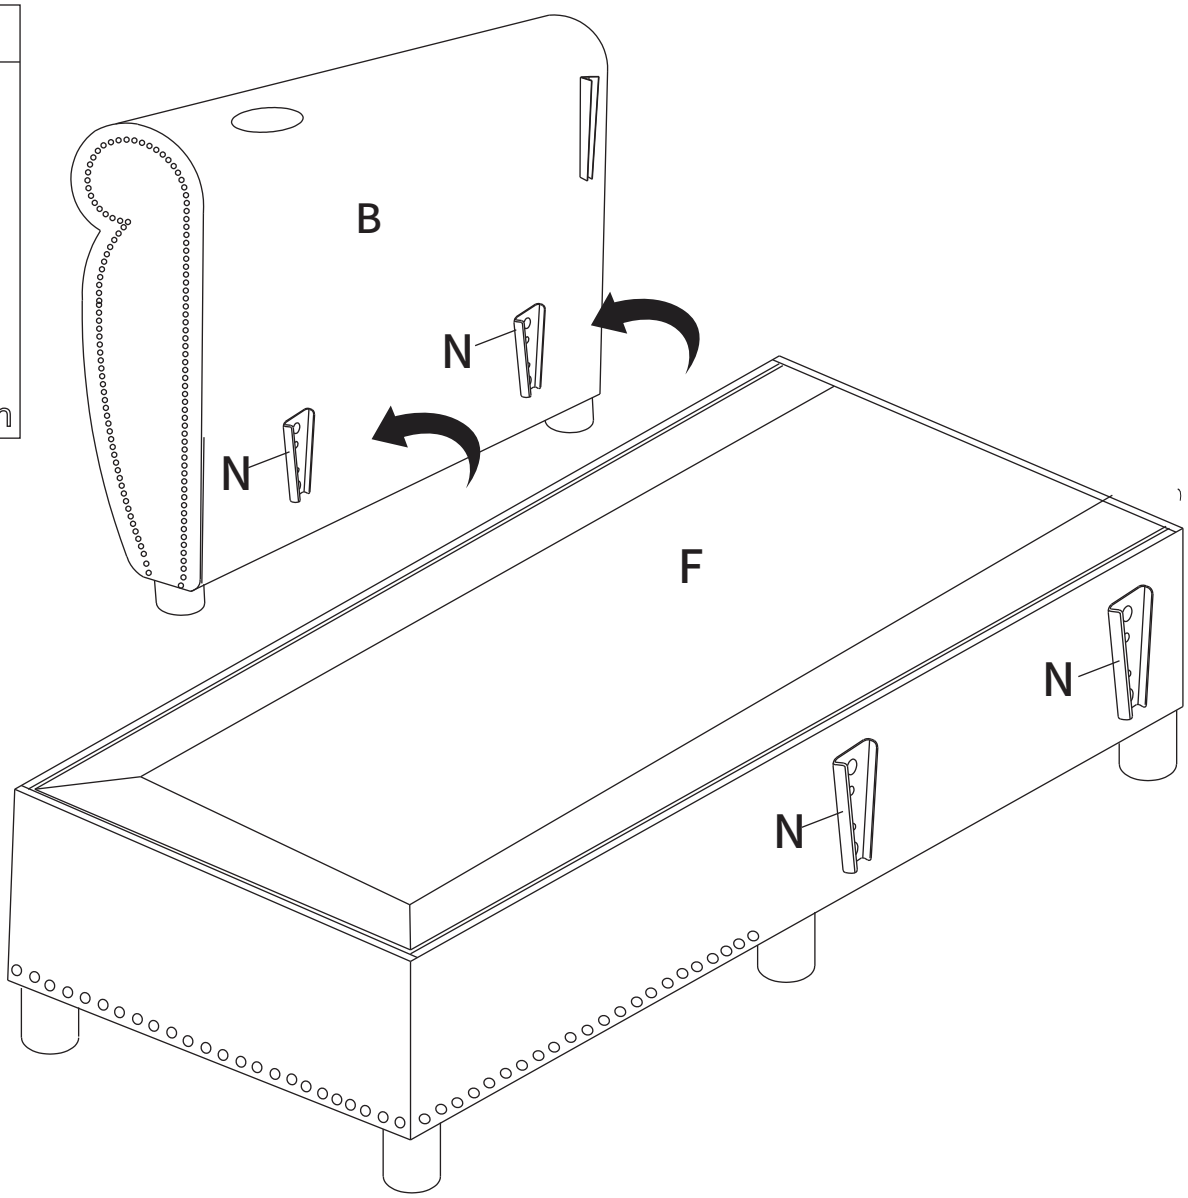


21 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

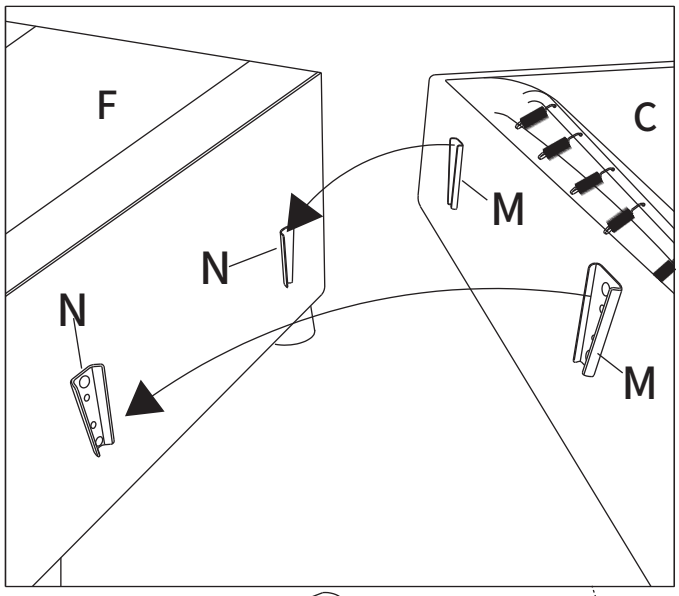


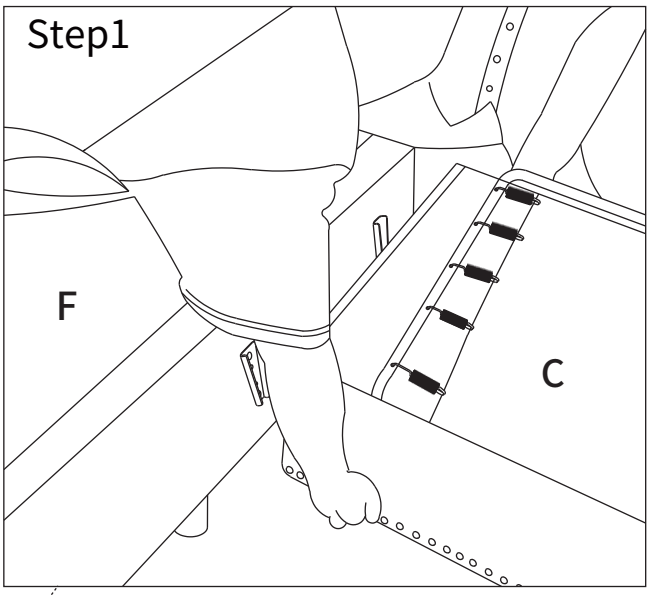

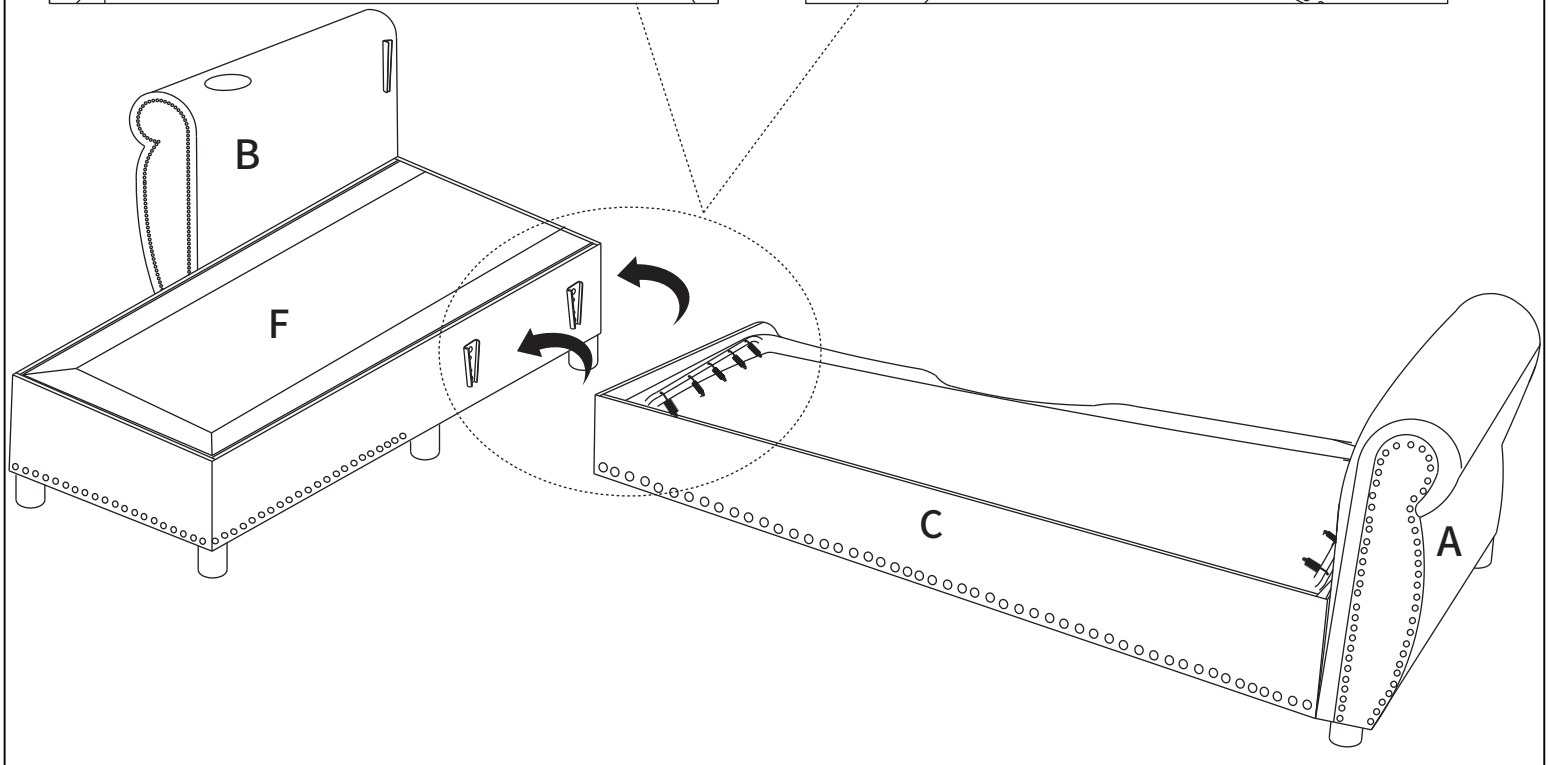


22 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

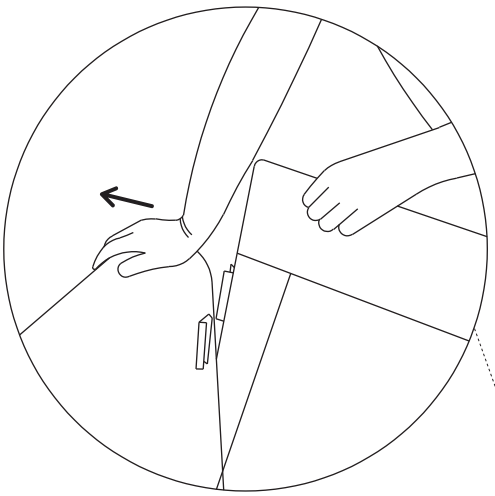


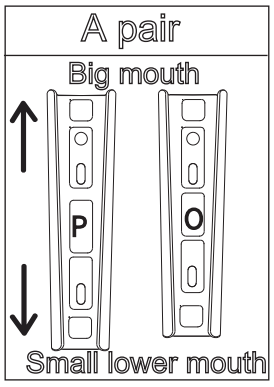


Step2

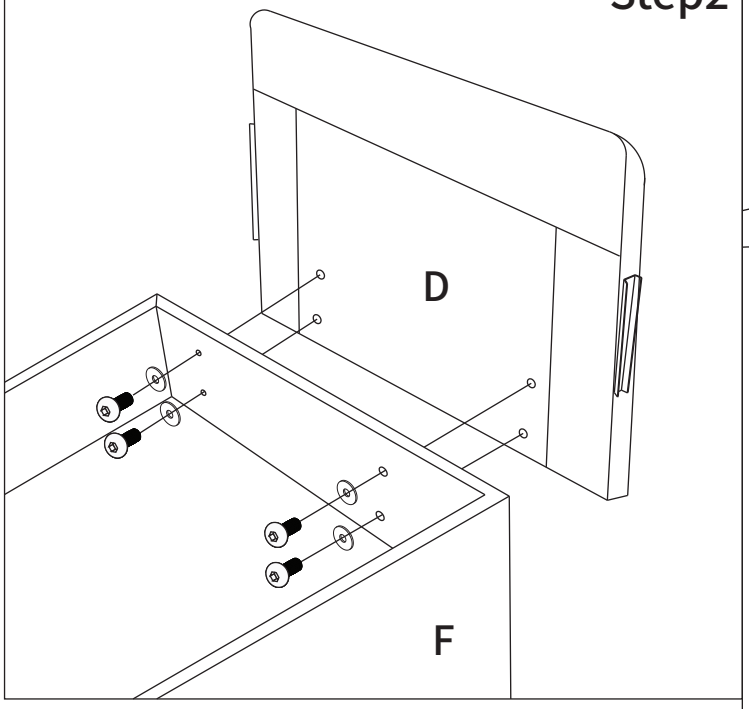


Step1

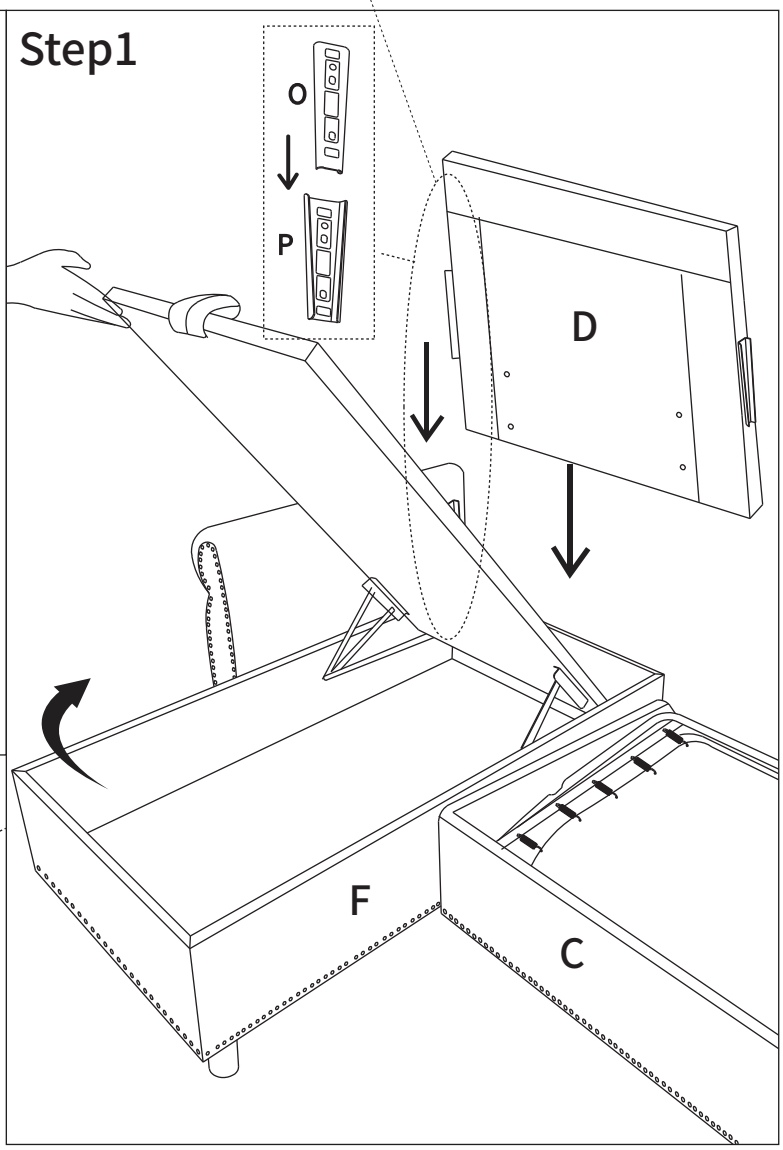


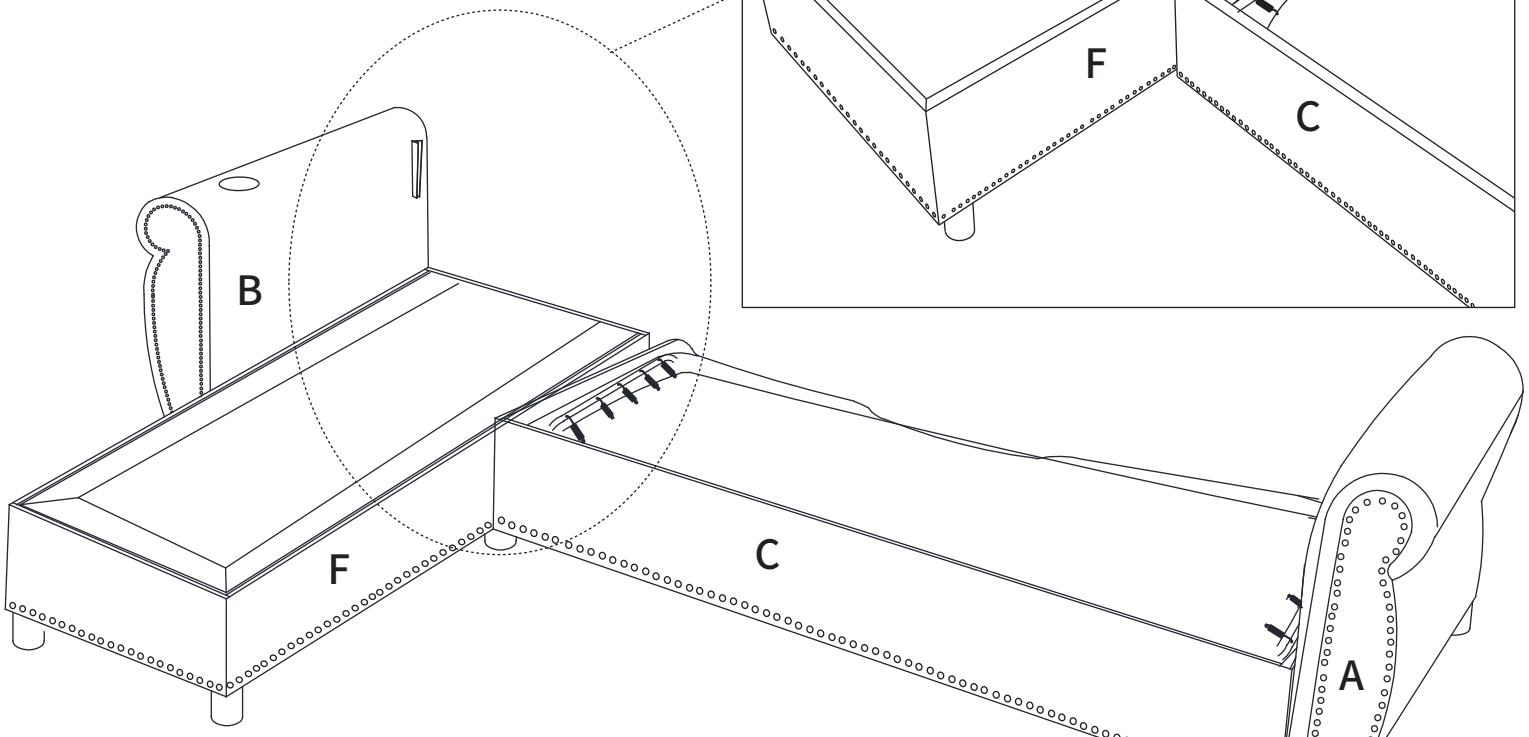


23 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

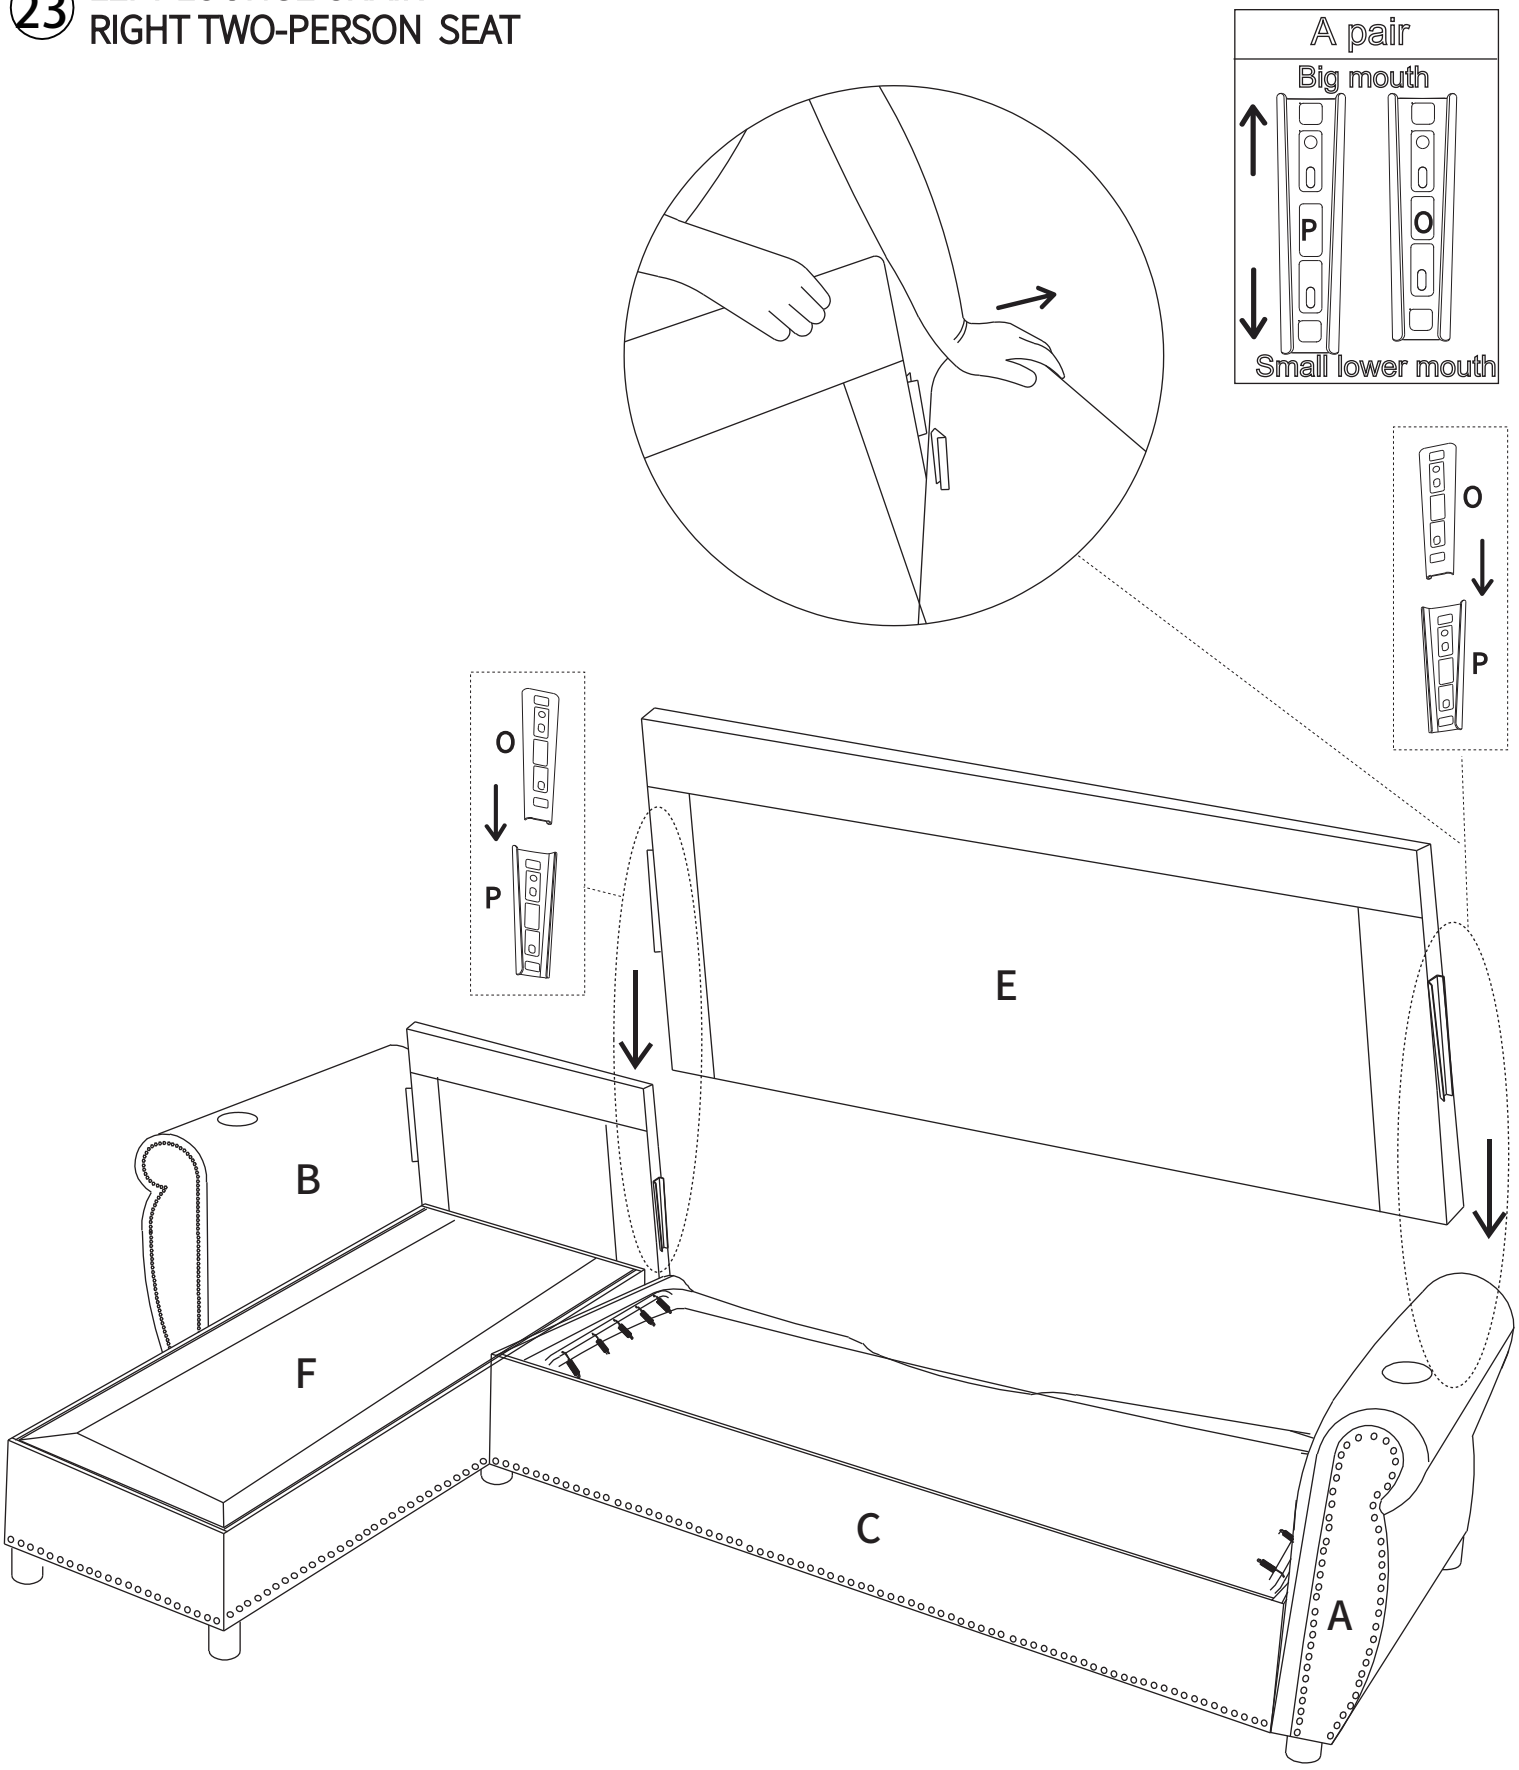

24 LEFT LOUNGE CHAIR
RIGHT TWO-PERSON SEAT

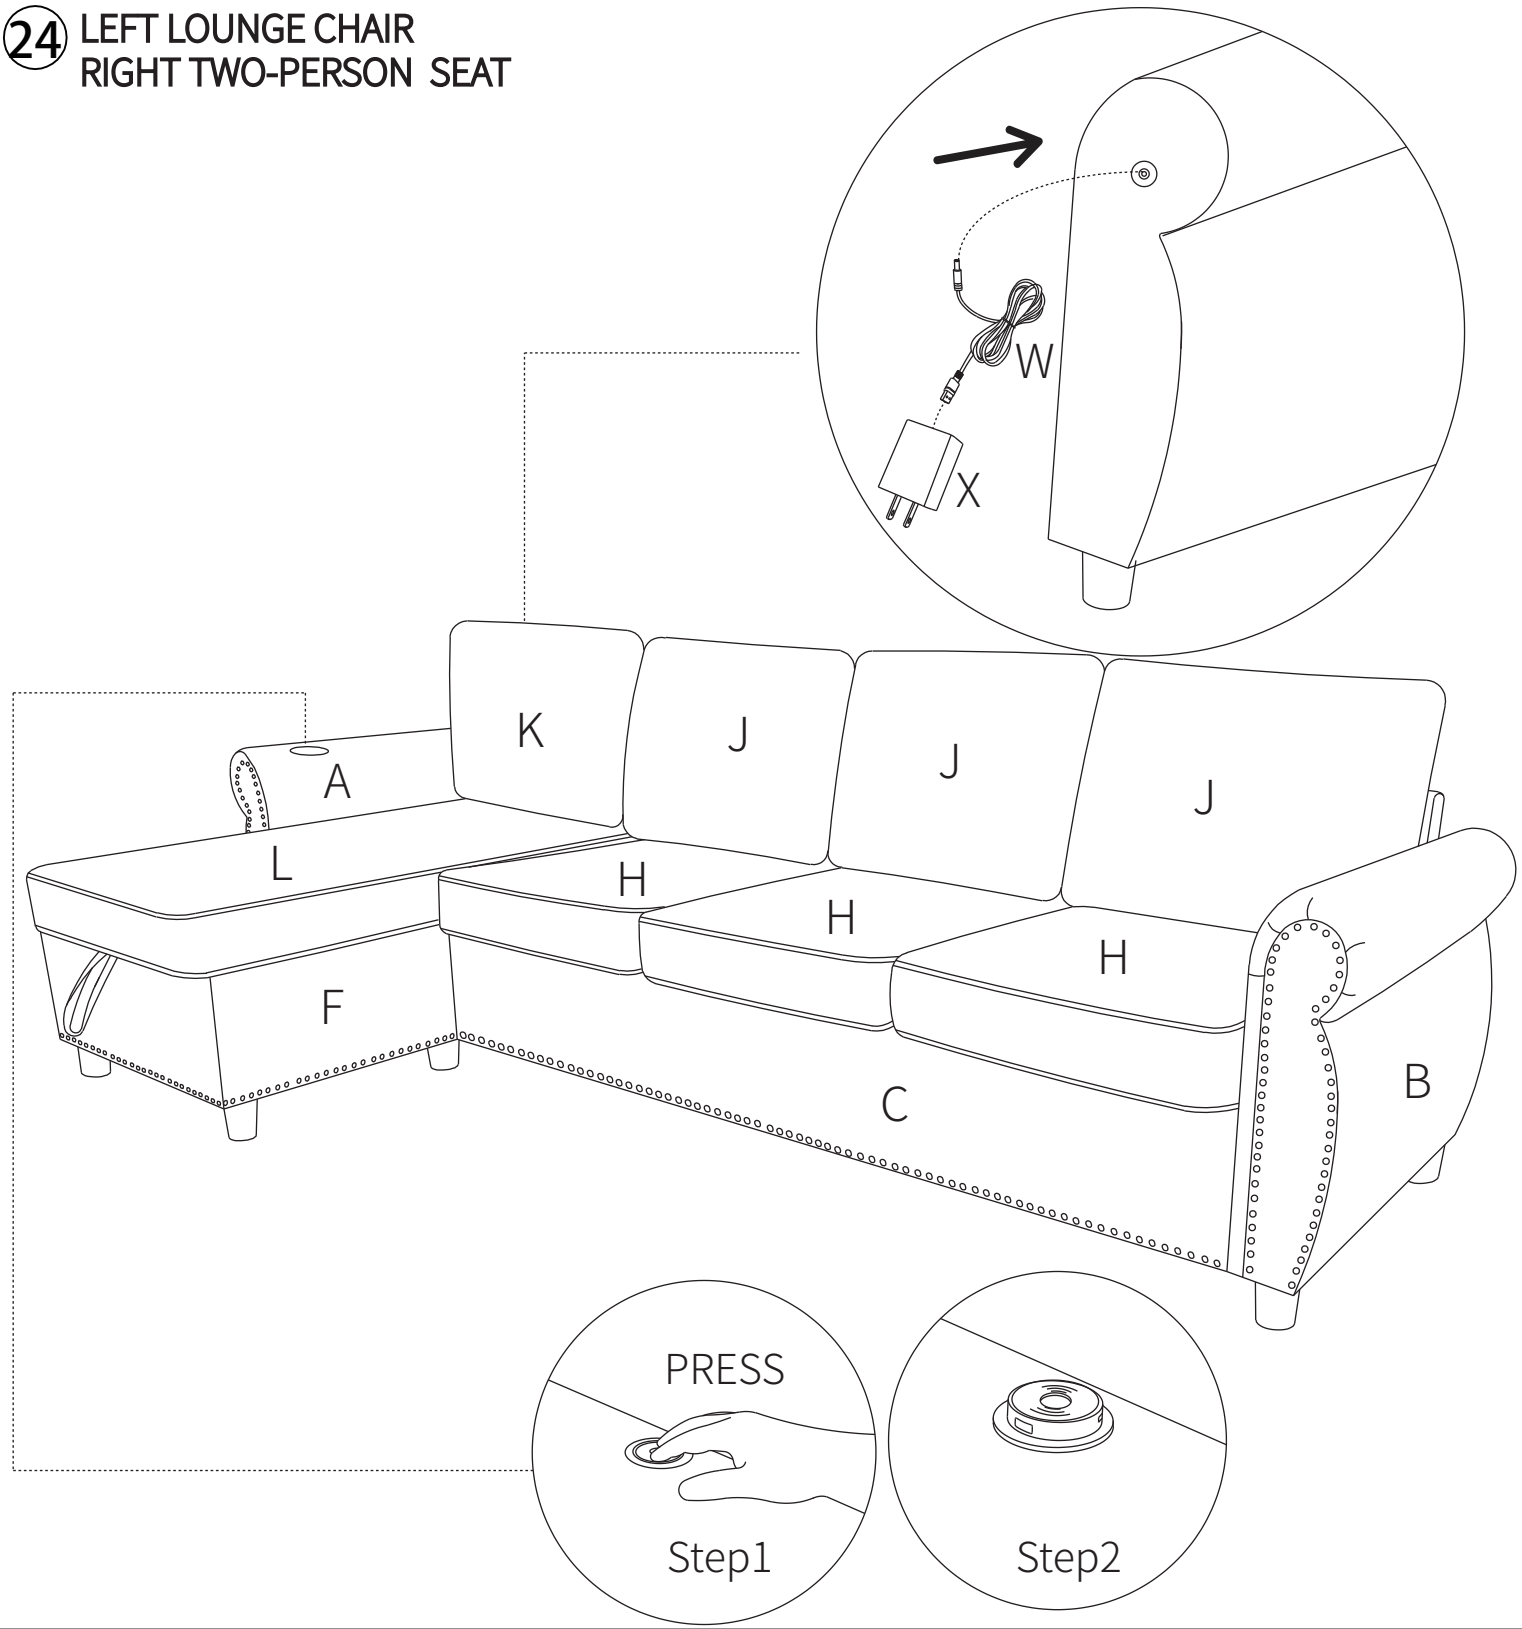

25

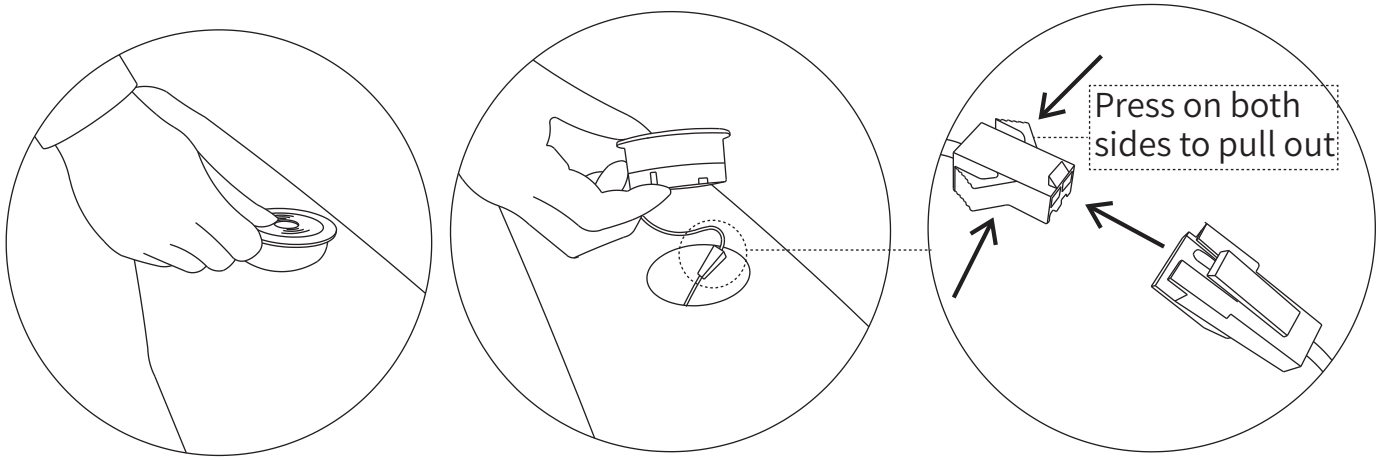


If you encounter the need for replacement parts, you can follow this procedure.


Unfold

STEP 1




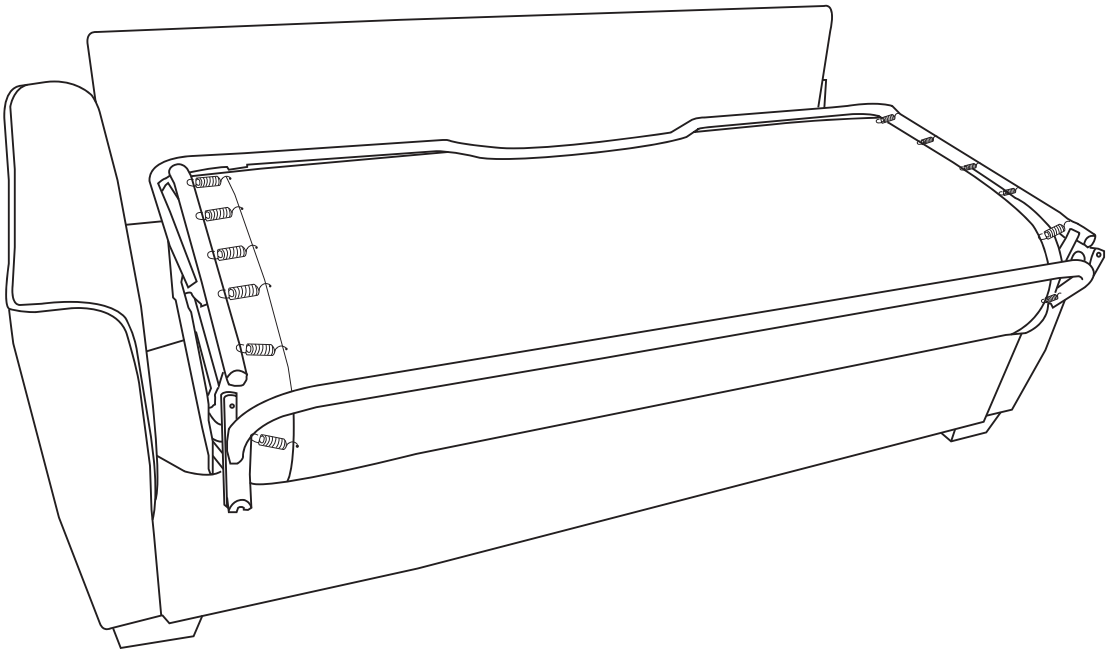


STEP 2

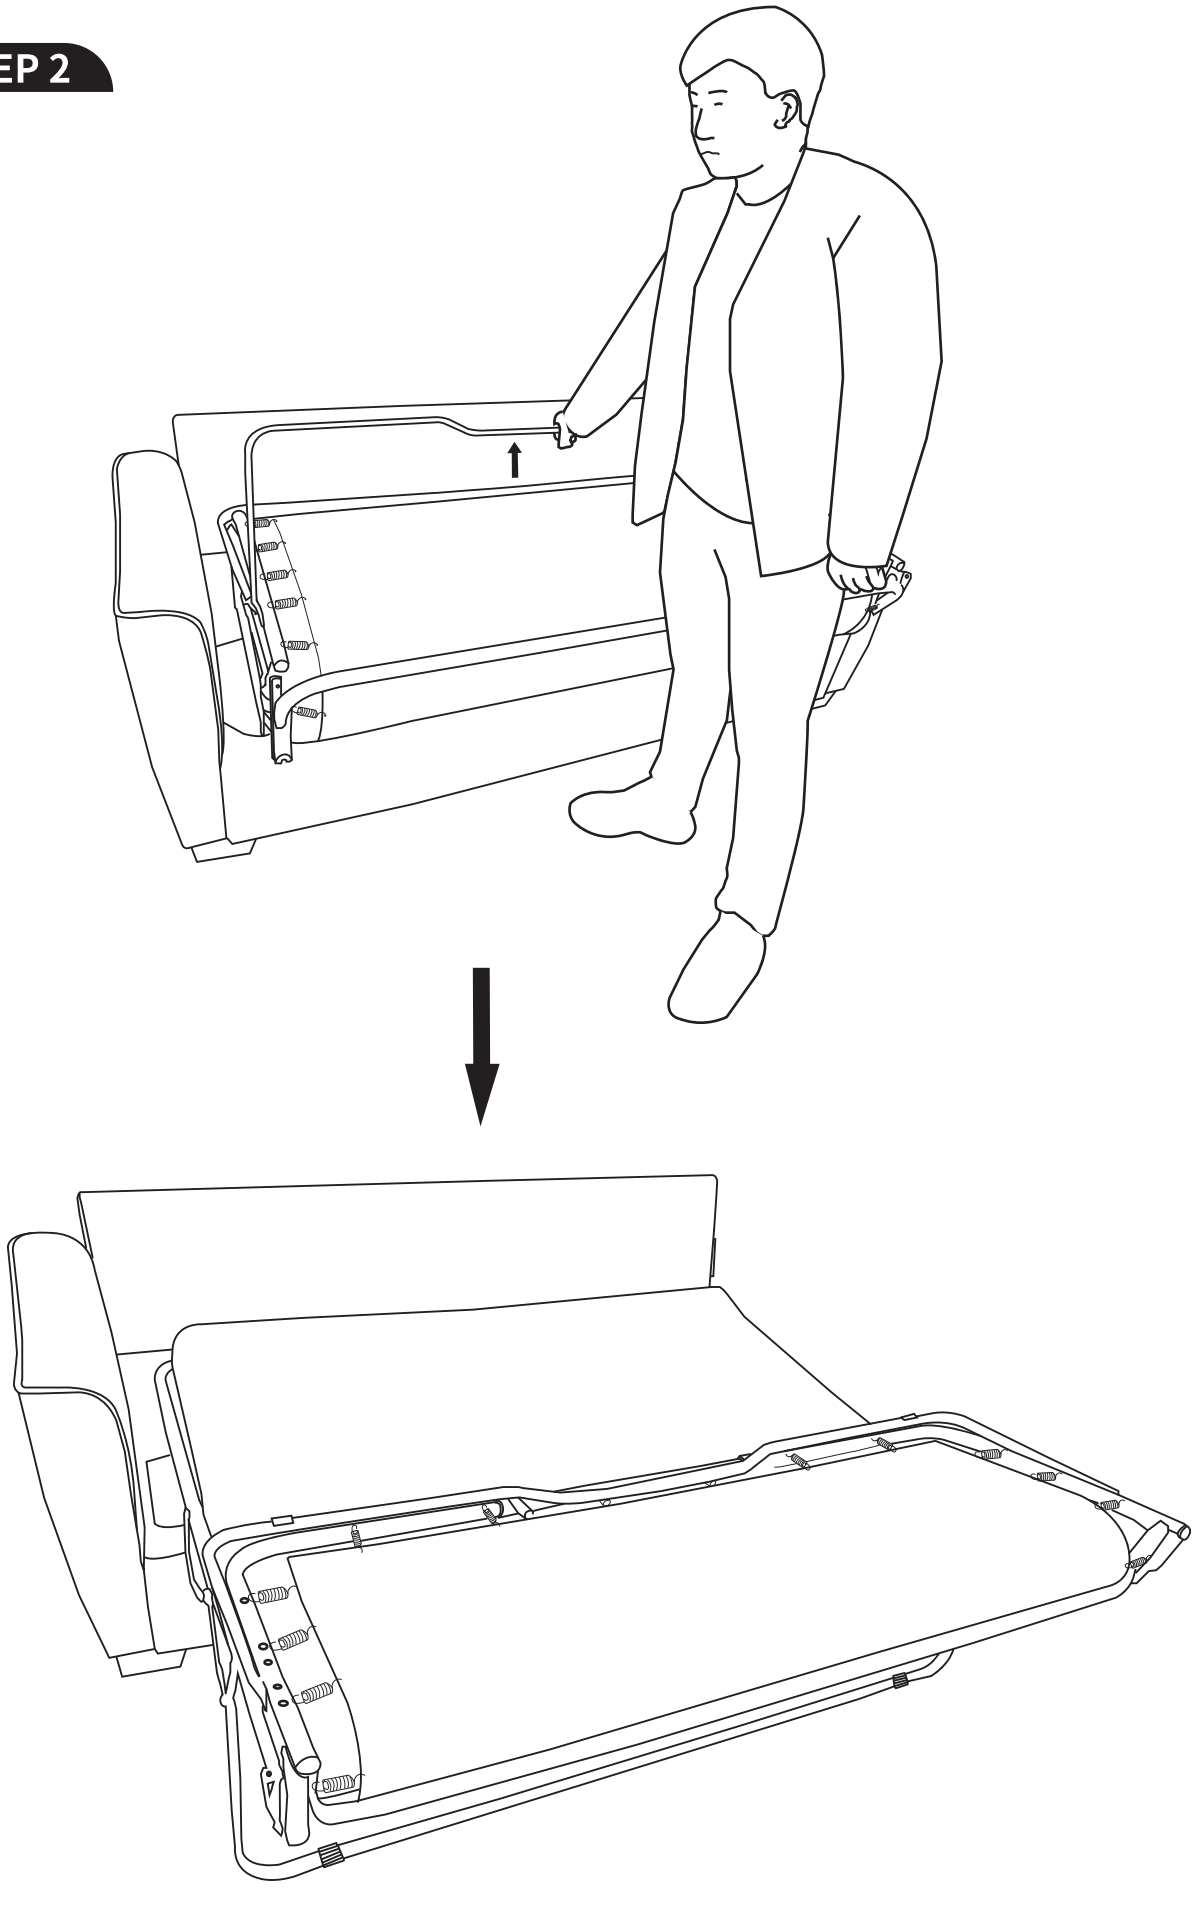


STEP 3

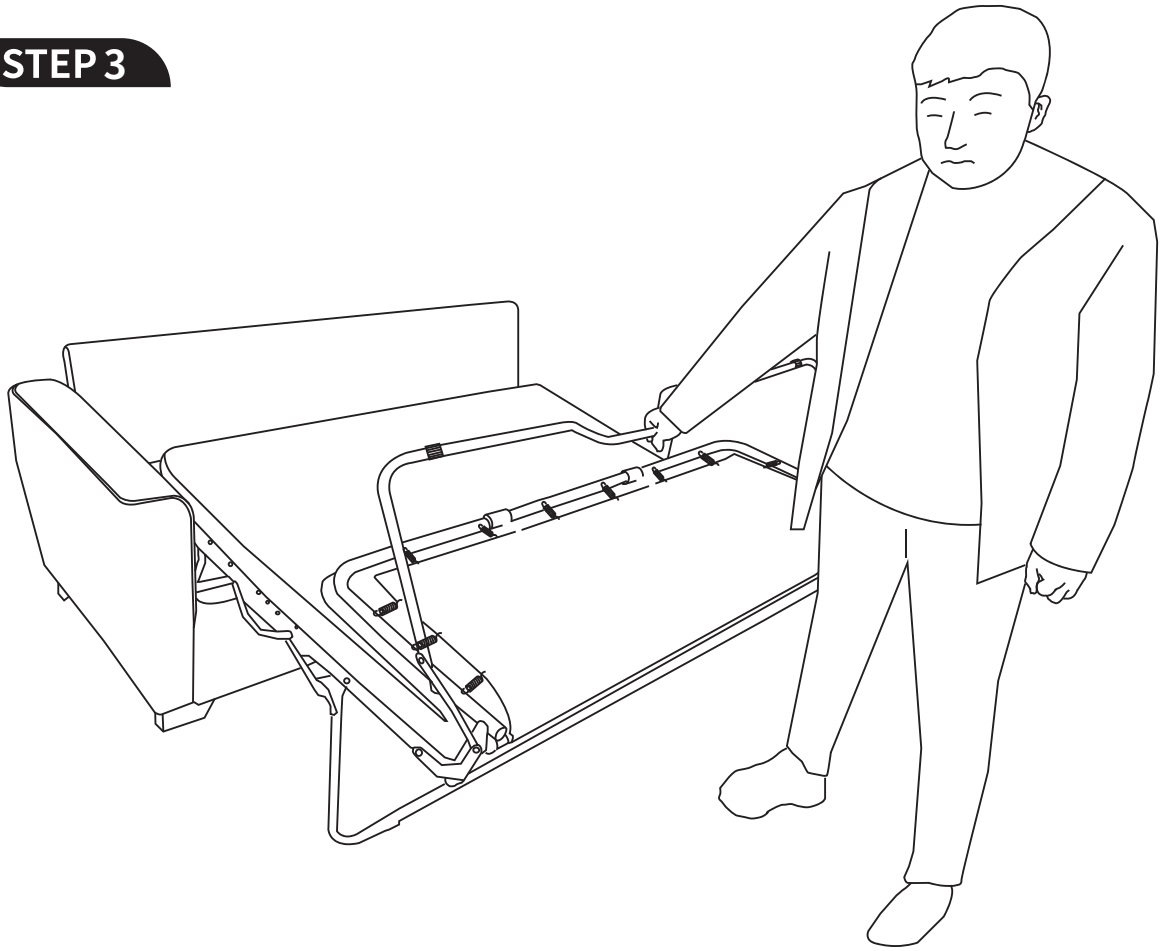


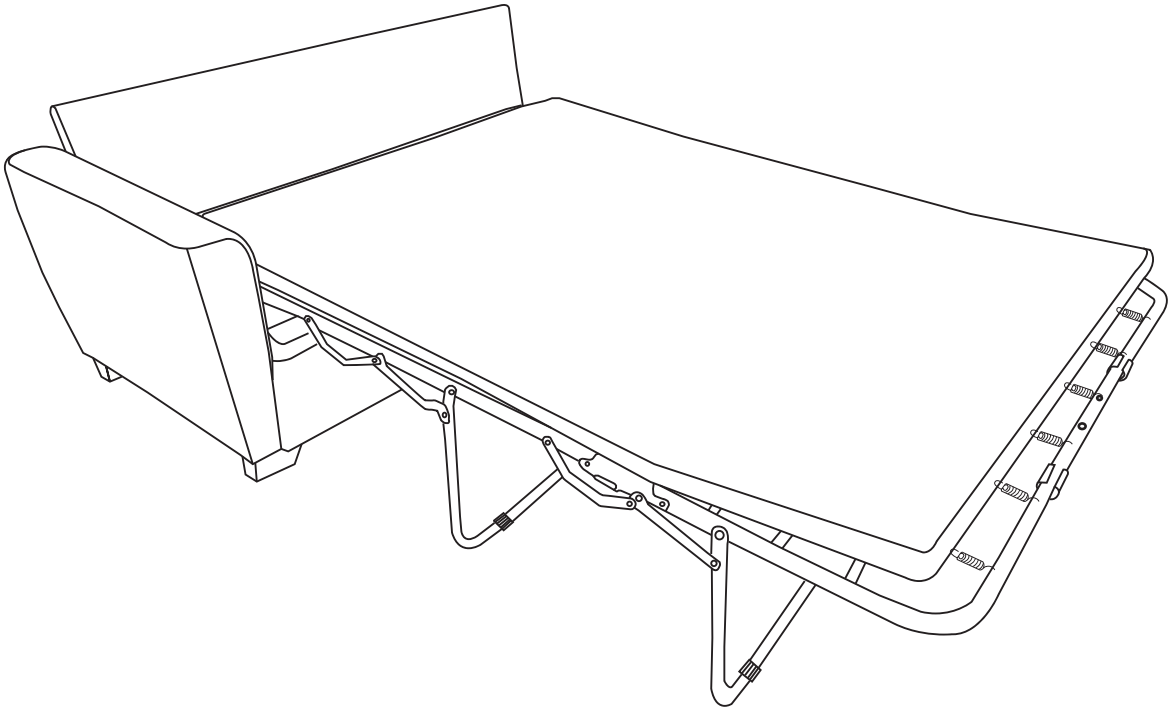


Fold


STEP 4

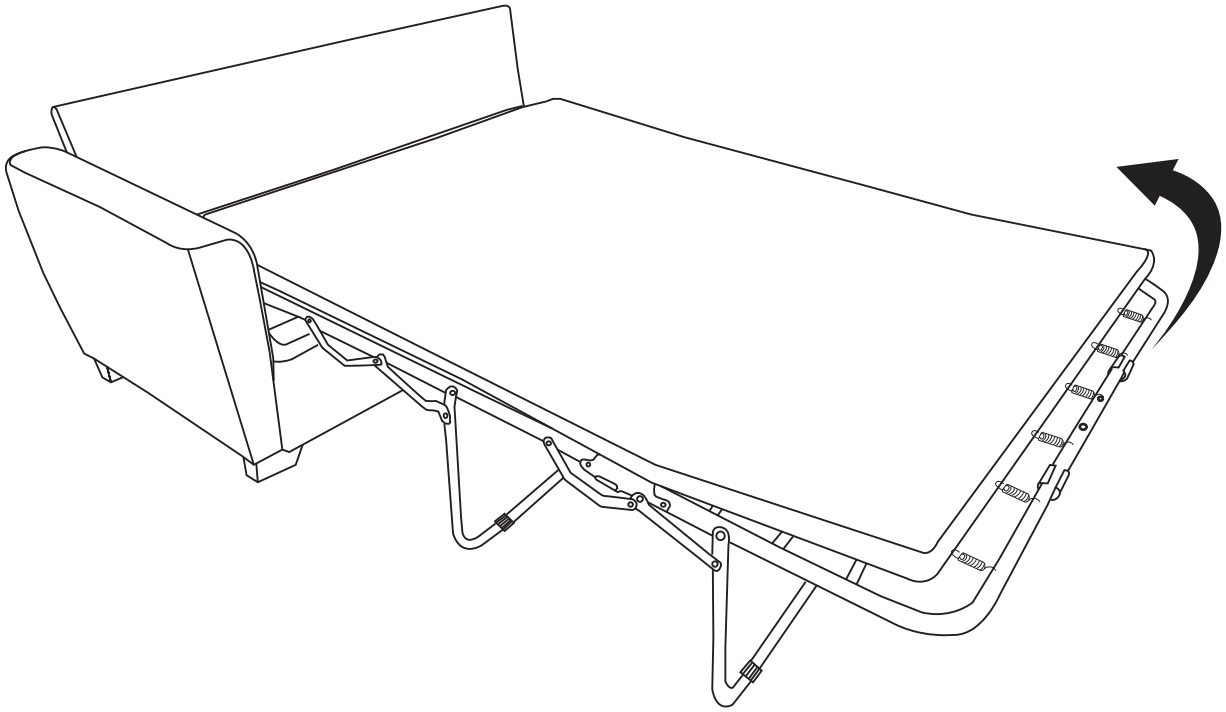

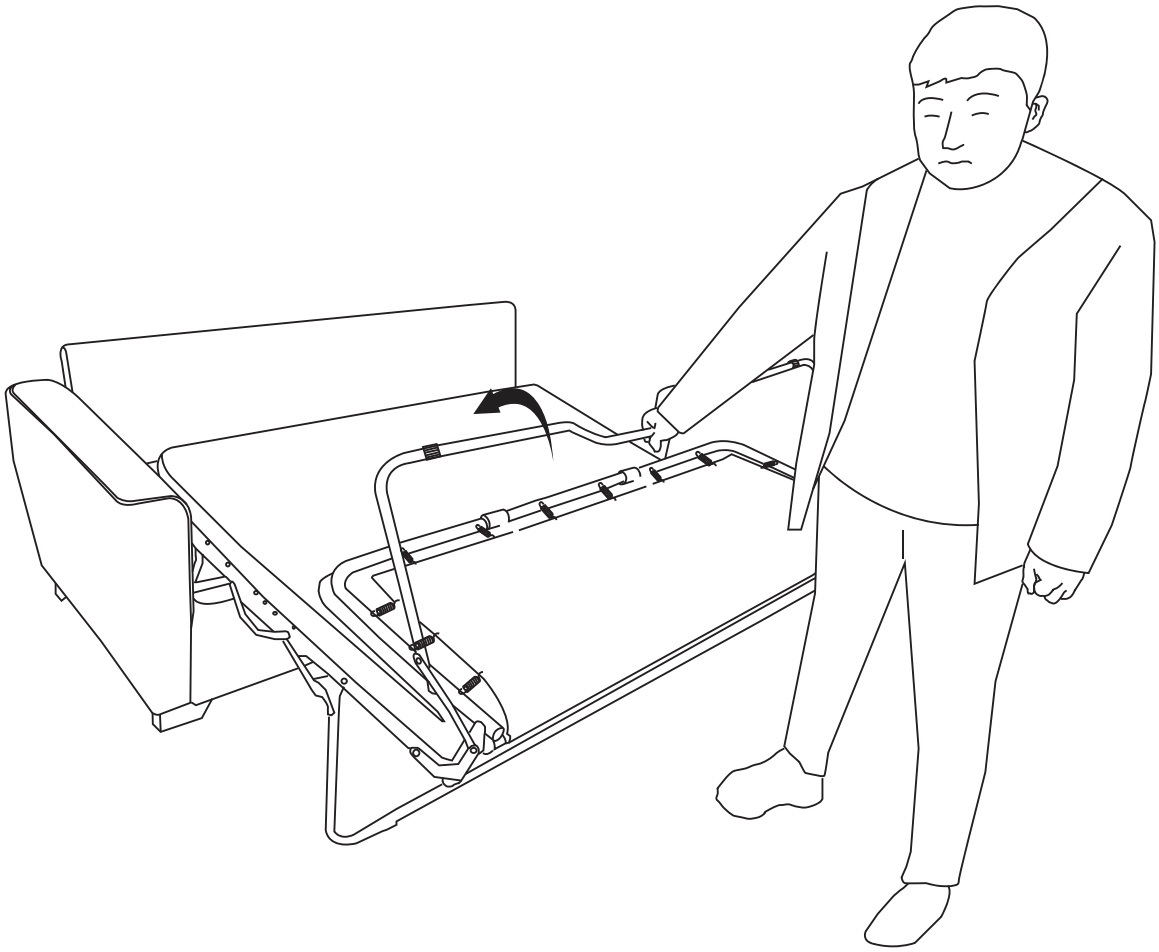


STEP5

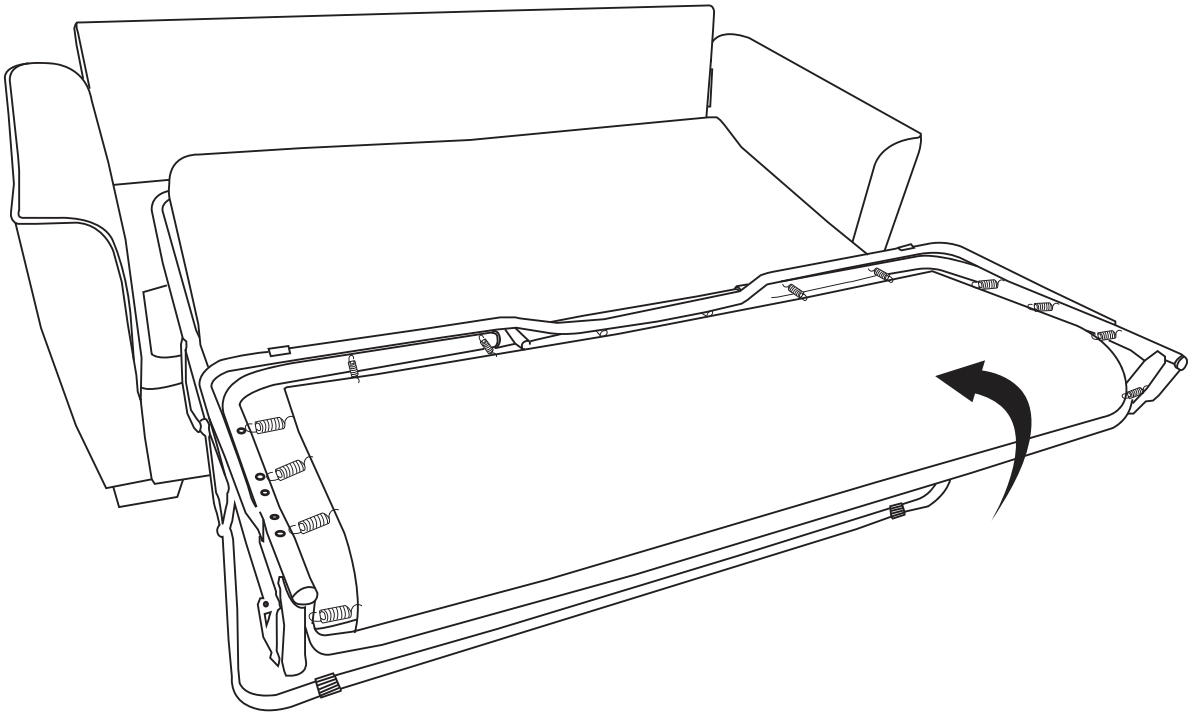

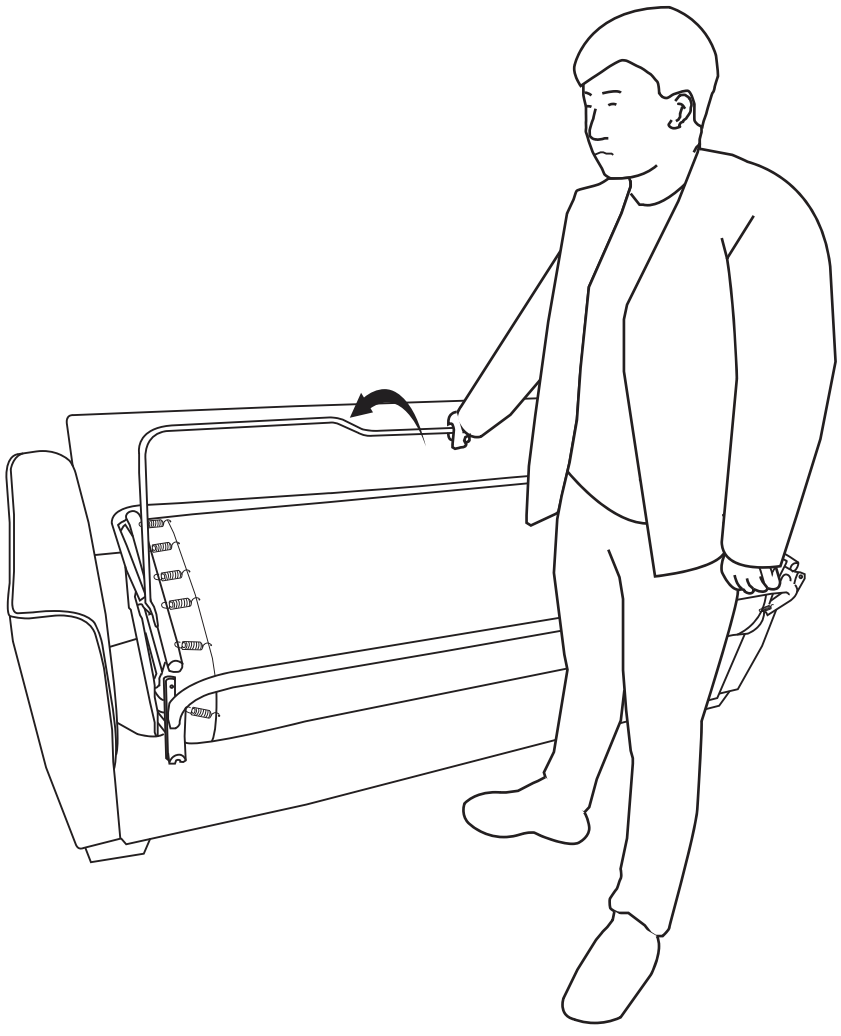

STEP6

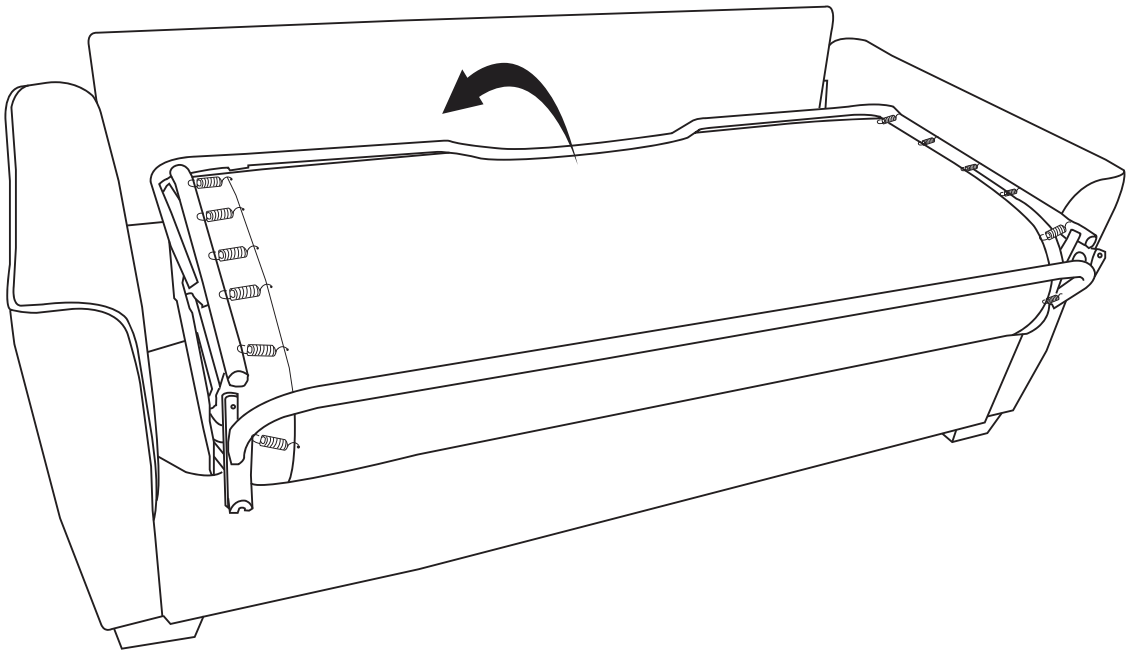



STEP 7

