
furniturebox

TAM

Large TV Unit

Assembly Guide

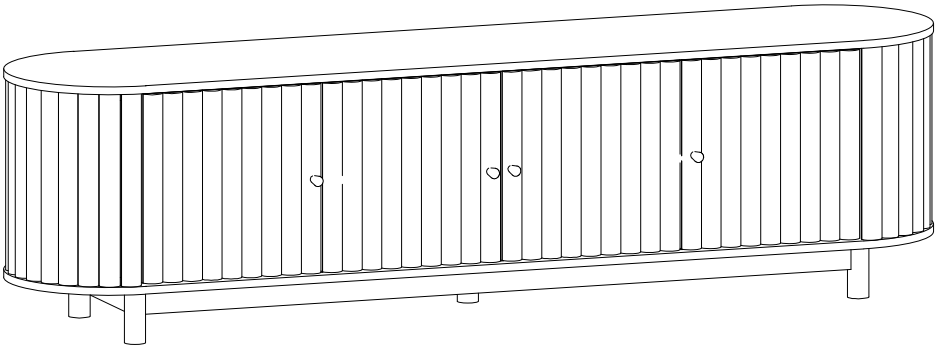

EasyBuild Design, powered by ovvo. Less assembling, more living.

furniturebox

IMPORTANT: please read these instructions fully before starting assembly



SAFETY AND CARE ADVICE



NO POWER TOOLS

- Check you have all the components and tools listed
- Remove all fittings from their bags and separate into groups
- We do not recommend use of power tools - this could damage the unit. Only use hand screwdrivers and Allen keys
- Keep children and animals away from the work area, small parts could cause choking if swallowed
- Make sure you have enough space to lay out the parts before starting
- Assemble the item as close to its final position (same room) as possible
- Do not over tighten the nuts to avoid damage to the threads
- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners
- Do not allow children to climb or play on this product From time to time, check there are no loose screws in this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- Unless otherwise stated, this product is designed for domestic use and is not certified for commercial or contract settings

furniturebox

IMPORTANT INFORMATION



60 Minute Build



Two Person Build



Max Weight Capacity 40kg


Note: Assembly estimates are approximate and can differ based on the specific environment and user experience.

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Getting to know your product:







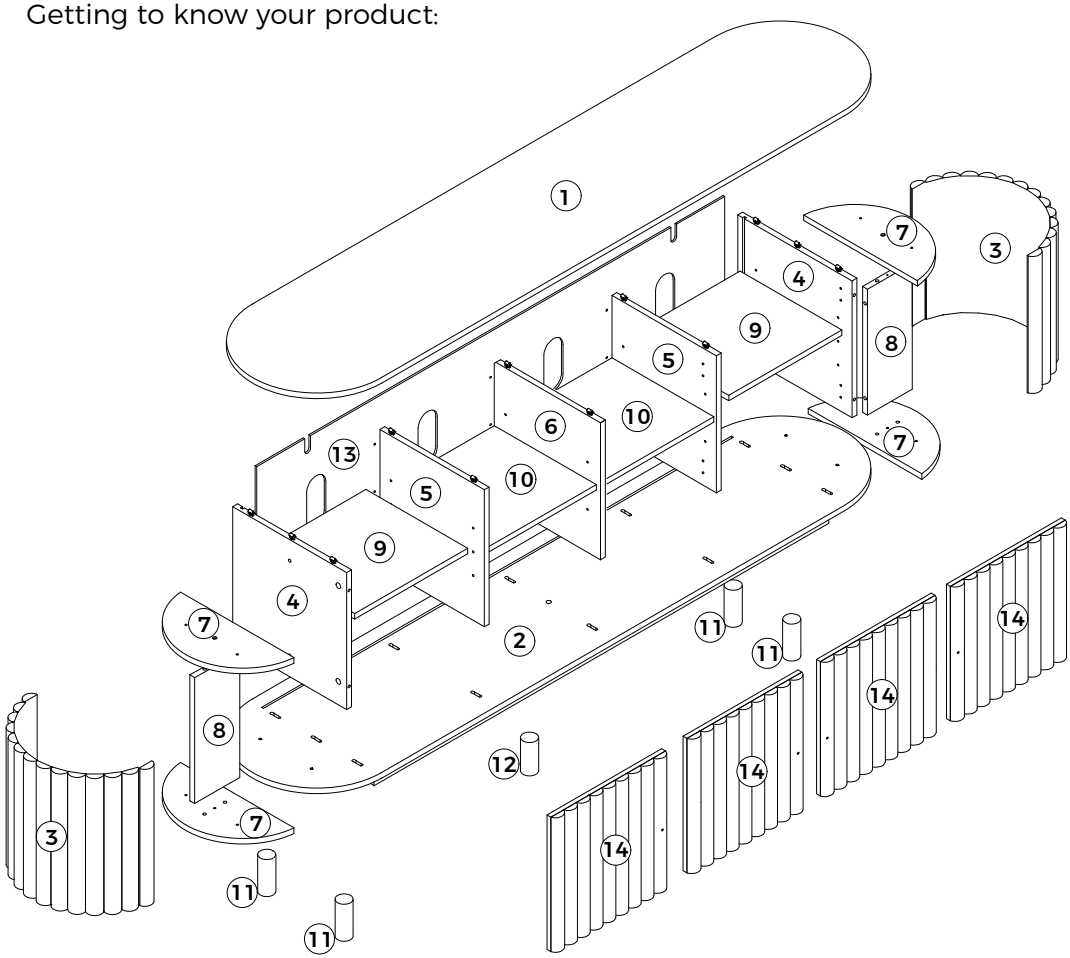






furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Parts Key:

Label	Part Name	Image / Drawing	Quantity
1	Top Panel		1
2	Bottom Panel		1
3	Side Decor Panel		2
4	Side Panel		2
5	Divider Panel		2
6	Middle Divider Panel		1
7	Arc Panel		4
8	Support Panel		2



Label	Part Name	Image / Drawing	Quantity
9	Side Shelf		2
10	Shelf		2
11	Leg		4
12	Middle Leg		1
13	Back Panel		1
14	Door		4

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Hardware Key:


Label	Hardware Description	Image / Drawing	Size(mm)	Quantity
A	Cam Bolt		ø7x34	4
B	Cam Nut		ø15x12	4
C	Dowel		ø8x30	12
D	Hinge		ø35	8
E	Screw		ø4x15	16
F	L-Bracket		80x30x15	2
G	Screw		ø4x14	4
H	Shelf pin		ø6.5x16	16
J	Felt feet		ø30x5mm	4
K	Bolt		M6x55mm	8

furniturebox

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Hardware Key:

Label	Hardware Description	Image / Drawing	Size(mm)	Quantity
L	Washer		ø16x8x1.5	8
M	Spring washer		ø10x8x2.5	8
N	Allen Key		M4	1
P	Handle		ø18x24	4
Q	Bolt		M4x30	4
R	Screw		ø4x25	8
S	Screw		ø5x30	8
T	Screw		ø3x19	6


furniturebox

Note:


- Use a clear, flat surface to avoid bumps or scratches before assembling.
- Insert all fixings loosely at first to allow for alignment; only tighten them once everything is properly positioned, as some adjustment may be required.
- Avoid over-tightening, as this may damage the parts.
- Seek assistance when moving large or heavy parts

Fitting Assembly Instructions


Assembly

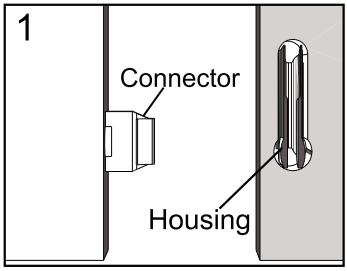


Push connector into housing to join.

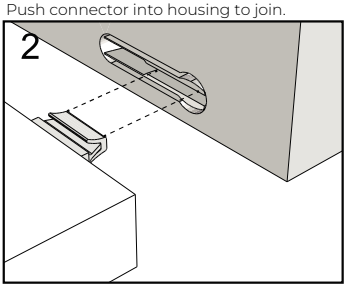


Make sure there is no gap between the panels.

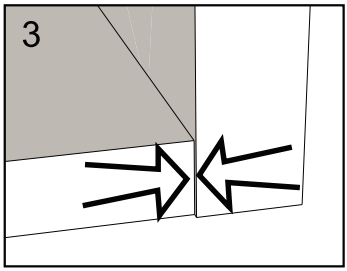

Disassembly

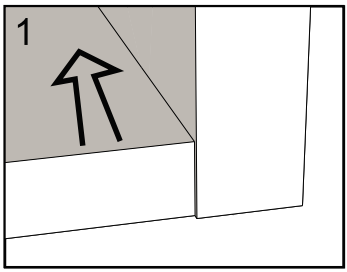

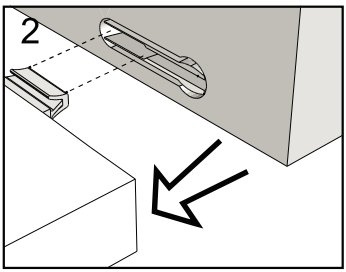


furniturebox

STEP 1

Attach 4 x Legs [11] to Bottom panel [2] using 8 x bolts [K],
8 x washers [L] and 8 x spring washers [M] with Allen key [N] as shown.
Attach 4 x felt feet [J] to 4 x legs [11].
Attach 1 x Middle leg [12] to bottom base [2].


									
J	4PCS	K	8PCS	L	8PCS	M	8PCS	N	1PC

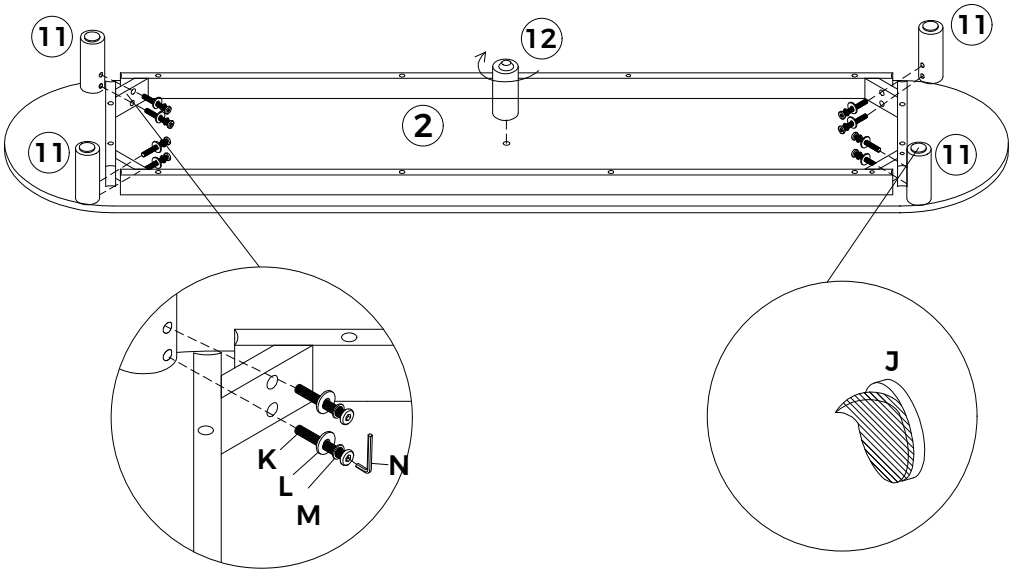


furniturebox

STEP 2

Insert 6 x dowels [C] to each x Support panel [8](12 total).
If needed use a mallet to gently tap the dowels into place.

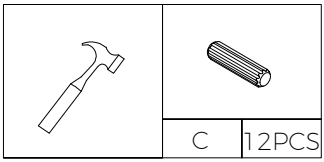

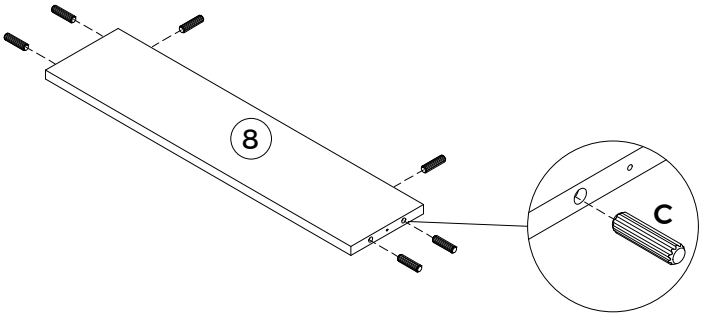



x2

furniturebox

STEP 3

Attach 4 x Arc panels [7] to 2 x Support panels [8] with 4 x Screws [S] as shown, tighten with a Phillips head screwdriver.

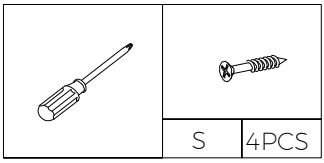

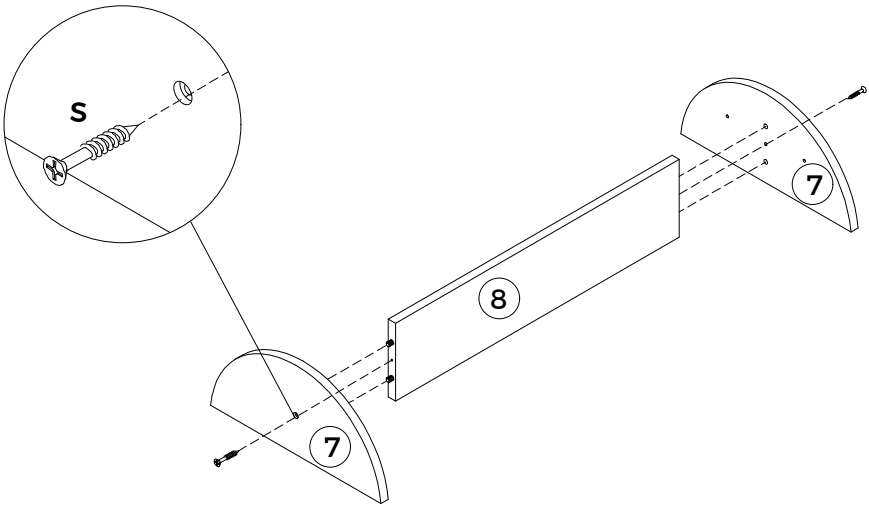



x2

furniturebox

STEP 4

Insert 2 x Side panels [4], 2 x Divider panels [5] and 1 x Middle divider panel [6] to Bottom panel [2] as shown.

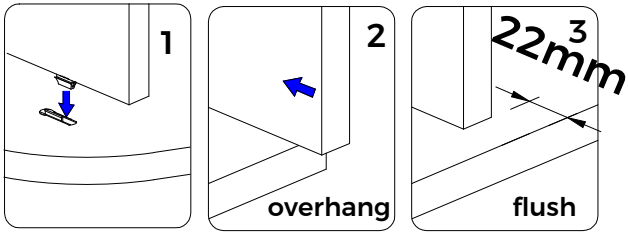


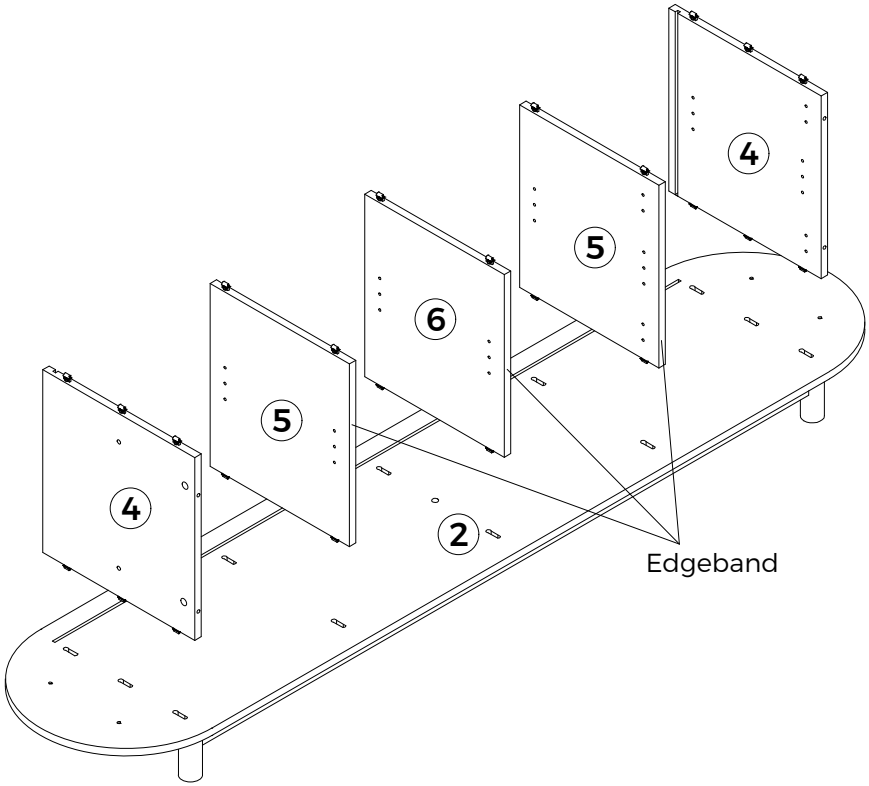

furniturebox

STEP 5


Attach Support panels [8] to Side panels [4] as shown.

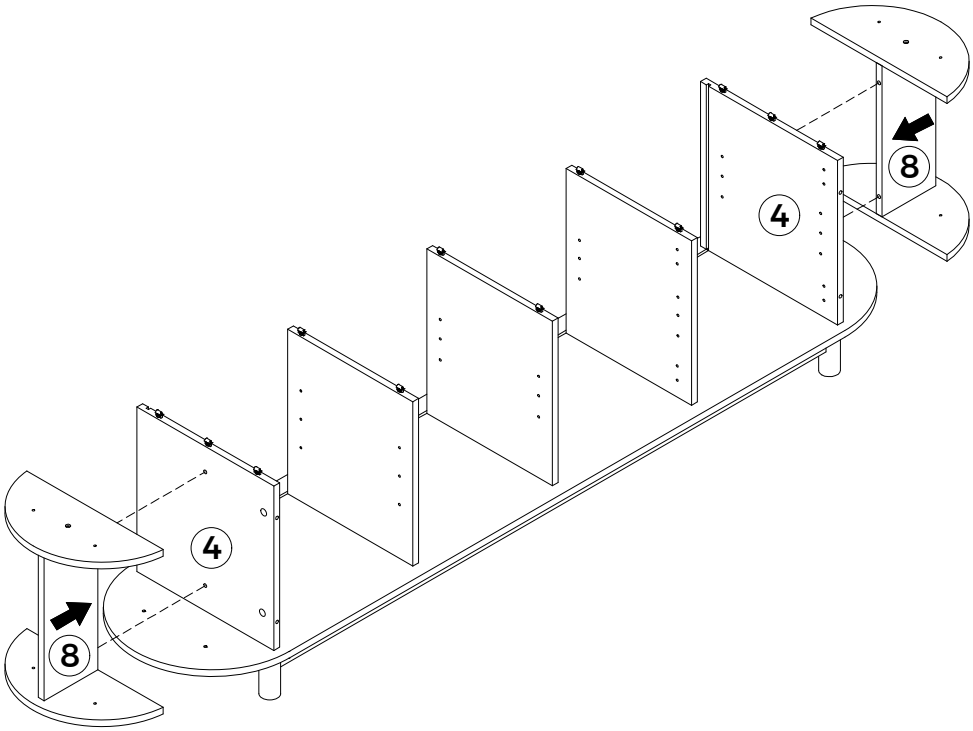


furniturebox

STEP 6


Insert 2 x screws [R] into Arc panel [7] as shown, tighten with a Phillips head screwdriver.

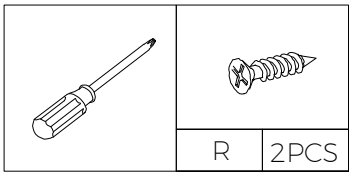


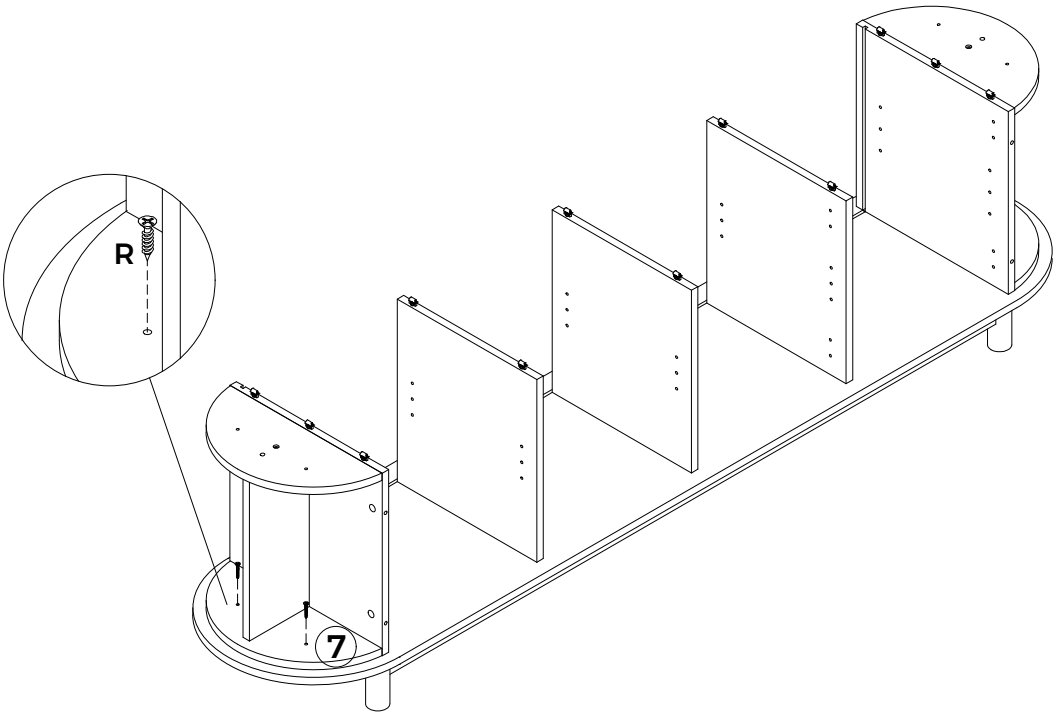

STEP 7

Insert 2 x screws [R] into Arc panel [7] as shown, tighten with a Phillips head screwdriver.

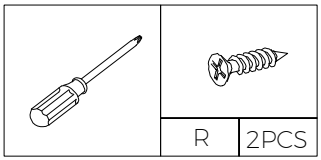


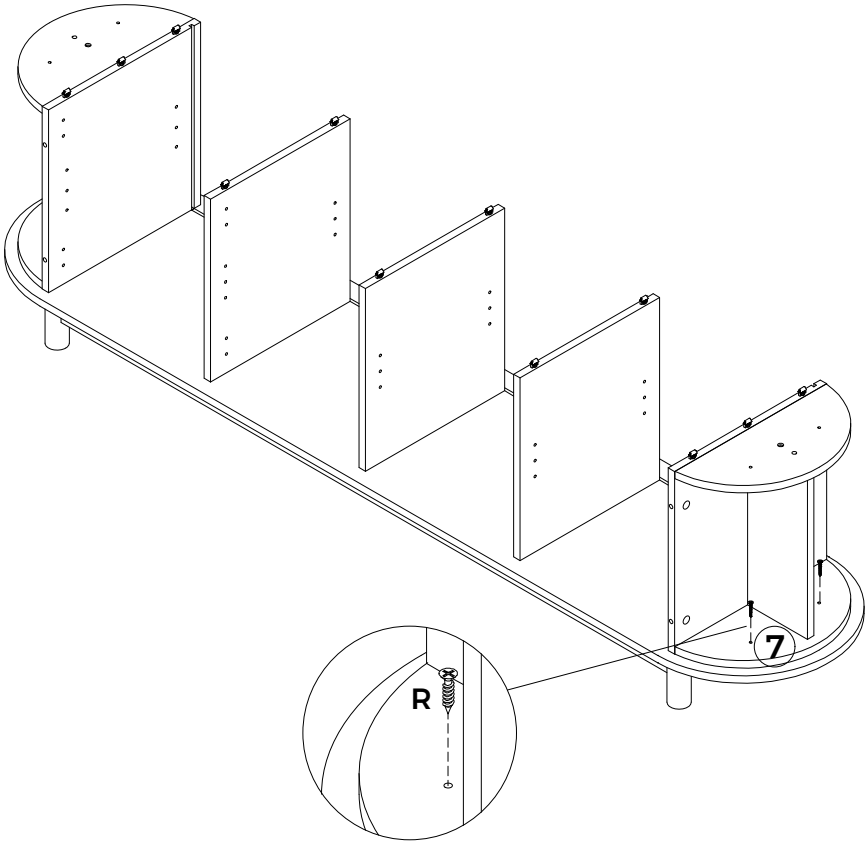

furniturebox

STEP 8


Slot in the back panel [13] into the grooves on Side panels [4] and Bottom panel [2] as shown.
Ensure back panel is fully slotted into the grooves.

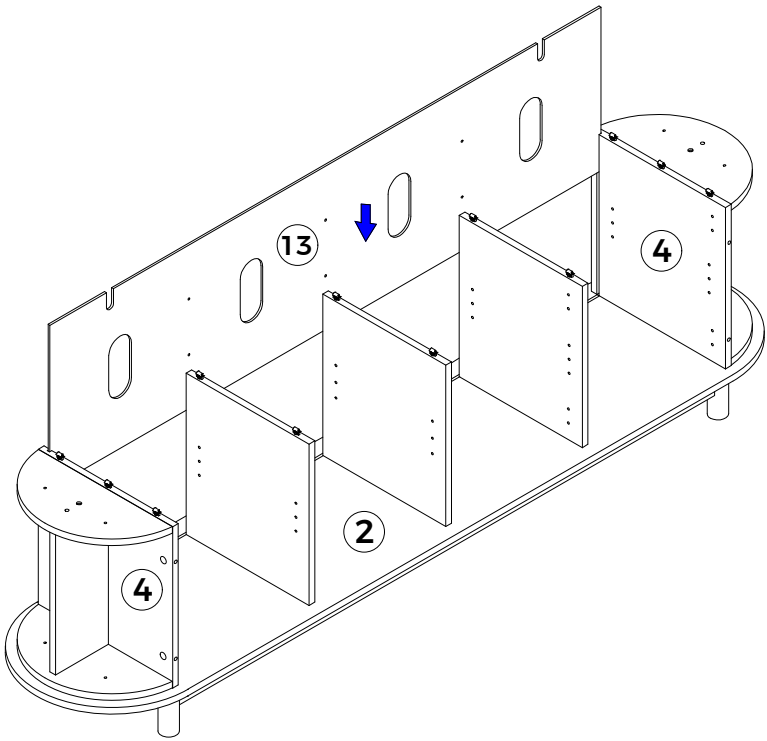


furniturebox

STEP 9

Attach 2 x L- brackets [F] to Top panel [1] with 4 x screws [G] using a Phillips head screwdriver.

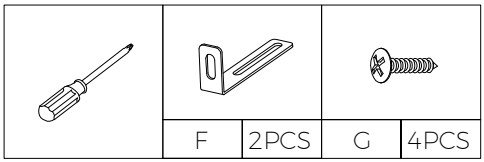


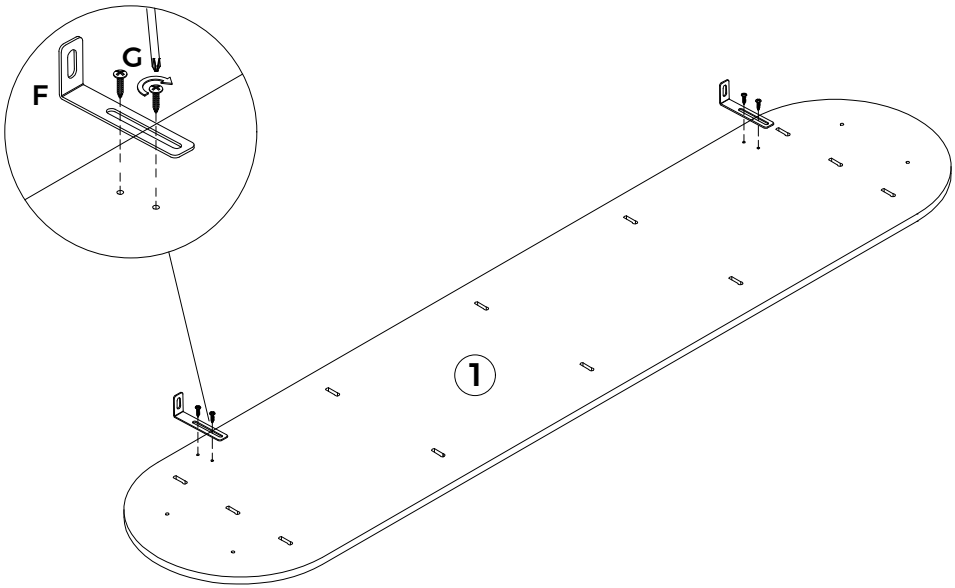

furniturebox

STEP 10


Attach Top panel [1] to assembled frame as shown.

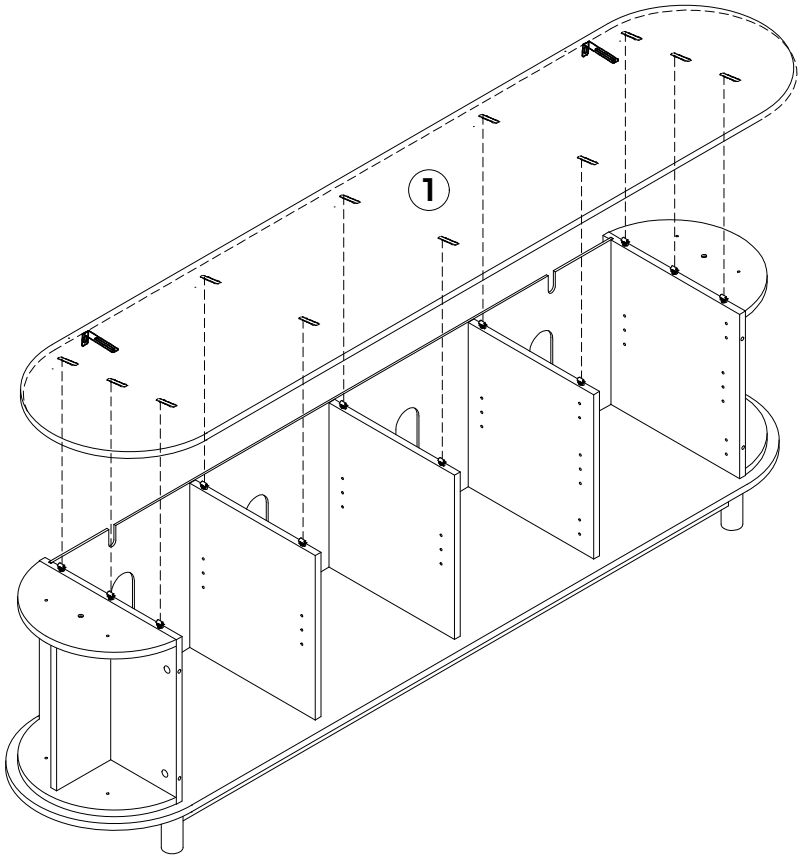


furniturebox

STEP 11

Screw 6 x screws [T] into Back panel [13] as shown, tighten with a Phillips head screwdriver.

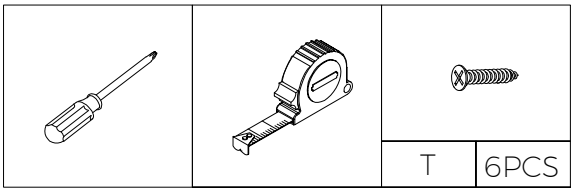

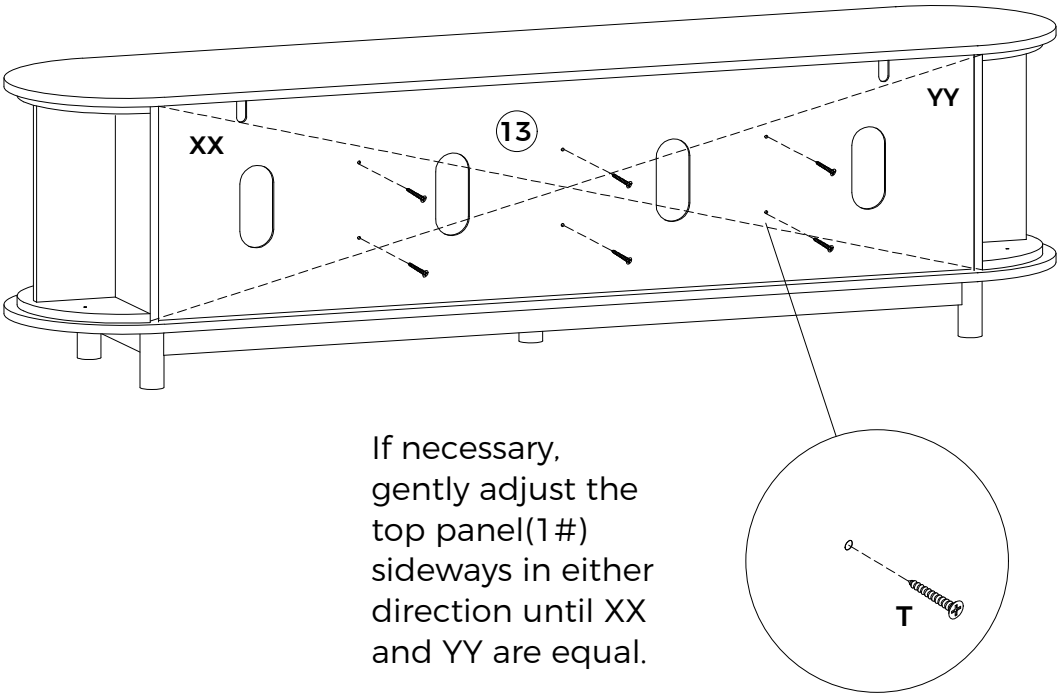



If necessary, gently adjust the top panel(1#) sideways in either direction until XX and YY are equal.

furniturebox

STEP 12

Insert 2 x screws [R] into Arc panel [7] as shown, tighten with a Phillips head screwdriver.

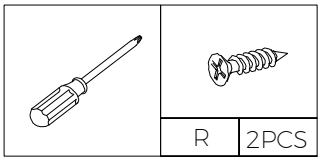


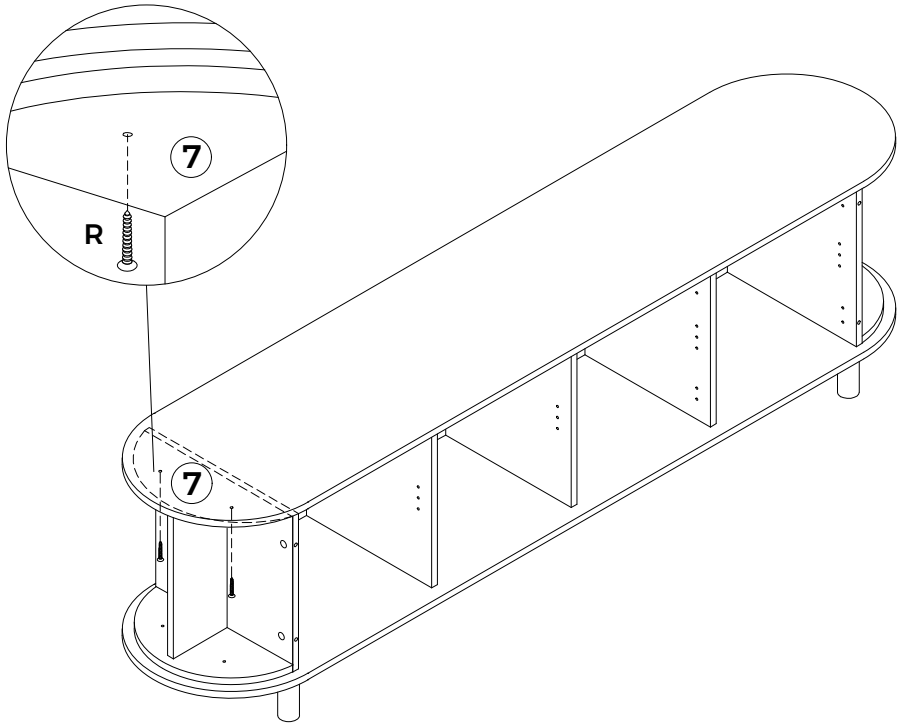


furniturebox

STEP 13

Insert 2 x screws [R] into Arc panel [7] as shown, tighten with a Phillips head screwdriver.

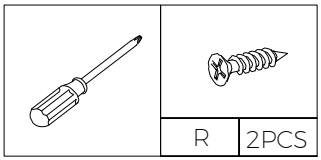


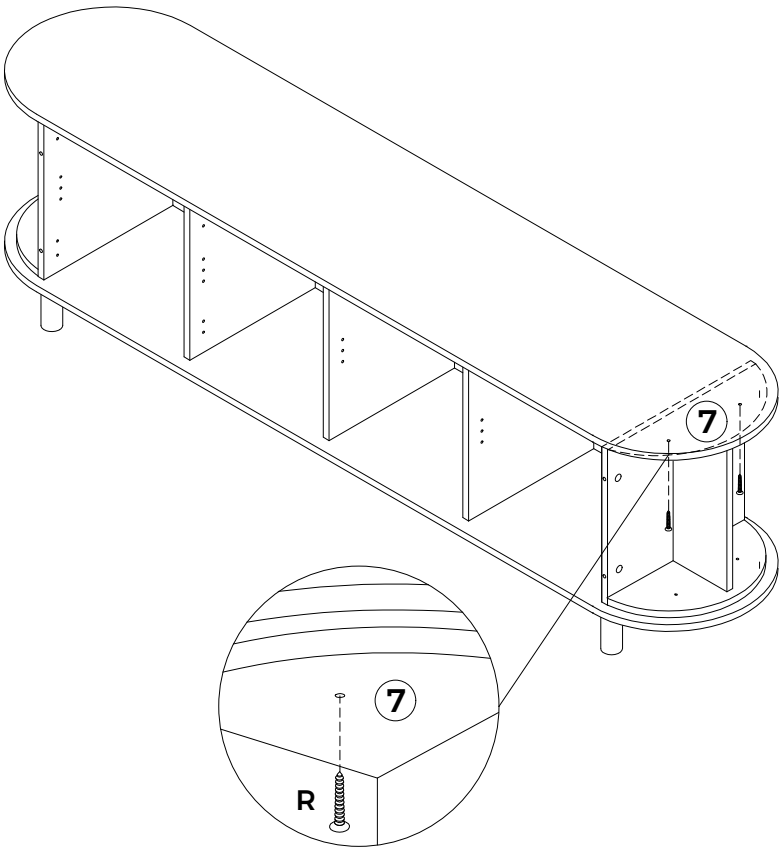


furniturebox

STEP 14

Screw 4 x cam bolts [A] into 2 x Side decor panels [3] as shown.

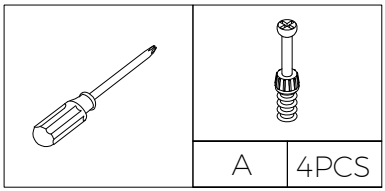

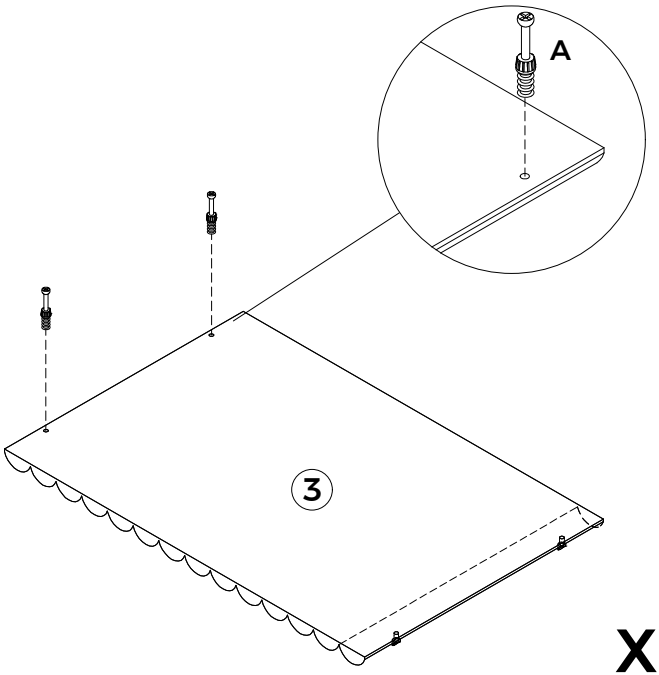



x2

furniturebox

STEP 15

Attach 1 x Side decor panel [3] onto Side panel [4] as shown.
Insert 2 x cam nuts [B] into Side panel [4].
Turn cam nuts clockwise to lock using a flat head screwdriver.

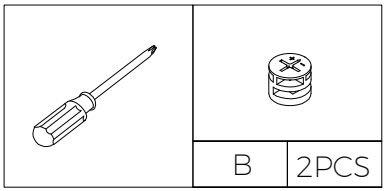


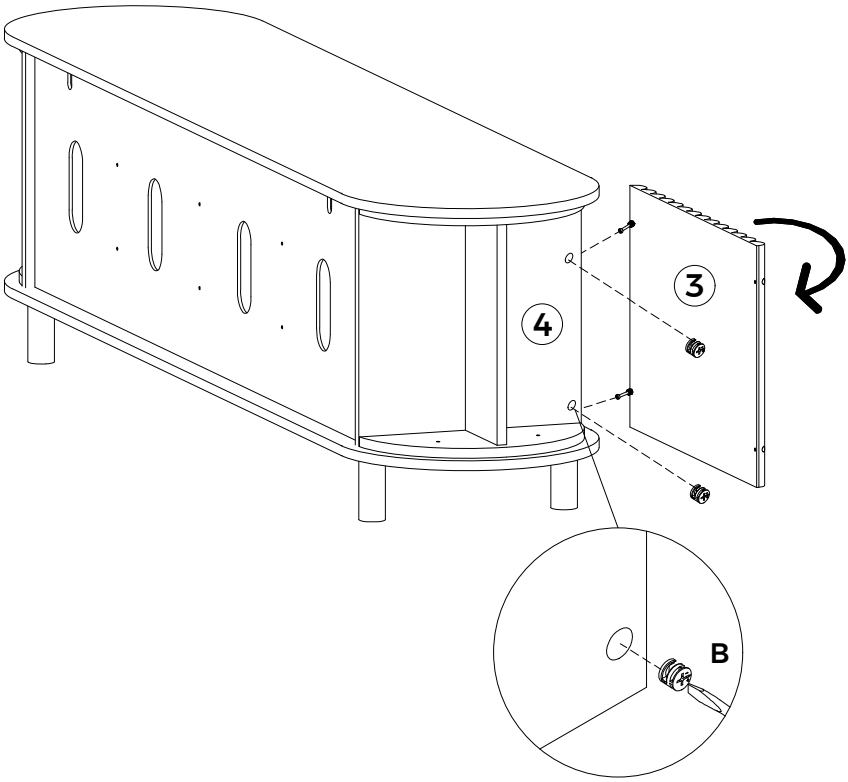


furniturebox

STEP 16

Secure 1 x Side decor panel [3] to assembled frame with 2 x screws [S] as shown, tighten with a Phillips head screwdriver.

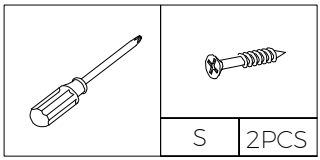


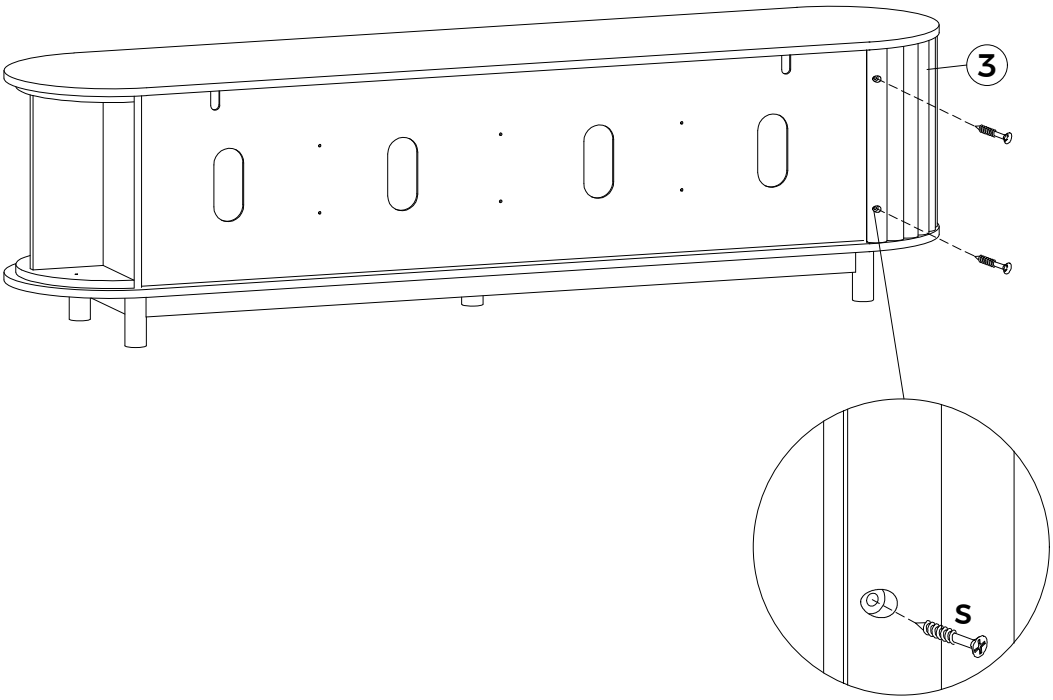


furniturebox

STEP 17

Attach 1 x Side decor panel [3] onto Side panel [4] as shown.
Insert 2 x cam nuts [B] into Side panel [4].
Turn cam nuts clockwise to lock using a flat head screwdriver.

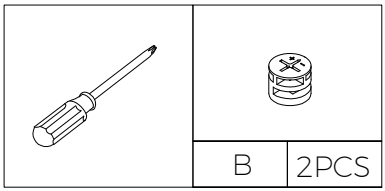


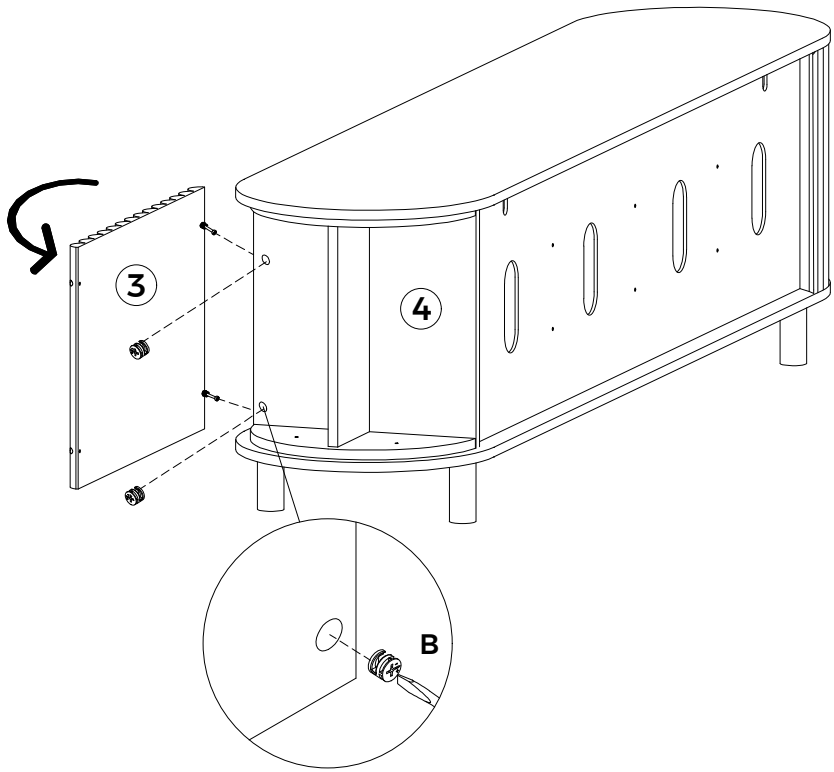


furniturebox

STEP 18

Secure 1 x Side decor panel [3] to assembled frame with 2 x screws [S] as shown, tighten with a Phillips head screwdriver.

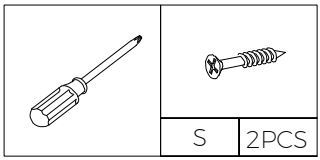


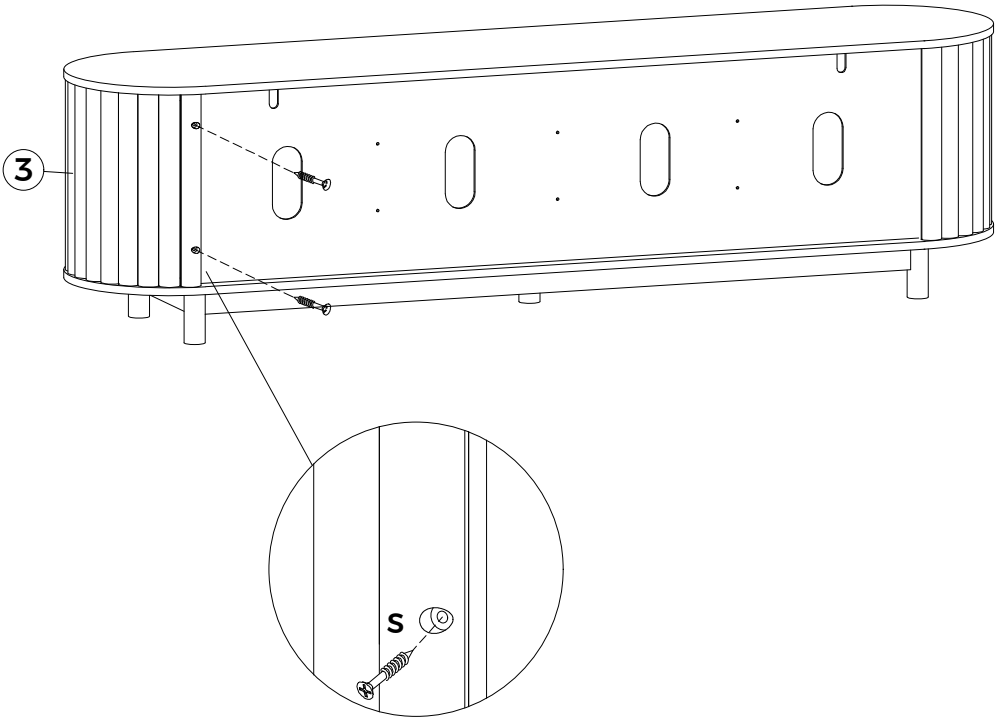

furniturebox

STEP 19

With assistance, move the TV stand to the final position.
If necessary, adjust the TV stand's level by rotating the feet.

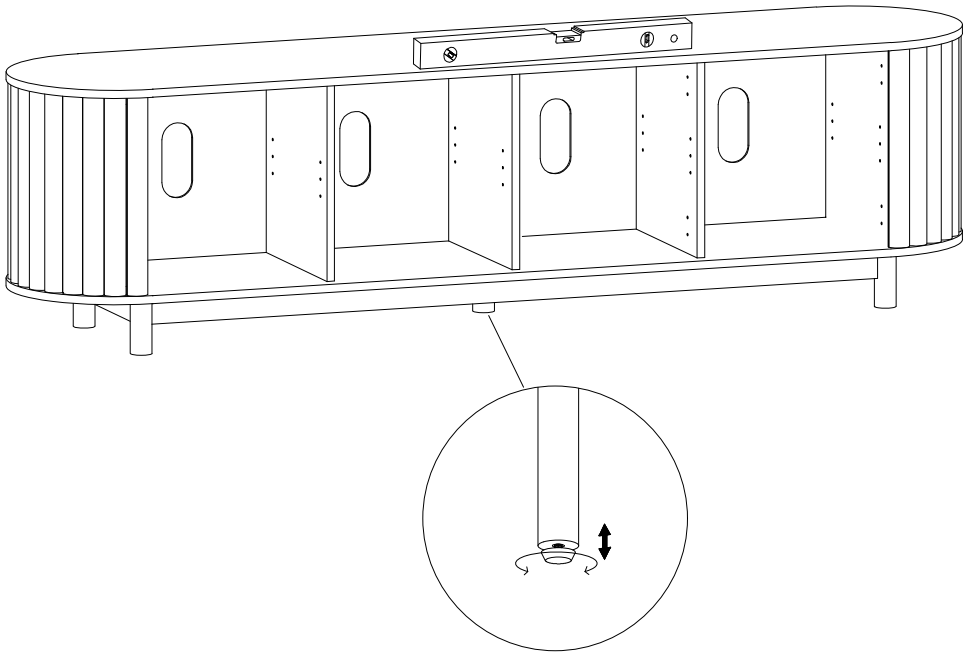

furniturebox

STEP 20 - Anti-tip Restraint

WARNING

To reduce the risk of serious injury or death from tip-over, this unit must be securely anchored to a suitable wall before use.


- Never allow children to climb, stand or hang on this furniture.
- Always secure the unit to a suitable wall using appropriate fixings for your wall type.
- Before drilling, check for hidden electrical cables, water pipes and other concealed services.
- If you are unsure how to install the anti-tip restraint or select suitable fixings, seek advice from a qualified installer or your local hardware store.

Installation

1. With assistance, move the cabinet into its final position.
2. Using the attached L-brackets [F] as a guide, mark the fixing positions on the wall.
3. Move the cabinet away from the wall and prepare the wall for fixing as required.
4. Reposition the cabinet and securely fasten the L-brackets [F] to the wall using fixings suitable for your wall type.
5. Check that the cabinet is level, stable and securely anchored before use.

Important Handling Note


Always lift the cabinet from the base. Do not lift or carry the cabinet by the top panel, as this may cause damage or separation.

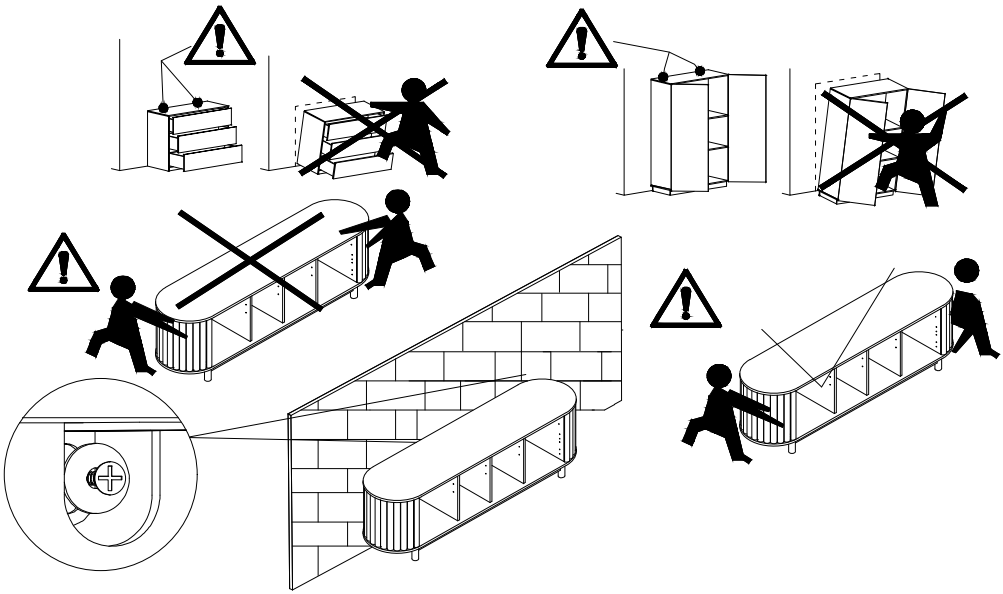


furniturebox

STEP 21

Insert 16 x shelf pins [H] into desired holes in the panels.

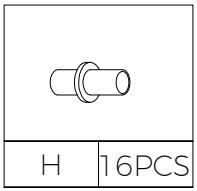


H	16PCS

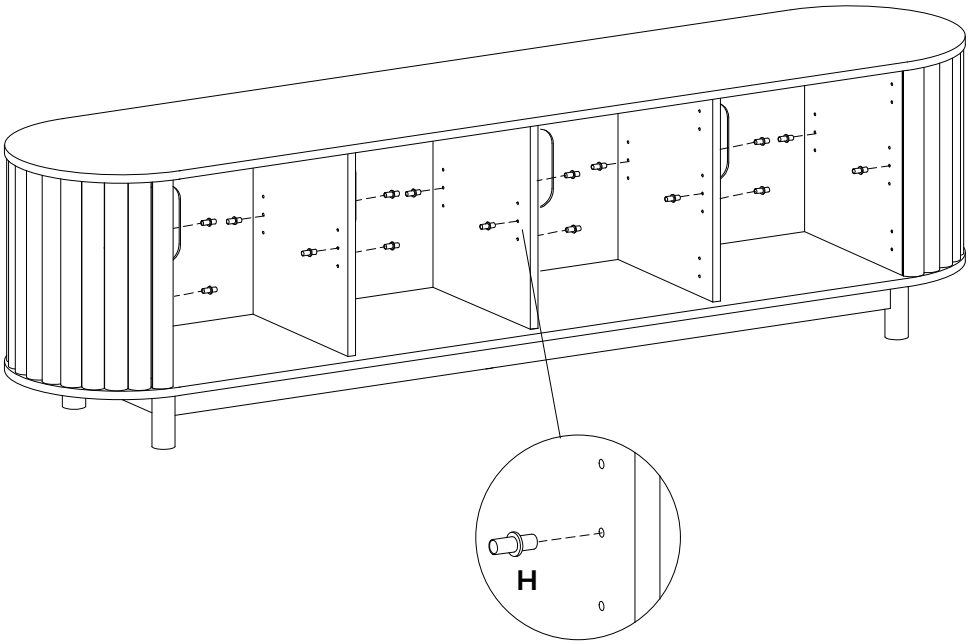

furniturebox

STEP 22


Place 2 x Side Shelves [9], 2 x Shelves [10] into cabinet as shown by resting on the shelf pins.

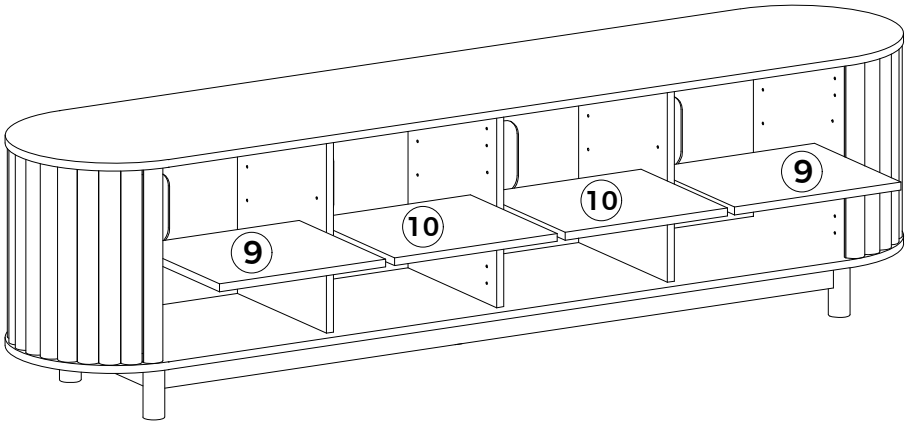


furniturebox

STEP 23

Attach 8 x Hinges [D] to 4 x Doors [14] with 16 x screws [E] as shown, tighten with a Phillips head screwdriver.

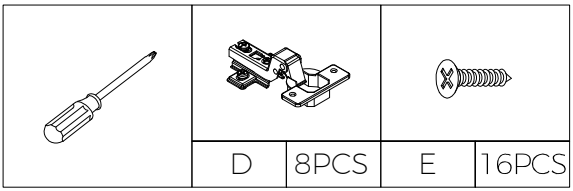

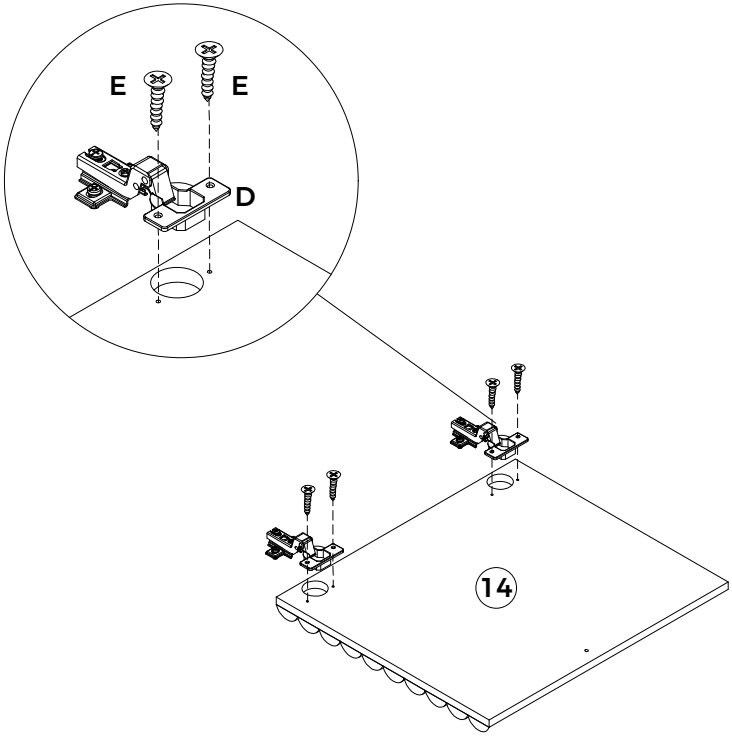



x4

furniturebox

STEP 24


Attach 4 x Doors [10] to side panels as shown.
Attach 4 x handles [P] to Doors [10] with 4 x bolts [Q], tightening using a Phillips head screwdriver.

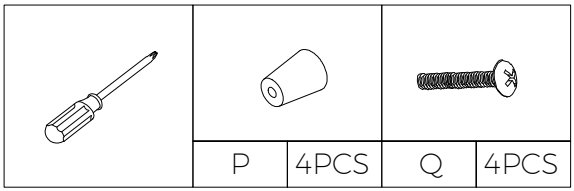

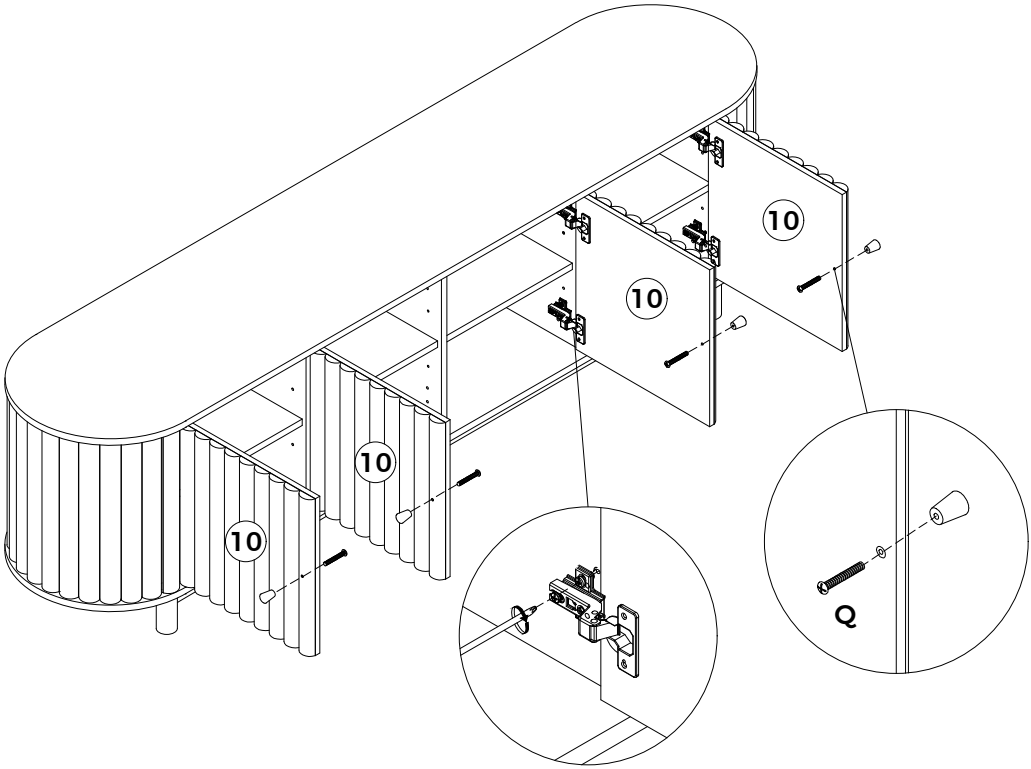

furniturebox

STEP 25

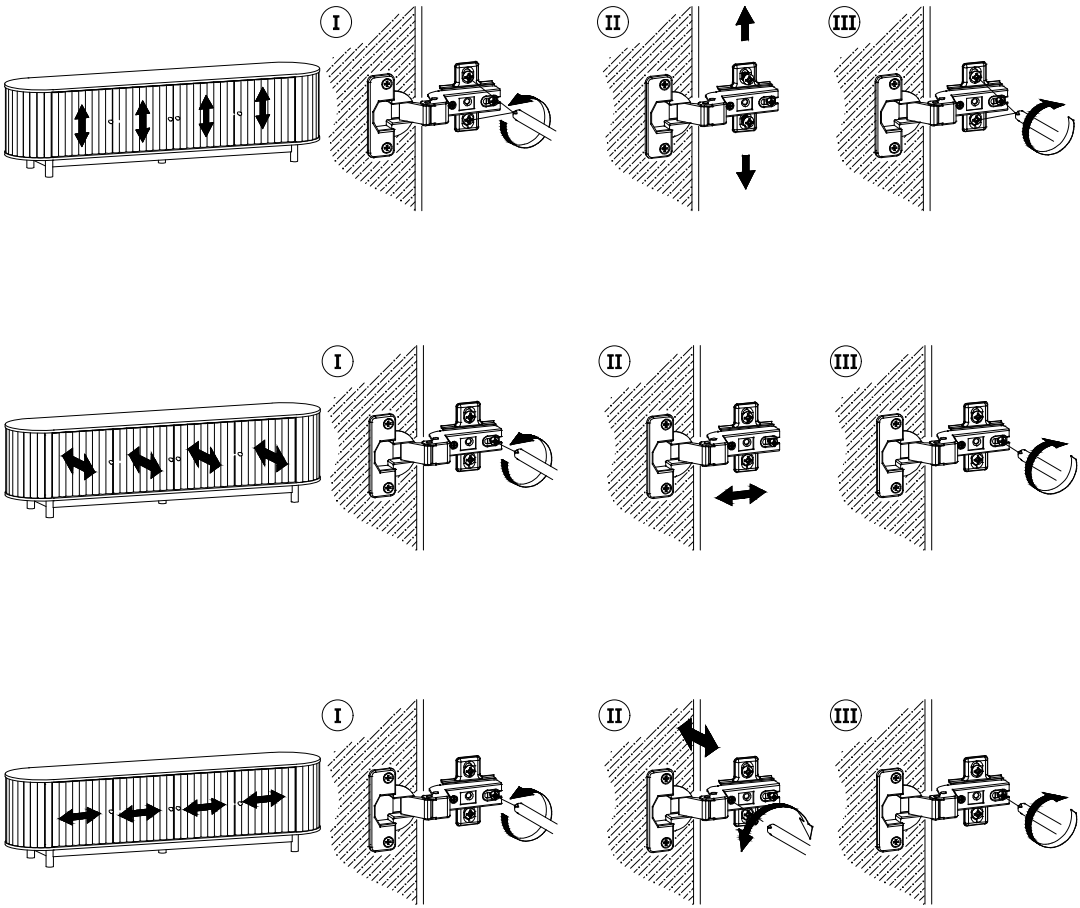

Looking Good!


Now you've assembled your furniture, find out how to care for your item and keep it looking brand new.

Product Care Guide



Look for your care guide in the box or visit:
www.furniturebox.co.uk/club/care-guide

let's stay IN TOUCH

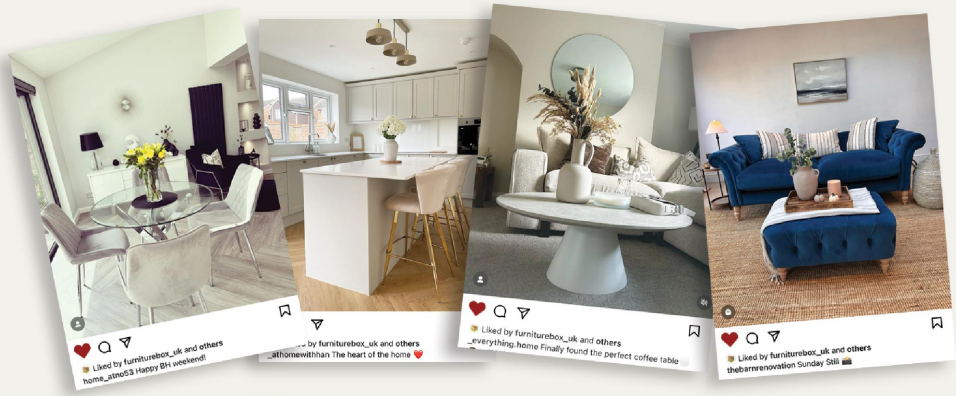

WE LOVE INTERIORS! SHARE YOURS WITH US ON SOCIAL MEDIA

1. Follow us on our socials | **2.** Post your snap or video
3. Tag us so we can see (and for a chance to be featured!)

@furnitureboxUK @furniturebox_uk @furnitureboxuk @furniturebox_uk

We're proud of our service and product reviews

Trustpilot

RATED EXCELLENT based on thousands of Trustpilot reviews

our 2 year GUARANTEE

Our products come with a 2 year guarantee, giving you extra peace of mind when shopping with us!

What the guarantee covers

PRE-INSERTED FIXINGS
e.g. loose metal threads

FAULTY JOINTS
e.g. legs bending

EXTERNAL FIXING FAULTS
e.g. metal discs removing from table top

STRUCTURAL INTEGRITY
e.g. the frame of the product

Activate your Guarantee

Scan the QR code to read the full guarantee online and register your product. It only takes a moment to fill out.
Or visit: furniturebox.co.uk/our-guarantee

Furniturebox Unit 6, Indurent Park Chippenham, Clanville Way, Chippenham, SN15 5BD, UK
Telephone: 01747 863 333 **Email:** sales@furniturebox.co.uk