Assembly Instructions

Caution: You must read this before you proceed.

CHAIR

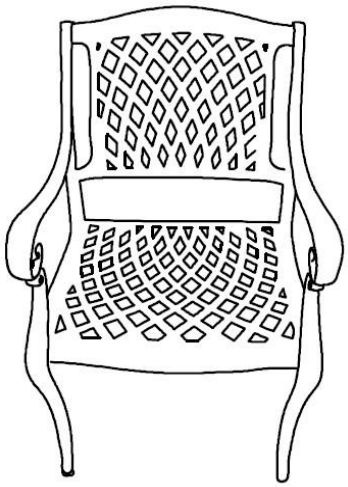

CAUTION: This chair is NOT a TOY.
Keep your child/children at bay during the assembly process.

Parts list

No.	Picture	Description	Qty
A	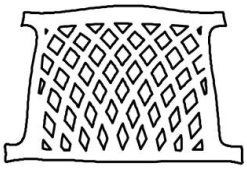	Backrest Panel	1
B	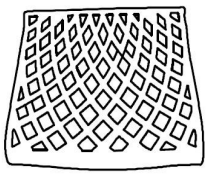	Chair Seat Panel	1
C		Left Legs with Arm and Pre-attached Bolts for Seat Panel and Leveller	1
D		Right Legs with Arm and Pre-attached Bolts for Seat Panel and Leveller	1

Hardware

No.	Picture	Description	Qty
①		Washer(8mm)	9
		Spring Washer(8mm)	9
		Nut(8mm)	9
②		Rubber Cap	5
③		Spanner	1

Assembly Preparation

Before Beginning Assembly:

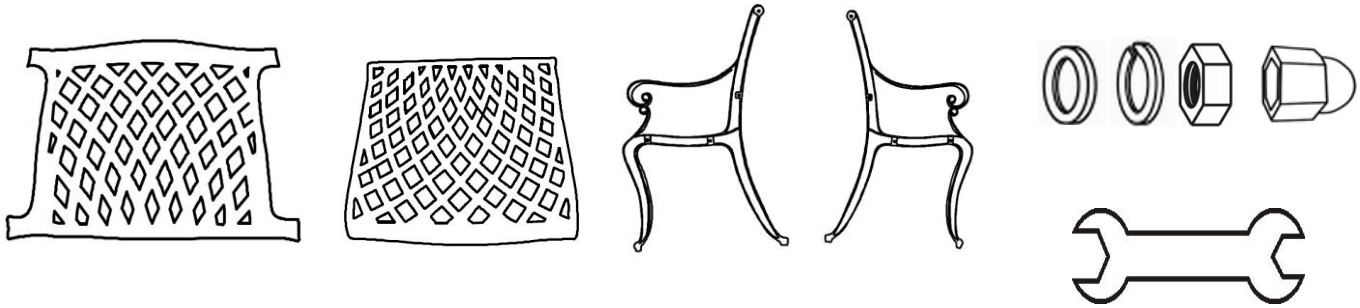

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps

Overview

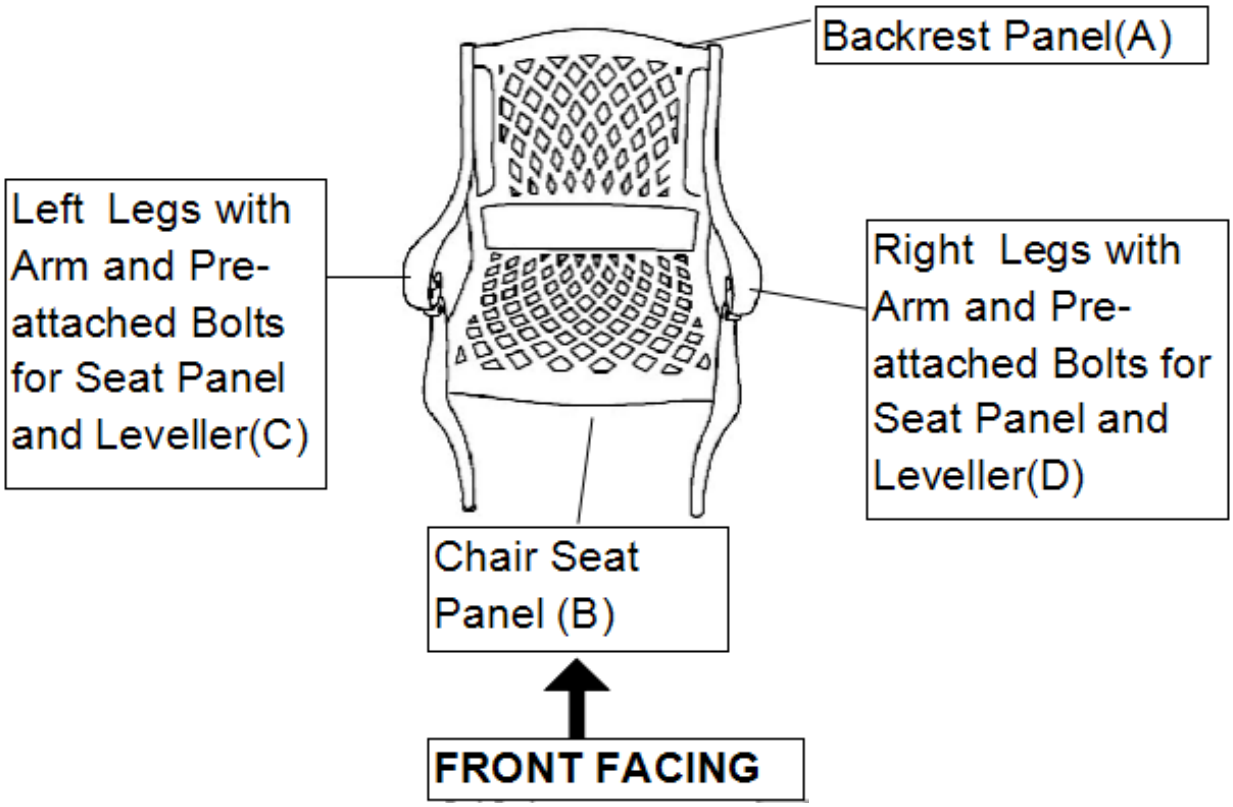

This Chair has multiple parts and may require up to some 30 minutes to assemble.
To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

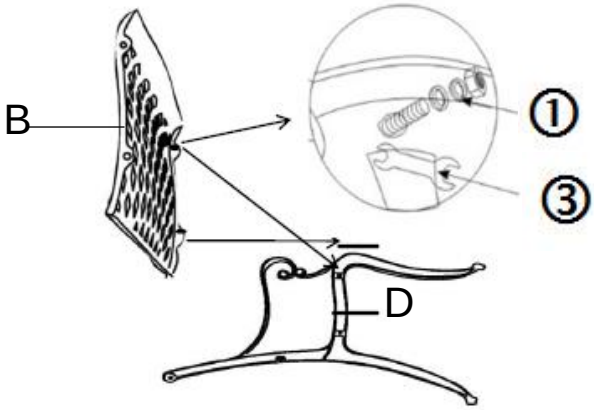

Attach the Chair Seat Panel(B) to the Right Legs with Pre-attached Levellers(D) using Washers, Spring Washers and Nuts(①), with Spanner(③).

Caution: This Chair can only be used on a flat, level surface.

Step 2

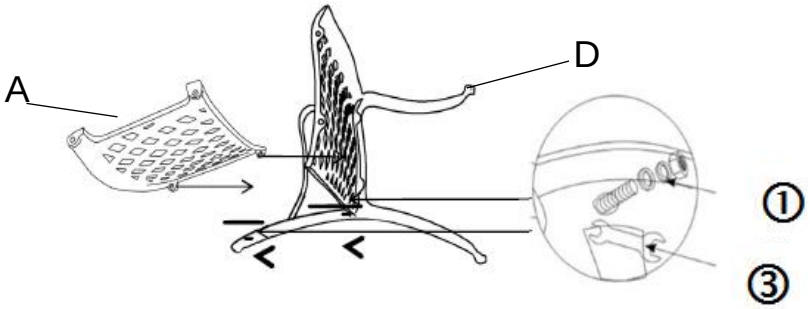

Then attach the Backrest Panel(A) to the Right Legs with Pre-attached Levellers(D) using Washers, Spring Washers and Bolts(①), with Spanner(③).

DO NOT fully tighten at this stage.

Step 3

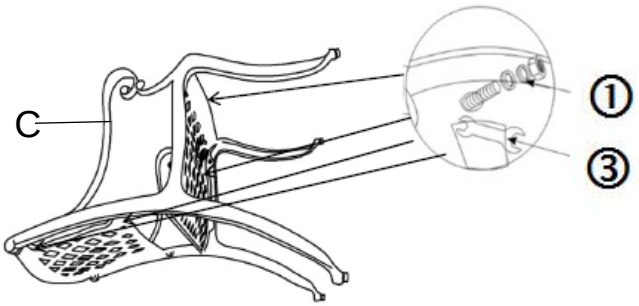

Repeat the same assembly process for the Left Legs with Pre-attached Levellers(C).

DO NOT fully tighten at this stage.

Step 4

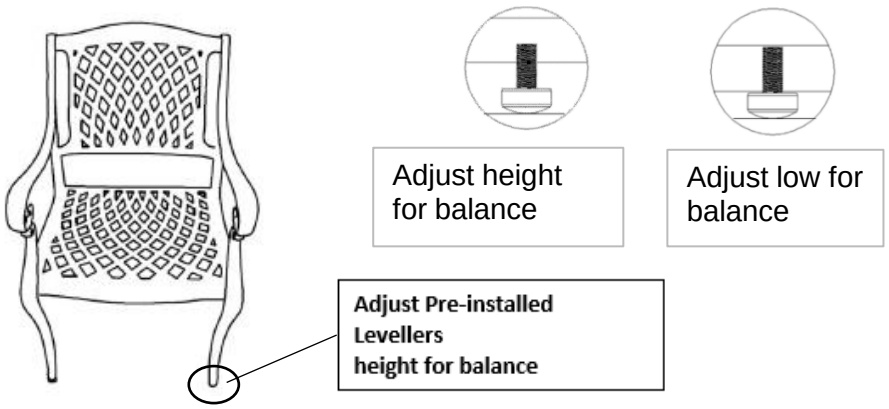

Stand the chair upright.

Adjust the Pre-attached Levellers on the Chair Legs until the chair is level with the ground.

Now, in a sequential manner, fully and securely tighten all bolts at all joints.

Then Add Rubber Caps(②) on 4 bolt ends on the back of the chair to protect skin or clothing from getting snagged.

Your Chair is ready for use.

Caution: This Chair can only be used on a flat, level surface.

Care &Maintenance

- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- Not for commercial use. For residential use only .
- Stains may be removed with mild soap solution and damp cloth.

- Dust and pick-up spills using a clean, non-colored, lint-free cloth .