
Self-Cleaning Cat Litter Box
User Manual

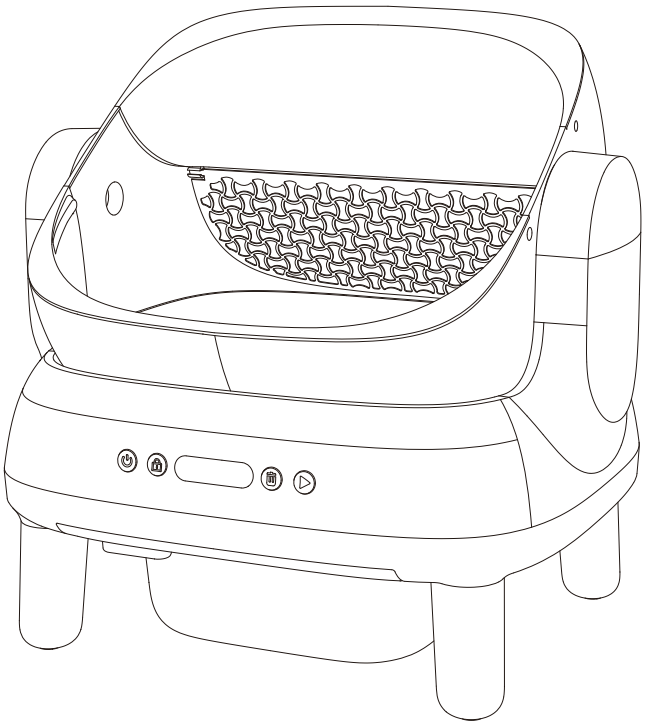

User information

Before use, please read this product manual carefully and keep it in a safe place. Once installed or used, it is deemed that you have read and accepted the following safety guidelines.
· The company shall not be responsible or liable for any accidents or losses resulting from improper operations.

* Failure to comply with the following terms may result in the product not functioning properly or other accidental losses.
* Please install and use the product strictly in accordance with this manual. Product malfunctions or damage caused by operations not specified in this manual are not covered by the warranty.


- This product is not intended for use by pets under 6 months of age or pets under 6" in height.
- This product is for indoor use only.
- Place the product on a stable surface in a cool, dry place indoors. Avoid placing it in direct sunlight, as this may cause the product components to age prematurely.
- Do not use this device in environments where the temperature is below 0°C or above 40°C.
- Keep away from open flames, high-temperature heat sources, and volatile substances.
- Do not submerge the entire device in water or expose it to water, as this may damage internal electronic components.
- Use the original power adapter provided with the device. Using an incompatible power adapter may cause device damage or other safety hazards.
- If the power adapter or power cord is damaged (including cracks, breaks, etc.), stop using the device immediately and contact customer service for repair or replacement.
- If the product will not be used for an extended period, disconnect the power and empty any remaining cat litter from the device.
- If you will be away from home for an extended period, check the cat litter level in the drum and the space in the waste collection box to ensure they are sufficient.
- Do not allow young children to operate, touch, approach, or climb on the product. Children and individuals with intellectual disabilities should use the product under adult supervision.
- Do not insert fingers into the structural gaps of the product to avoid injury.
- Clean or maintain the device only when it is powered off.
- We recommend using mineral-based cat litter or bentonite cat litter.
- The product may emit slight vibrations and noise during operation, which is normal.
- When moving the product, handle it with care and avoid dragging it.
- Do not disassemble, modify, or repair the equipment yourself, as this will void all warranty and after-sales service rights.

Packaging materials


Please confirm that all components shown in the illustration are included in the packaging box. Some components will be packaged separately in small boxes.

Please do not discard the packaging until installation is complete


Note: Retain the original packaging until you have verified that the product is in good condition. Dispose of it only after confirmation. If any accessories are missing, please contact us at

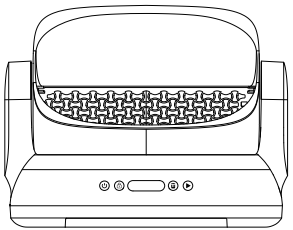

Main unit x1




Waste bin x1

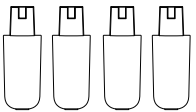

Support legs x4



Garbage bag x1



Adapter x1




Deodorizing box x2



User manual x1

Product Introduction

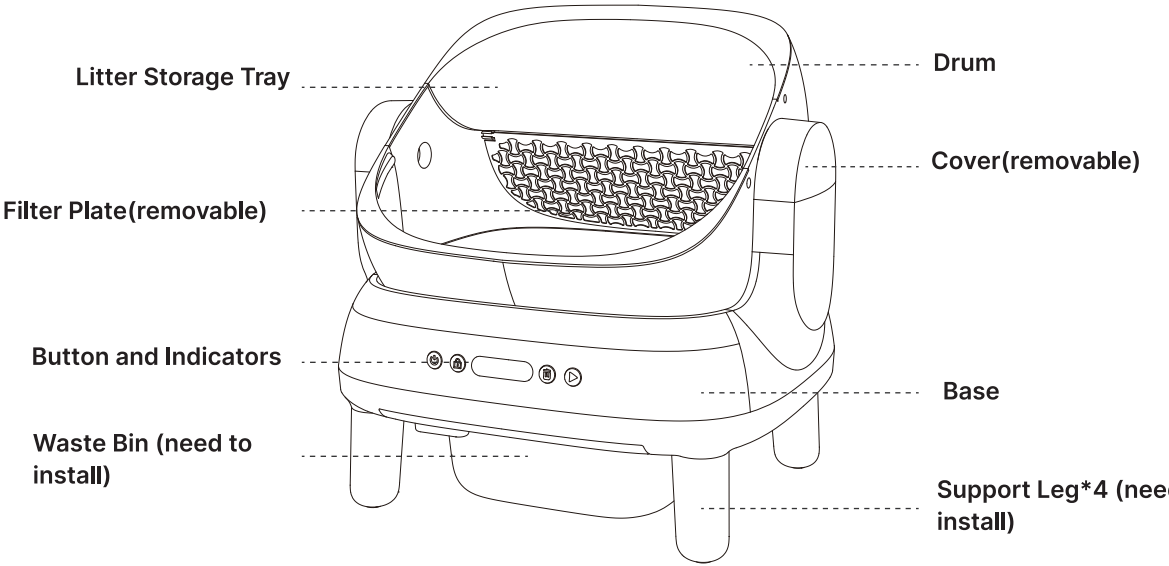

How it works

The self-cleaning litter box is equipped with multiple built-in detection sensors that can accurately determine whether the cat is using the device or not. Once the cat has finished using, it will start a 3-minute countdown timer(the timer can be modified in APP from 1-60 minutes), and after the countdown is over, the device will start to operate automatically. During the operation, the clumps will be separated from the cat litter through the 'Filter Plate', and they will be dropped into the 'Waste Bin' underneath the device through gravity. And then, by reversing the rotation, the cat litter stored behind the 'Litter Storage Tray' will be re-spread evenly, providing a clean and tidy environment for the cat's next use. For subsequent maintenance, we only need to replace the garbage bag in the 'Waste Bin' every few days and replenish some cat litter as needed.

Description of button and indicators

Button	Function
Turn on/off	Press and hold for 3 seconds: Turn on/Turn off
Child lock	Press and hold for 3 seconds: Temporarily disable child lock Press and hold for 5 seconds: Turn child lock on/off
Litter dumping	Click: Pause / Continue Press and hold for 3 seconds: Start dumping litter
Clean up	Click: Start/Pause /Continue Press and hold for 3 seconds: Enter network mode


Indicator Light	Indicator Light Status
Waste bin	Long-lasting: The waste bin is full Extinguish: None
Child lock	Long-lasting : Child lock is enabled Extinguish: Child lock is disabled
Status indicator	Long-lasting: The drum is running Extinguish: Standby mode Flashing: Countdown
cat enters	Long-lasting: Cat enters Extinguish: None

Indicator Light	Indicator Light Status
Power light	Long-lasting: Energized/WiFi Extinguish: Unenergized Flashing : Pairing inprogress
E1 Fault E1	Long-lasting: Anti-pinch beam triggered Extinguish: None
E2 Fault E2	Long-lasting: Outer cover not installed Extinguish: None
E3 Fault E3	Long-lasting: Motor anti-pinch triggered Extinguish: None
E4 Fault E4	Long-lasting: No Drum found Extinguish: None

Instructions for use


1. Install support legs

①

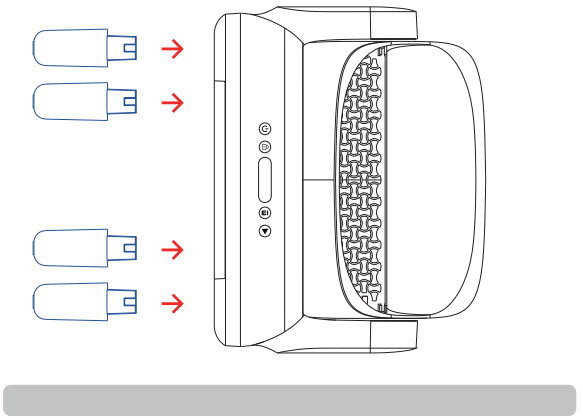

Place the main unit sideways on a soft, clean, flat surface. Insert the four support legs into the mounting holes at the bottom of the main unit one by one.


②

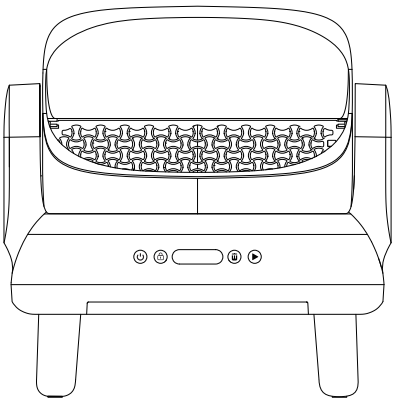

After installing the support legs, place the machine in an upright position.
Check that the four support legs are securely installed, and that the product is stable and does not wobble.


Instructions for use

2.Installation of the garbage bag

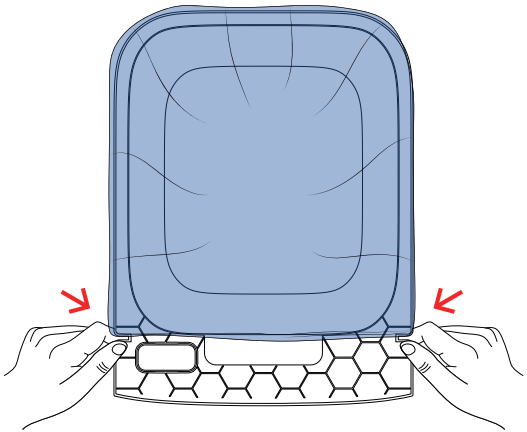

Take a matching garbage bag, put it on as shown in the illustration, and tuck the sides of the garbage bag into the fixed grooves of the waste bin.


3.Installation of the waste bin

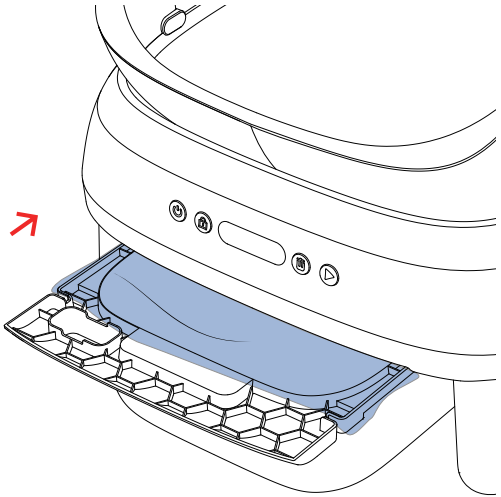


Attach the waste bin covered with the garbage bag back to the bottom of the device as shown.

Instructions for use

4. Adjust the position of the litter box.

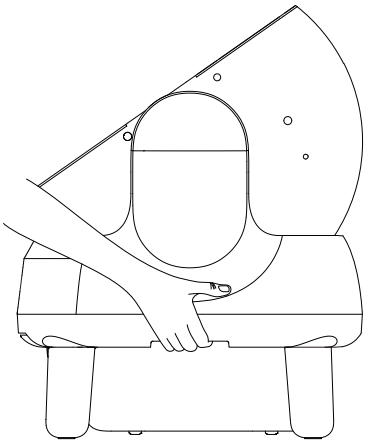


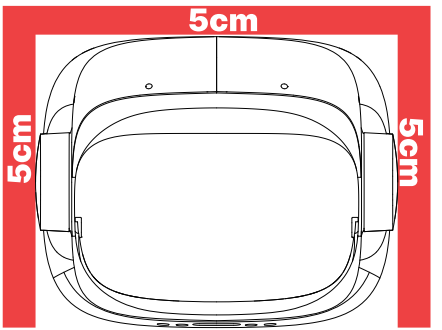

Hold the handles at the bottom of the device, carefully move it to the target position, after placing it, please make sure to leave at least 5cm of clearance around the device.


Instructions for use

5.Connect to power supply

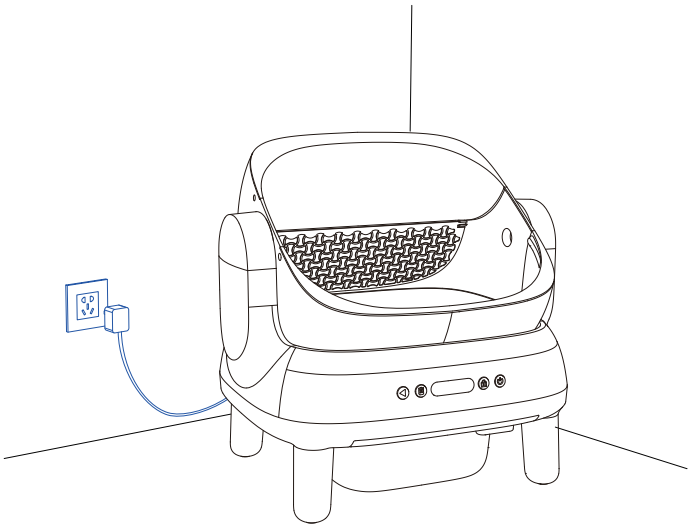

Turn on the power, after you hear a long 'drop' of sound, it is indicated that the power supply is successful.

6. Turn on the device and wait for it to complete the self-check.

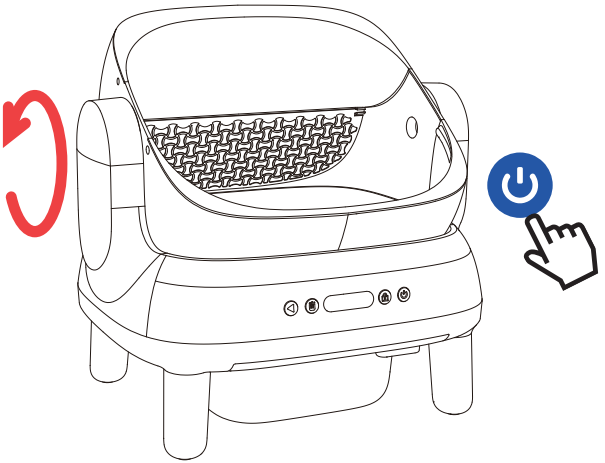


After waiting a few seconds, the device will automatically enter the self-test program.

The whole self-test process needs to wait for about 90 seconds. During the self-test process, try not to let the cat to interfere with the device.

Instructions for use

7. Add cat litter

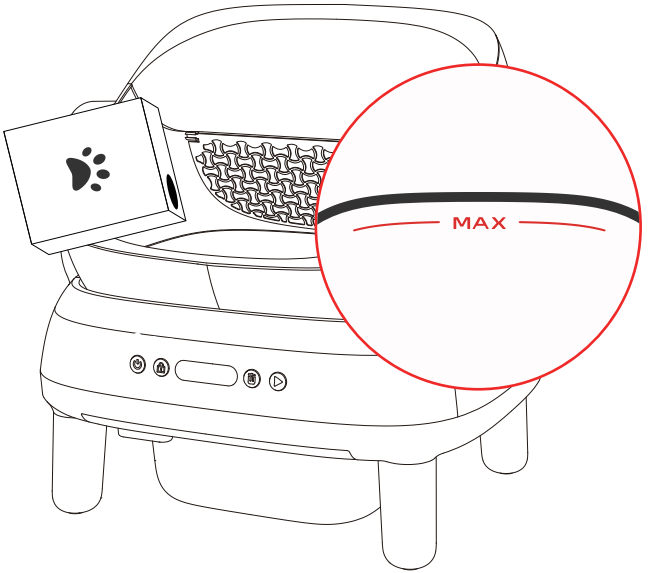

Slowly and evenly pour the cat litter onto the silicone pad inside the drum. Do not exceed the MAX mark when pouring cat litter, as excess cat litter will be filtered into the waste bin.

We recommend using clumping clay cat litter or bentonite cat litter.

Instructions for Use


8.Download the App

①






② Turn on Bluetooth on your phone and connect to a 2.4 GHz Wi-Fi network (5 GHz is not supported). For best results, place the device in an area with a strong Wi-Fi signal.

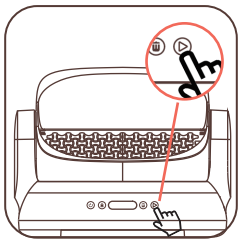

③ Press and hold the button for 3 seconds to enter network configuration mode (the indicator light will flash)..


④

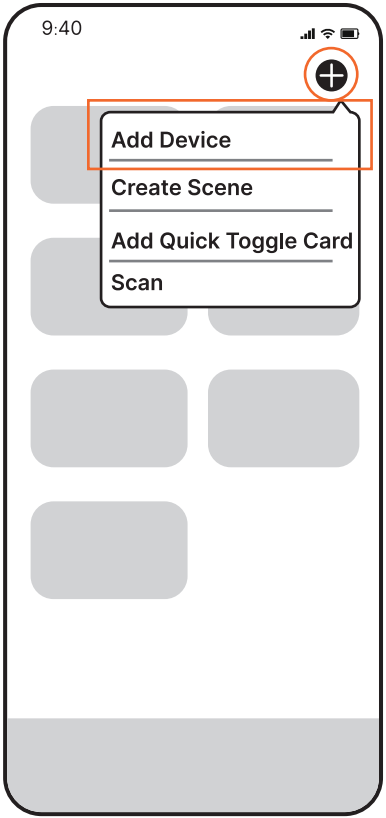


Open the App, tap the **"+" icon** in the top right corner and select **"Add Device"** to begin searching.

Instructions for Use

⑤

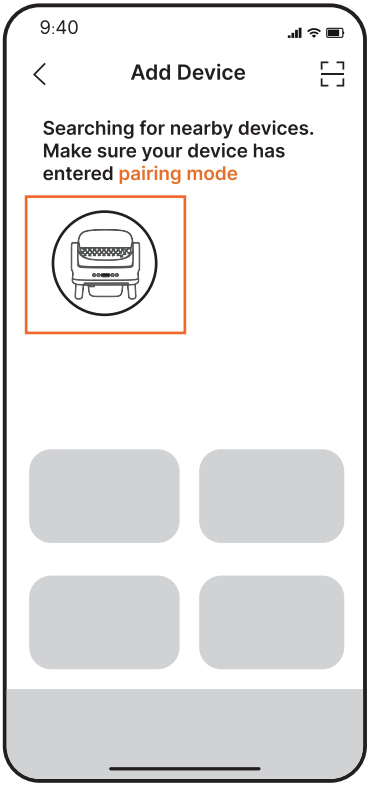


⑥

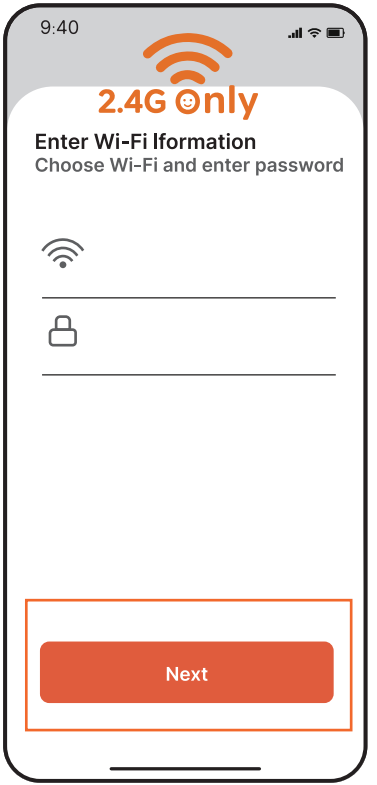

When the litter box icon appears, tap the icon, select your **2.4GHzWi-Fi** net work, and enter your Wi-Fi password. (5 GHz is not supported)

⑦

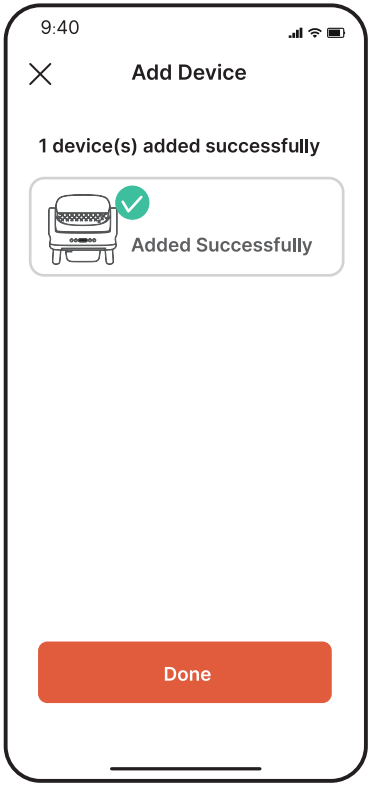

Then tap **"Next"** to begin the network configuration. Once the connection is successful, tap **"Done"** to start using your litter box.

Guide your cat to use and become familiar with the litter box

Most cats adapt easily to self-cleaning litter boxes, but some may need a period of adjustment to get used to the new litter box. **Here are some tips to help your cat adapt quickly:**

1. Place the new litter box next to the one your cat has been using. Allow your cat to use both the new and old litter boxes simultaneously for at least one week. The duration of this period may vary depending on your cat's temperament.
2. Add some of the old cat litter to the new litter box to make the scent more familiar.
3. Reduce the cleaning frequency of the old litter box, as cats prefer clean litter boxes.
4. Once the cat has switched to the new litter box, remove the old one.

Attention

Although self-cleaning litter boxes only operate after use and are very quiet when running, it is best to unplug the device for a few days to allow your cat to adapt to it without disturbance. If you unplug the device, you will need to manually scoop out the waste from the self-cleaning litter box until your cat has fully adapted, at which point you can plug it back in.

For kittens under 6 months old:

Attention


If your kitten weighs less than 3.3 lbs or is shorter than 6 inches, please do not plug in the deviceClean up waste manually with a scoop until your kitten meets these requirements.

Tips for helping kittens use a litter box:

- Kittens have a natural instinct to use the bathroom after eating, playing, or napping. You can take advantage of this instinct by placing your kitten in the litter box after these activities to help them get used to it.
- Place the litter box away from your kitten's food and water bowls. In the wild, cats avoid predators by using the bathroom away from their feeding areas.
- For kittens, it's important to place the litter box in an easily accessible location, as they have limited bladder control. Having your kitten walk across the house or climb stairs to reach the litter box may lead to accidents.
- The litter box should be placed in an open area where kittens can easily see it. The location should be safe, quiet, and free from distractions or disturbances, avoiding loud noises or proximity to dogs in the household.
- Compared to adult cats, kittens require more frequent cleaning of their litter boxes.

Daily maintenance

1. Replace the garbage bag

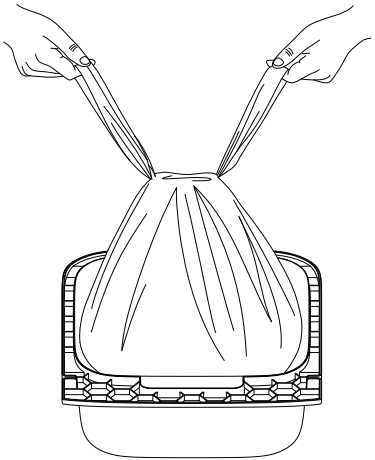


Note

A strong odor will be emitted during replacement. Wear a mask when necessary.

① Remove the waste bin box and pull the drawstrings on both sides of the garbage bag by hand as shown in the illustration, then tighten the opening.

(Move slowly to prevent small pieces from falling out.)

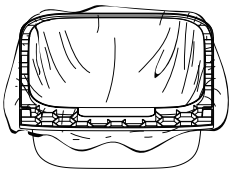

② Throw the garbage bag into the trash can, replace the garbage bag on the waste bin box, and put it back on the base.

Recommended garbage bag replacement cycle*		
Number of cats	Temperature below 30°C	Temperature above 30°C
🐱	5-7 days	3-5 days
🐱 🐱	3-5 days	2-3 days
🐱 🐱 🐱 +	We recommend using multiple self-cleaning litter boxes together.	
* Depends on the cat's age, weight, health, and diet.		

⚠ Warning


Pregnant women, infants, young children, and people with weakened immune systems should avoid contact with cat feces. Cat feces may contain toxoplasma, a parasite that can cause toxoplasmosis, which is harmful to these groups.

Note


- If your cat eats food that's high in roughage, ash, and by-products, which can make them poop more often, you might need to change the garbage bag more often. Kittens' poop is softer than adult cats', so it's easier to get on the litter box.
- Wash your hands after handling used cat litter.

Daily maintenance

2. Refill cat litter

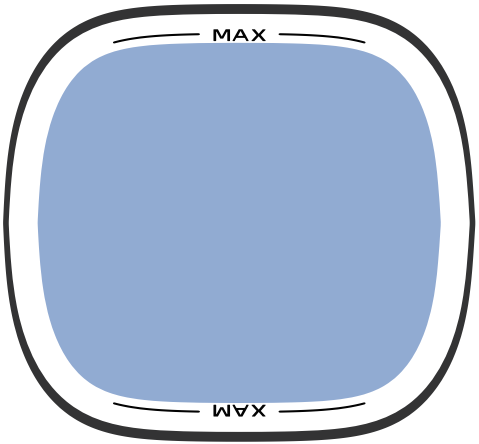

sufficient cat litter

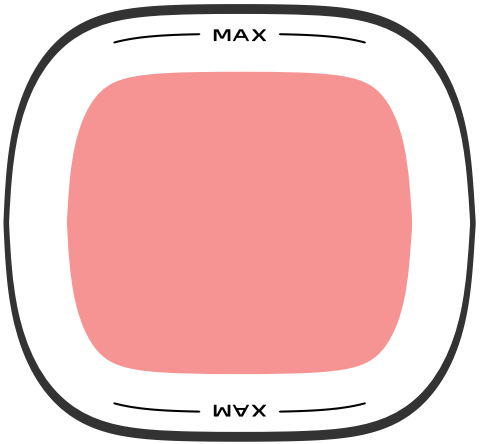


insufficient cat litter

After each cleaning of the waste bin, please observe the remaining litter in the drum and replenish the litter in time as needed.
Too little litter will increase the probability of sticking to the bottom and increase the odor.

After refilling the cat litter, we need to single press the ▶ Clean up Button to smooth out the litter.

Daily maintenance

3. Pour out all the cat litter

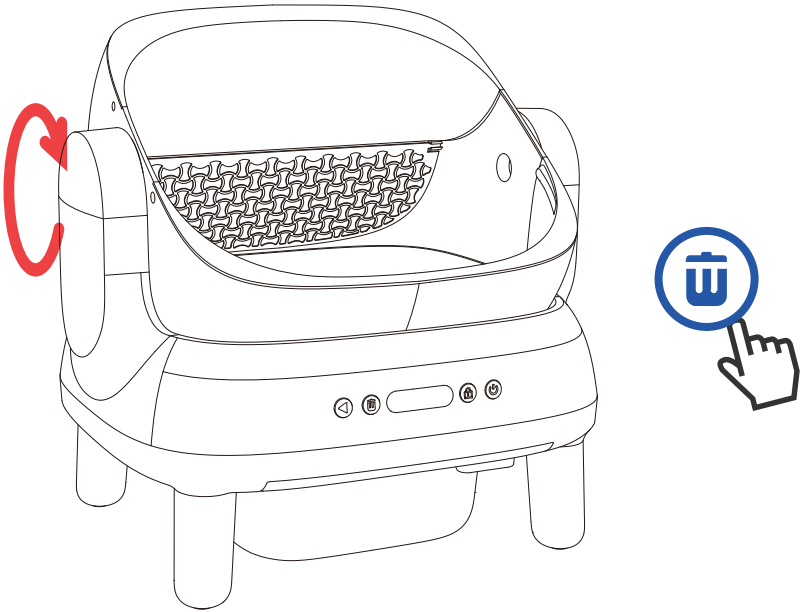


Press and hold for 3 seconds , then wait for the litter dumping operation to complete.

Before running the litter dumping program, please empty the waste bin to ensure that there is sufficient space available.

Daily maintenance


4. Daily wiping

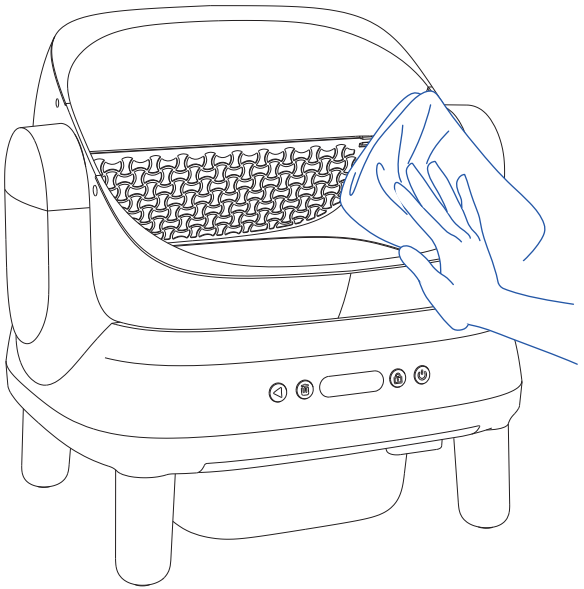

Use a damp cloth to wipe off dirt and dust from the machine body.

Daily maintenance

5. Deep cleaning of drum compartment

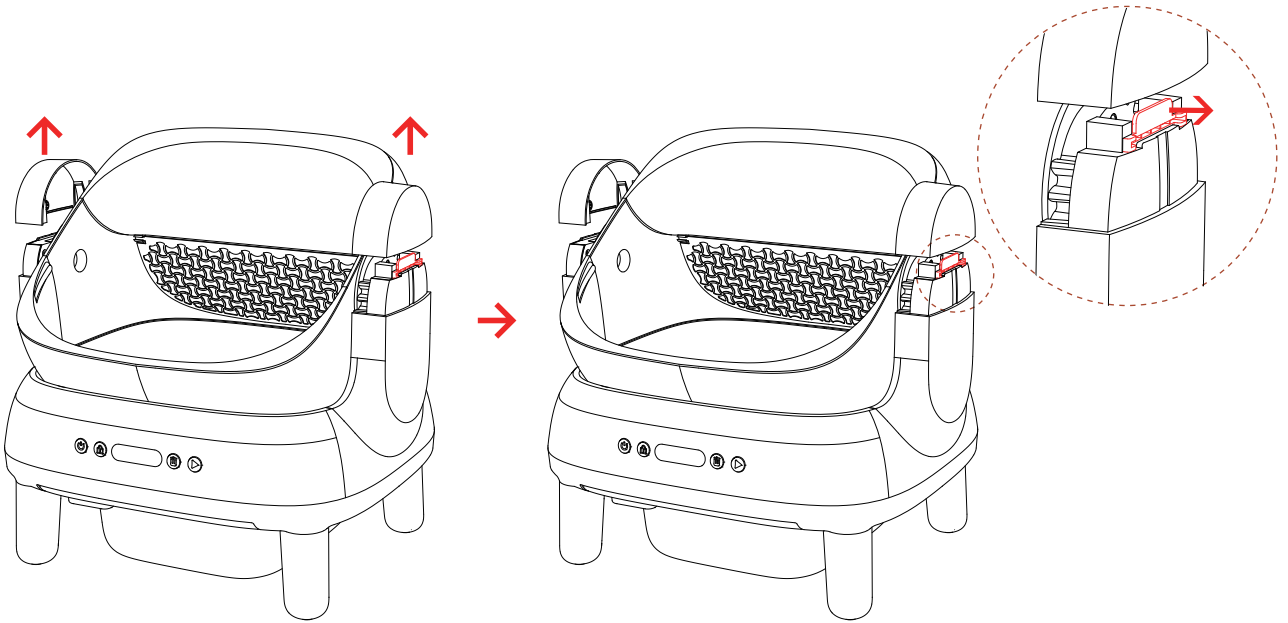

1. Disconnect the power supply to the litter box.
2. Remove the cover
3.Push off the bearing pressure plate on the gear side.
4. Remove the drum.
5. Clean the drum.

The litter box base and adapter are electrical components and should only be wiped clean. Do not rinse with water or immerse in water.

FAQ

Can multiple cats share a self-cleaning litter box?	Self-cleaning litter boxes are designed for use by one or two cats. If you have more than two cats, we recommend providing at least one litter box for every two cats.
Can kittens use this product?	This product is suitable for cats over 6 months old, weighing more than 3.3lbs and taller than 6 inches. If your cat does not meet these requirements please turn off the automatic cleaning function or use the product without plugging it in.
Is it dangerous for cats to enter the drum while it is in operation?	If a cat enters the drum during operation, the detection sensor will be triggered and the drum will stop rotating immediately. And the device will resume operation after the cat leaves the drum for a period of time, so there is no need to worry about danger.
What types of cat litter can I use?	We recommend using clumping clay catlitter, bentonite cat litter.
When should I refill the cat litter?	We recommend refilling when the cat litter level drops below the minimum (MIN) mark.

Product specifications

Rated Input: 12V⎓1A
Net Weight: 6.6kg
Dimensions: 535mm x 430mm x 540mm
Maximum Litter Capacity: 4.5L
Waste Bin Capacity: 8.7L
Compliance Standard: GB4706.1-2005

Warranty Terms

Warranty Information

1. When purchasing the product, users will receive a warranty card enclosed with the instruction manual. Please fill out the card and keep it in a safe place as proof of warranty.
2. Within 12 months from the date of purchase, if the product has any quality issues, the consumer is entitled to free repair service (excluding the power adapter) after verification by our company.

Non-warranty Statement

The following situations, including but not limited to, are not covered by the warranty:

1. The warranty period has expired.
2. The product has been disassembled by the user.
3. Damage caused by human error or force majeure.
4. Damage caused by failure to use or maintain the product in accordance with this manual.
5. Normal wear and tear during normal use of the product.
6. Accessories or gifts.