


Instruction Manual

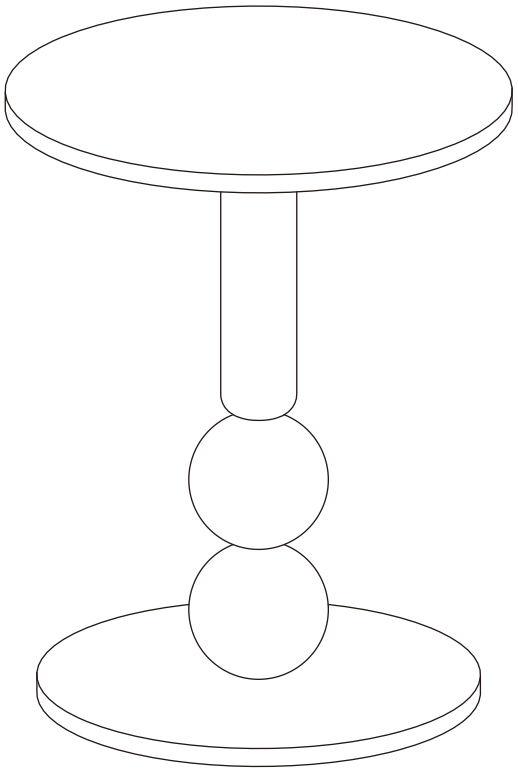


Parts List


 Ax4	 Bx1		

Assembly Steps 1

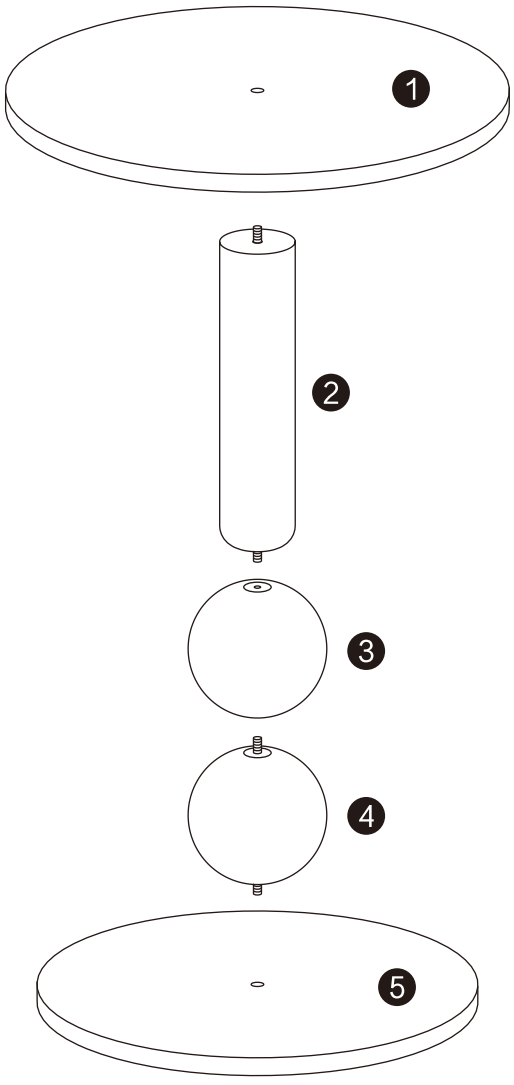


Assembly Steps 2

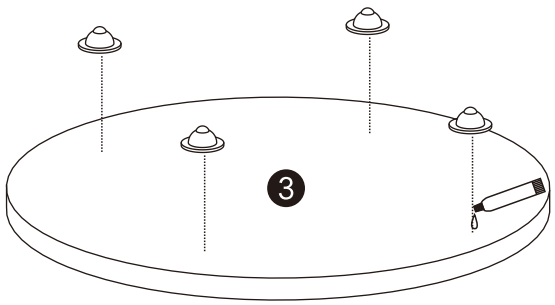


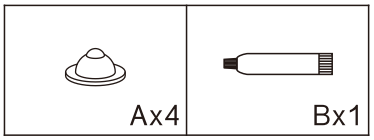

Assembly Steps 3

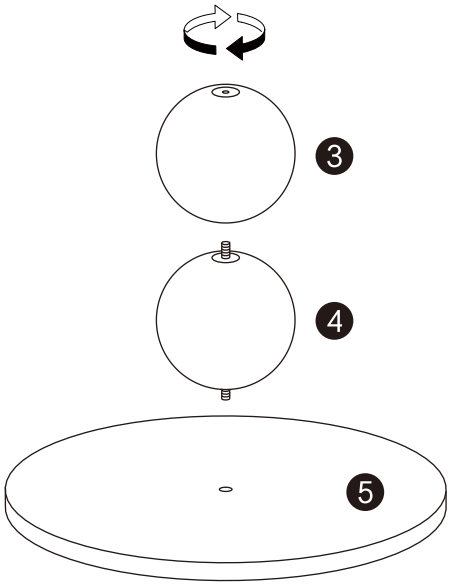

Assembly Steps 4

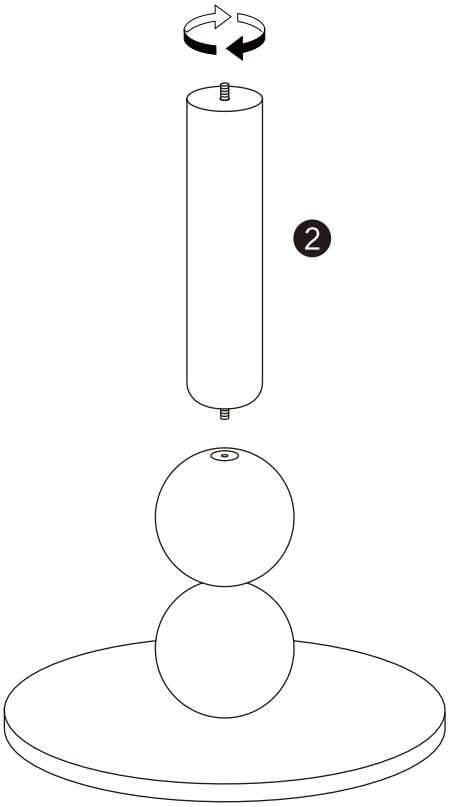

Assembly Steps 5

