
edishine

Outdoor Ceiling Fan

[Instruction Manual]

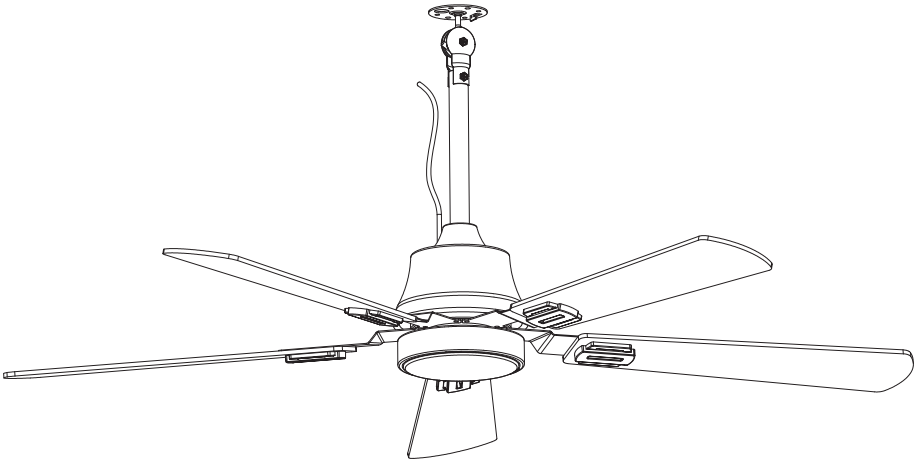

Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

V51217

● To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience it is recommended to have your fan installed by a licensed electrician.


● This manual is designed to make it as easy as possible for you to assemble, install operate and maintan your ceiling fan.

NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.

Tools You May Need



Step ladder

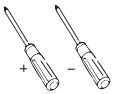

Phillips head screwdrivers



Protective gloves



Tape



Goggles


NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. lf any parts are missing contact us.




Install hooks (1)



Combination wheel (1)

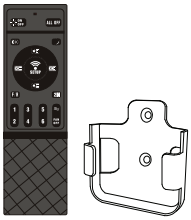

Remote Controller

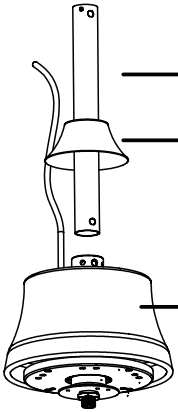

Downrod (2)

Coupling Cover (1)


Fan Motor Host (1)




Blade Arm (5)



Fan Blade (5)



Blade Decorative Part (5)



Lamp body(1)



lampshade (1)

4+1 (a)



Plastic expansion tube

2 (b)



Expansion screw

2+1 (c)



Balance kit

1 (d)




Hook

17+17 (e)



Blade screw silicone gasket

1(f)



Bundle Velcro

4+1 (g)



Washers

4 (h)



Self-tapping screw

3 Spare (i)



Arm screw

3 Spare (j)



Round iron plate screw
Black silicone ring

- **Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.**

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room


If the room is unoccupied, turn off the ceiling fan to save energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.


Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Fig.1

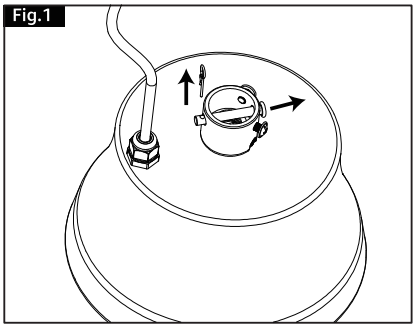

- Remove the pin.

Fig.2

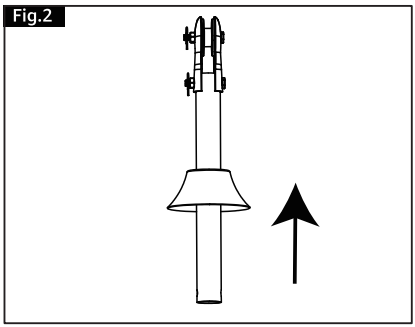

- Slide the canopy onto the downrod.

Fig.3


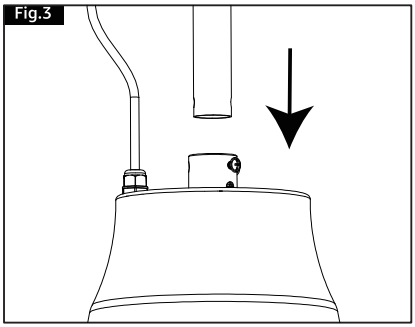


Fig.4

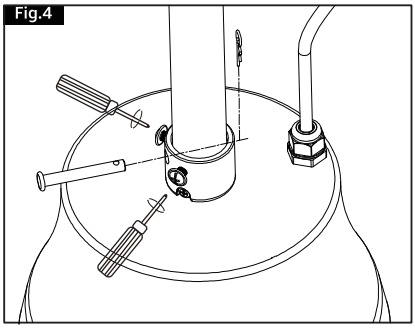

- Install the assembly onto the motor housing (see illustration).
- Align the pin with the holes, secure it with the safety clip, then tighten the two side screws.

Fig.5




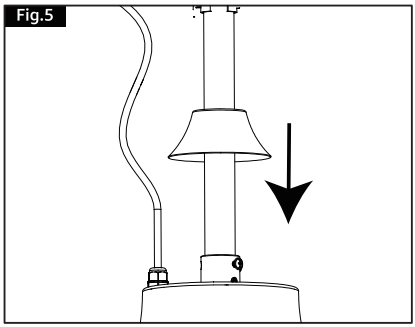


Fig.6

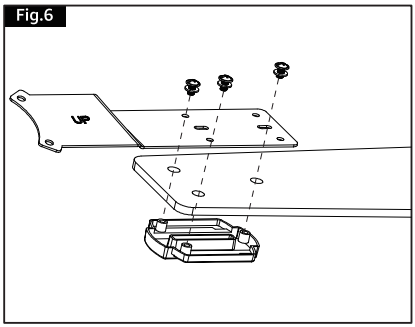



- Lower the canopy.
- Choose the blade color side need.Install the blade decorative part to the blade bottom, then fix with the blade arms withscrews and silicone gasket from top. Please note that the side of the blade arms facing up is marked with the word 'UP'.

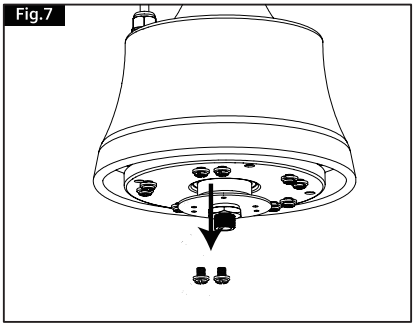

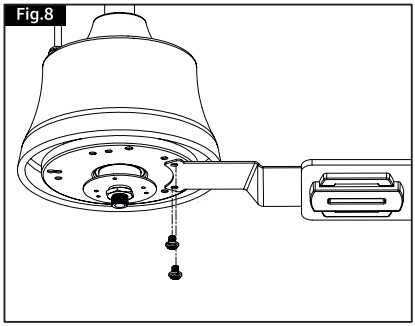



- Unscrew the 10 fan blade screws pre-installed on the fan motor host. Secure the assembled blade arms to the fan motor host using the screws removed in theprevious step. (Repeat this step for the installation of the remaining fan blades.)

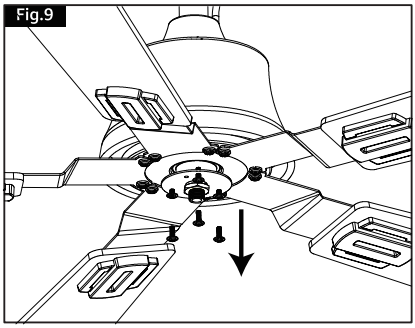

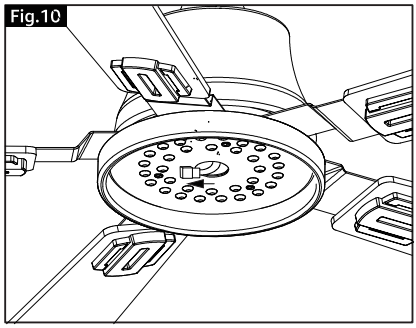

- Remove three screws from the triangle plate on the fan motor host.
- Connect the LED board wire connector.

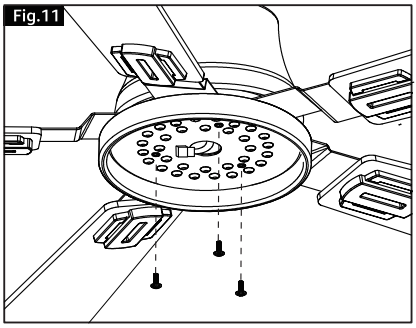

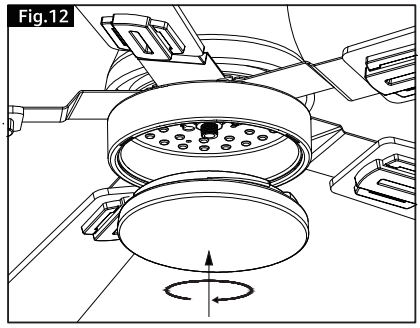

- Install the lamp body onto the main body and tighten the screws. (Use the 3 screws from step 10.)
- Locate the locking point and screw the lampshade into place by turning it upward.

Fig.13


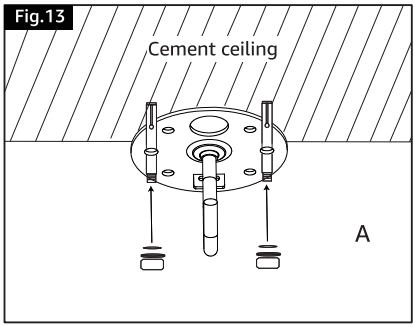


Fig.14

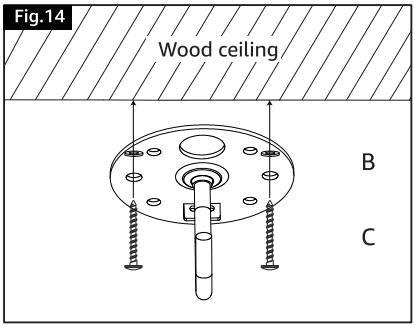

- According to the user's ceiling situation, choose the corresponding installation method.
  Cement ceiling: Drill a hole on the cement ceiling, then use expansion screws to secure.
- **Wooden ceiling**: Use self-tapping screws to drive into the wooden ceiling.

Fig.15


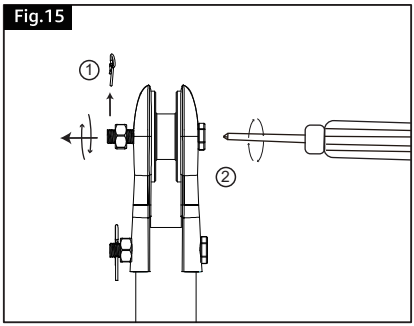


Fig.16

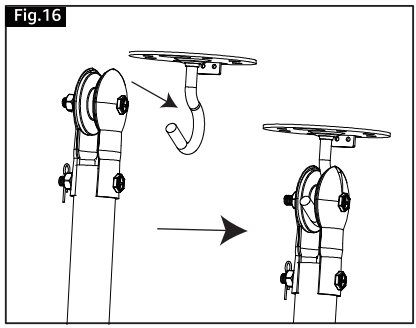

- Remove the safety clip and loosen the nut.
- Attach the wheel assembly to the hook as shown.

Fig.17


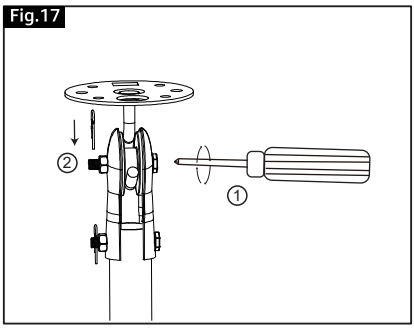


Fig.18

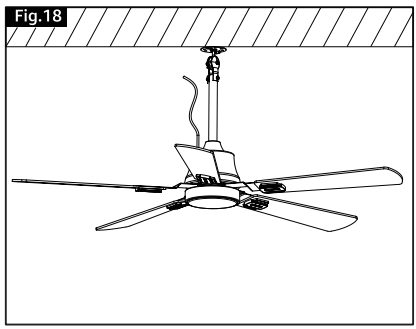

- Once properly installed, tighten the screw and reinsert the safety clip.
- Check that it is securely and correctly mounted.

Fig.19


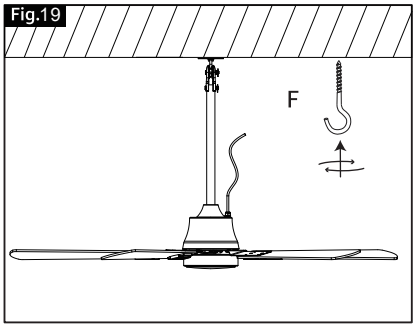



Fig.20



- Install the hook onto the ceiling.
- Secure the excess power cord with a zip tie, then plug in the power cord to com lete the installation.

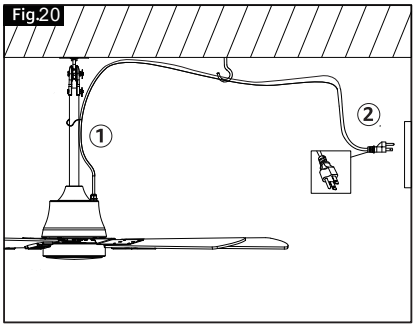

Attach wall plate using the two screws provided.

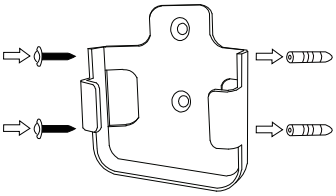

ON OFF	Light on/off
ALL OFF	Light & fan /off
Ⓚ	CCT change
★	Night light
☼+	Brightness +
☼-	Brightness -
Ⓚ+	CCT + (cooler)
Ⓚ-	CCT - (warmer)
SETUP	Pairing
F/R	Forward/reverse
2H	All off after 2 hours
1 2	Fan speed
3 4	Fan speed
5 6	Fan speed
≋	Natural wind
FAN OFF	Fan off

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. Ifnot used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.


1. For the ceiling fan you want to pair, turn the main power switch off for at least 60s.
2. Turn on the main power switch of the ceiling fan, then immediately click **SETUP** button.
3. The light will blink or beep to indicate a successful pairing.

If the pairing process is unsuccessful, please repeat the above steps.


- NOTE: For iPhone users, you can search for "FanLamp Pro" in the AppStore or scan the QR code to download. For Android users, please scan the QR code to download. **(Please enable Bluetooth and pair the fan with app to control it!)**



1. Ensure Bluetooth is enabled on your mobile device.

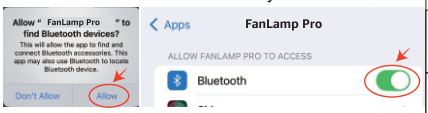


2. Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.)
Method 1: Click "Allow" when opening the app for the first time.
Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.

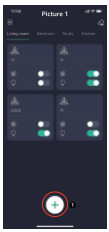


Picture 1

3. Enter the app page and click the plus sign below (Add group).

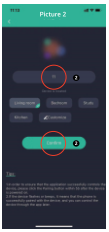

Picture 2

4. Enter any name, then click Confirm.



Picture 3

5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

	Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.
	Slide to change the fan speed
	Slide to change the brightness of the light
	Quick switch for "Natural" light color
	Quick switch for "Yellow" light color
	Quick switch for "White" light color
	N/A for this model
	Timer the fan
	Natural wind: fan speed will change automatically when use this function
	Sleeping wind
	Night light (10% brightness in neutral white)
	N/A for this model
	Fan moves forwards
	Fan moves reversely
	Light off/on
	Fan off/on