
ASSEMBLY INSTRUCTIONS

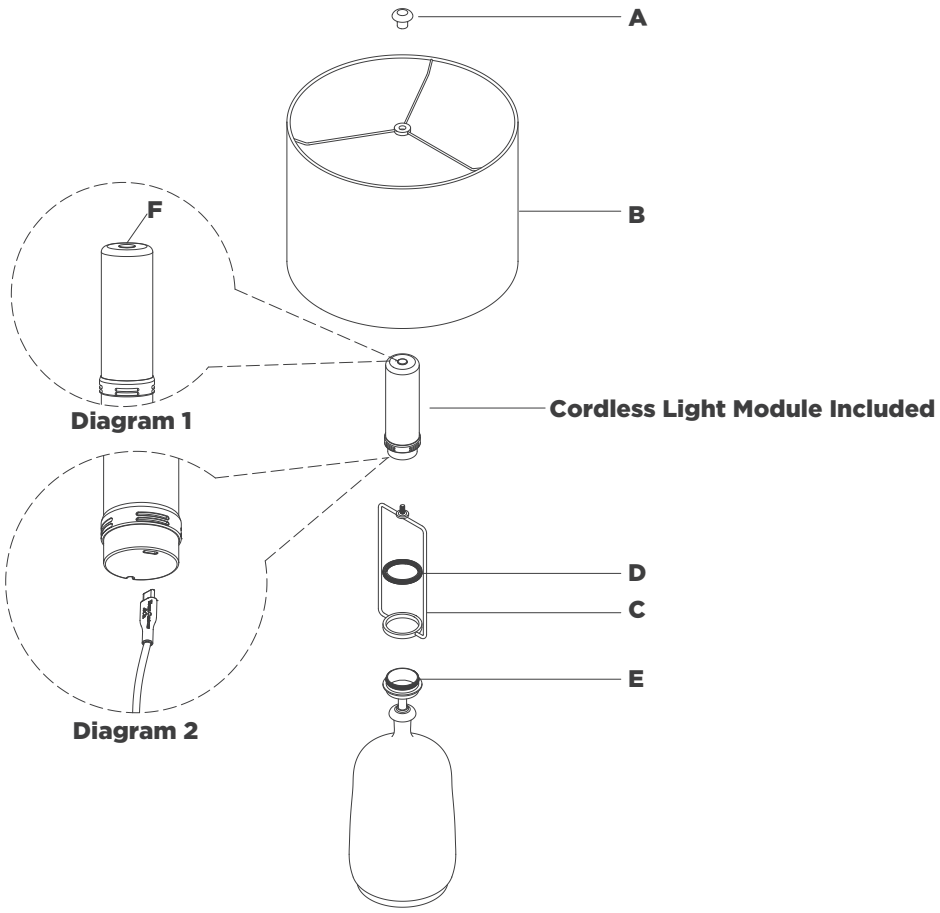

Culloden 25″ Cordless Table Lamp

Item # ARN3677


NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove socket ring **(D)** from cordless module holder **(E)**.
3. Install harp **(C)** to cordless module holder **(E)** and secure with socket ring **(D)**.
4. Remove finial **(A)** from harp **(C)**.
5. Remove shade **(B)** from packaging and install to harp **(C)** and secure with finial **(A)**.
   NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damages.
6. Place cordless light module into cordless module holder **(E)**.
7. For best results fully charge battery before use.
   NOTE: 10W minimum USB power source recommended.
8. Test the lamp.
   Dimmer switch operation: Touch dimmer **(F)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).
NOTE: For convenience, USB-C to USB-A adapter is included.

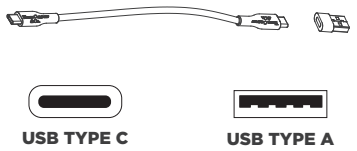

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.

Intertek DRY LED