








80066 Card Display Cabinet

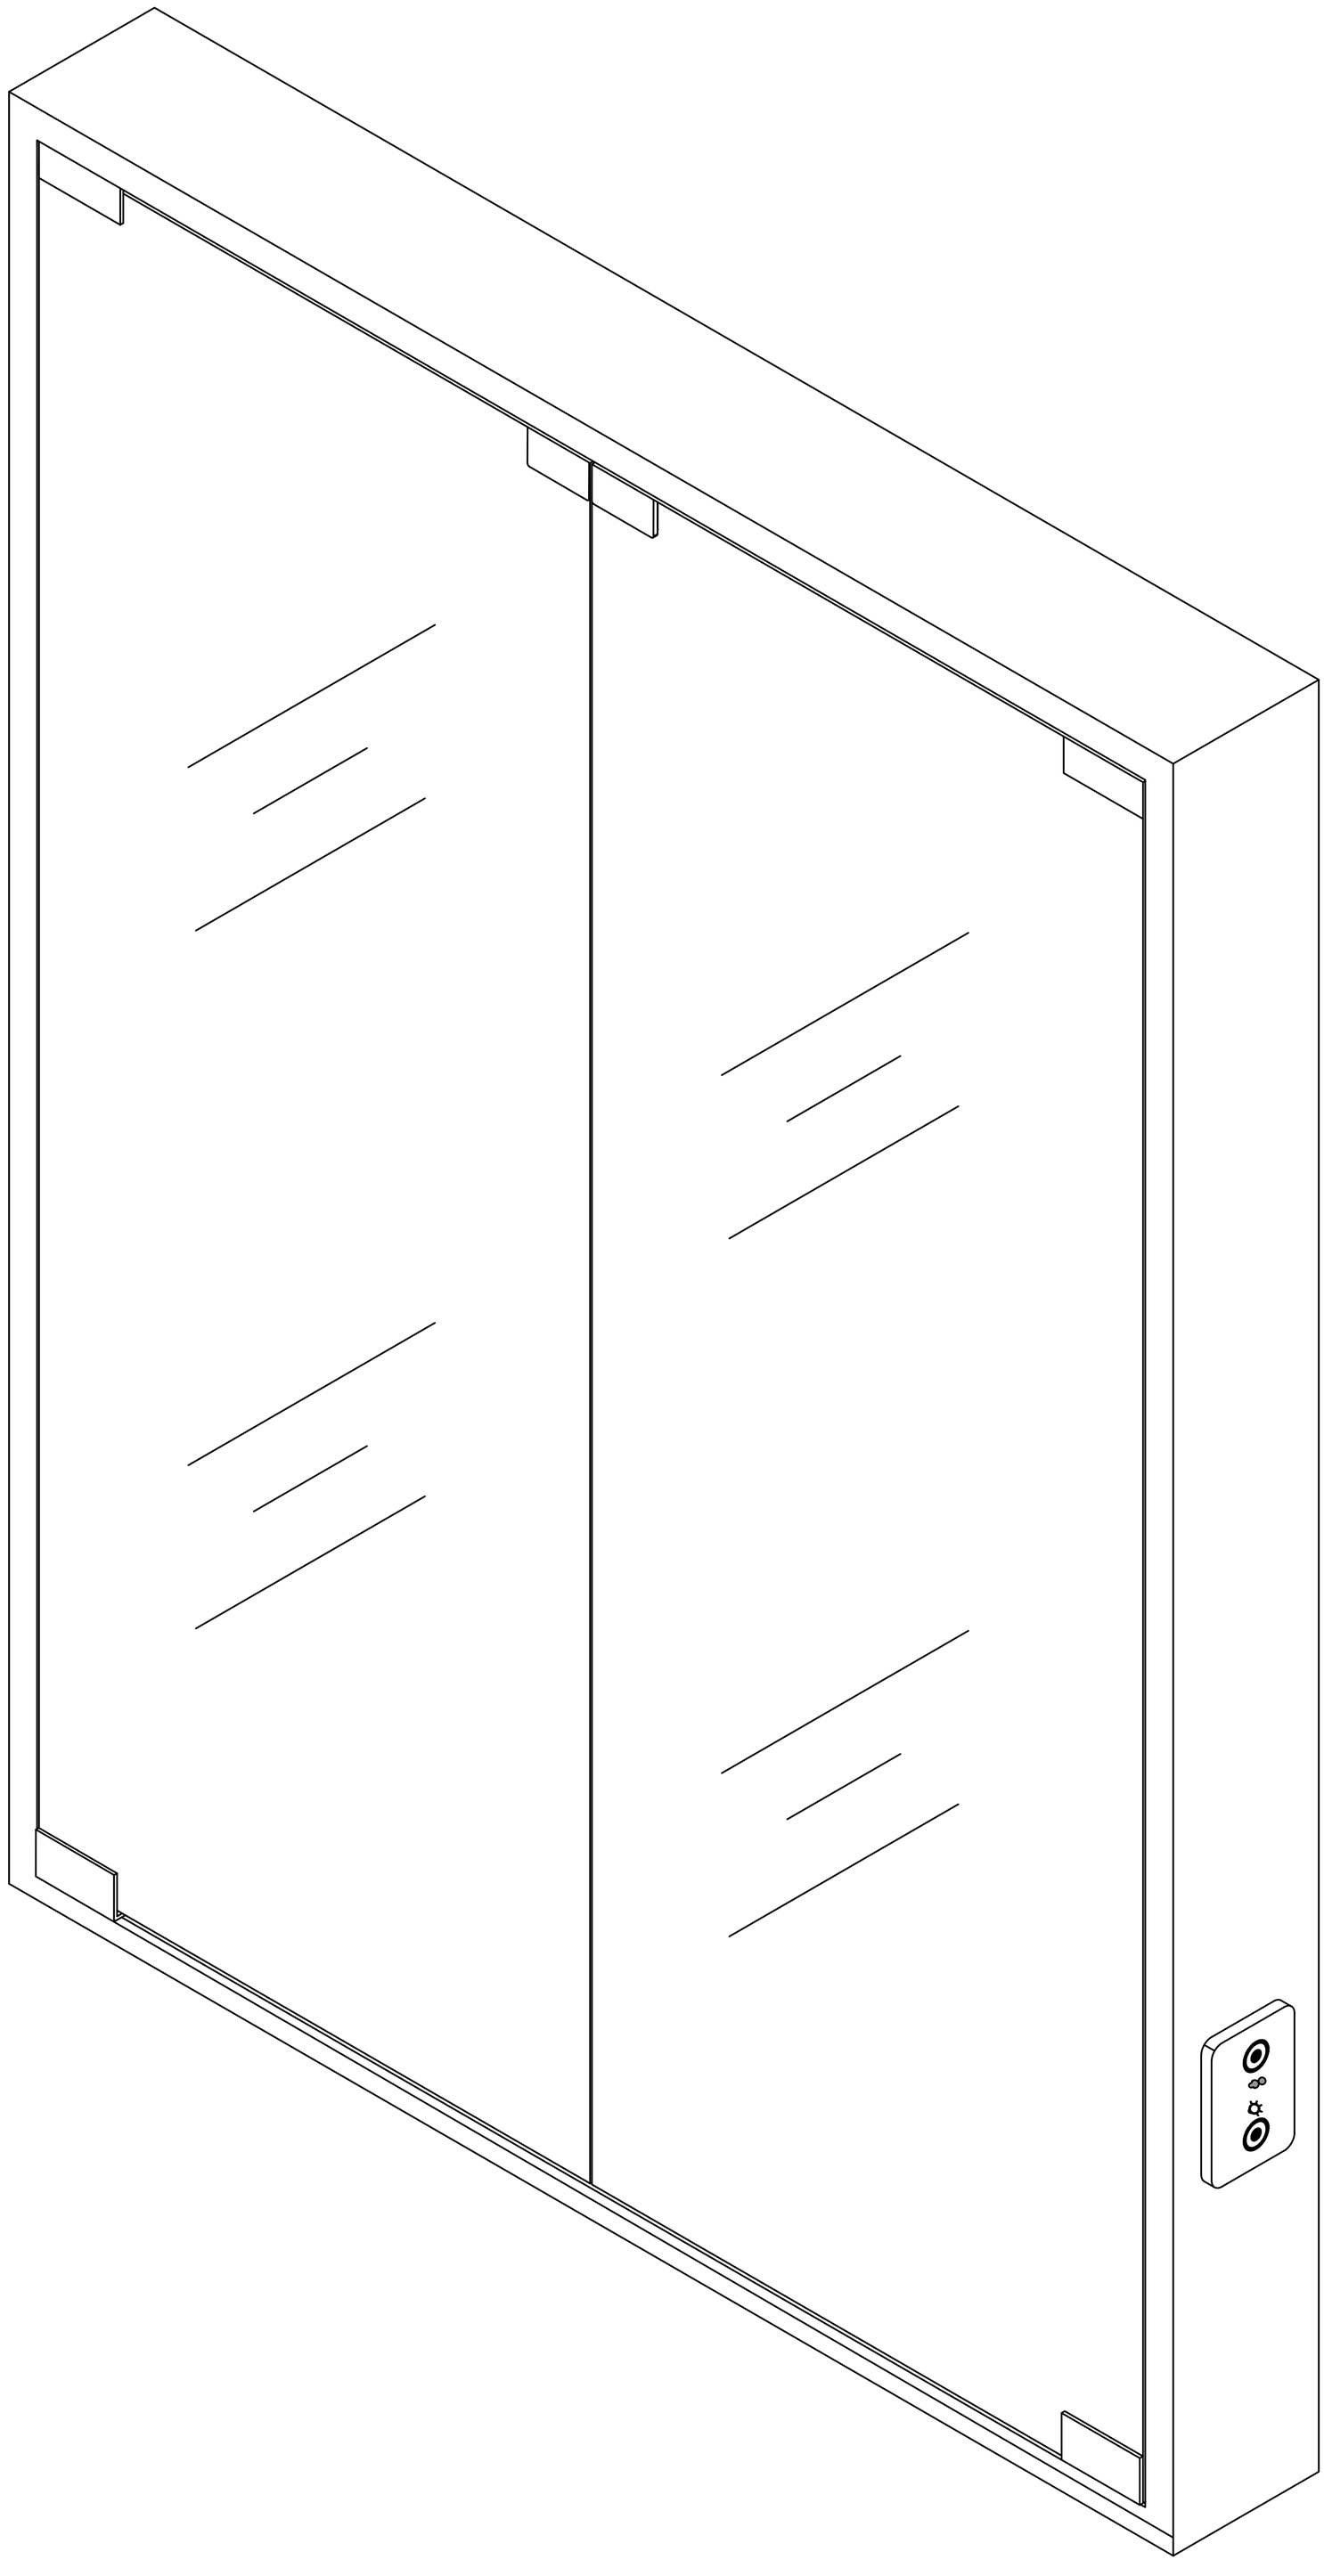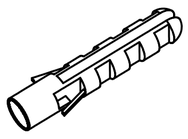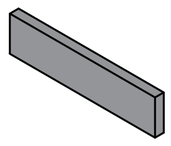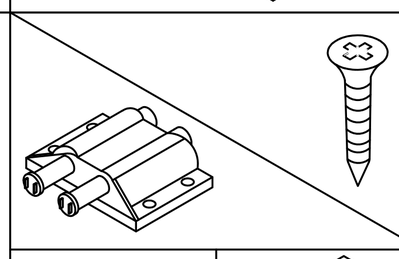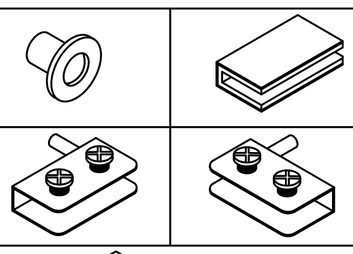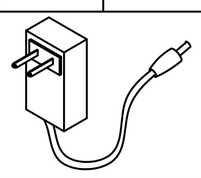


A		Self-Tapping Screw (4 × 45 mm)	3 Pcs +1Pc
B		Wall Anchors	3 Pcs +1Pc
C		Non-Slip Pads (50 × 10 mm)	2 Pcs
D		Push-to-Open Latch & Screws （3x16mm）	4pcs +1pc / 1pc
		Metal Clips & Hinges	4pcs / 2pcs 2pcs / 2pcs
		Power Adapter (12V, 3A)	1 Pc

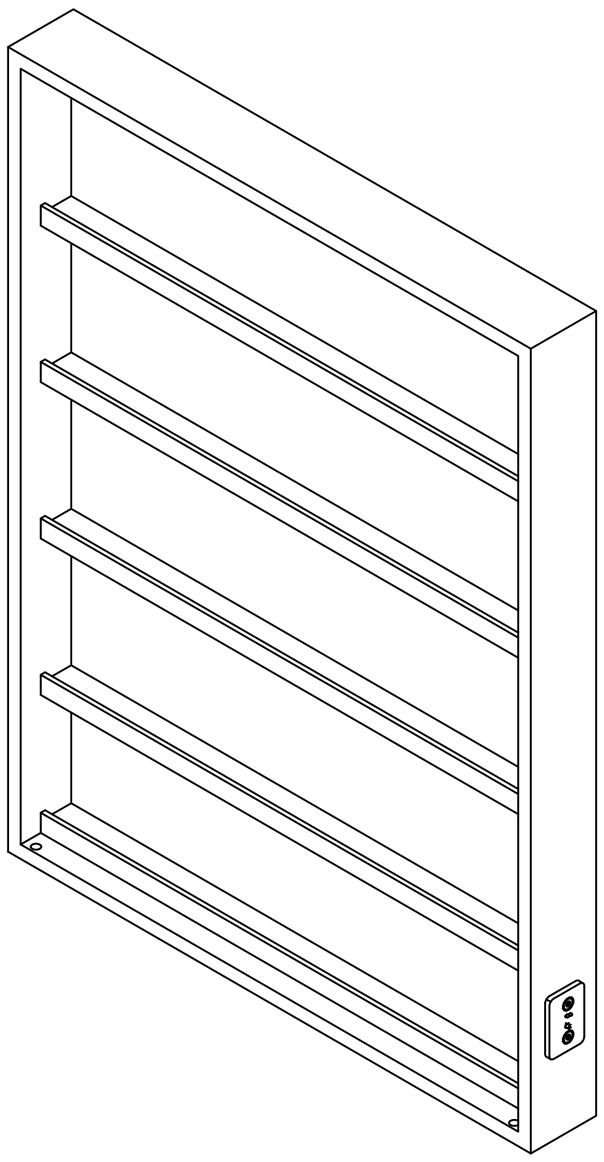

01x1

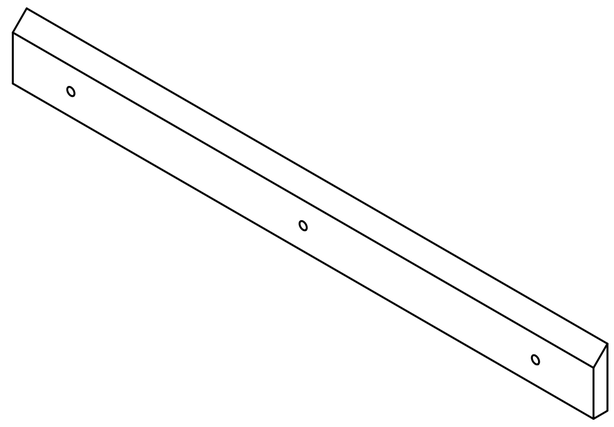



02x1

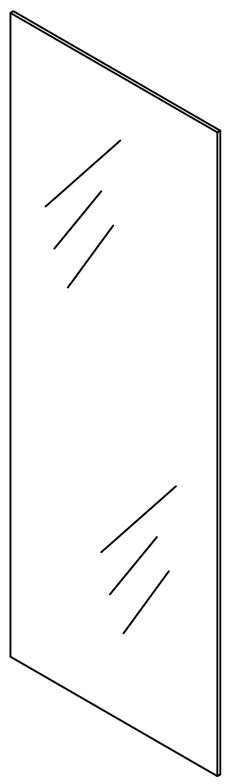

03x2


Step 1

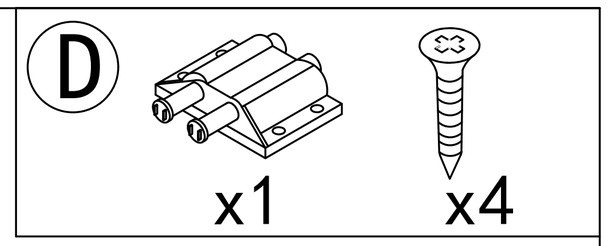

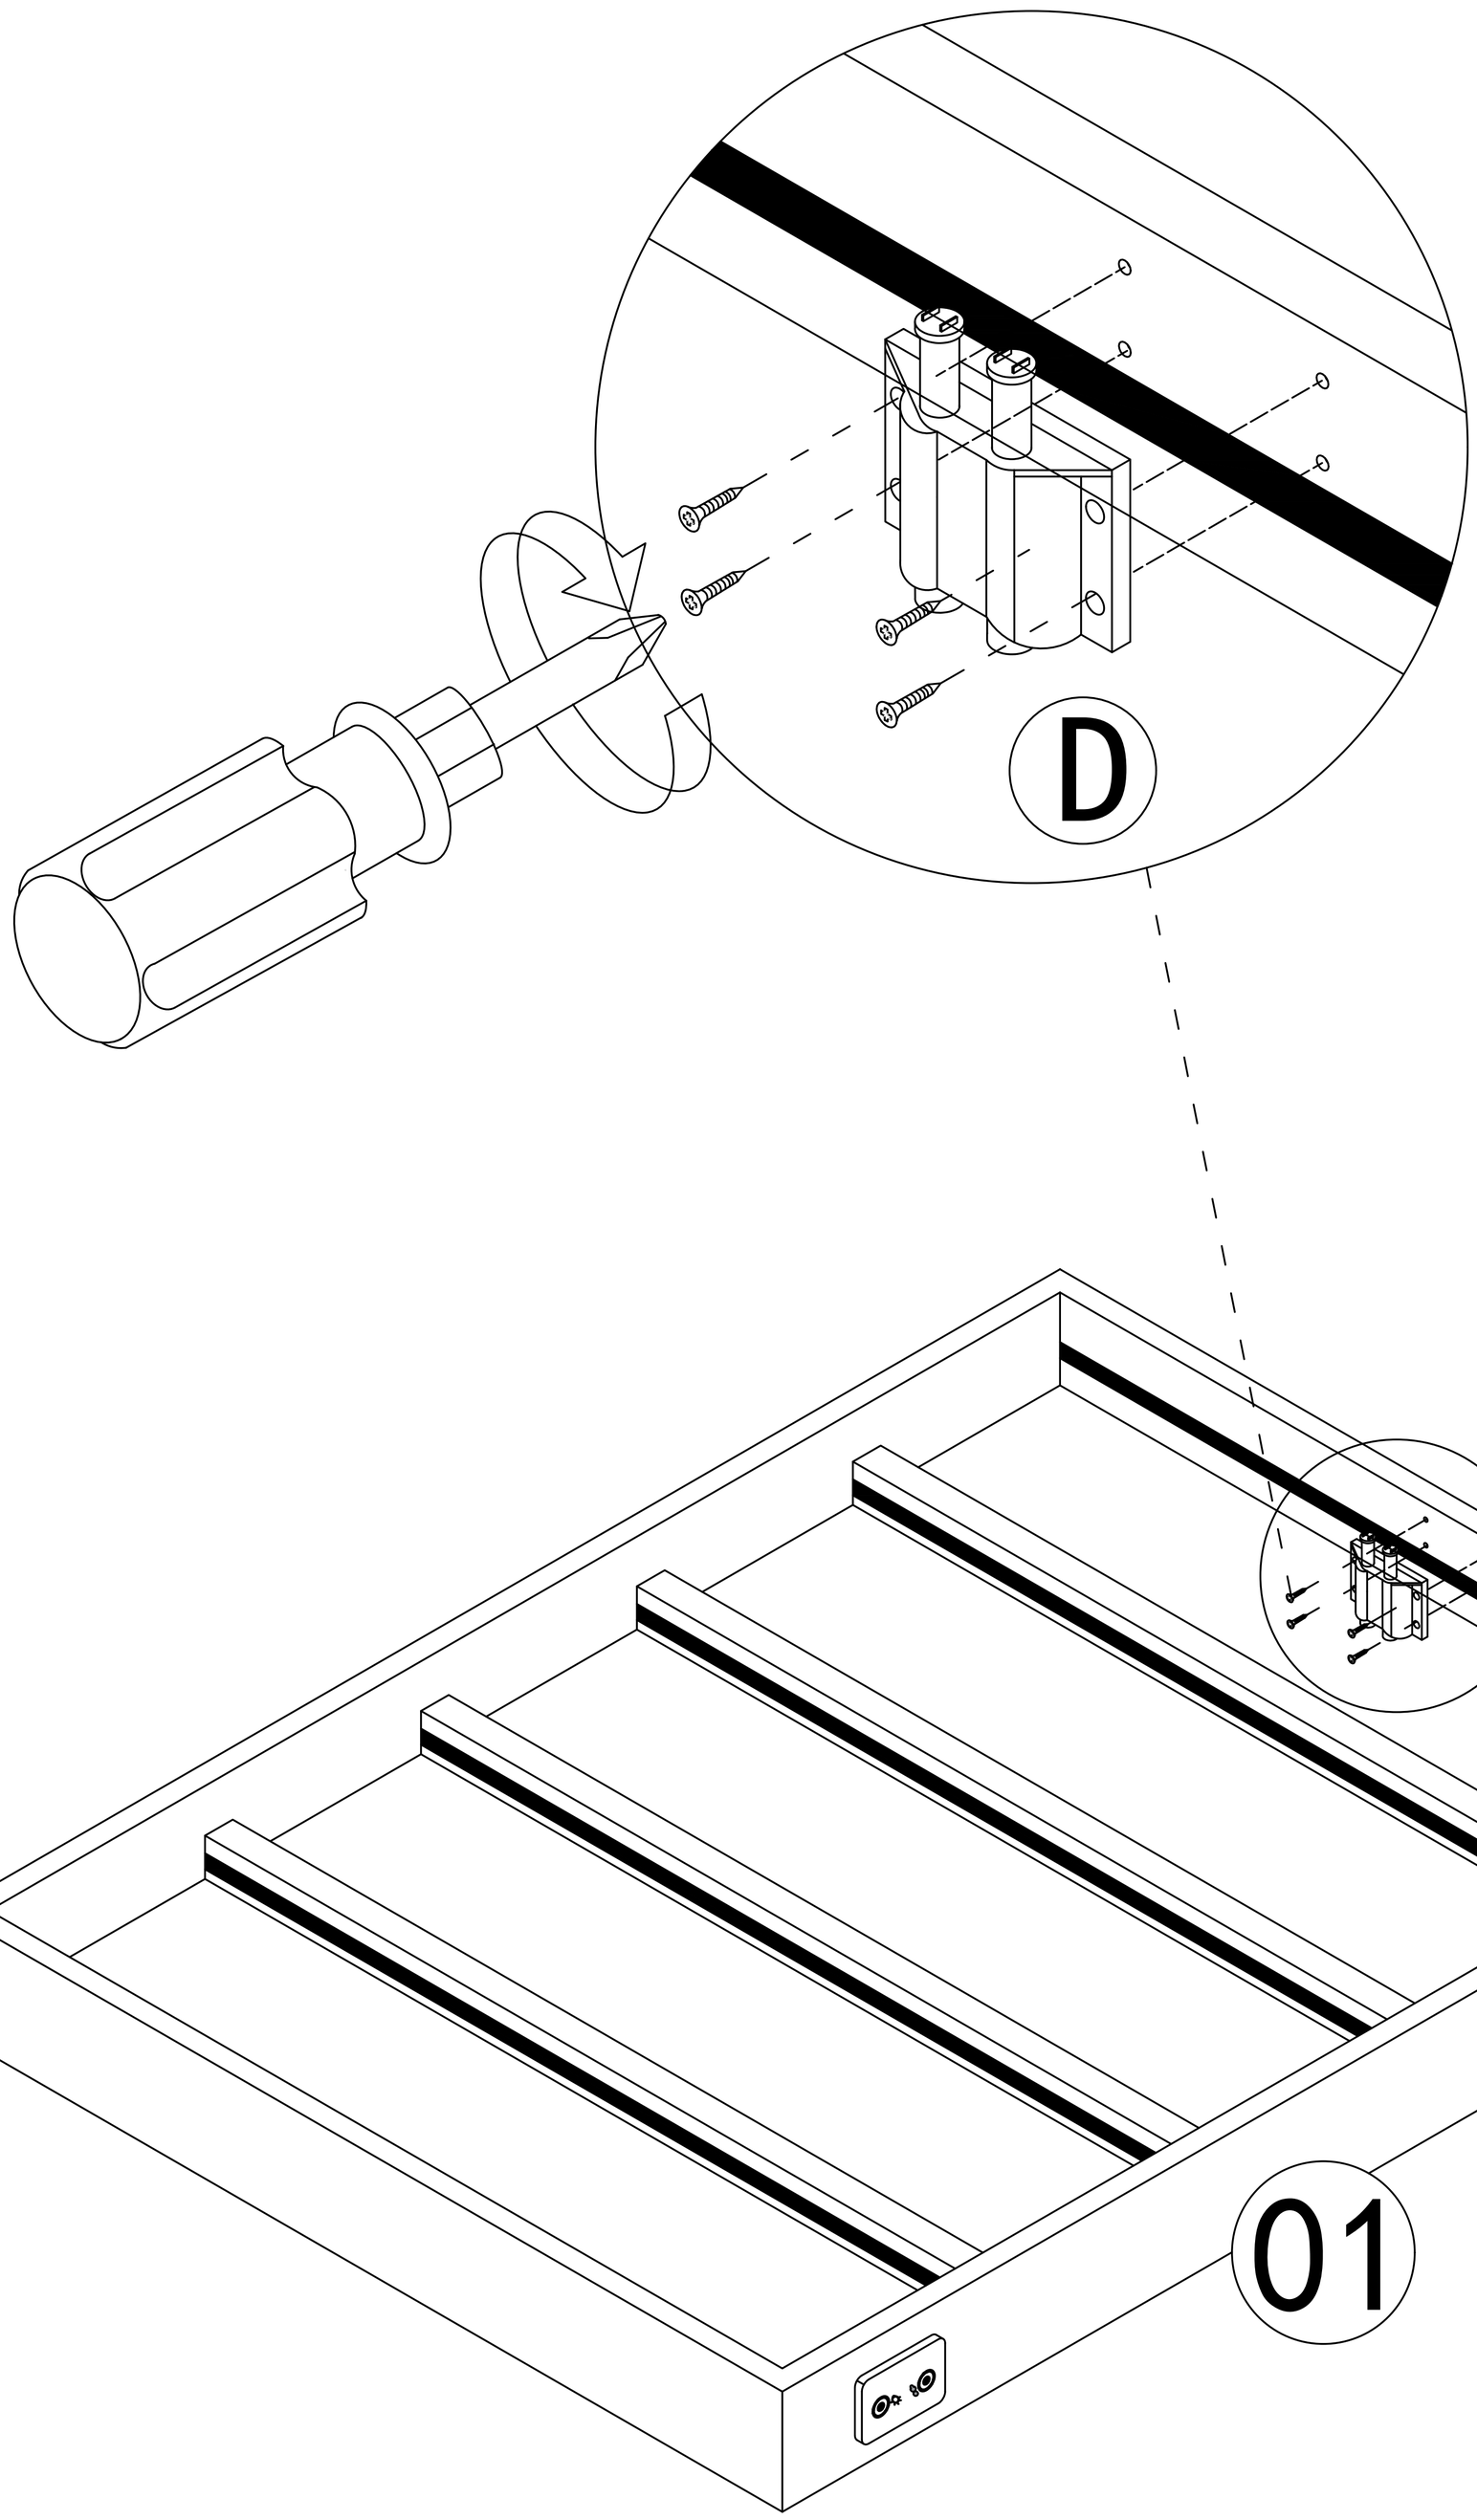


Step 2

First, fully loosen the screws on the hinge.

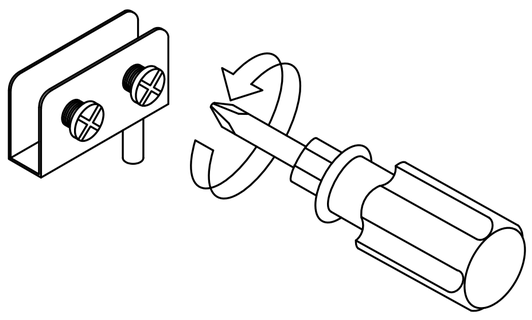


Place the white gasket in position, install the hinge, then tighten the screws securely.

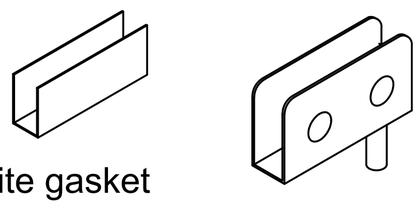


White gasket

D

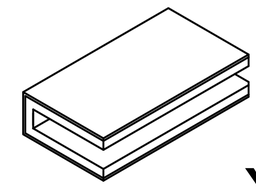


x1

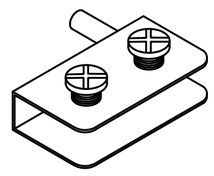

x1


Make sure the hinge is oriented correctly, then tighten the screws until the white gasket is firmly compressed.

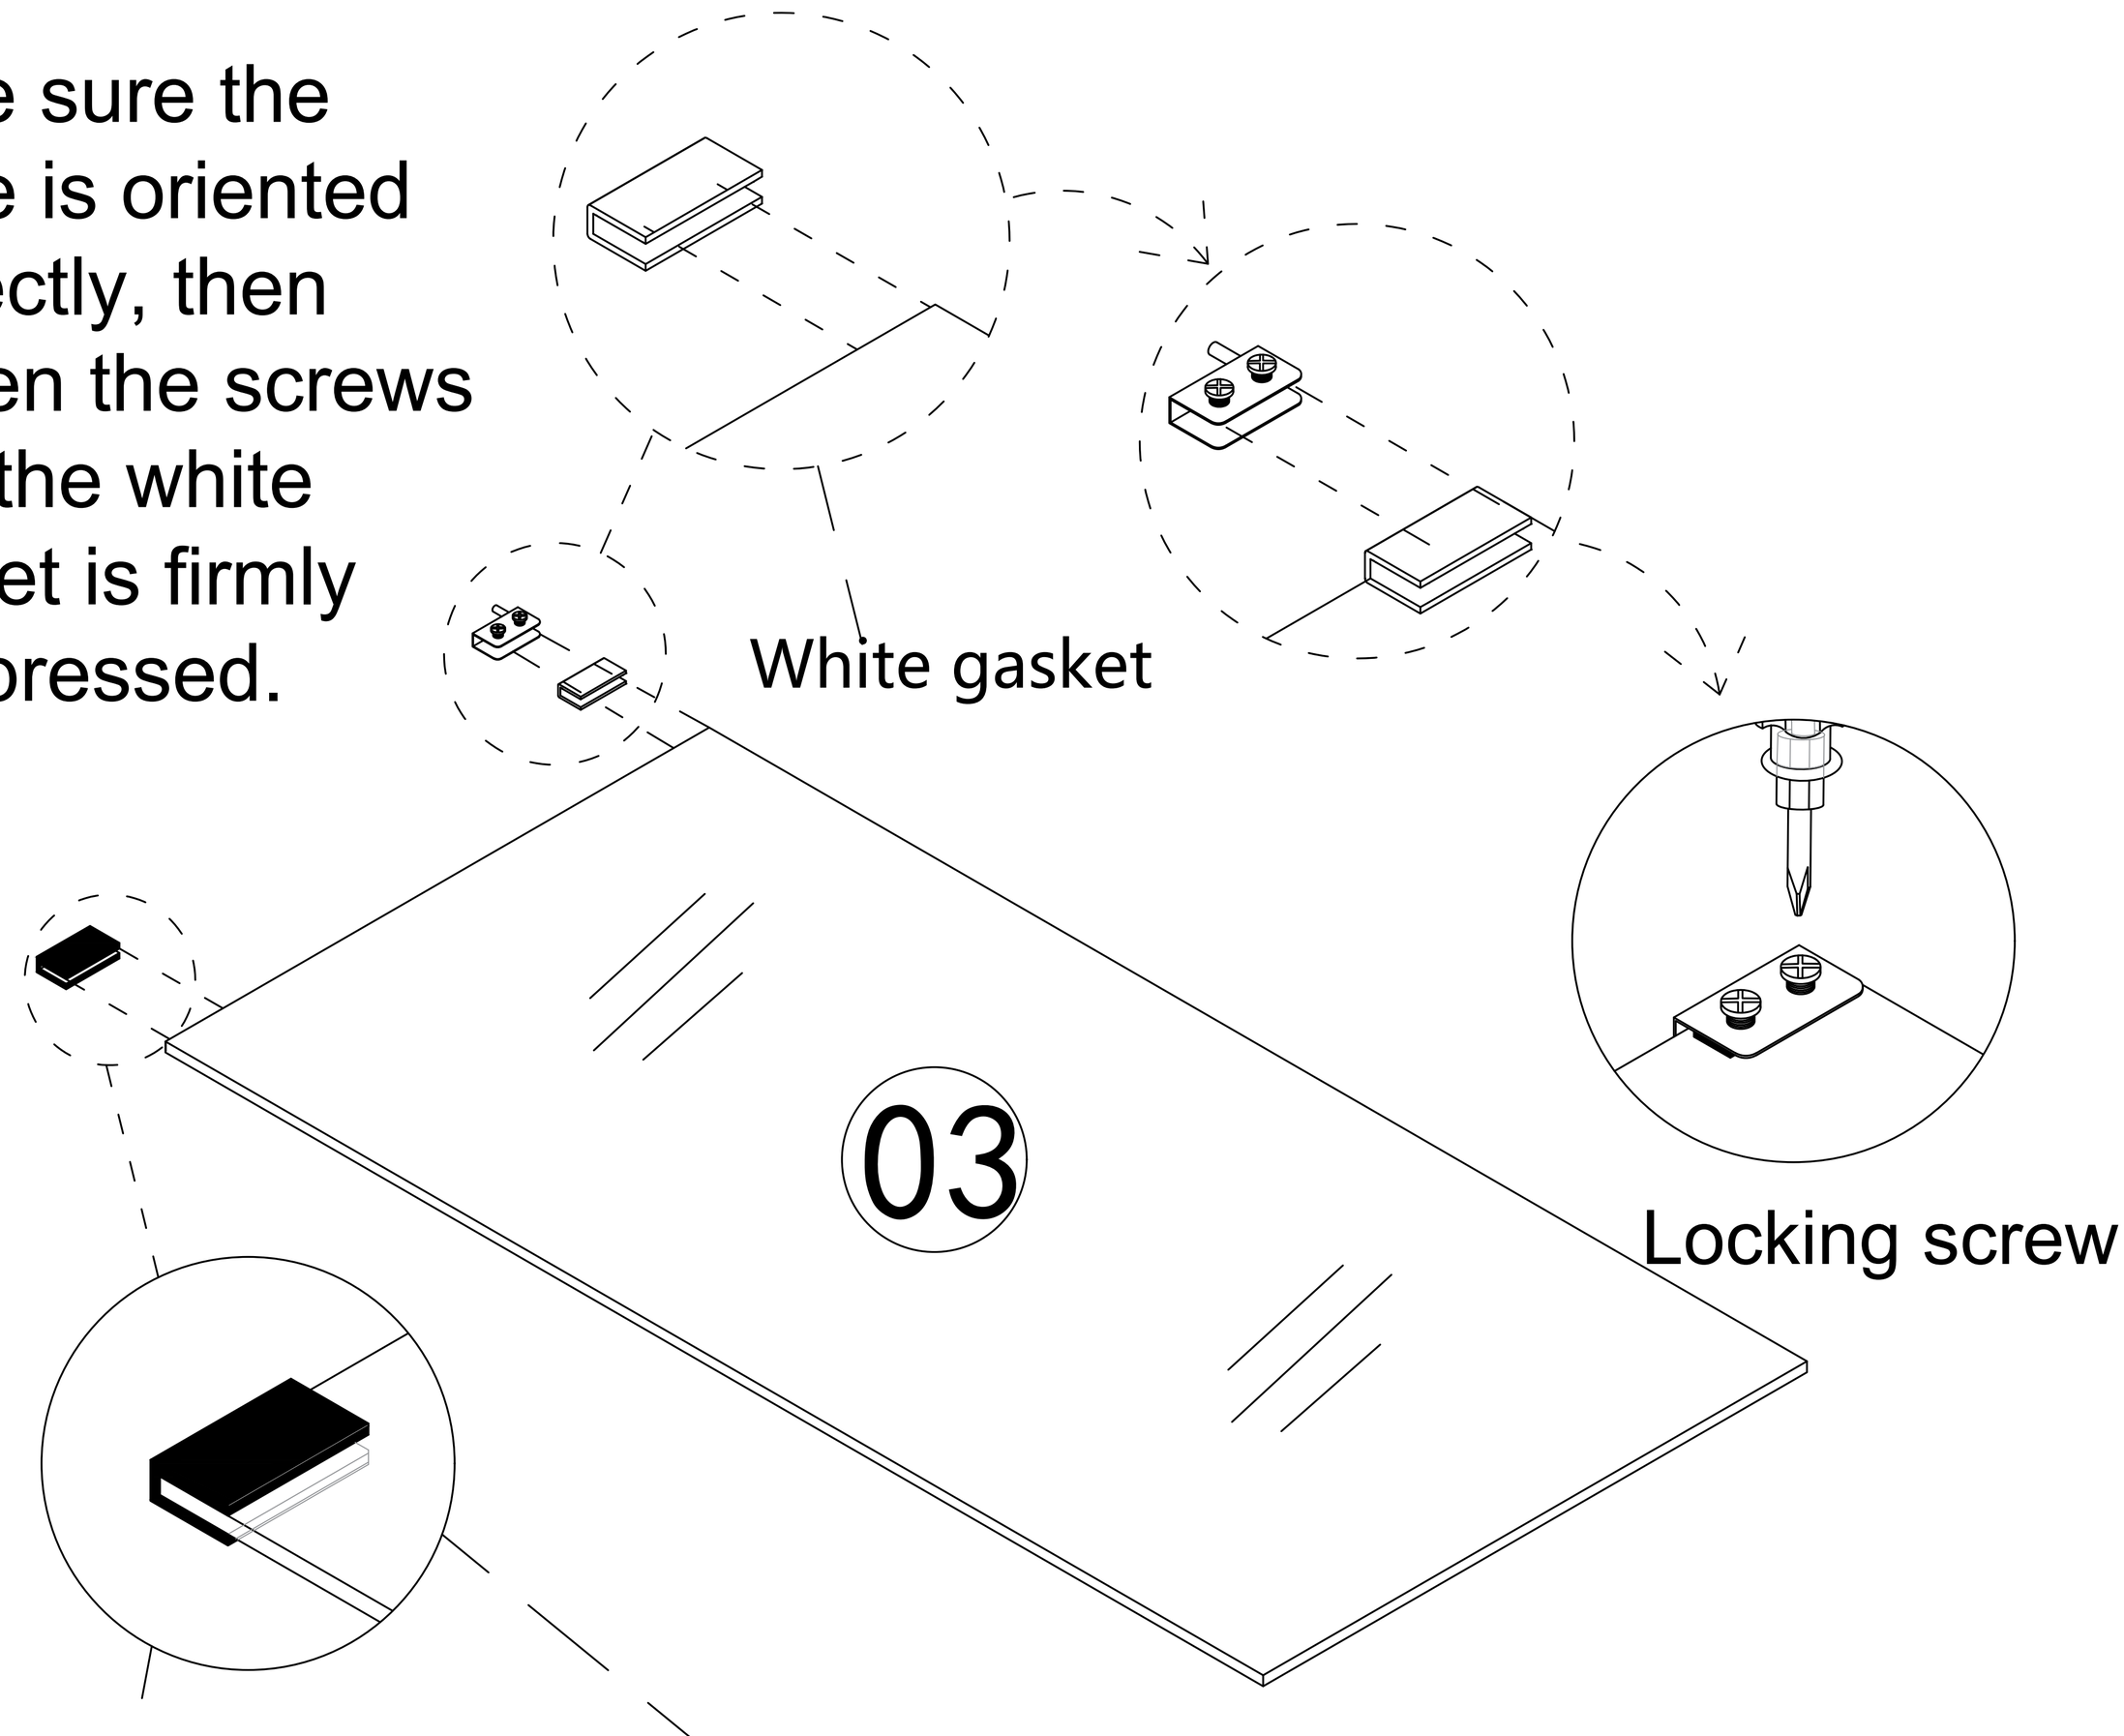


If the metal clip feels loose, gently pinch it closed before installation.

Step 3

First, fully loosen the screws on the hinge.

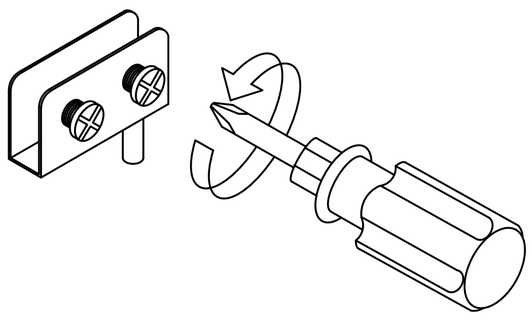


Place the white gasket in position, install the hinge, then tighten the screws securely.

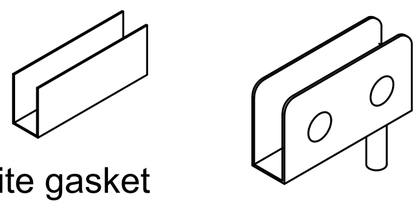


White gasket


D

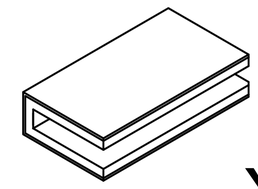

x1

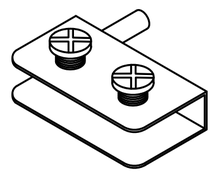

x1

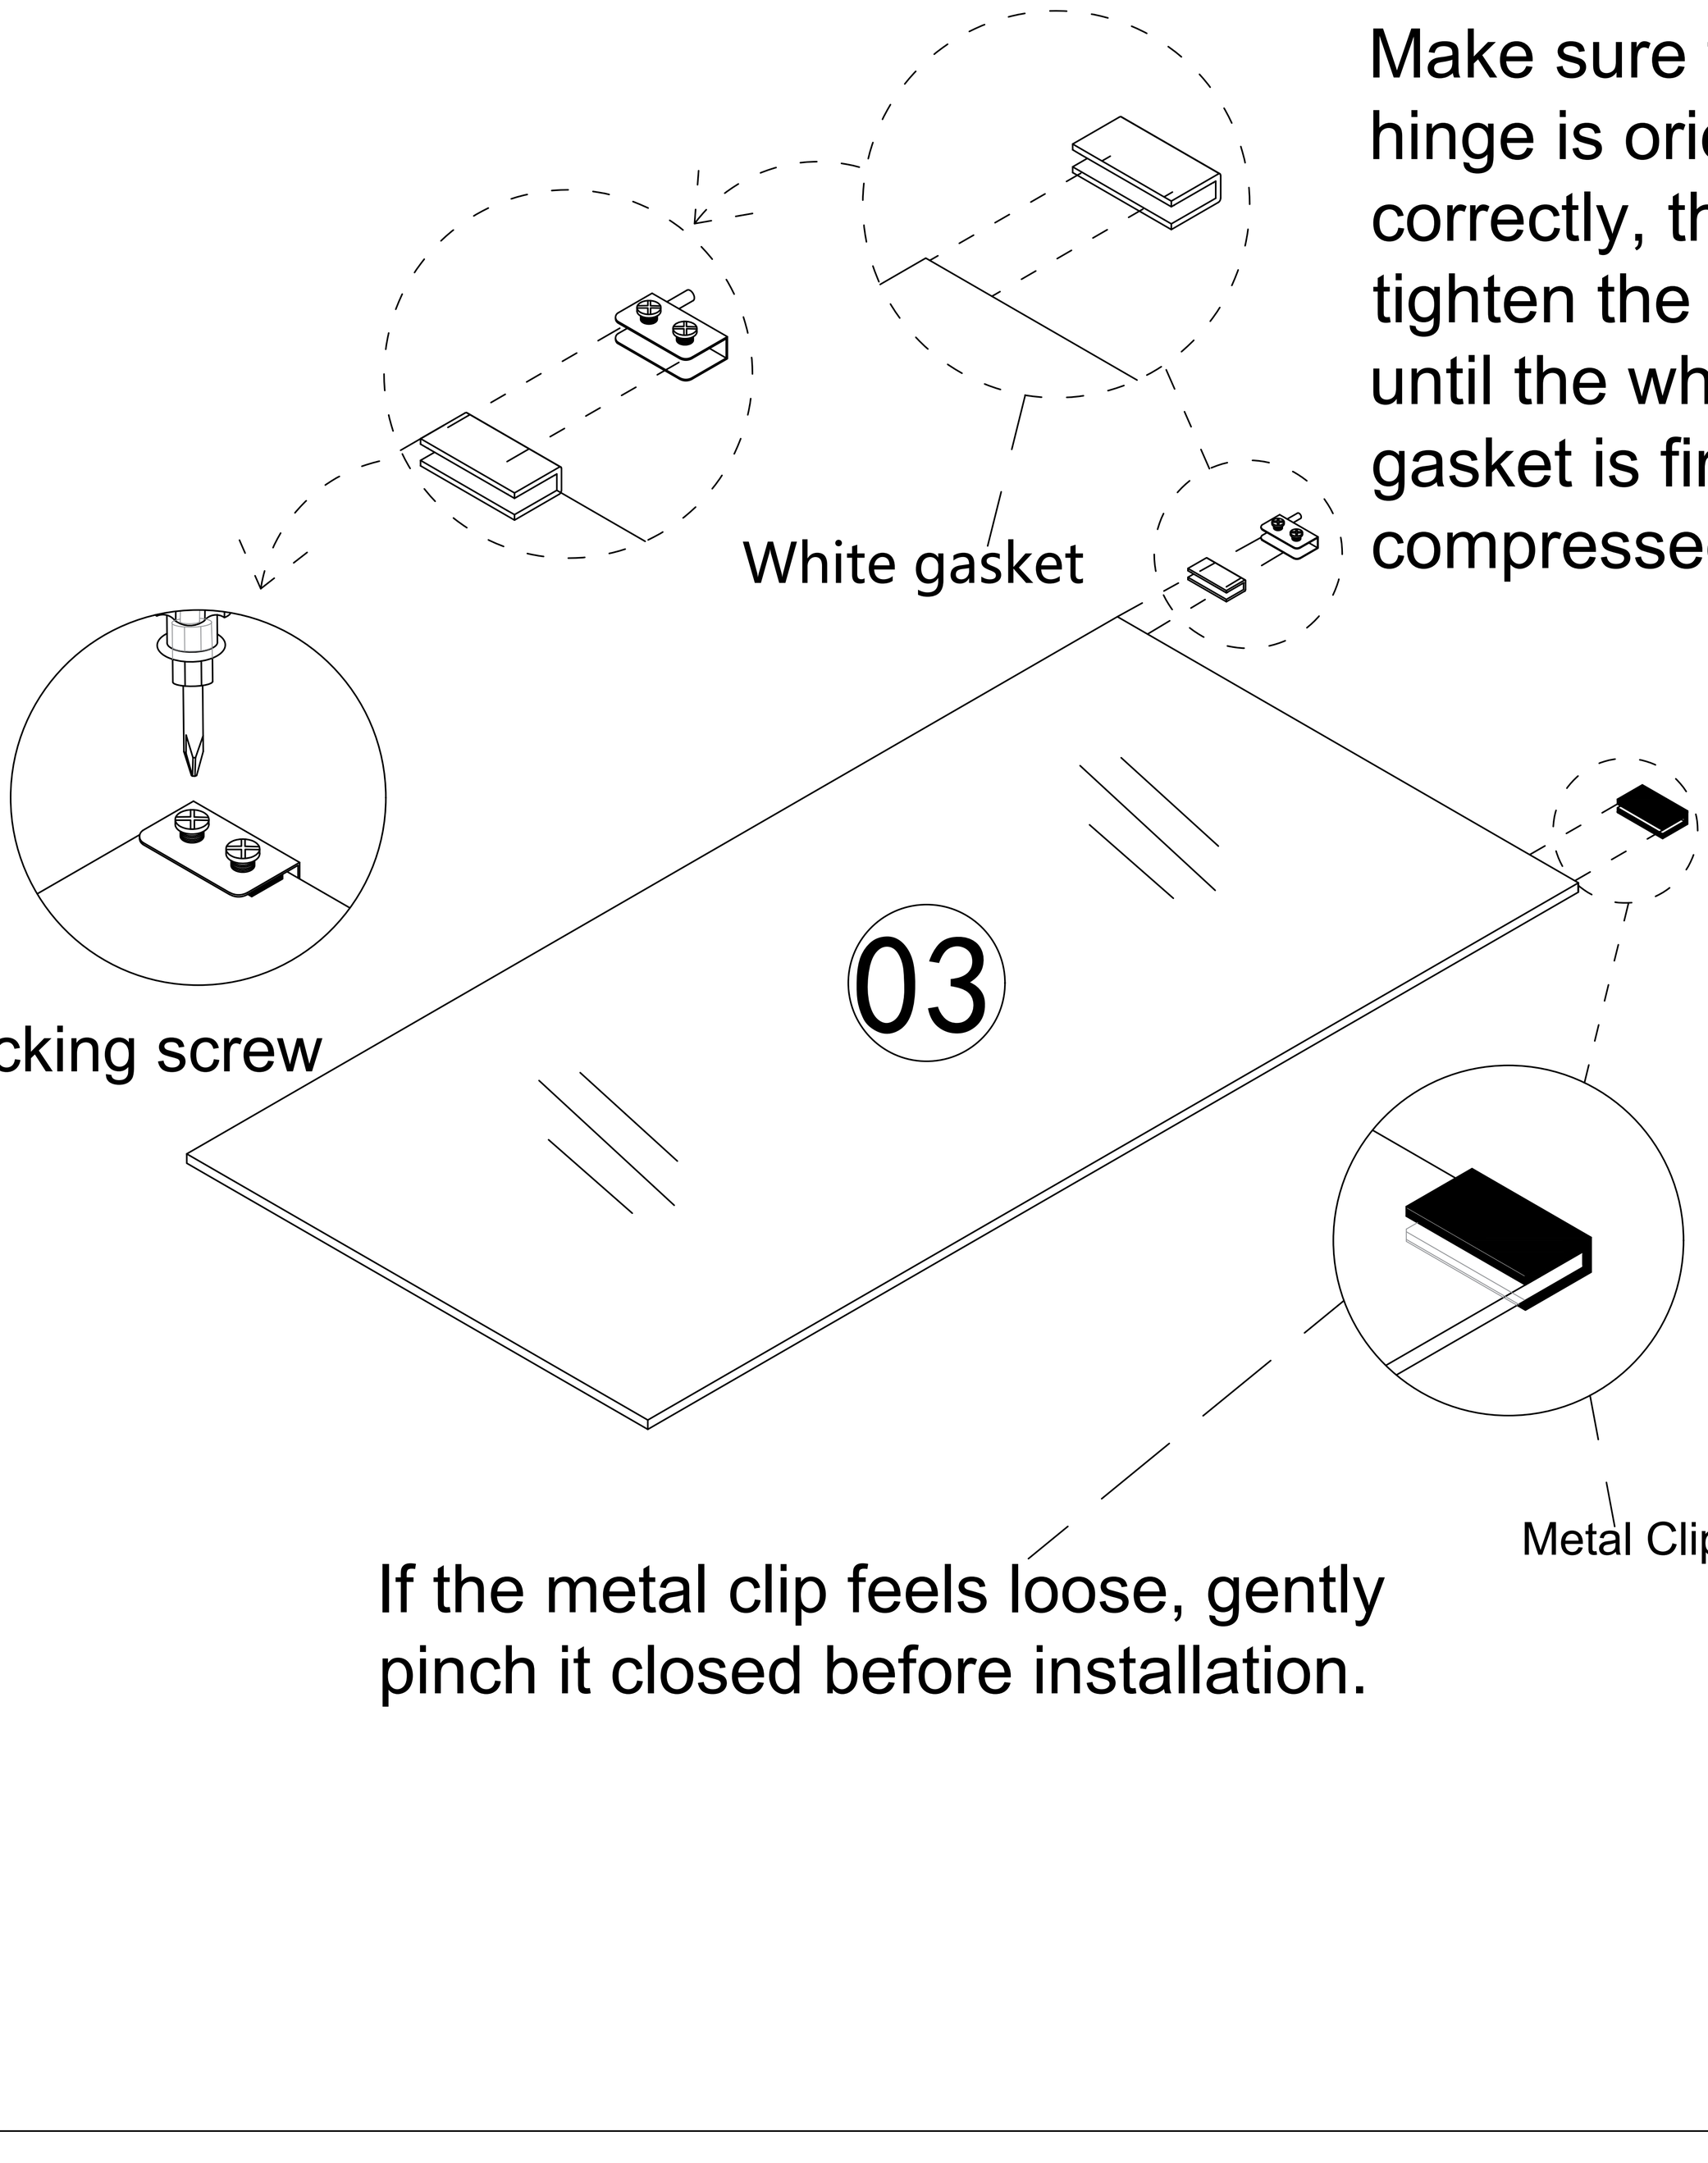


Make sure the hinge is oriented correctly, then tighten the screws until the white gasket is firmly compressed.

If the metal clip feels loose, gently pinch it closed before installation.

Step 4


C x 2

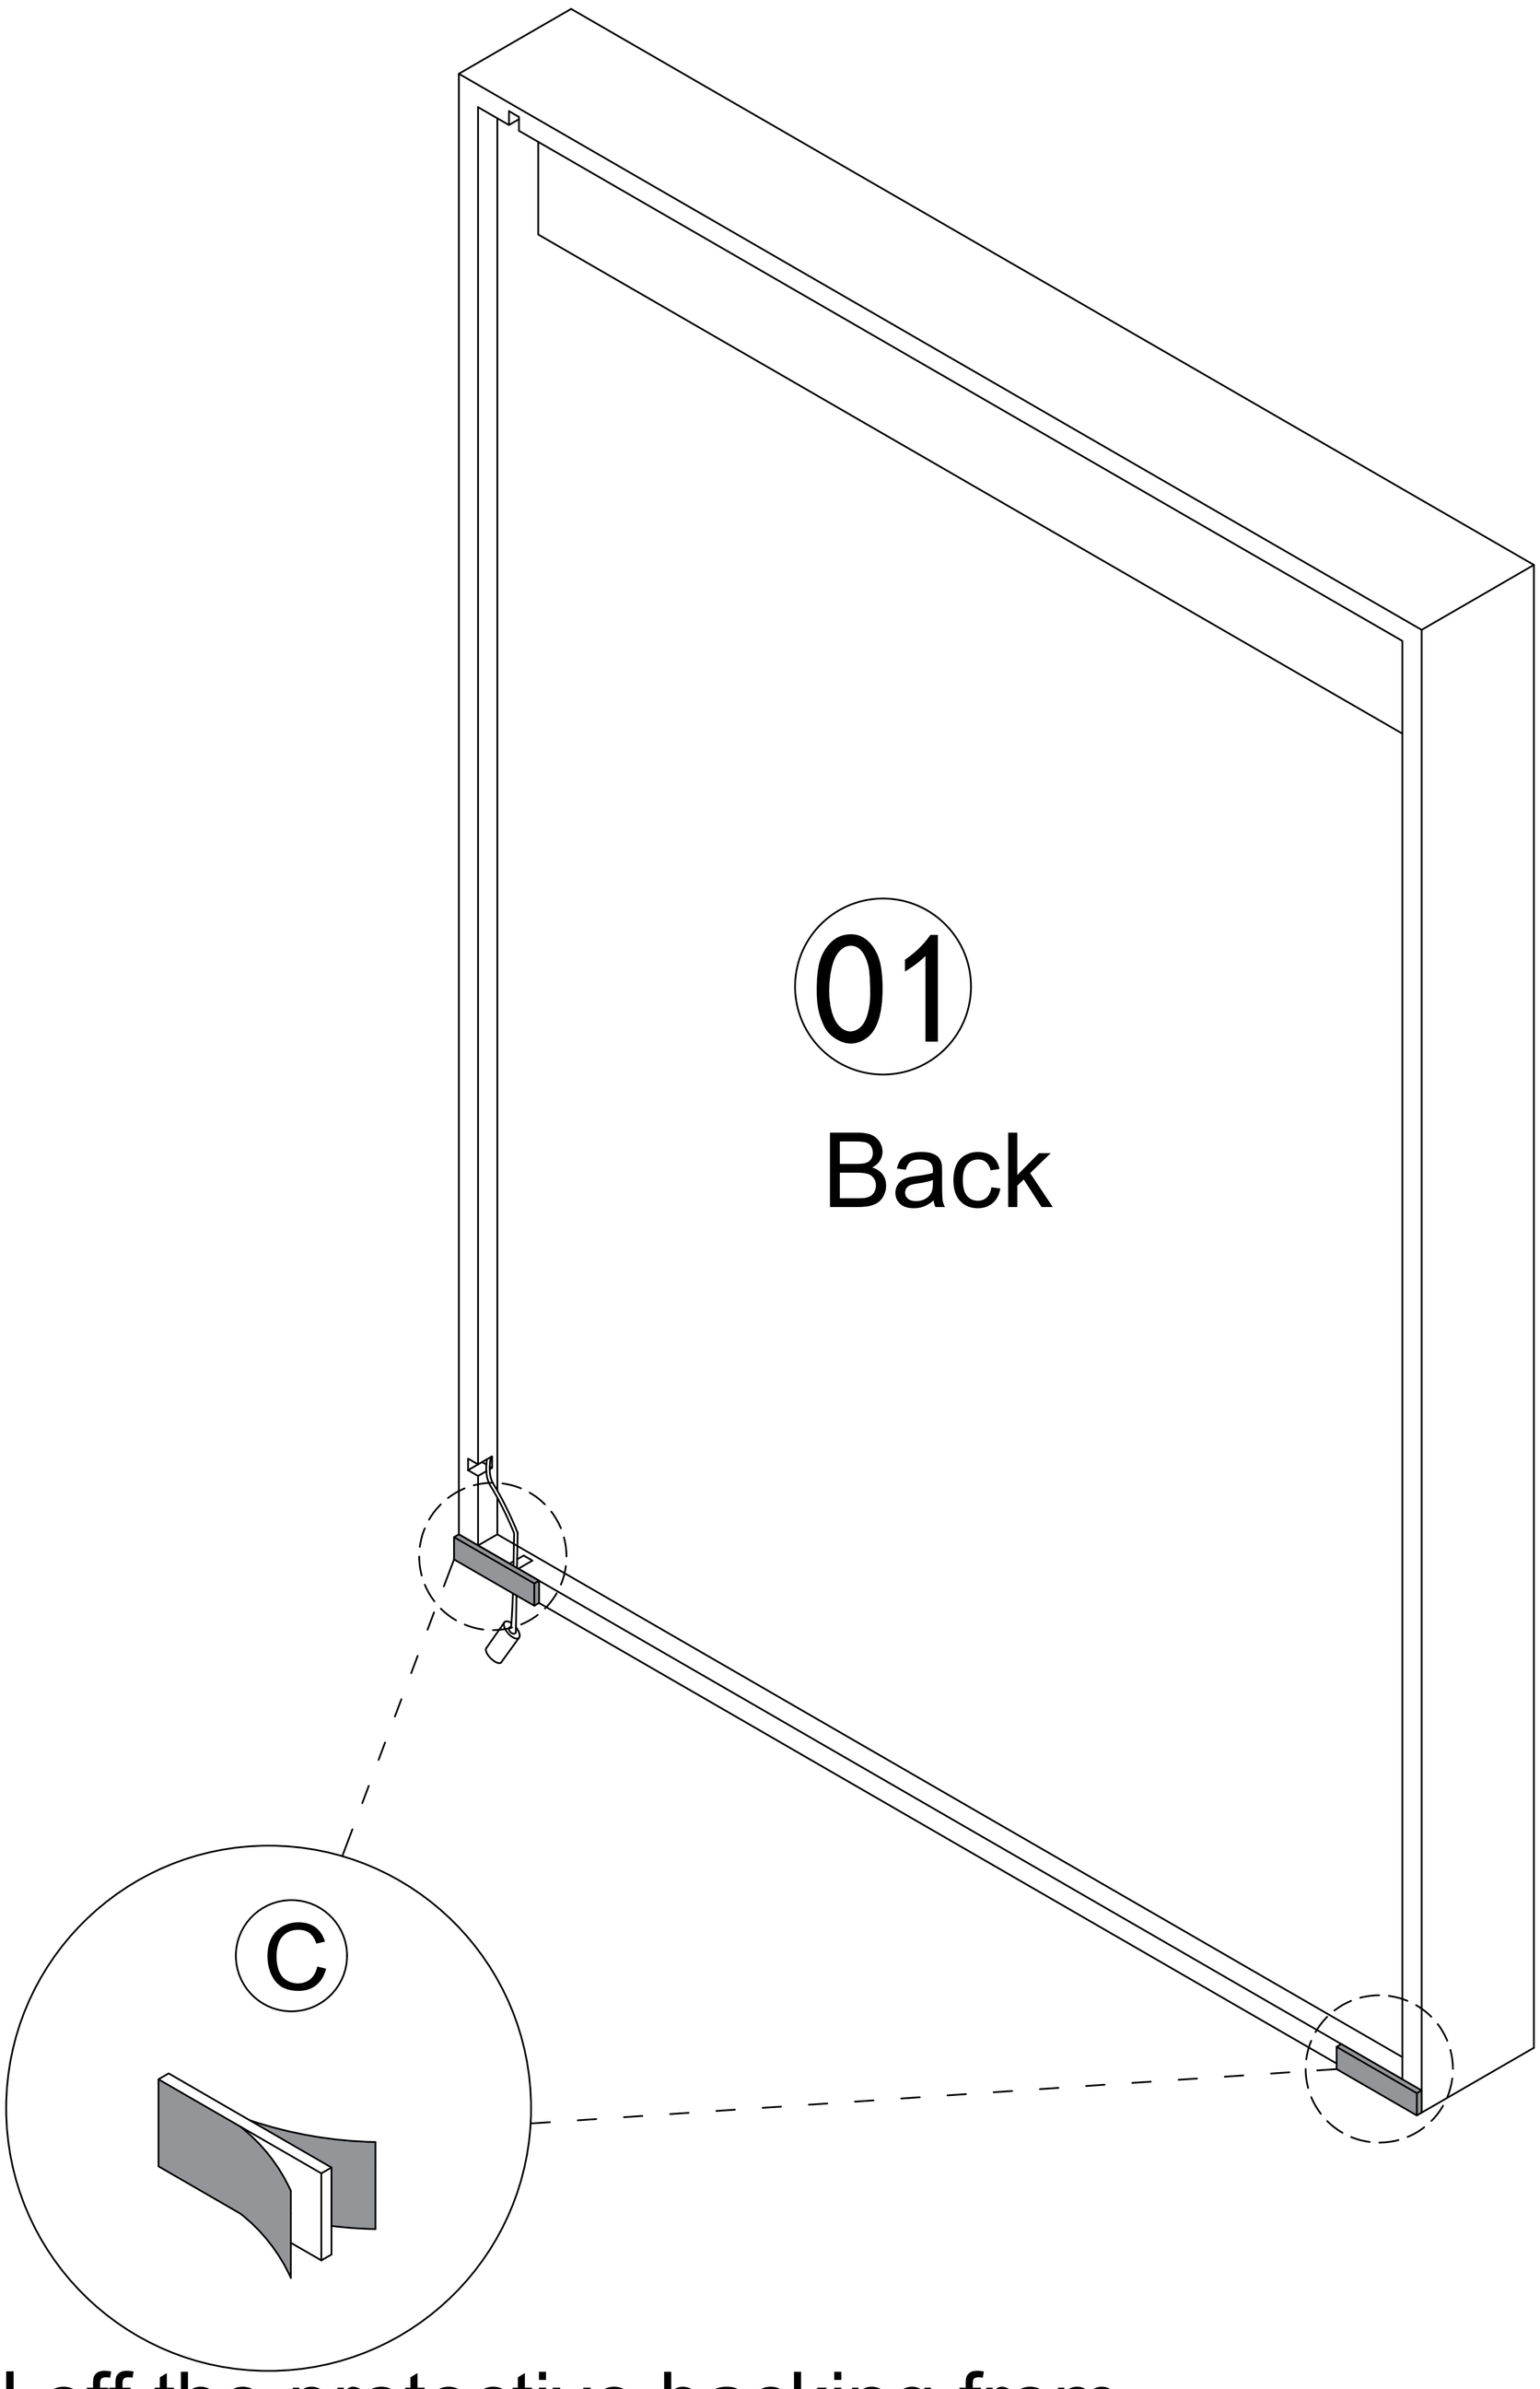


Peel off the protective backing from each non-slip pad and attach one pad to each bottom corner.

Step 5


D

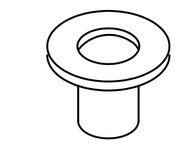


x2

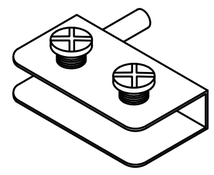


x1

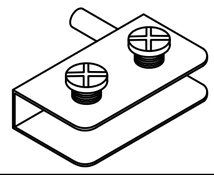


x1

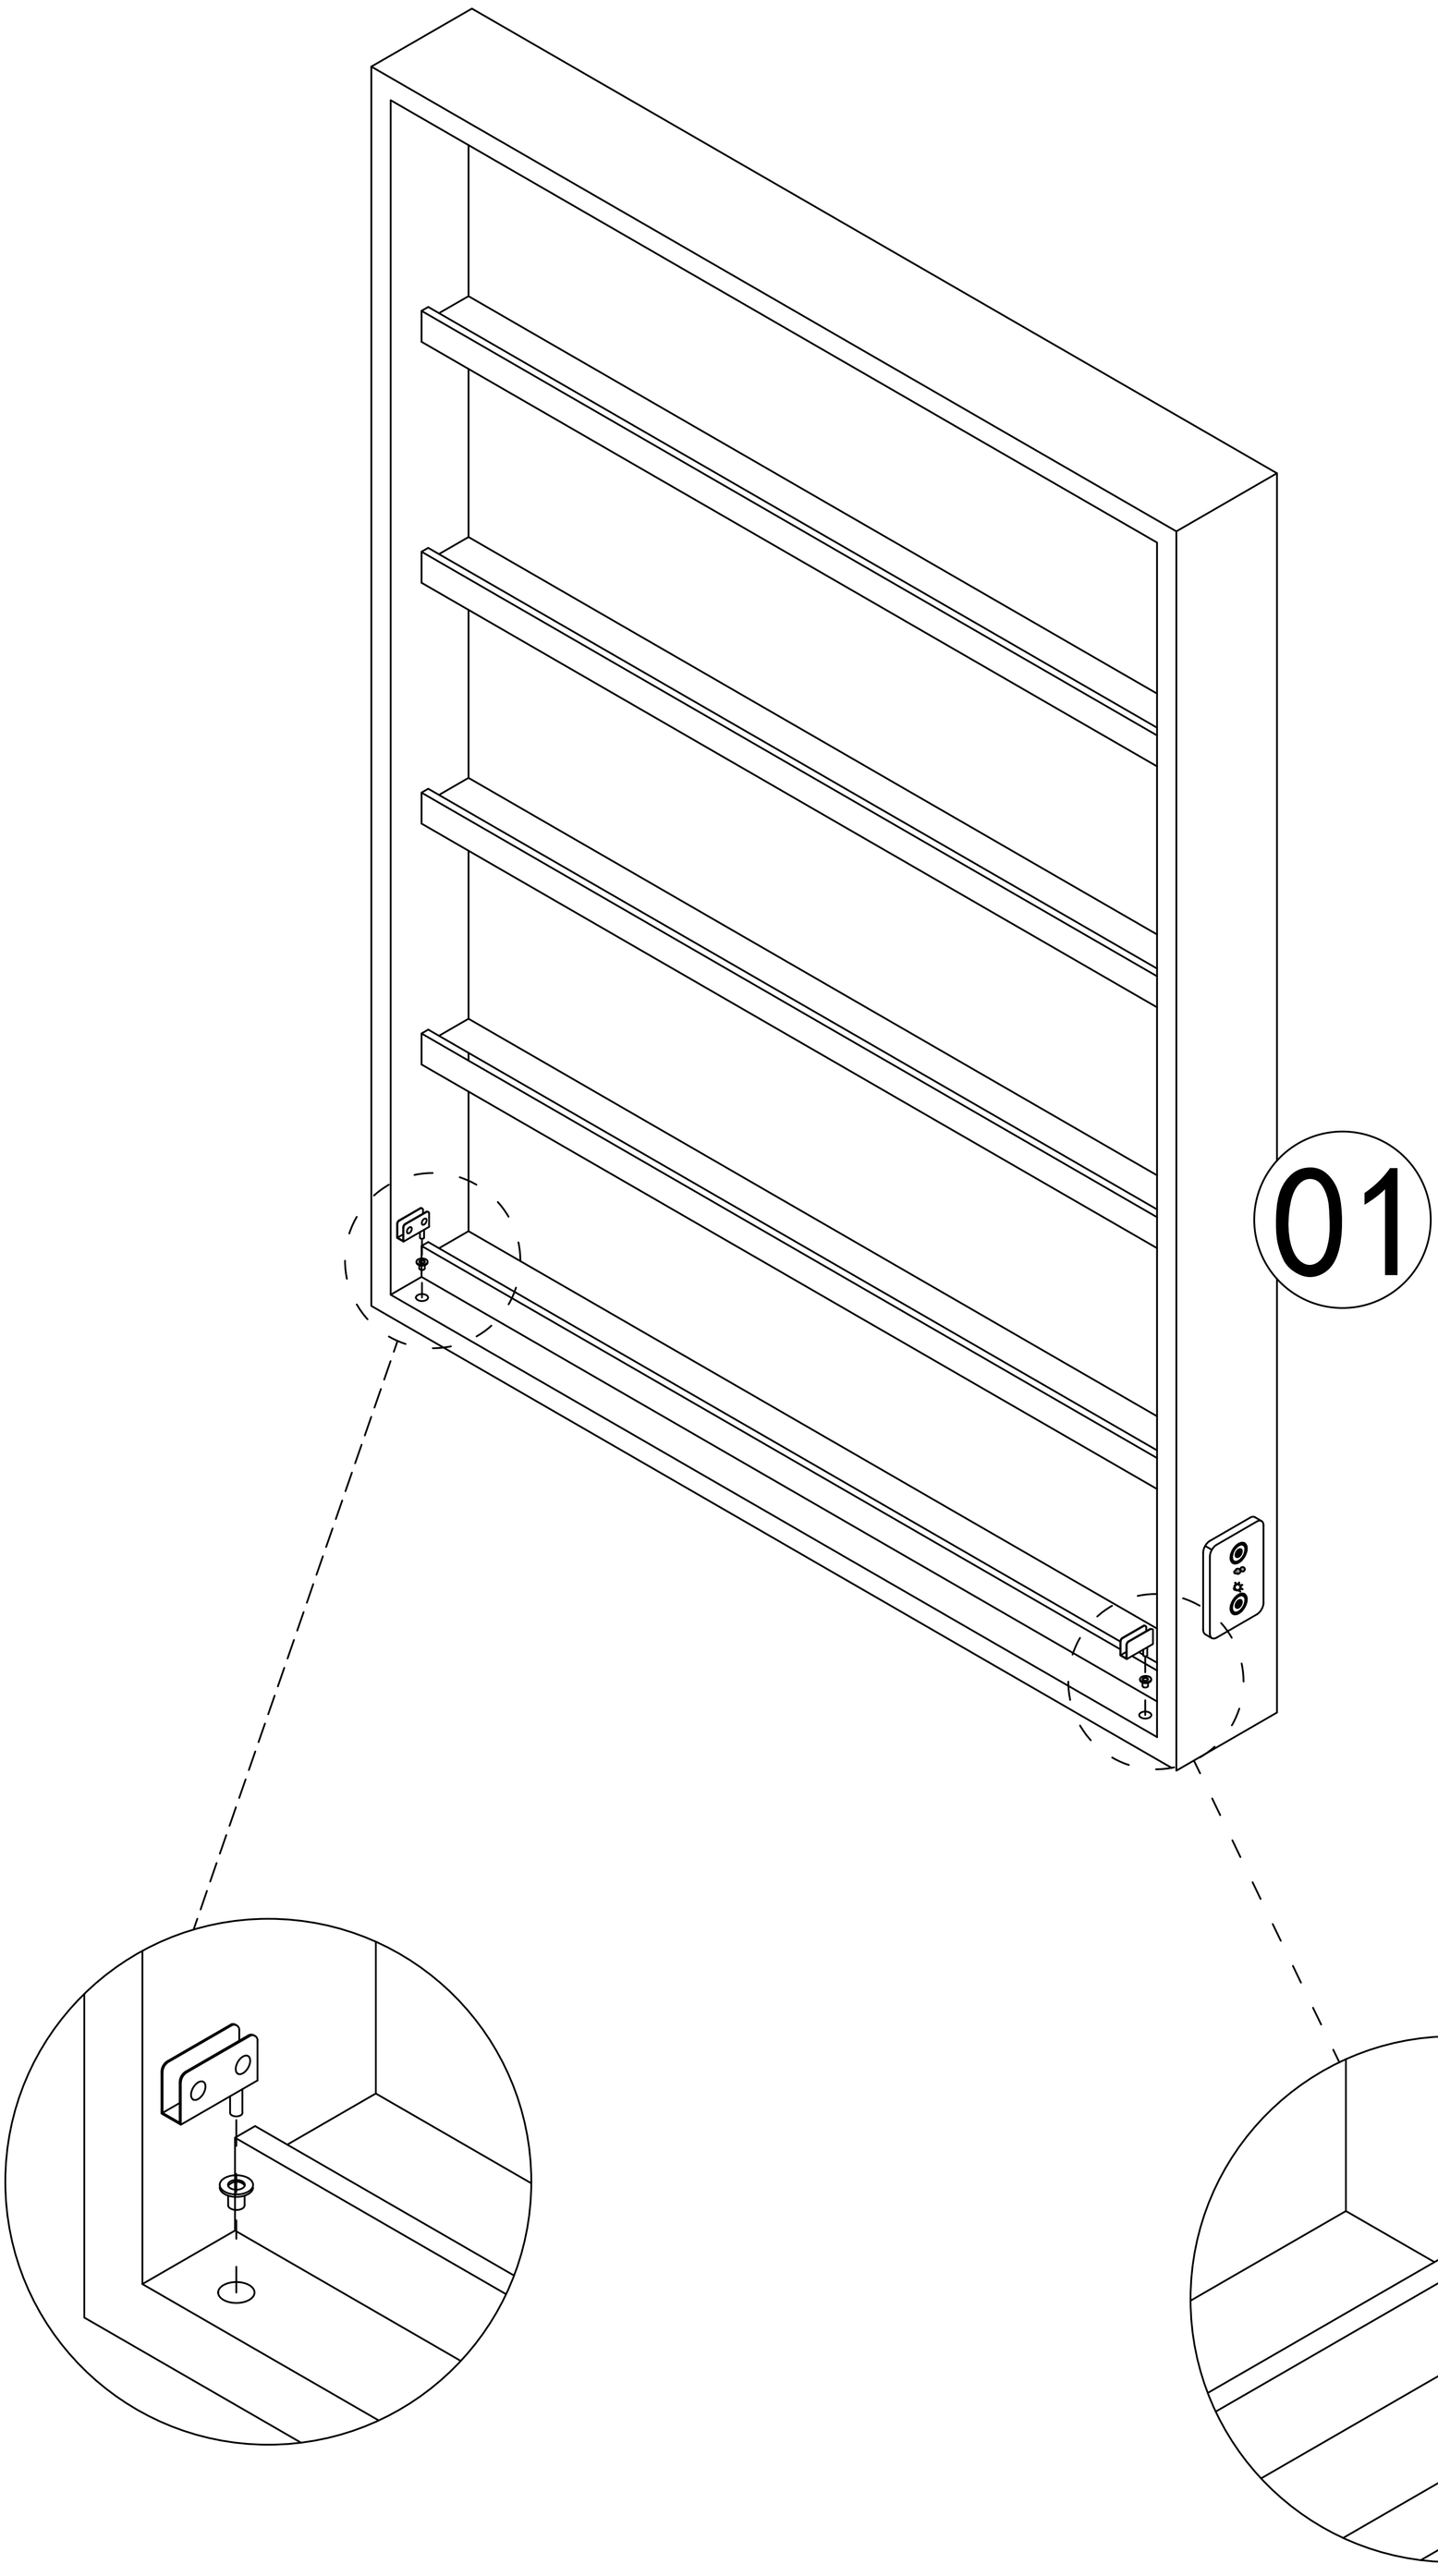

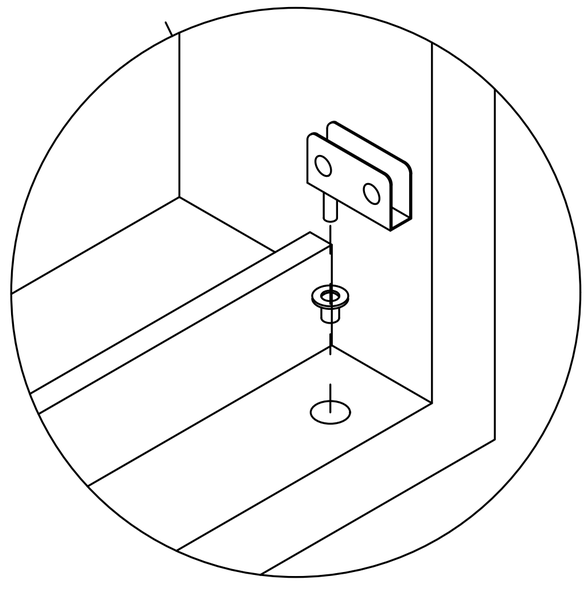


Step 6


D

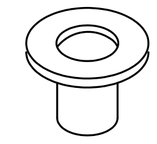


x2

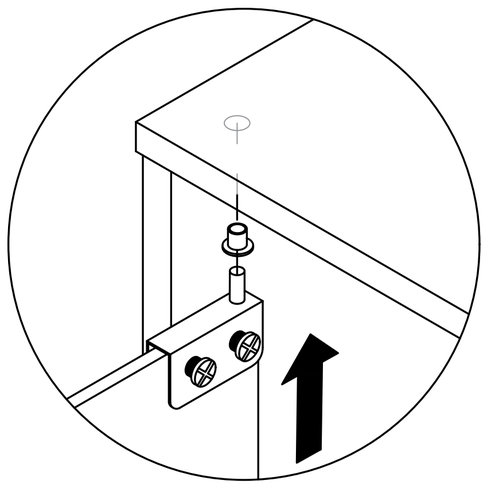


1.Insert the upper pivot pin into the mounting hole.

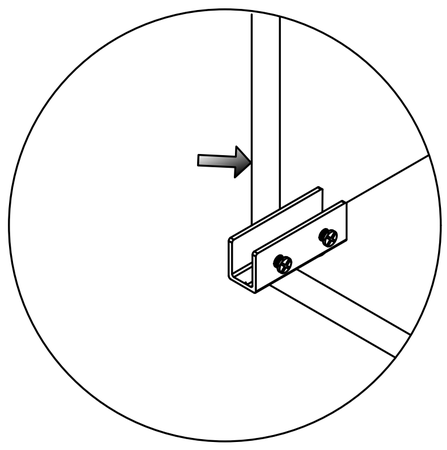



2.Slide the door into position.

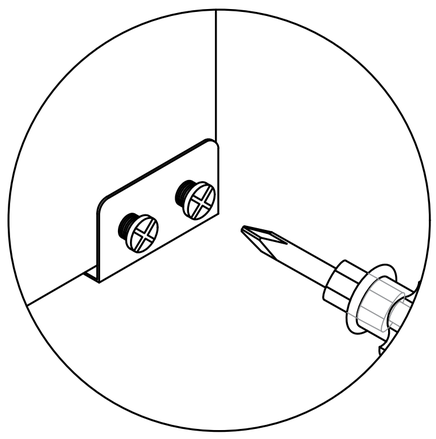



3.Tighten the locking screw securely.

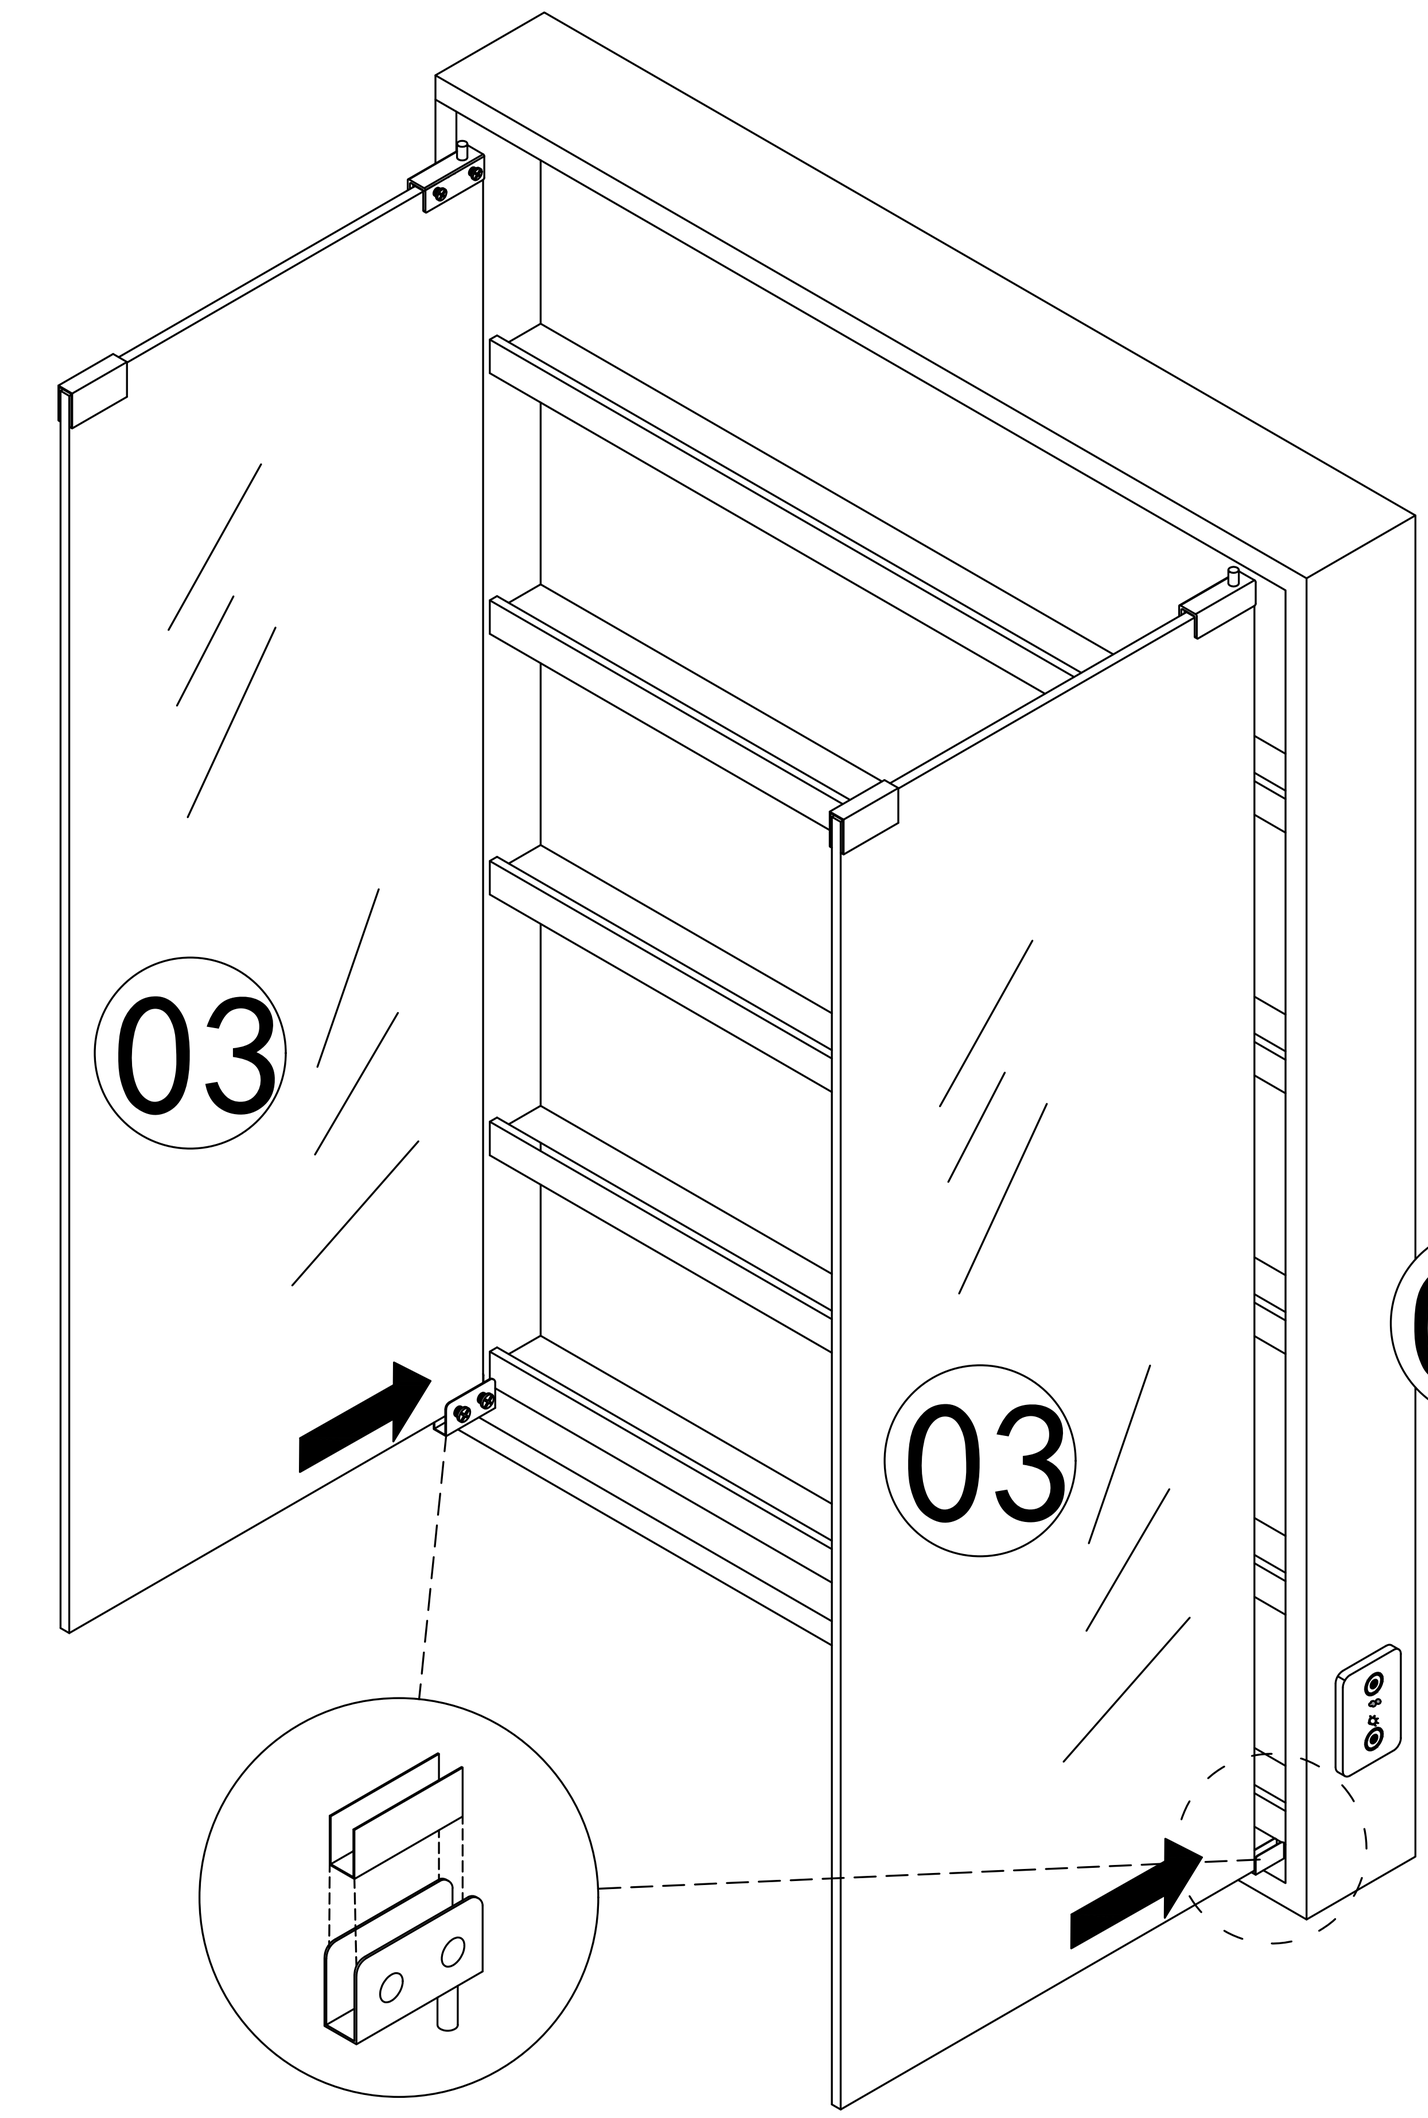


Step 7

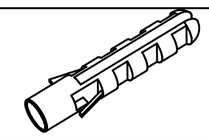B		x 3
A		x 3

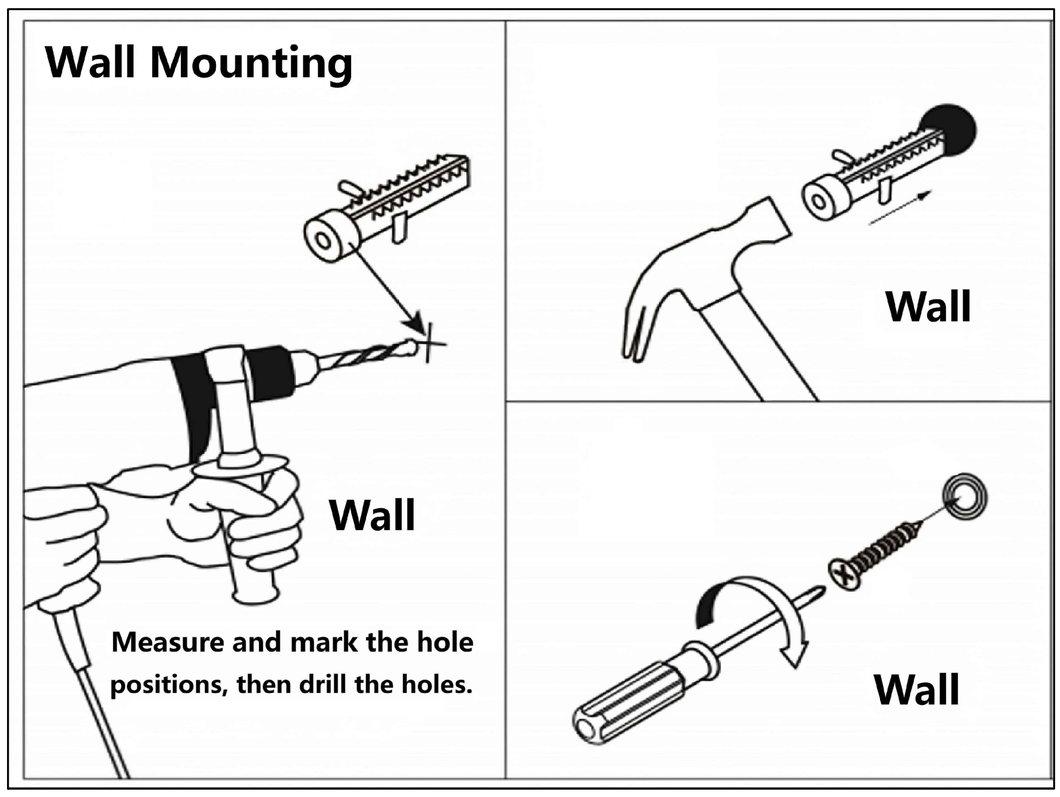

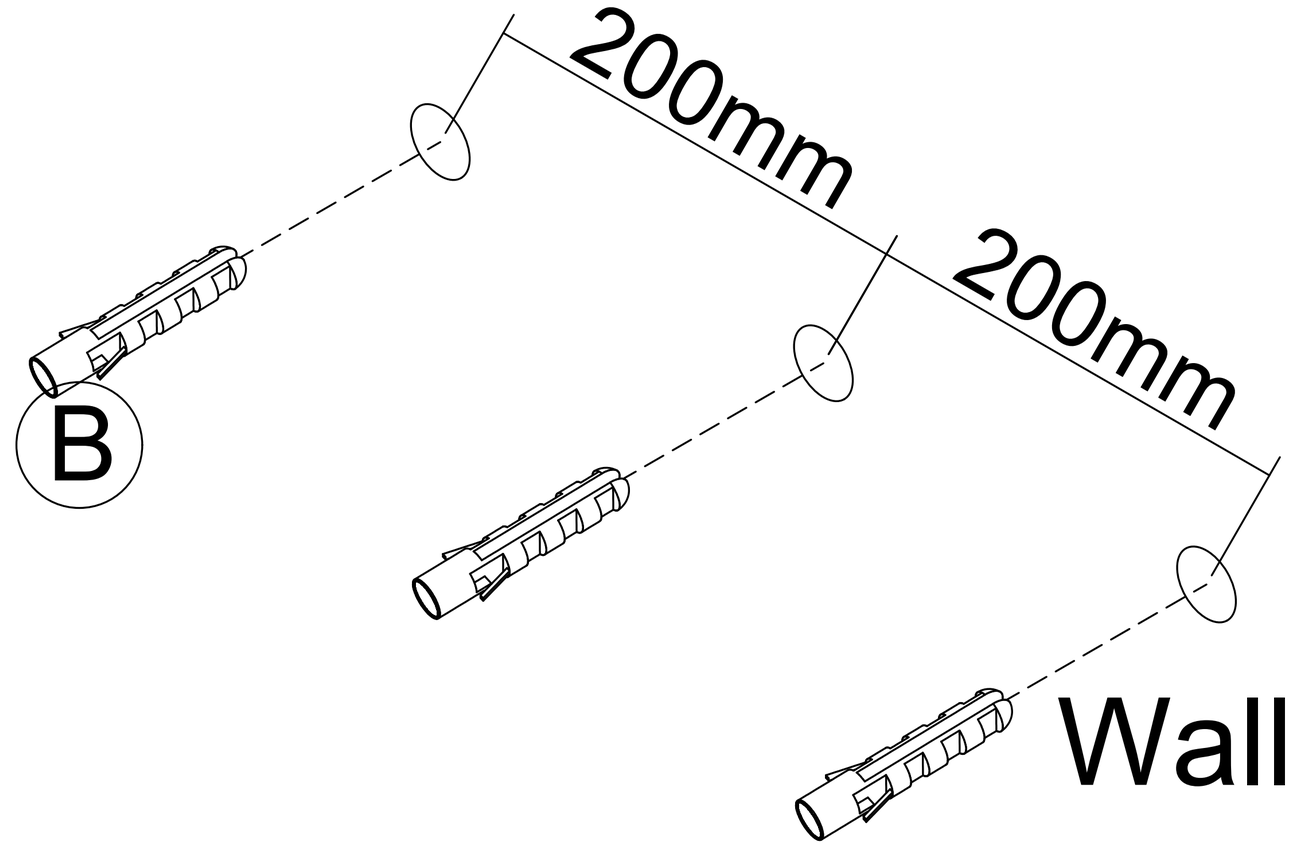


2. Secure the mounting rail to the wall.

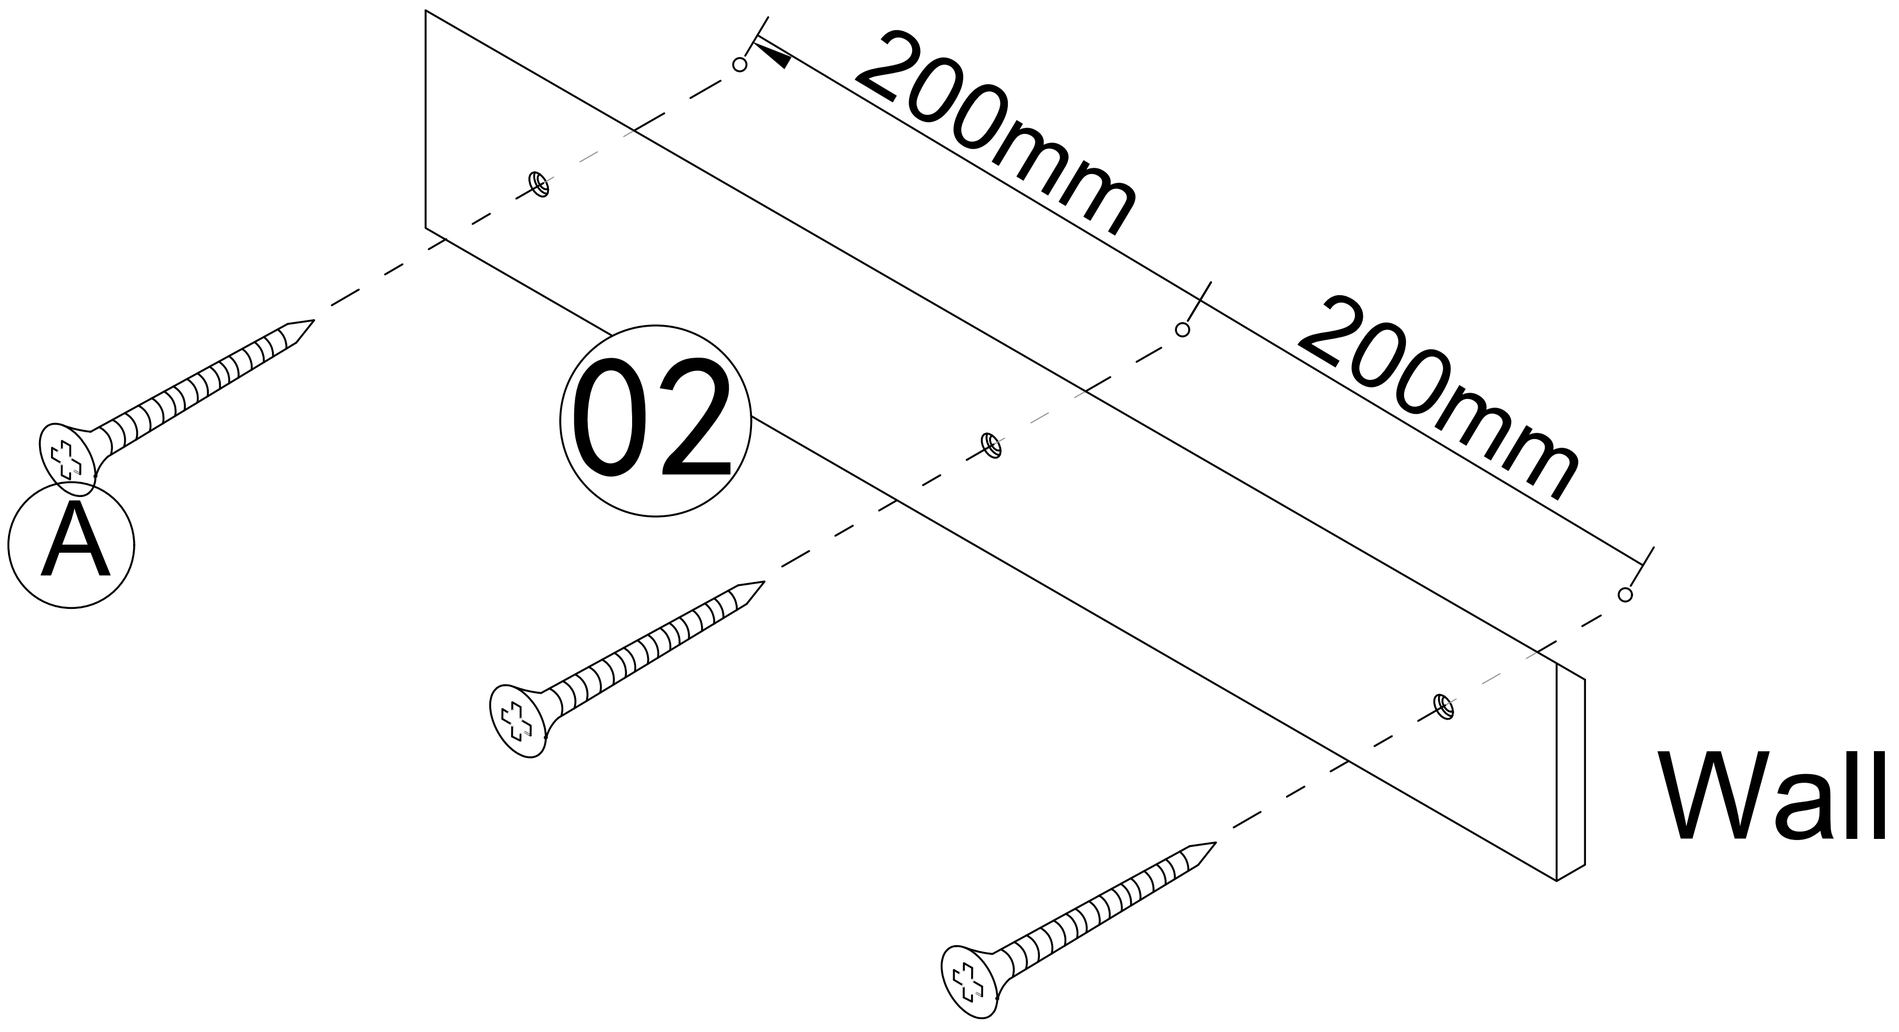


x 1

Step 8

Align the cabinet with the mounting rail and slide it into place.

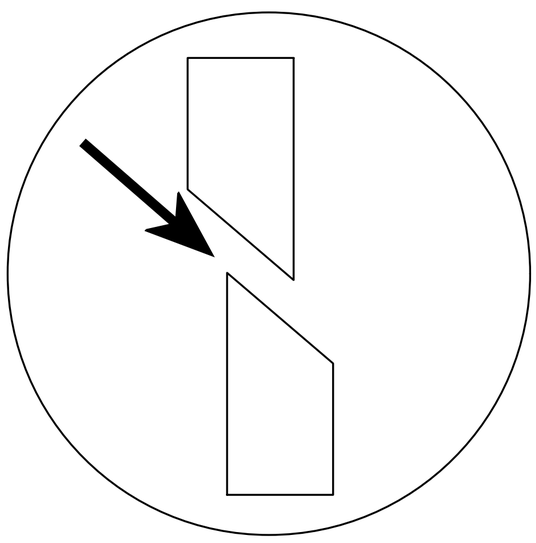

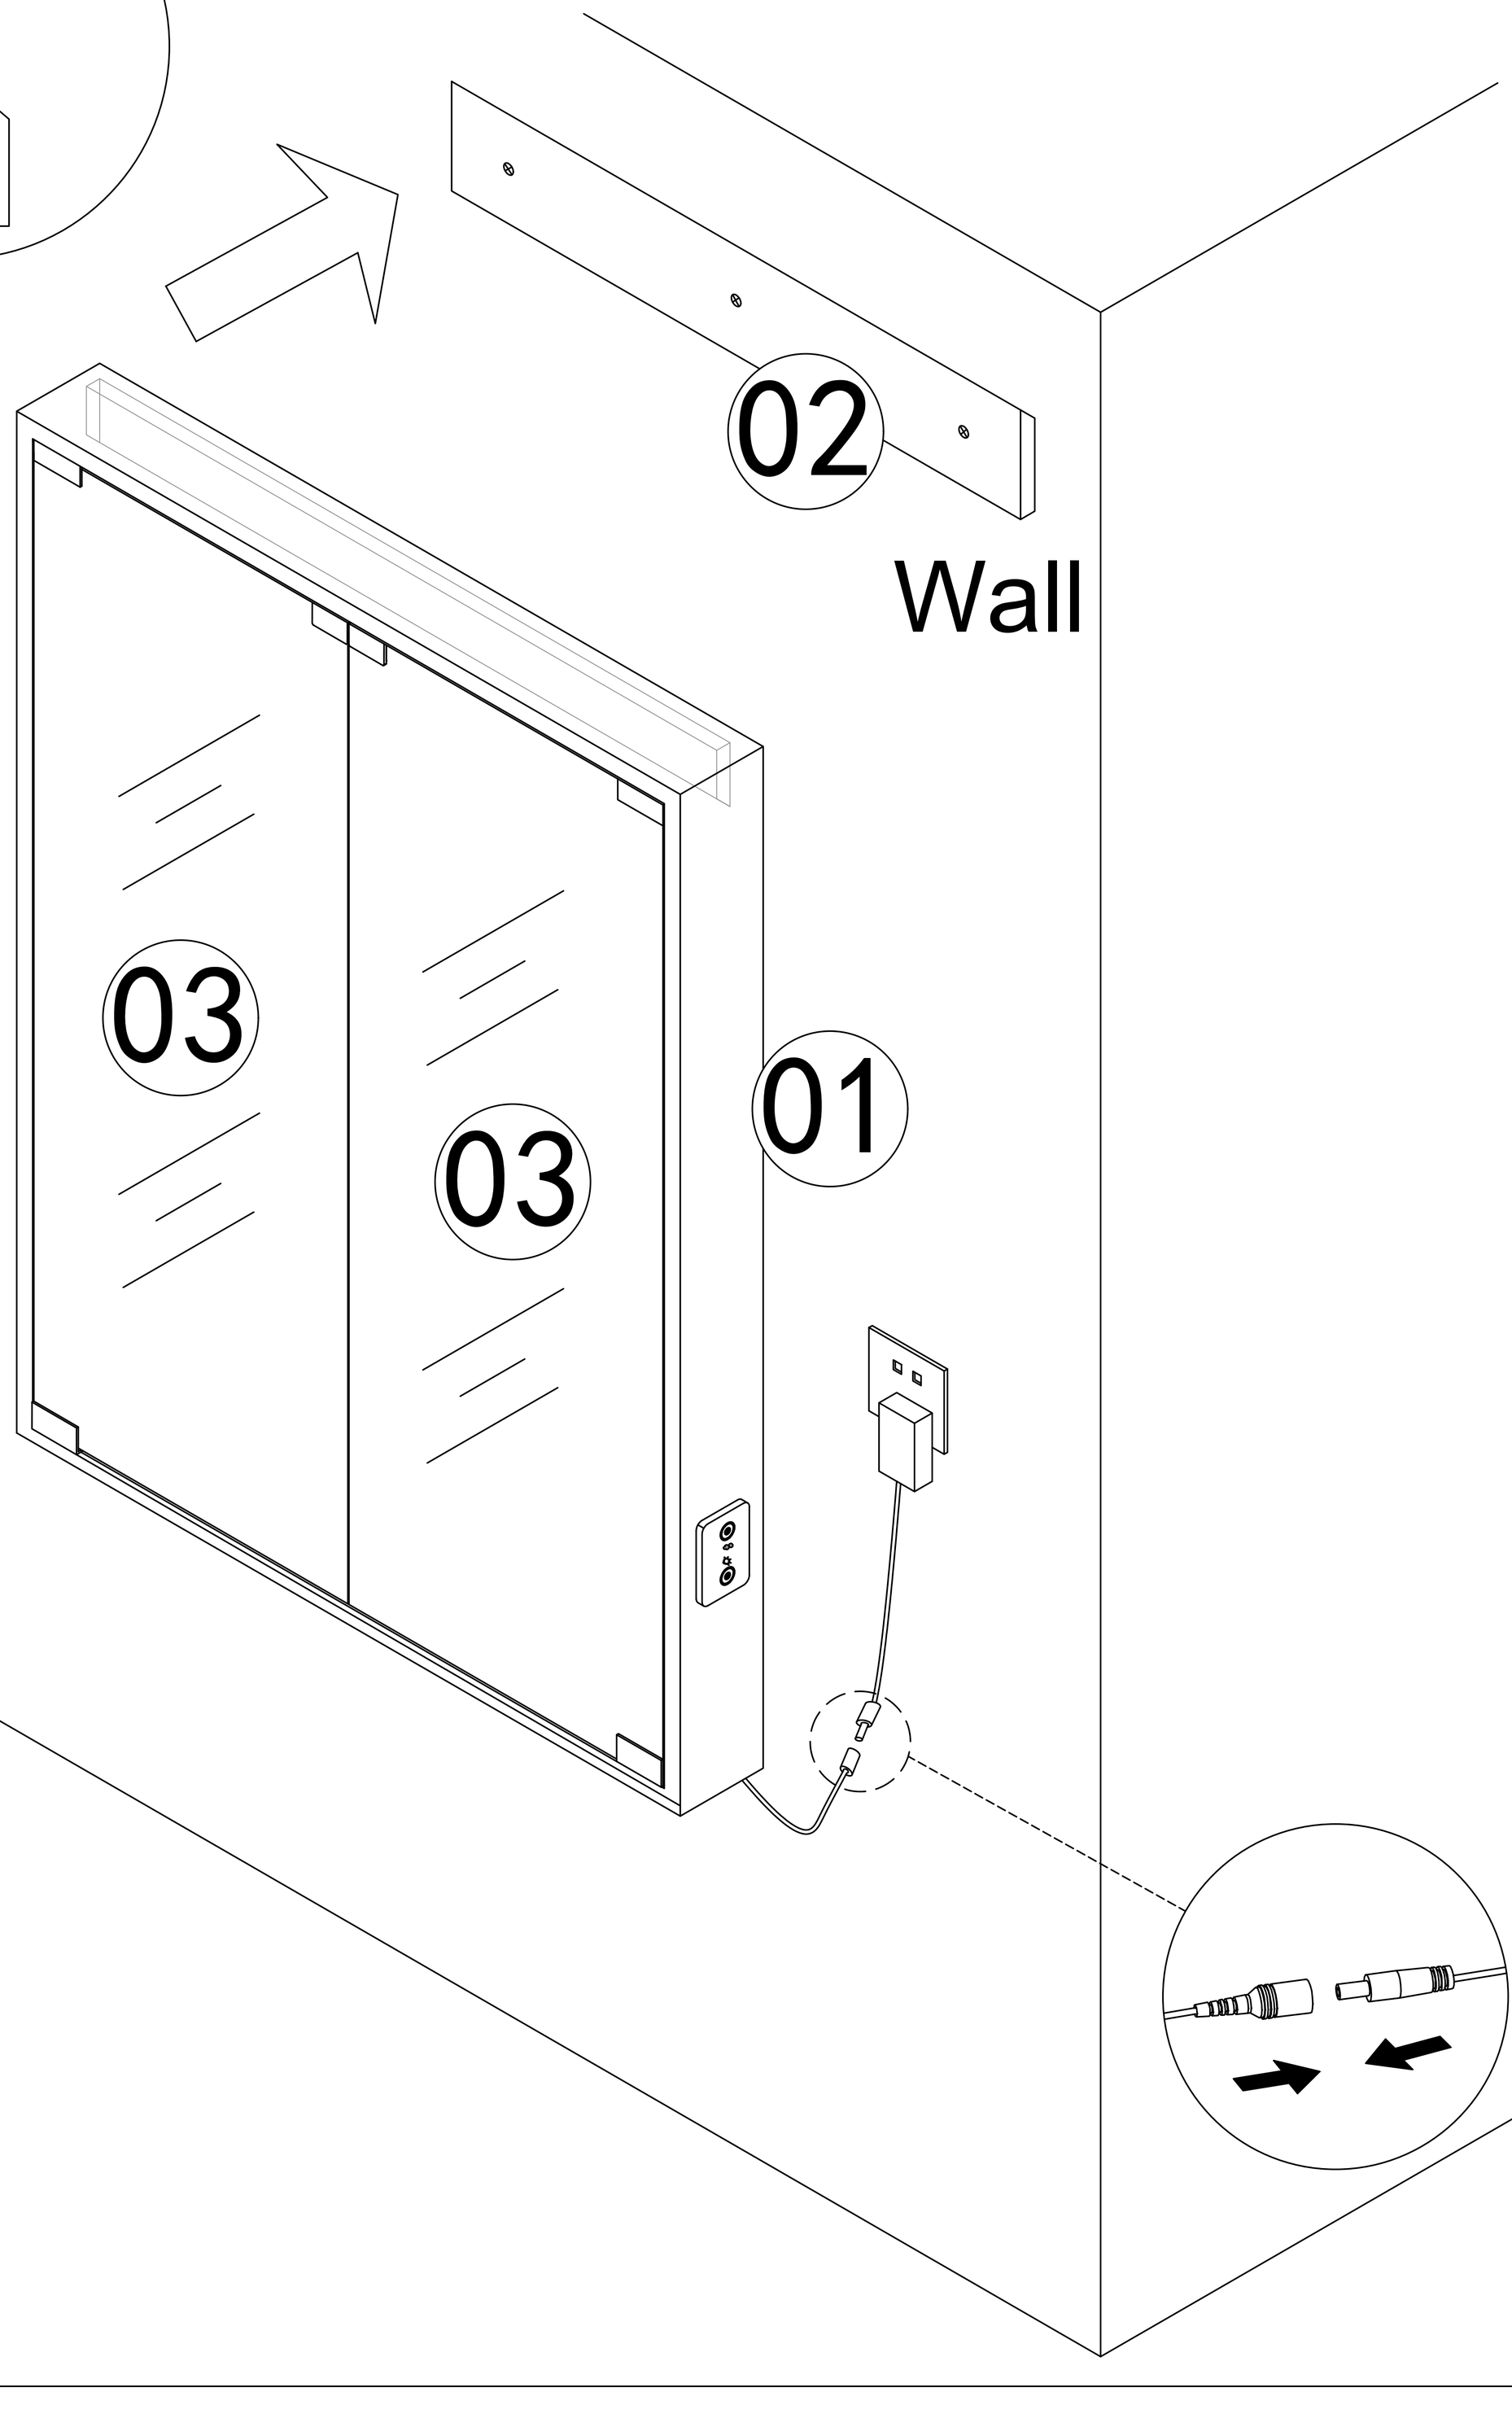


User Guide

Thank you for purchasing this product. Before use, connect the product to a 12V DC power supply and confirm that the l1ighting and touch controls operate normally.

Introduction

The controller features two touch-sensitive buttons for controlling the light and the motion-sensing function. Use the controller to turn the light on or off, change the light color, and adjust the brightness.

Product Overview

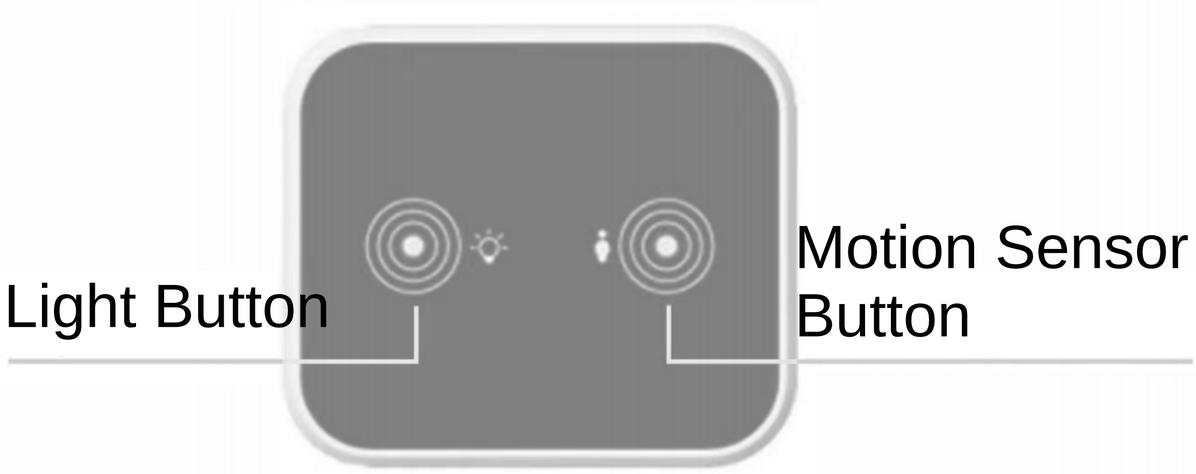

IMPORTANT

1. If the touch controls stop responding, disconnect and reconnect the power to reset the controller.
2. If bubbles appear on the control panel, remove the protective film from the surface.

Operation

Light Button



Use this button to turn the light on or off, change the light color, and adjust the brightness.

A. Short Press: Short-press the button to turn on the light. Continue short-pressing to cycle through the available light colors. After the last color setting, press the button again to turn off the light.

B. Press and Hold: Press and hold the button to adjust the brightness.



Motion Sensor Button

Use this button to turn the motion-sensing function on or off.

A. Short Press: Short-press the button to activate the motion-sensing function. The light will turn on automatically when a person comes within approximately 1 meter (3.3 ft) of the controller. The light will turn off automatically about 30 seconds after no person is detected nearby.

B. Press and Hold: Press and hold the button to turn off the motion-sensing function.

C. Note: Using the Light Button to change the lighting mode will automatically disable the motion-sensing function. Set your preferred light color and brightness first, then reactivate the motion-sensing function.