LCD Projector Manual (Android)

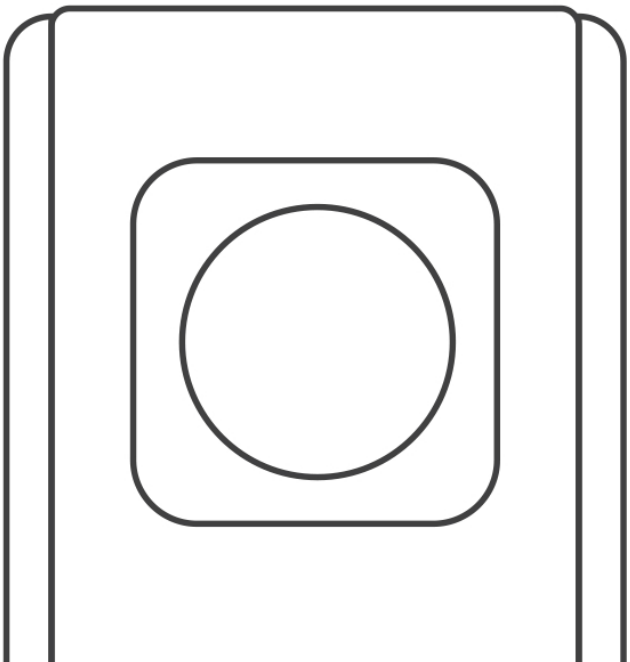

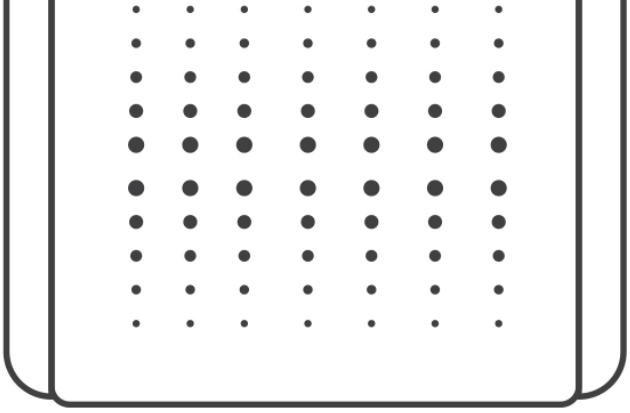

Contents

Chapter 1 Warm Reminder--01
Chapter 2 Projector Overview--02
Chapter 3 Remote control/Key Overview---03
Chapter 4 Equipment connection Settings---------------------------------------04
Chapter 5 Android Desk--05
Chapter 6 External channel(OSD)Setting---06
Chapter 7 Projection distance and Screen Size----------------------------------07

Chapter 1 Warm Reminder

DO not switch on or operate the unit before you have read the instruction manual.

Please pull out the power plug from the wall plug if the projector overheats and smoke appears

Do not look into the lens directly - this can cause eye damage

Do not let children get close to the projector as they may look into the lens directly

Do not turn on the projector before connecting with other components

Do not attempt to repair the projector as this action will void the warranty;

Do not use the projector in a wet environment, do not place liquids on or close to the projector

Do not block the air inlet and ensure the projector is placed in a well ventilated location

Accessories

Projector lpc
Remote Control lpc
19V DC Adaptor lpc
Instruction Manual------------- lpc

Chapter 2 Projector Overview

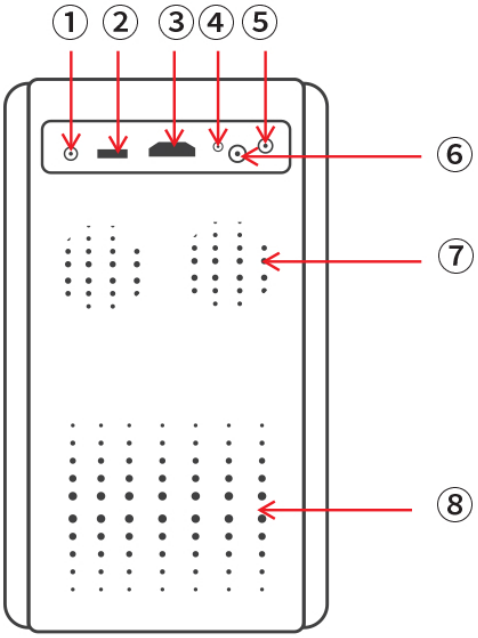

Projector Back view

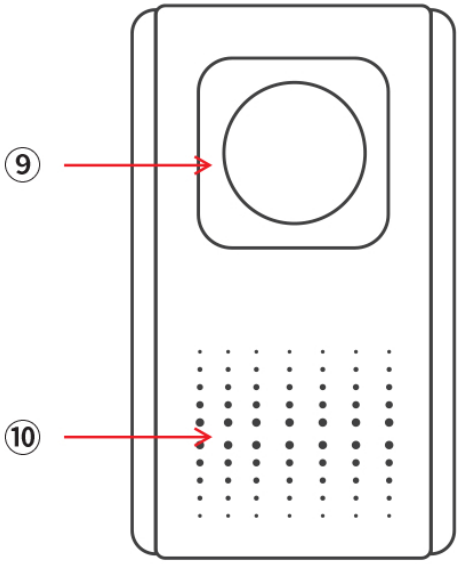

Projector Front View

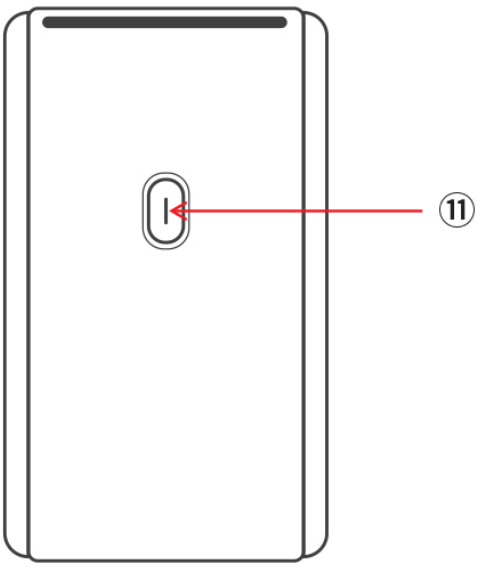

Projector Top View

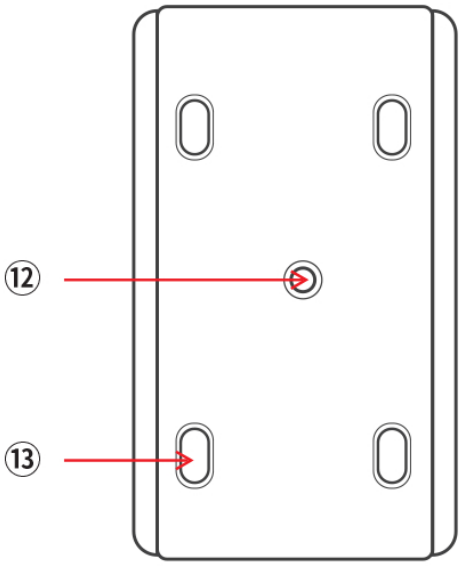

Projector Bottom View

① 19VDC in ② USB ③ HDMI ④ Indicator light ⑤ Audio/AV in
⑥ Infrared receiving Window ⑦ Dual Channel Speaker
⑧Wind-in ⑨ Lens ⑩ Wind-out ⑪Power ⑫Bracket Screw Hole
⑬Machine Corner Gasket*4

Attention :Please do not look into the lens directly to avoid harm your eyes.

Chapter 3、Remote Controller/Key Overview

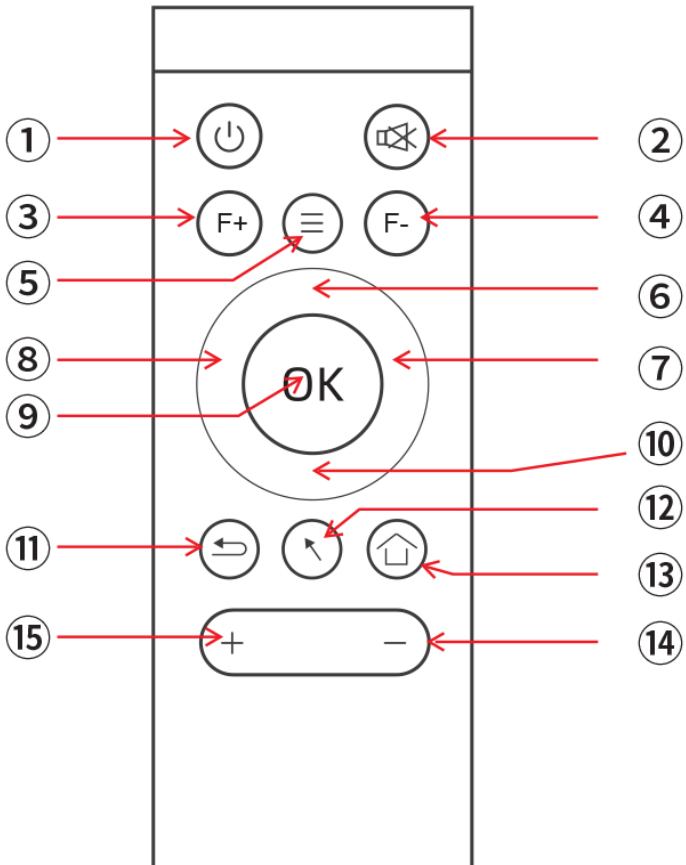

①Power On/Off
②Mute
③F-
④F+
⑤Menu
⑥Up
⑦Right
⑧Left
⑨OK
⑩Down
⑪Return
⑫Virtual MK
⑬Homepage
⑭V-

⑮V+

IR&BT Remote Controller

Bluetooth Remote controller connection：Settings---Bluetooth setting---connect HID Remote01-Connected

PS:Make sure the Bluetooth remote controller connected,then use the Virtual MK use the Netflilix,IMDB..APPS

Chapter 4、Equipment connection Settings

Warning: To be safe, cut power between projector and relative equipment before connect cable.

1、Turn on

①High-Version with battery in,just press the power key can turn on the projector.(The lower version do not have battery-in).

②If battery low, please use the matching 19V DC adapter connect the projector DC in port for battery charging. Battery-charging indicator light is red,full charged turn off.

③The indicator light is red when use the 19V DC adapter, After pressing the power bottom,the indicator light will turns to green light . The projector starts to work.

2,Image Focus/Keystone Correction

①Image Focus：When Projector Power-on,Press remote-controller F+、F- adjust the

Clear screen.

Lens Focus Key

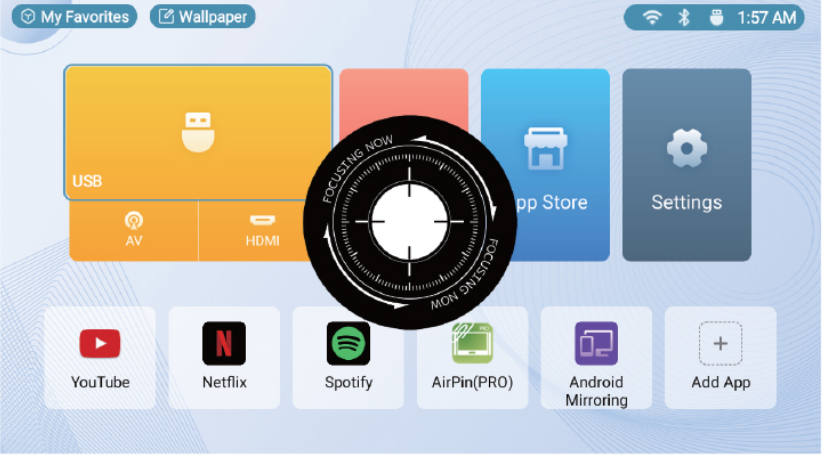

Image Focus process

②Keystone Correction: Up and Down Projection, It need the Keystone Correction to let the Screen Image Correct.

(1)Settings→Projection Settings→Keystone Correction: Manual/Auto

(2)Settings→Projection Settings→Vertical/Horizontal Correction: Up and down projection,use Vertical Correction,Left and Right projection,Use Horizontal Correction.

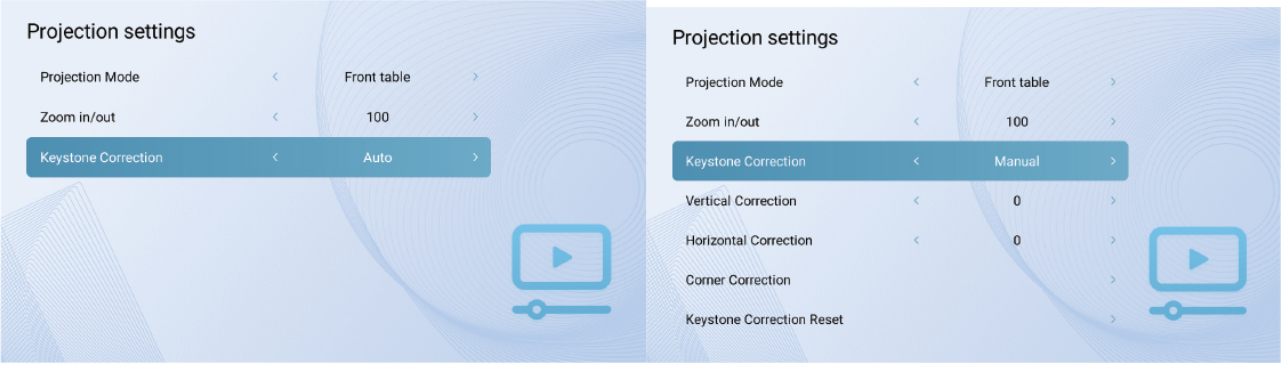

Projection settings
Projection Mode ‹ Front table ›
Zoom in/out ‹ 100 ›
Keystone Correction ‹ Auto ›

Projection settings
Projection Mode ‹ Front table ›
Zoom in/out ‹ 100 ›
Keystone Correction ‹ Manual ›
Vertical Correction ‹ 0 ›
Horizontal Correction ‹ 0 ›
Corner Correction ›
Keystone Correction Reset ›

(1) our Ponits keystone Correction: Enter"setting---projection set-choose the adjust keystone--4 points Keystone Correction"(Or Press Menu Key---choose the Correction---4 points Correction).

Four Points keystone Correction Instructions: Press OK Key turn to the 4 Corners.Then press the Up Down Left Right key adjust it. Press OK key turn to another corner and go on.



The aspect ratio is the best when the center circle is a perfect circle.

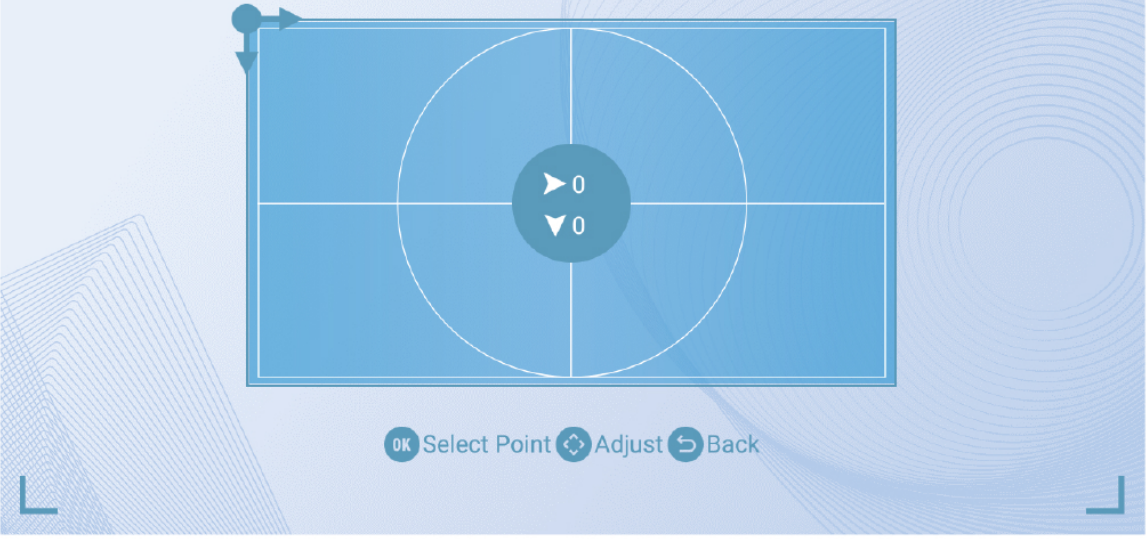

1、Select the Channel for the Projector

Projector should choose the correct channel when connected with different Device. Such as HDMI,AV. USB.

1、Choose SETTING and type HDMI,AV OR USB Which channel you need.

Or Press the remote control Channel key,Choose the HDMI,AV OR USD Channel

2、Press OK key confirm the Channel.

3、Press Return key Return to choose another channel.

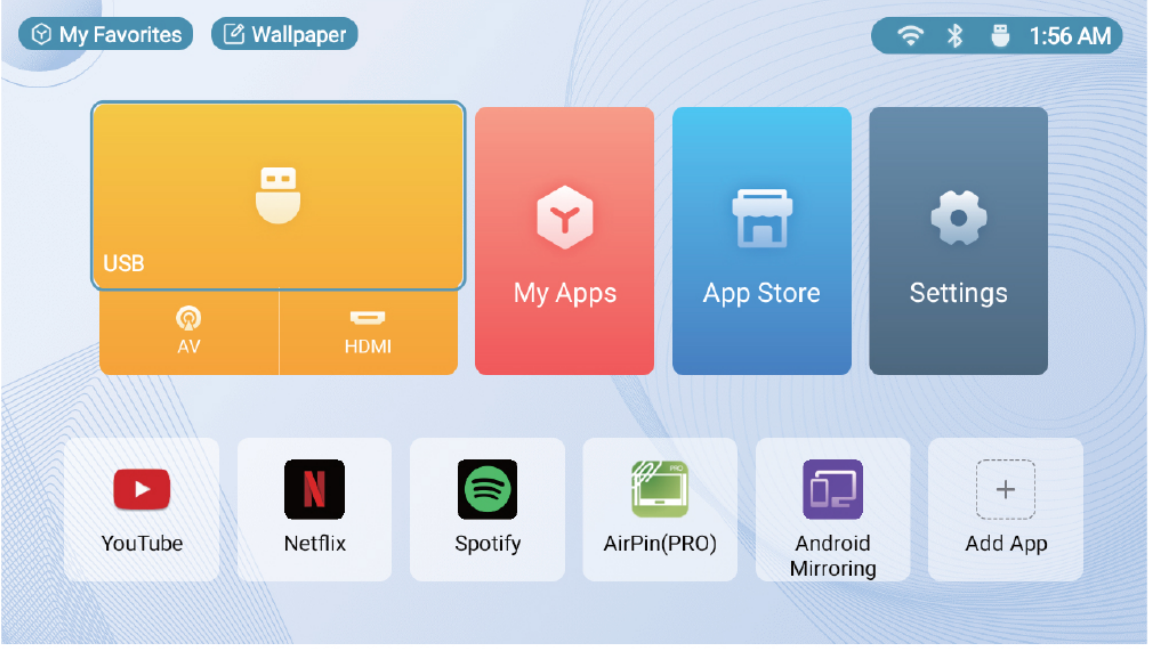

(1)Connect with HDMI device

Use HDMI cable to connect projector with HDMI device(such as computer,HD player, DVD and so on) .

(2)Connect the USB

Insert the USB into the projector,move icon on the main interface to corresponding options to open the video, audio, text, images and other documents.

(3)Connect the AV output devices

Prepare a 3in 1 3.5mm AV cable. The red, yellow and white end connected with the output end, while the 3.5mm end connect with the AV interface of the projector.

Then enter to the AV input channel with the projector signal selection key.

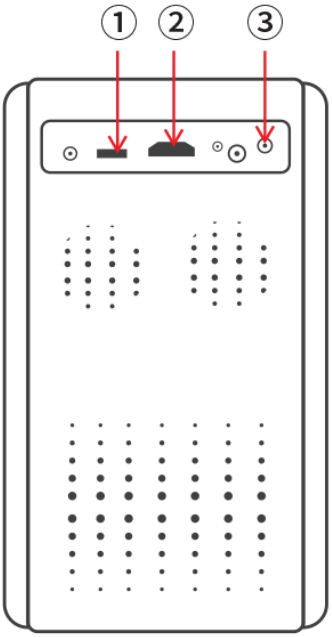

①Connect USB
②Connect HDMI
③Connect AV&audio

Chapter 5、Android Desk

1、Overview

Press the “Power on button,it will enter into main interface after the boot screen appeared for a few seconds.

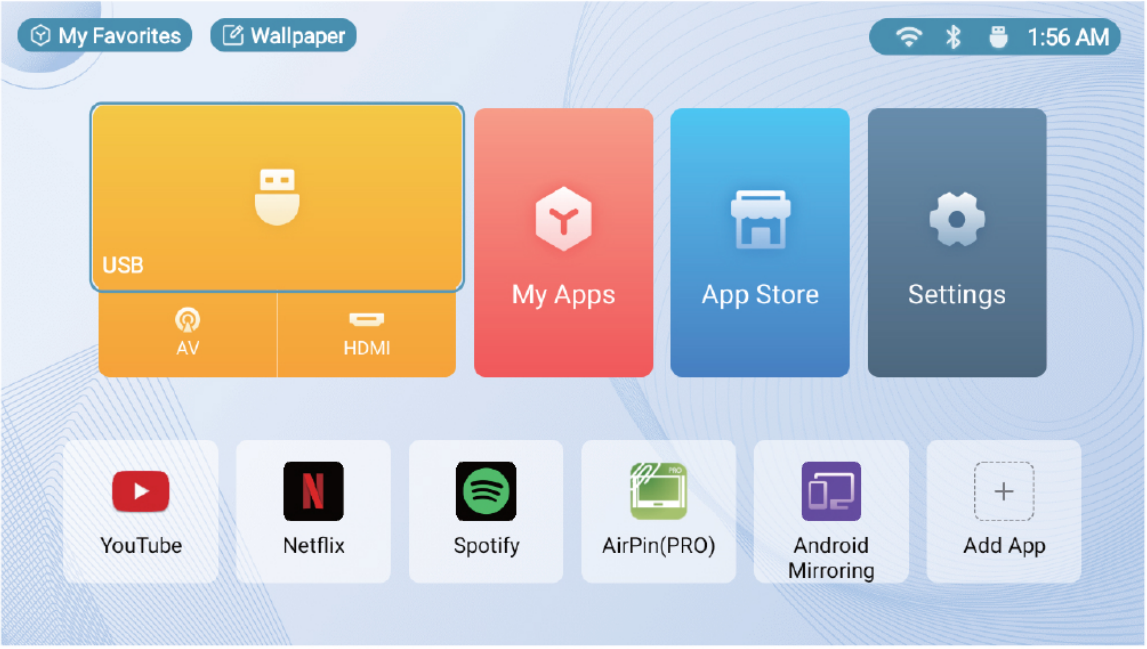

2、Mirroring Function

①Android Mirroring

Android
Mirroring

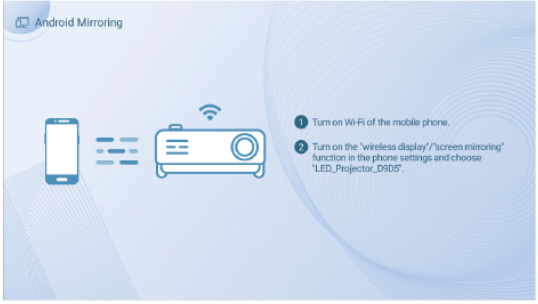
Android Mirroring

❶ Turn on Wi-Fi of the mobile phone.

❷ Turn on the "wireless display"/"screen mirroring" function in the phone settings and choose "LED_Projector_D9D5".


投屏

打开投屏

投屏示例

选择设备(1)

LED_Projector_2711

❶Android Mirroring

❷ Press Android Mirroring

❸Moblie Setting-Mirroing --Connected

②IOS AirPin

PRO
AirPin(PRO)

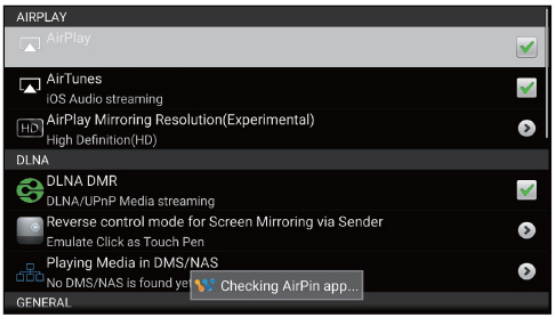
AIRPLAY

AirPlay ☑

AirTunes ☑
iOS Audio streaming

AirPlay Mirroring Resolution(Experimental)
High Definition(HD)

DLNA

DLNA DMR ☑
DLNA/UPnP Media streaming

Reverse control mode for Screen Mirroring via Sender
Emulate Click as Touch Pen

Playing Media in DMS/NAS
No DMS/NAS is found ye

Checking AirPin app...

GENERAL

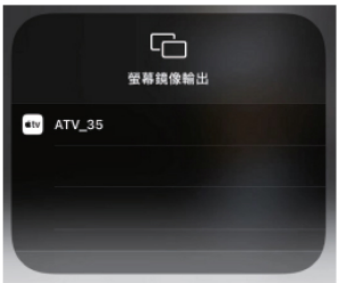
螢幕鏡像輸出

ATV_35

❶ AirPin(PRO)

❷Press AirPin(PRO)

❸Mobile Mirroing Open-Choose - Connected

3、Local Player

Connect the USB flash driver to the projector and open local player with the remote control, then select local disk, USB flash driver to open(videos, pictures, musics and all files), select the e you want to open, it will be lights around, then press OK to play, press the return key to exit.

Local Player support format as following :

Video	Mp4, AVI, mov, mkv, flv, mpg, ts, 3gp, VOB
Audio	AAC, amr, FLAC, m4a, mp2, mpga, ogg, Wav
Picture	JPEG, BMP, PNG, JPG

4、Android Setting

>>Setting

Press the left and right arrow keys of the remote control to move to the system Settings, press the up, down, left and night arrow keys to select the corresponding Settings, and press the OK key to enter the settings

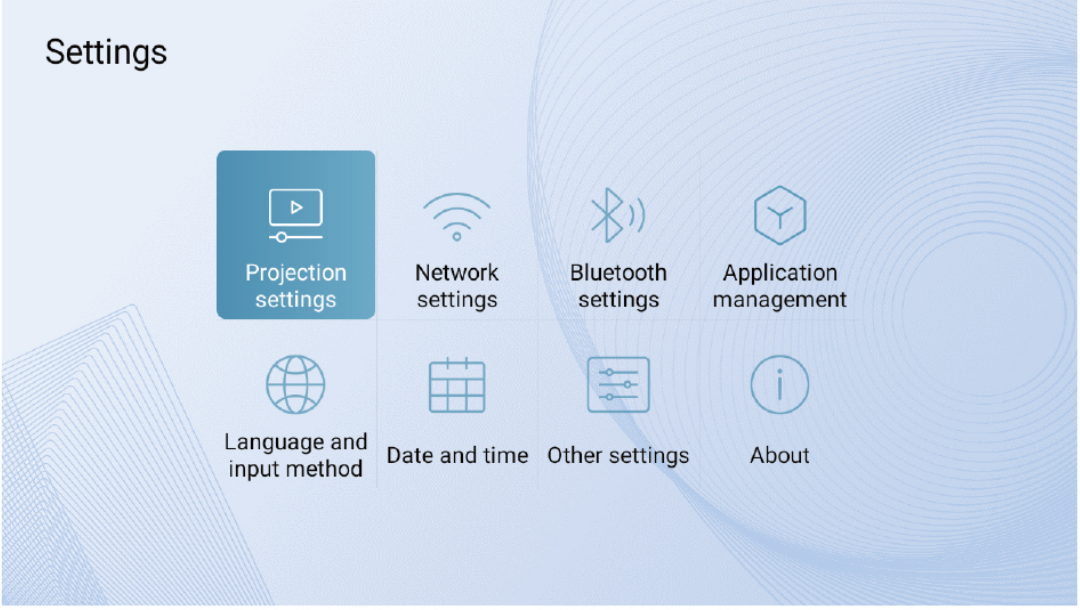

(1) Network Settings

At the main page, select settings-network settings -WIF settings, press OK enter WIFI settings

Select the WIFI you want to connect, press OK enter settings, the password entry box will pop up, enter password to connect, and press the return key can exit the WLAN interface.

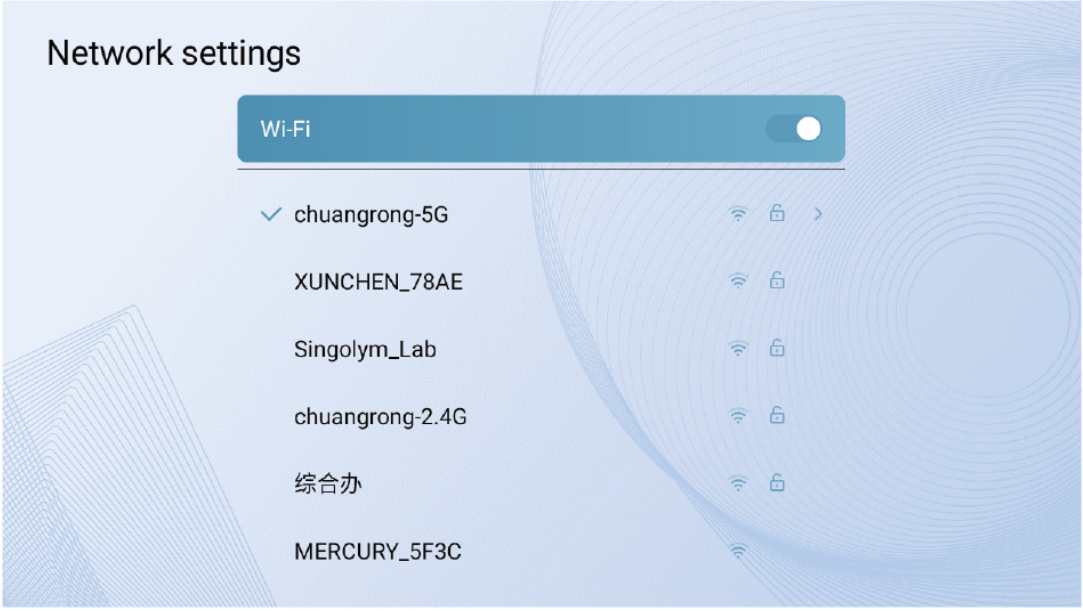

(2) Bluetooth settings

At the main page, select settings Bluetooth settings, press OK to turn on Bluetooth, choose the device to be paired, and then select the return key to exit.

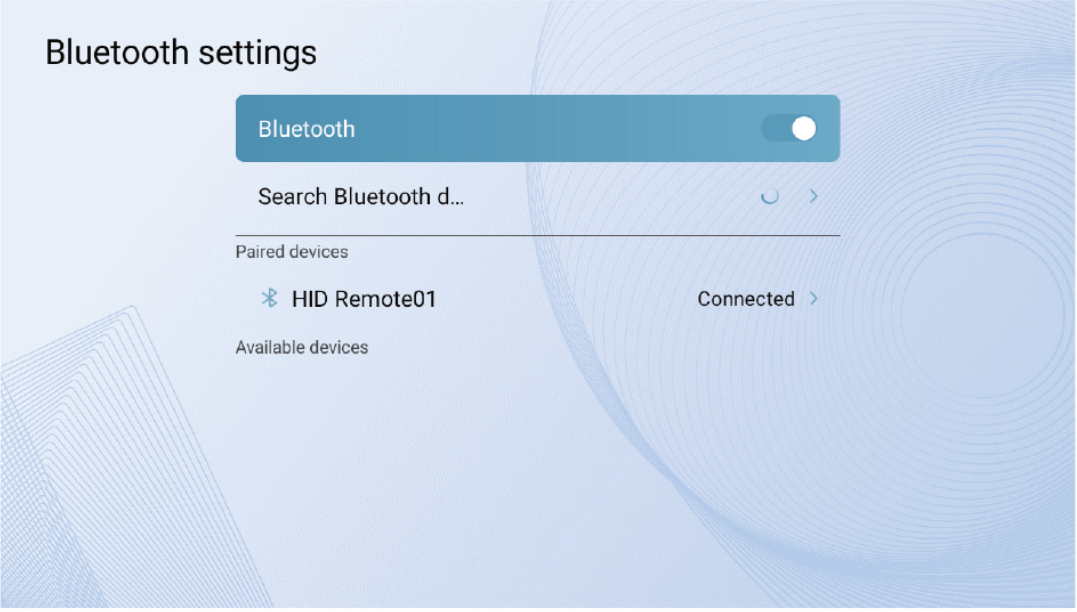

Bluetooth settings

Bluetooth

Search Bluetooth d...

Paired devices

HID Remote01 Connected

Available devices

(3) Projection Settings

①Settings→Projection Settings→Projection Mode:Front table、Rear、Upside down front、Upside down rear。

②Settings→Projection Settings→Zoom in/Out:100

③Settings→Projection Settings→Keystone Correction:Manual/Auto

④Settings→Projection Settings→Vertical/Horizontal Correction:Up and down projection,use Vertical Correction,Left and Right projection,Use Horizontal Correction.

⑤Settings→Projection Settings→Corner Correction:Adjust 4 Corners

⑥Settings→Projection Settings→Keystone Correction reset:Keystone Correction reset

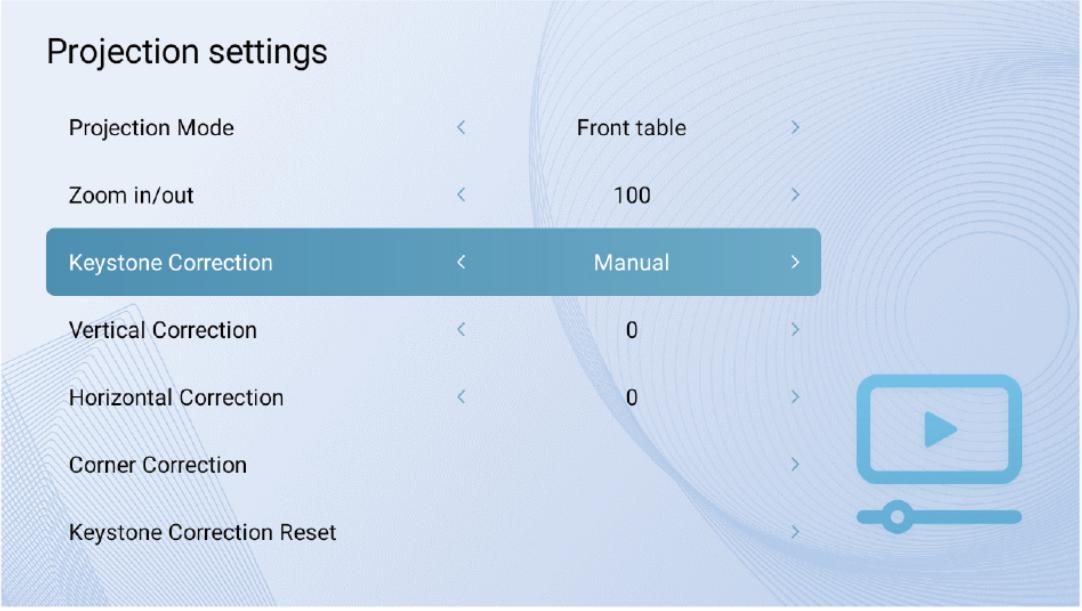

Projection settings

Projection Mode	Front table
Zoom in/out	100
Keystone Correction	Manual
Vertical Correction	0
Horizontal Correction	0
Corner Correction	
Keystone Correction Reset	

(4) Application Management

Settings→Application Management:Apps Clear/Cancel

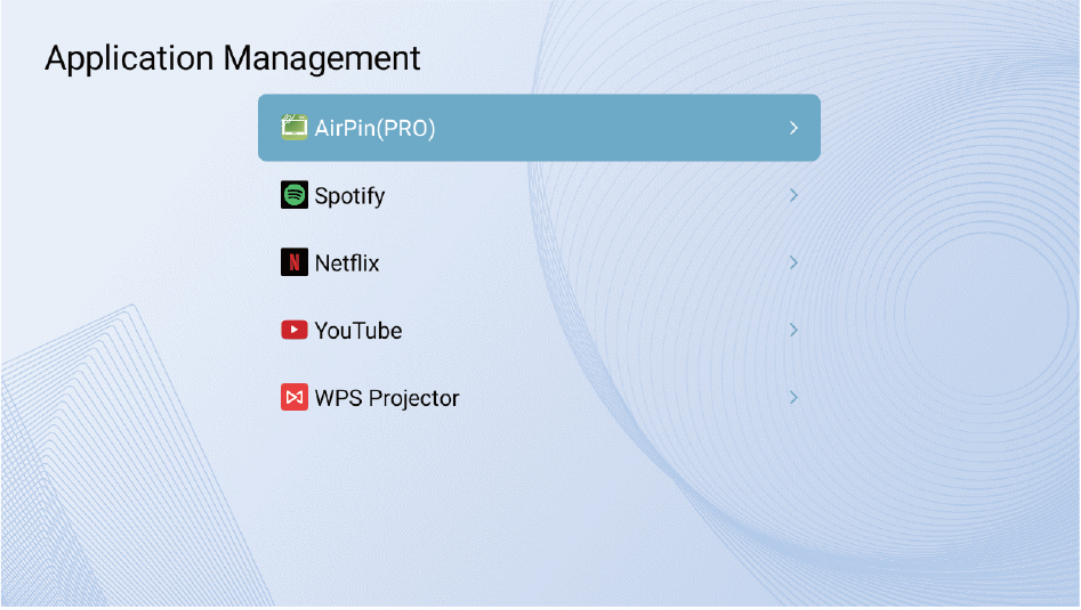

Application Management

AirPin(PRO)

Spotify

Netflix

YouTube

WPS Projector

(5)Language and input method

Settings→Language Settings:press ok enter language option to choose the language

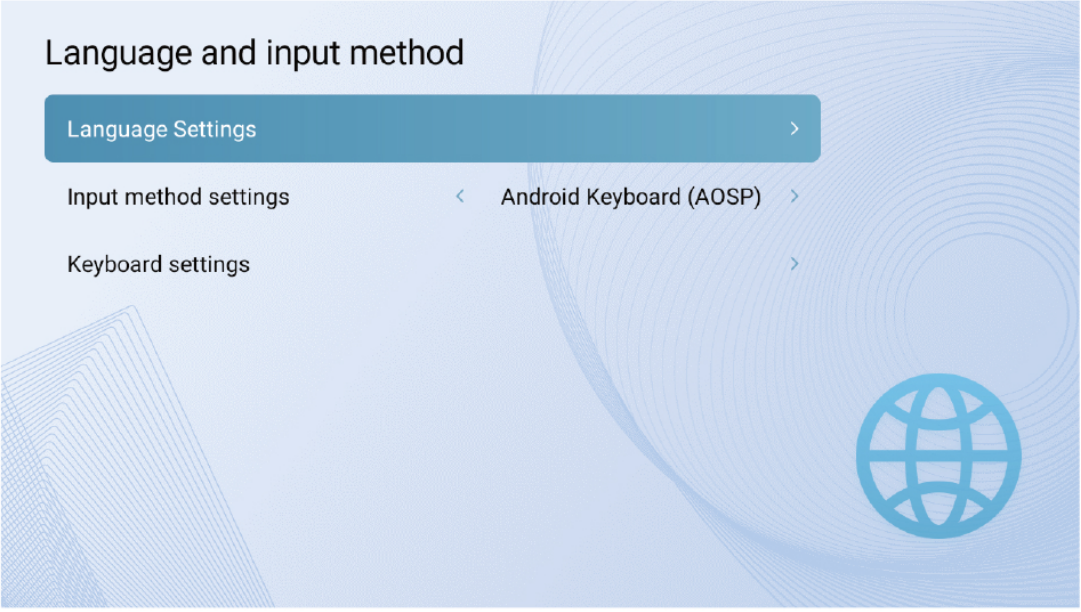

Language and input method

Language Settings

Input method settings ‹ Android Keyboard (AOSP) ›

Keyboard settings

(6) Date and Time

Setting→Date and Time：Auto internet date and time or set the data and Timezone,Use 24-hours format



Date and time

Auto obtain

Date 2022/03/22

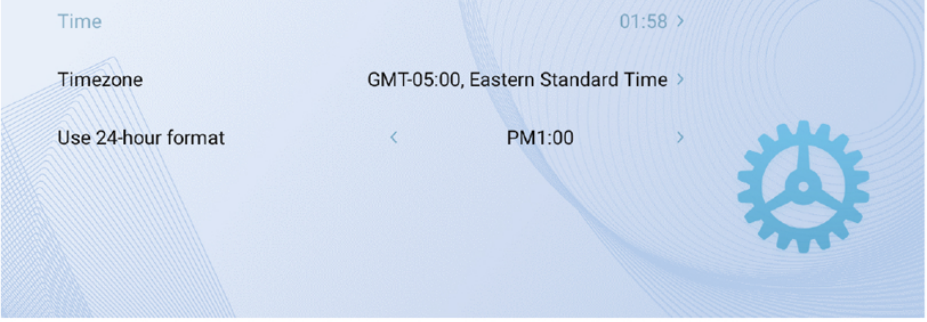

Time 01:58 ›

Timezone GMT-05:00, Eastern Standard Time ›

Use 24-hour format ‹ PM1:00 ›

(7) Other Setting

Setting →Other Setting

①Boot signal input: set the power-on source (off/USB/HDMI/AV)

②Boot APP: Set the Power-on using APP (off/APP)

③Power-on mode: Power-on standby/Power-on

④Key tone: On/Off

⑤Screen Saver: Off/5min/10min/20min/30min/45min/60min

⑥Shutdown: Off/15min/30min/45min/60min/75min/90min/120min

⑦Restore factory settings

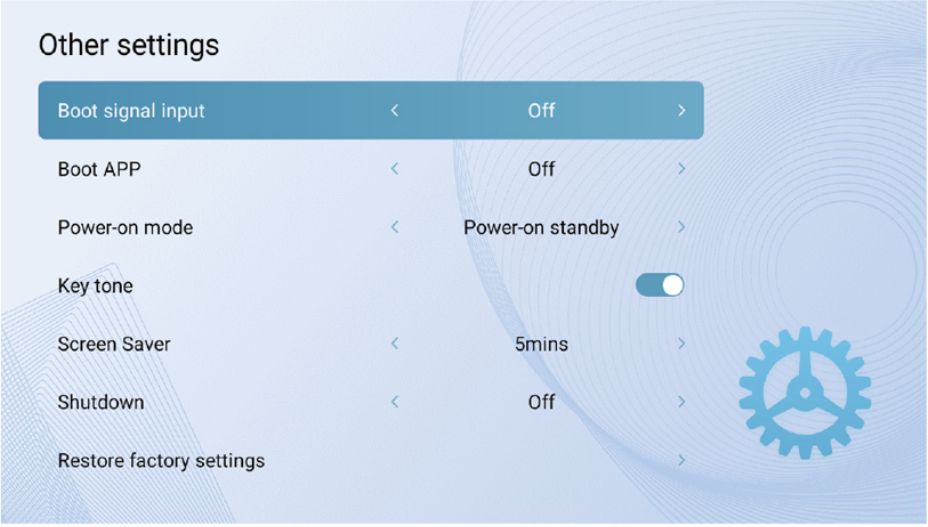

Other settings

Boot signal input ‹ Off ›

Boot APP ‹ Off ›

Power-on mode ‹ Power-on standby ›

Key tone ●

Screen Saver ‹ 5mins ›

Shutdown ‹ Off ›

Restore factory settings ›

(8) About

Settings→About: Model, System Version, Android Version, RAM, ROM, MAC Address, WiFi MAC Address

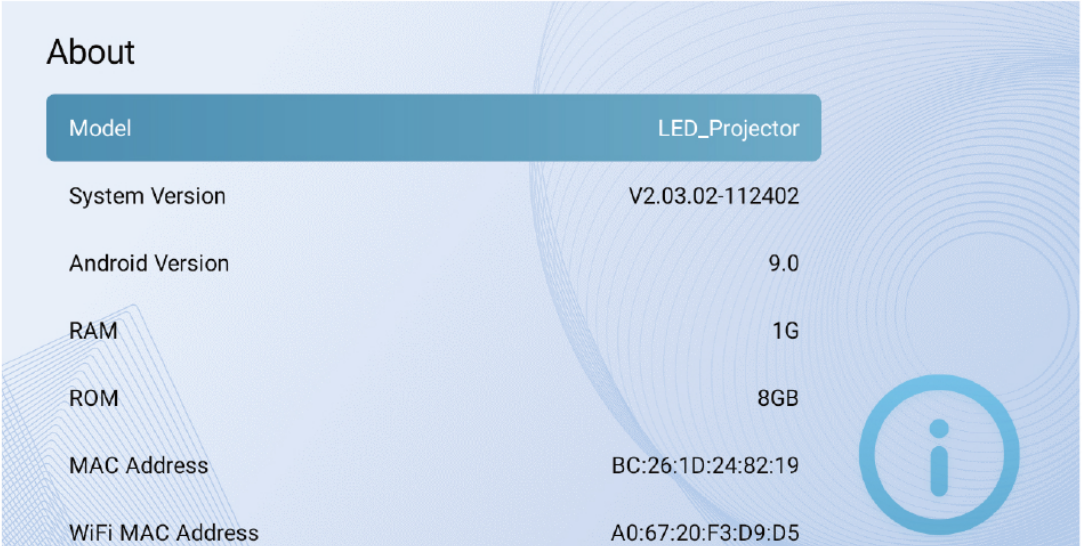

About

Model	LED_Projector
System Version	V2.03.02-112402
Android Version	9.0
RAM	1G
ROM	8GB
MAC Address	BC:26:1D:24:82:19
WiFi MAC Address	A0:67:20:F3:D9:D5

Chapter 6、External channel (OSD)Setting.

After the projector is connected to an external device such as HDM,I the menu function can be called by using the menu key to adjust the sound and image.

If you want to adjust the Setting meni,please perform the following steps:

1 ,Press menu key to en OSD menu and then press the direction ke ◀ yor ▶ choose the menu need to setting.

2,Press direction key ▲ or ▼ , choose the item need to adjust and then press OK to enter.

3,Press direction key ◀ or ▶ set parameters 4. Press return key to save setting.

4,Press return key to save setting

Home	Description
Image Mode	Standard,Brightness,Soft,User
Color Temp	Cool,Warm,Standard,User
Sound mode	Standard、Music、Movie、User
Surround	On/Off
Shutdown	Off、10min、20min、30min、60min
Keystone	Keystone Correction

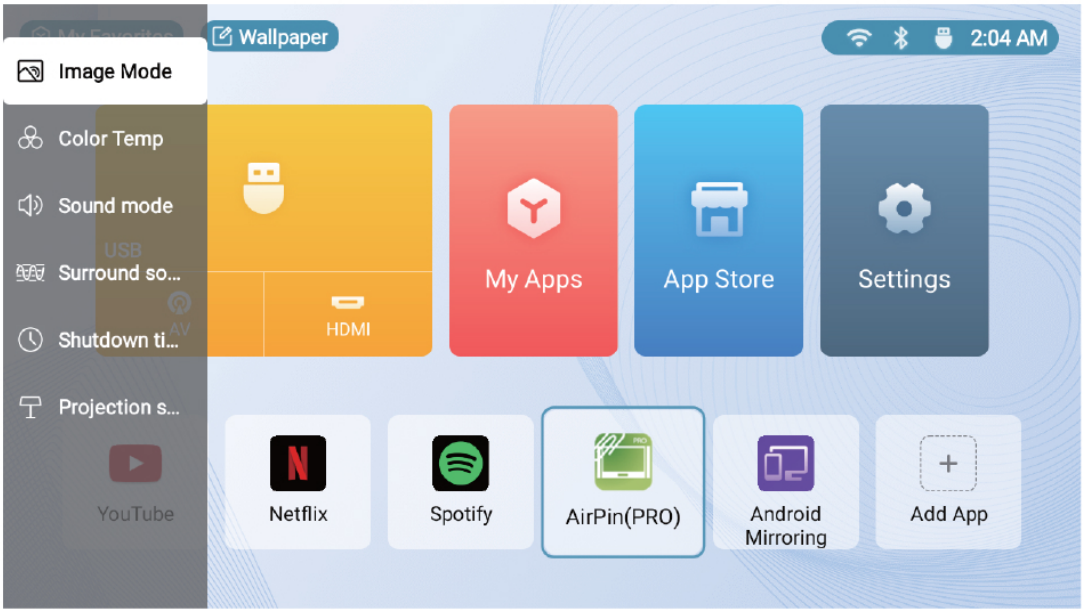

Chapter 7、Projection distance and Screen Size

Sreen size (inch)	Screen length (CM)	Screen width (CM)	Lens-Screen distance (CM)
40	89	50	110
50	111	62	138
60	133	75	165
70	155	87	192
80	177	100	219
90	199	112	247
100	221	125	274
110	244	137	303
120	266	149	330

Disclaimer:

Our company reserve the right to make changes to the contents of this instruction manual

without any advance notice.

Continuous upgrading of the software may bring some differences to the OSD operation