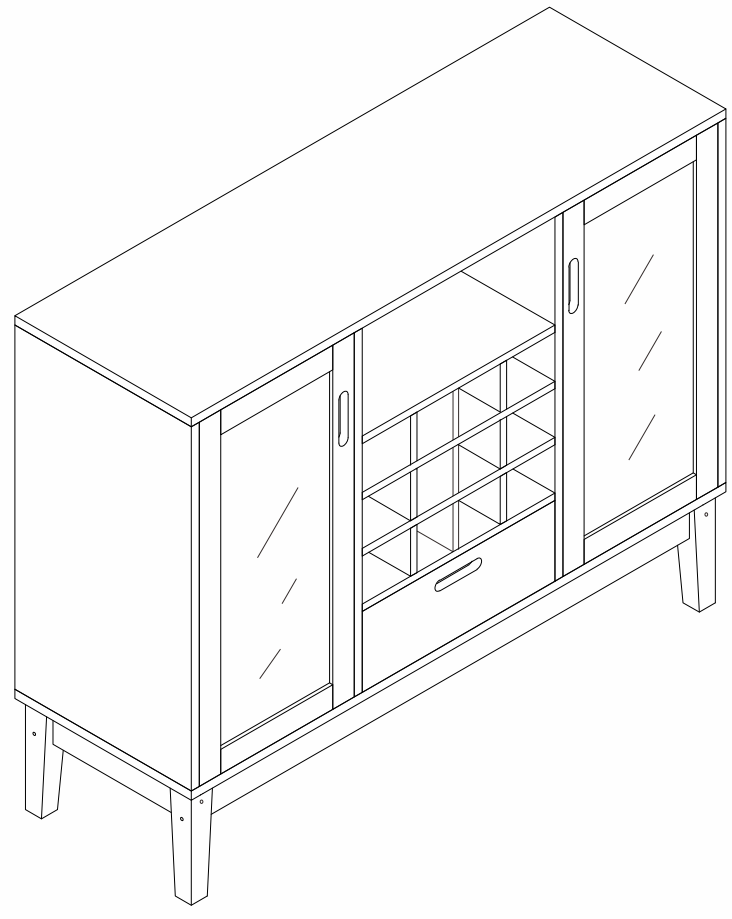

USER'S MANUAL

Wine Cabinet

PRODUCT ASSEMBLY

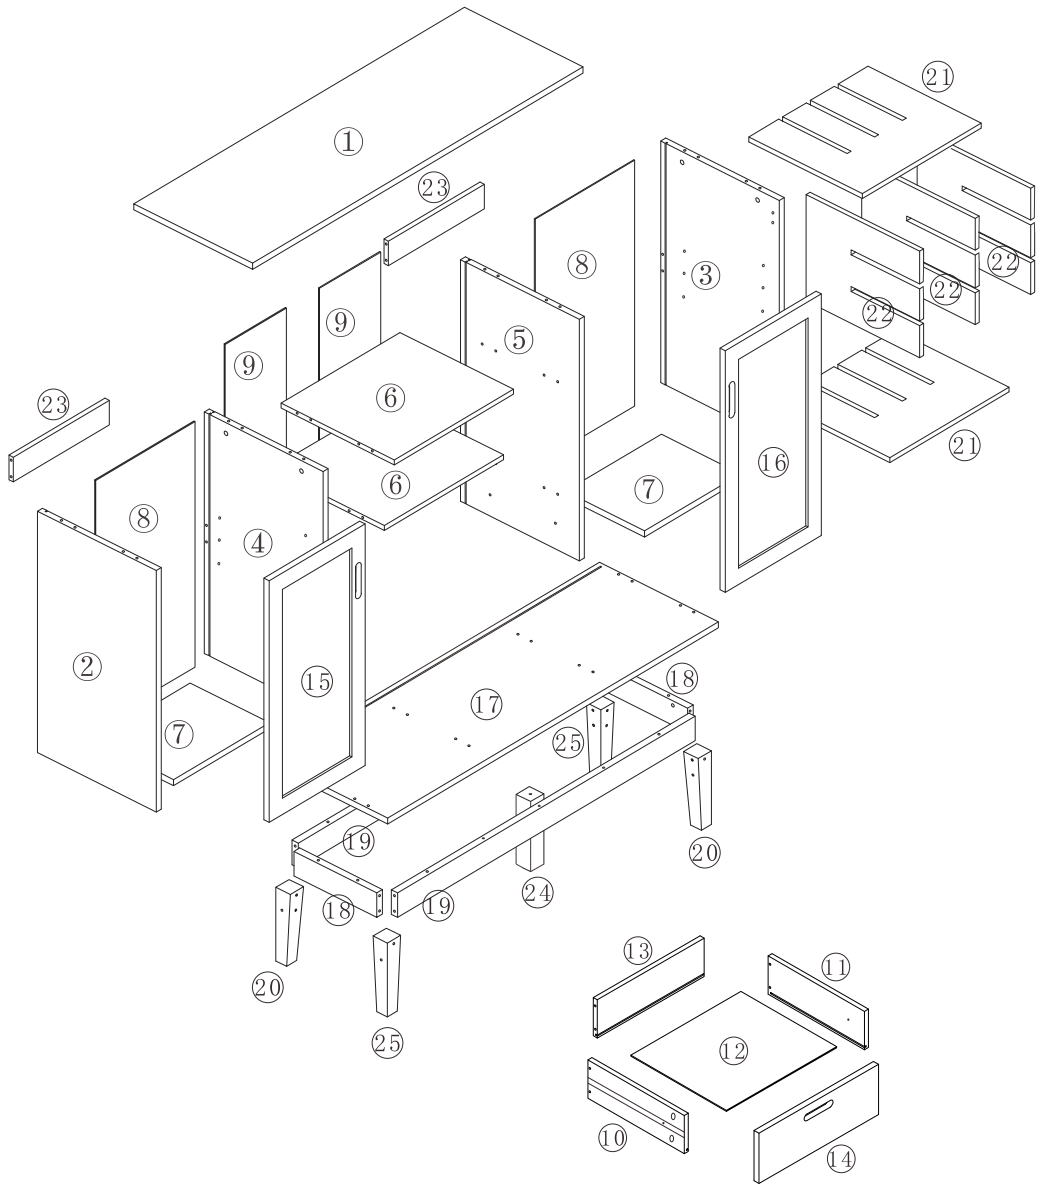

PRODUCT ASSEMBLY

A x 29 	B x 29 	C x 36 	D x 8  6 x 60mm
E x 8 	F x 10  4 x 45mm	G x 2 	H x 8 4 x 35mm
I x 2 	J x 2 	K x 4 	L x 16  4 x 14mm
M x 8 	N x 6 3 x 12mm	O x 2 	
P x 4 4 x 30mm		Q x 4  3 x 15mm	

PRODUCT ASSEMBLY

1

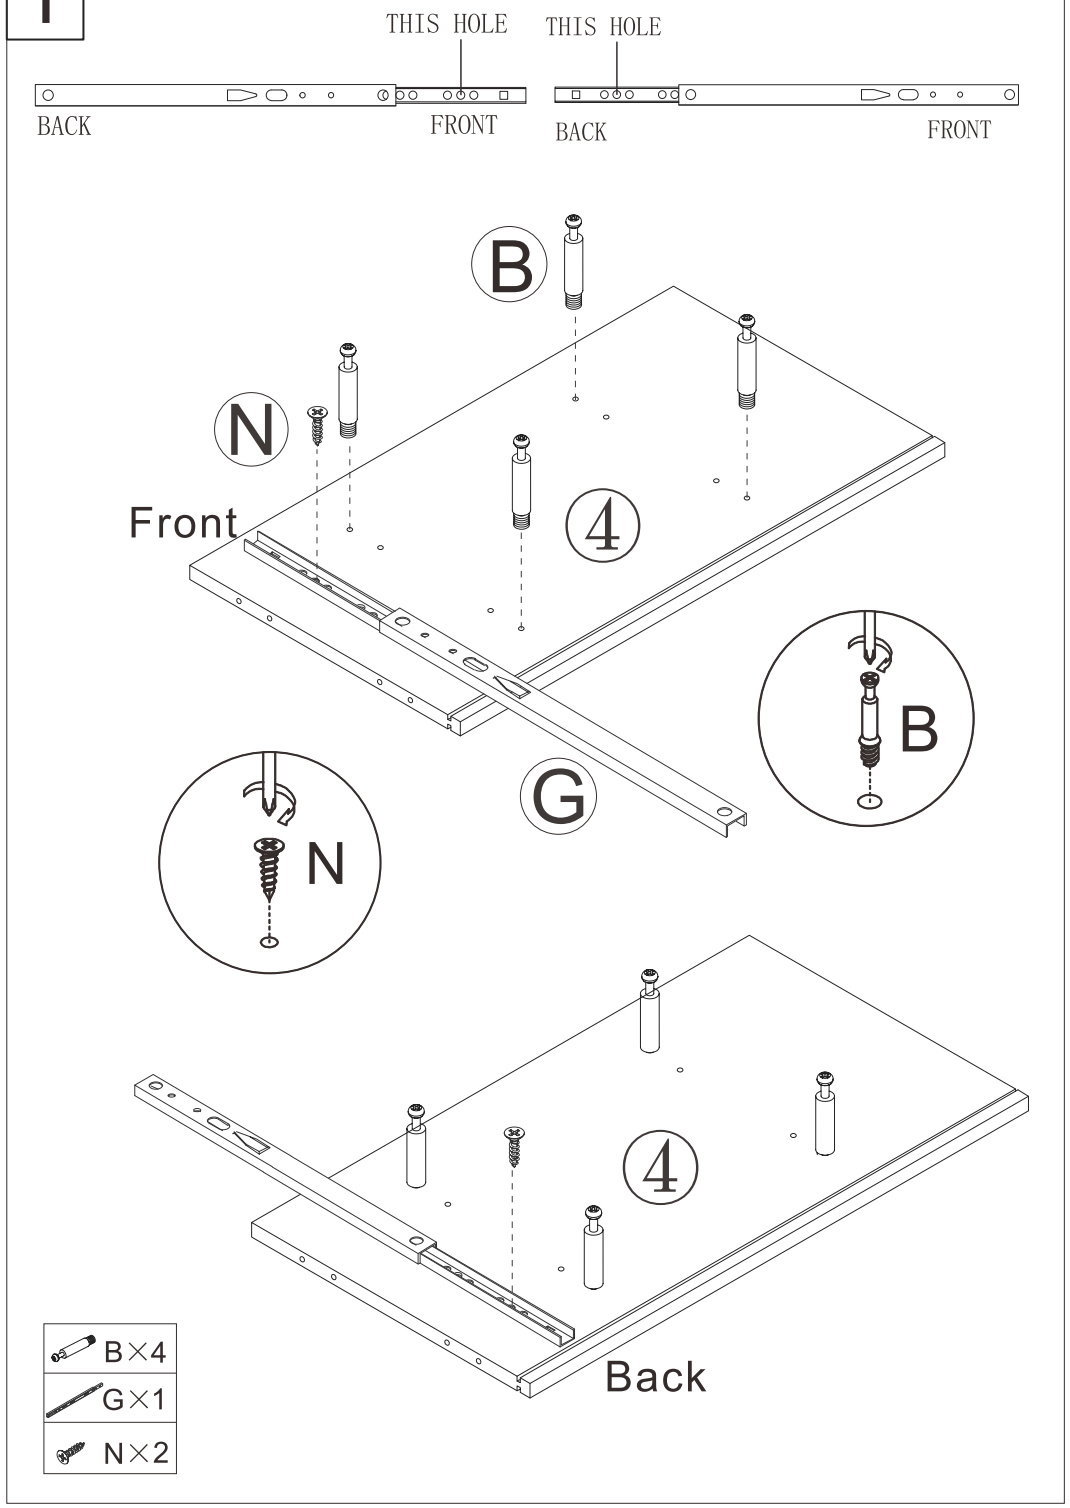

B×4
G×1
N×2

PRODUCT ASSEMBLY

2

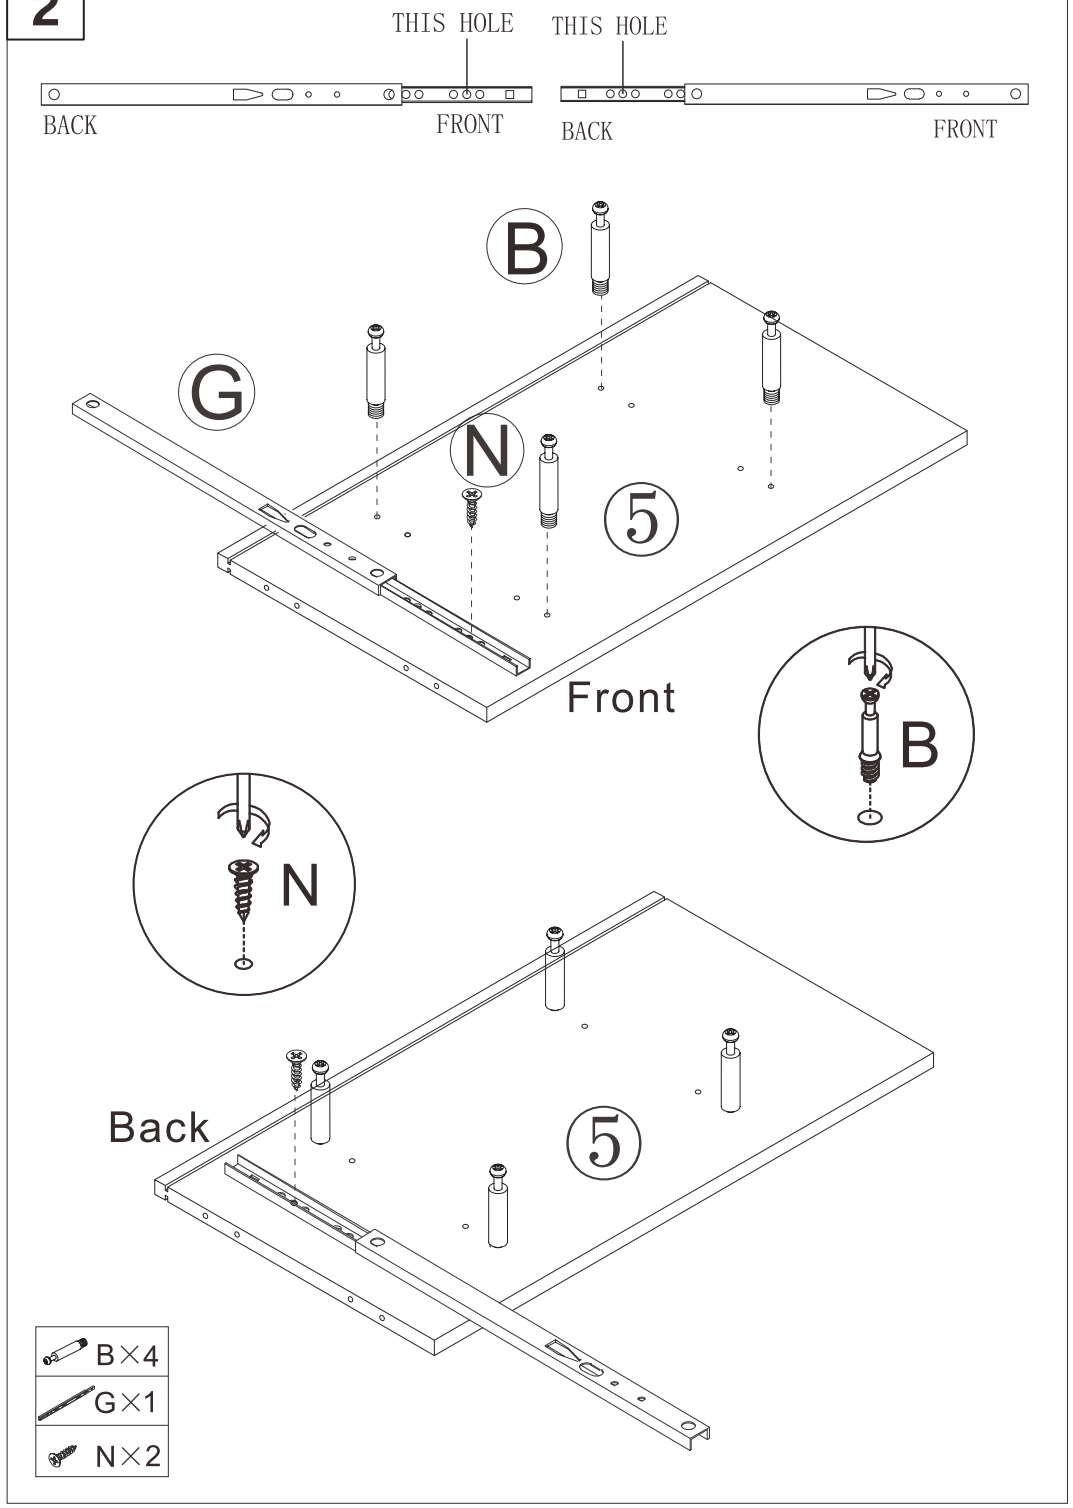

B×4
G×1
N×2

PRODUCT ASSEMBLY

3

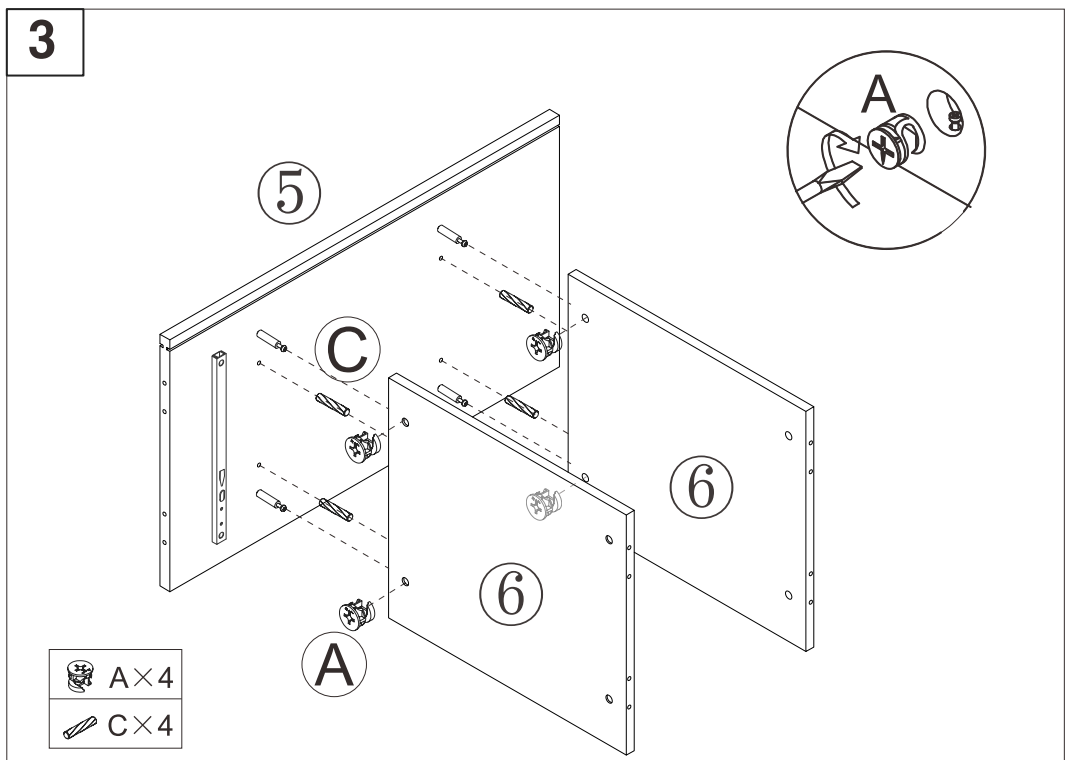

4

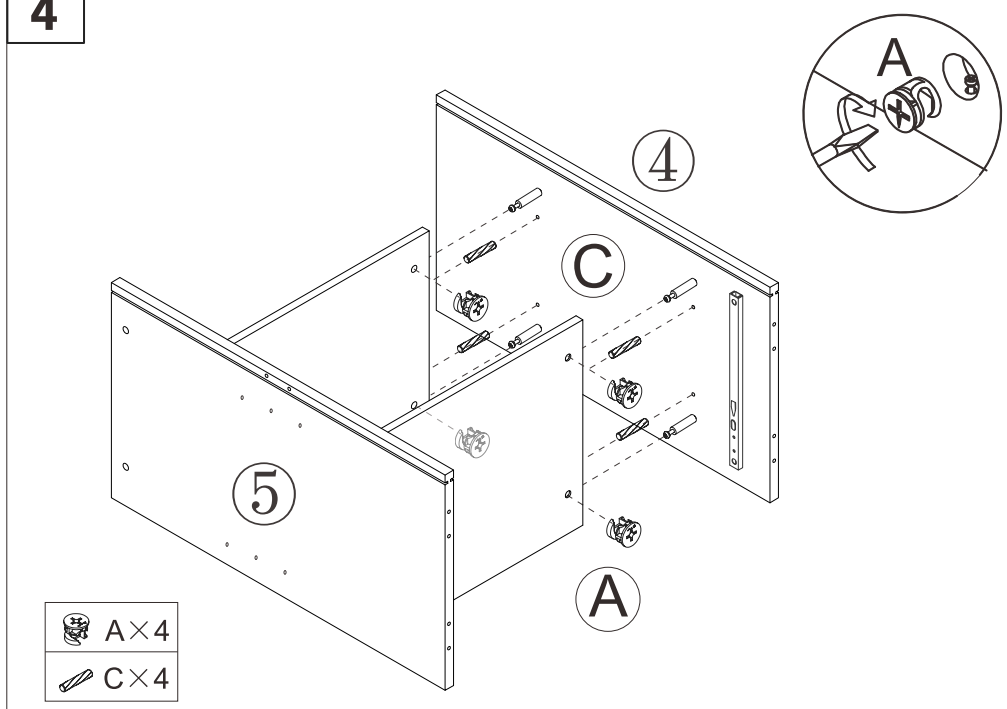

PRODUCT ASSEMBLY

5

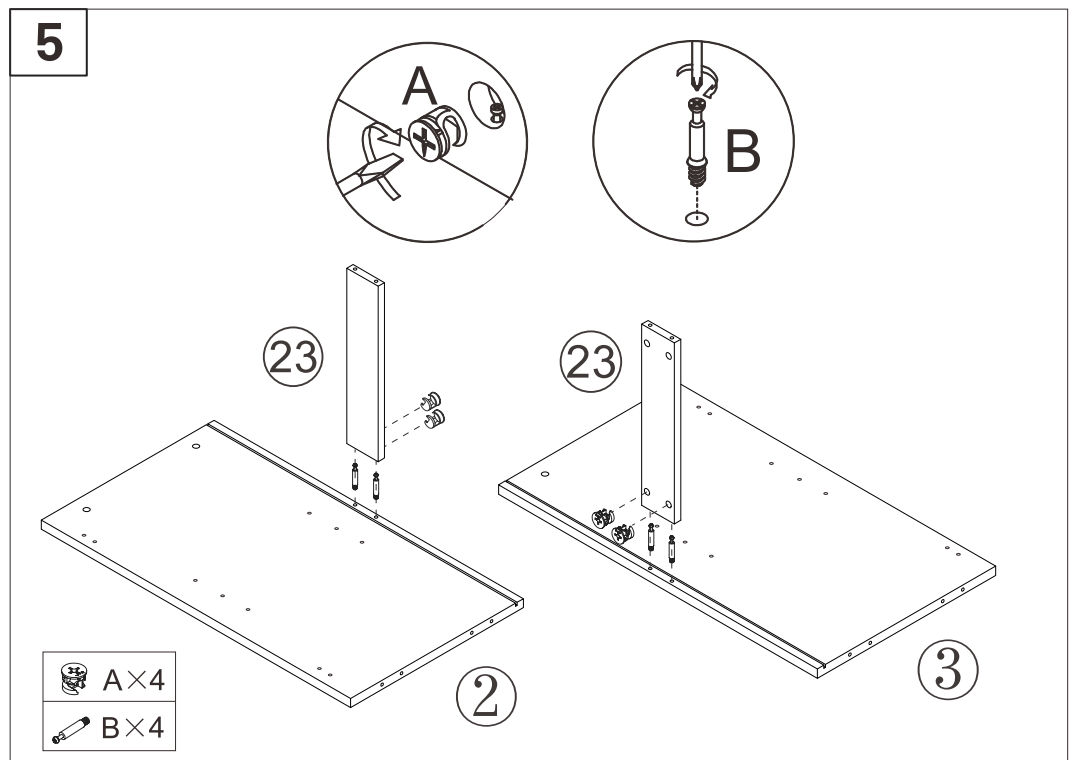

6

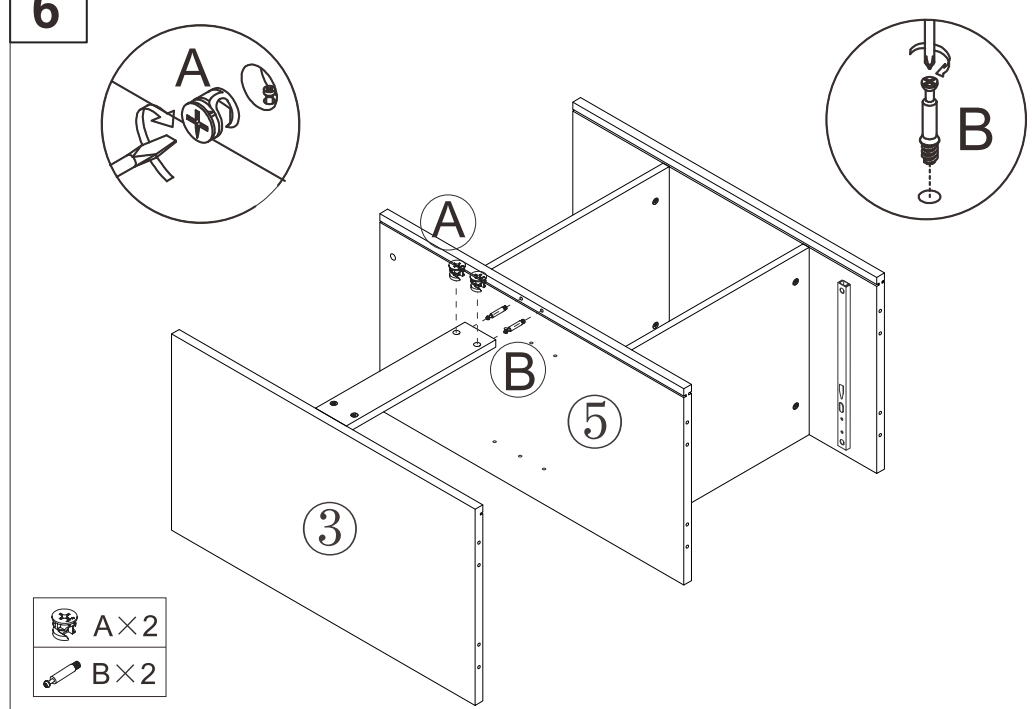

7

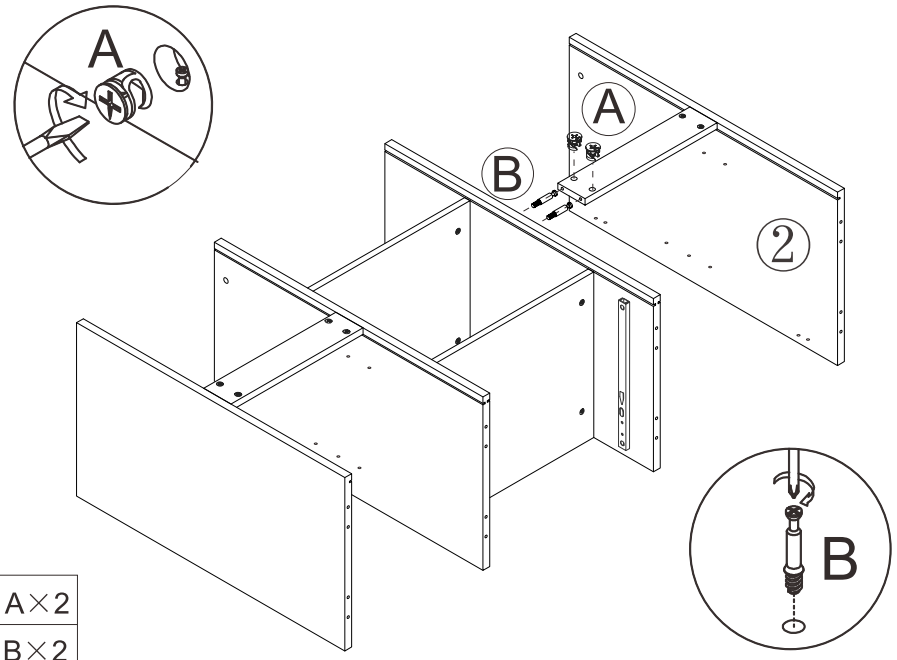

8

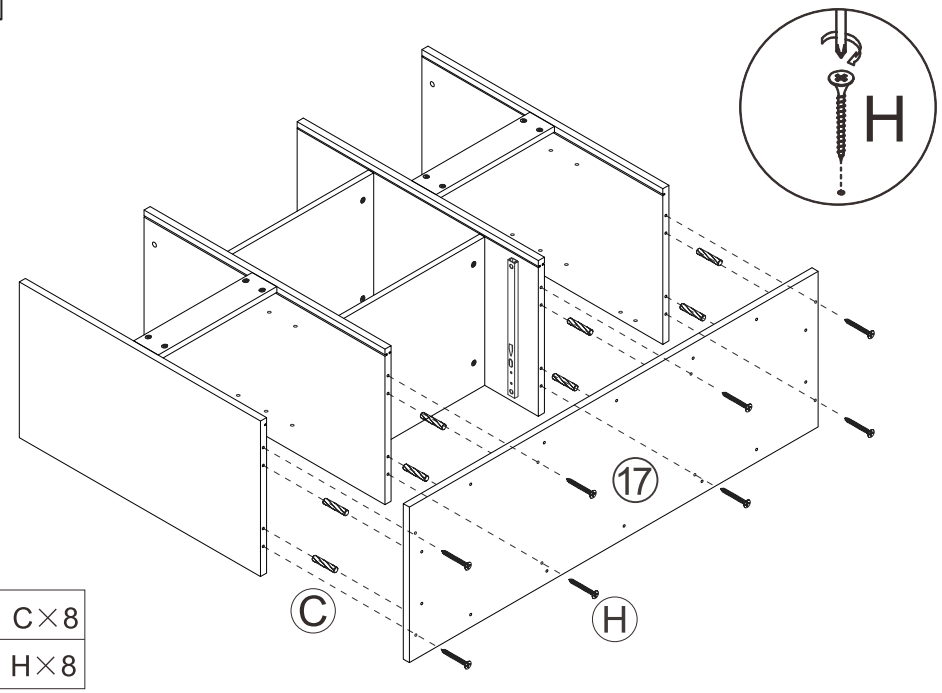

PRODUCT ASSEMBLY

9 ×2

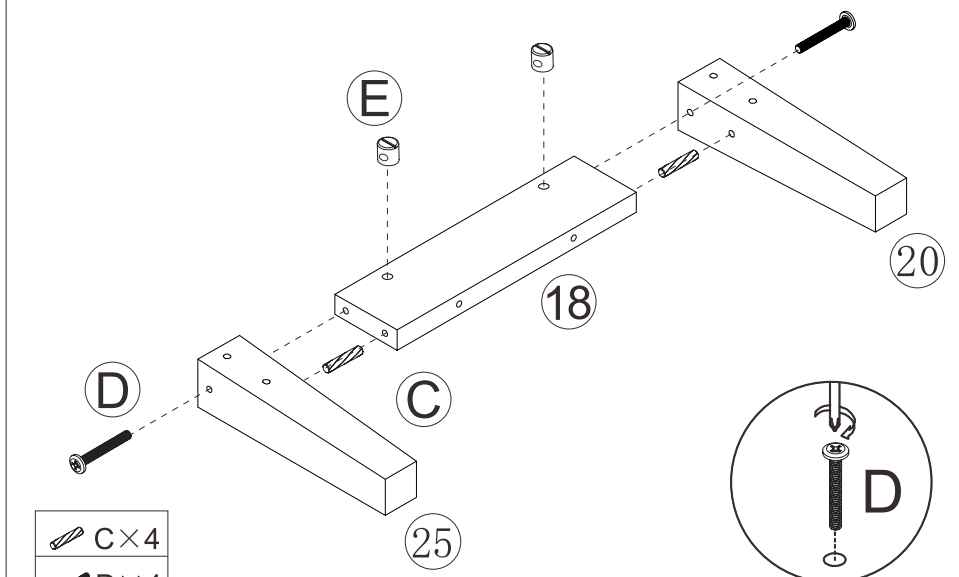

10

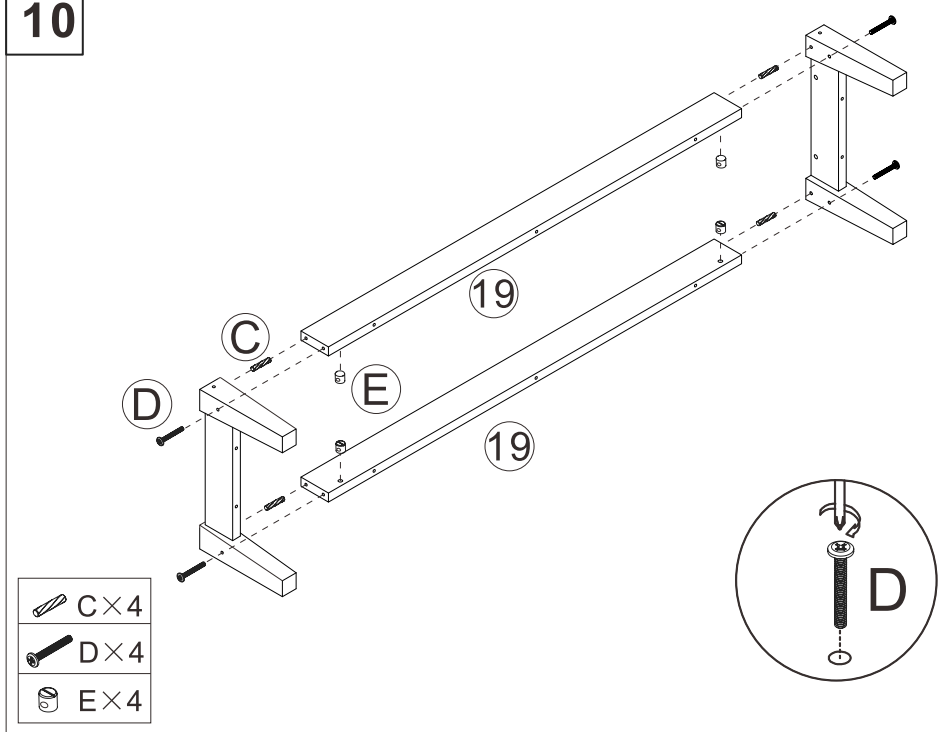

11

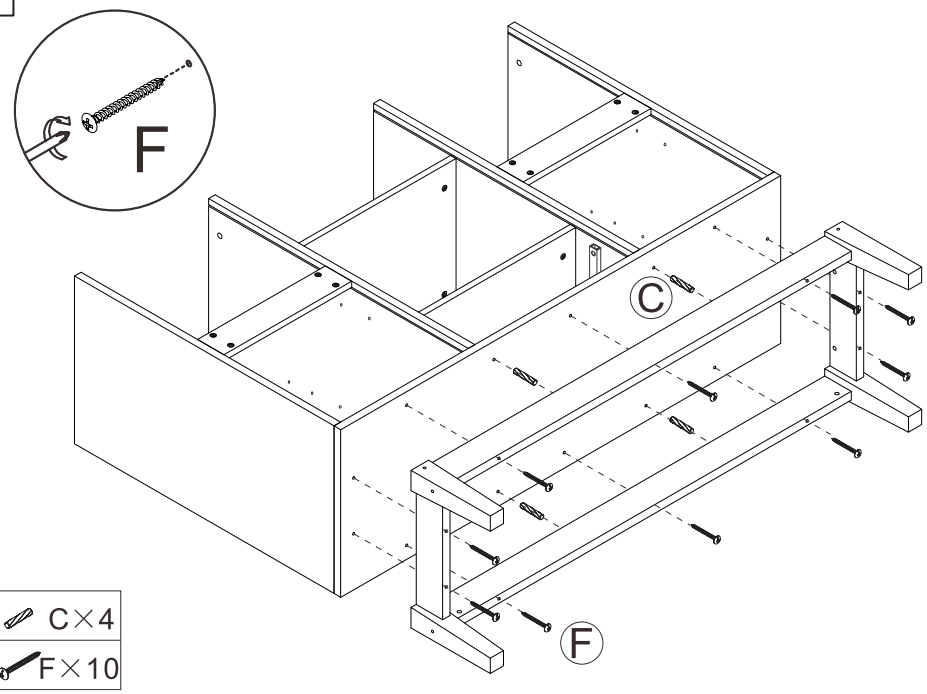

12

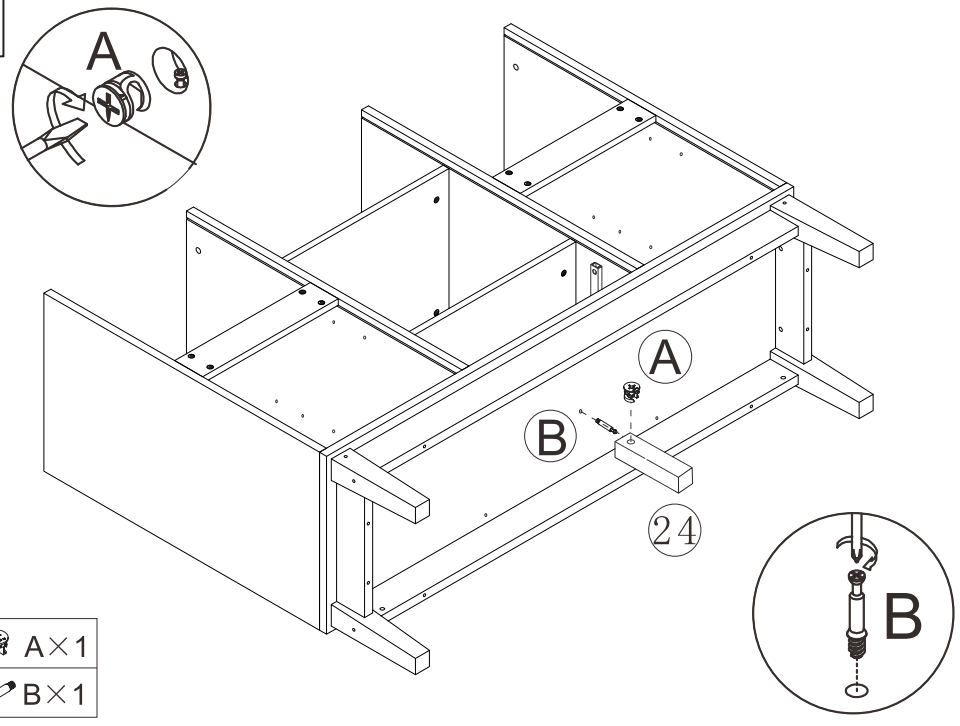

PRODUCT ASSEMBLY

13

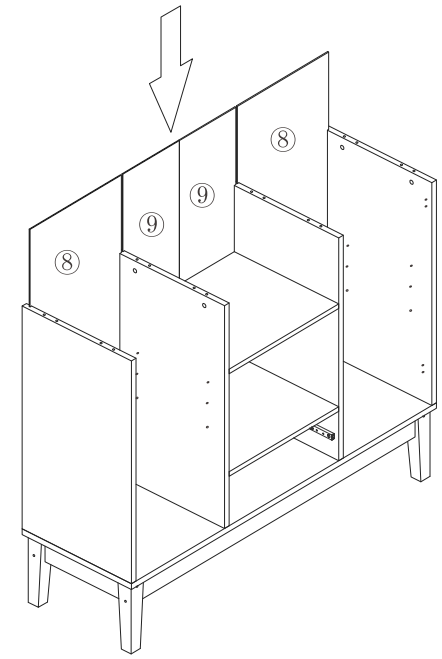

14

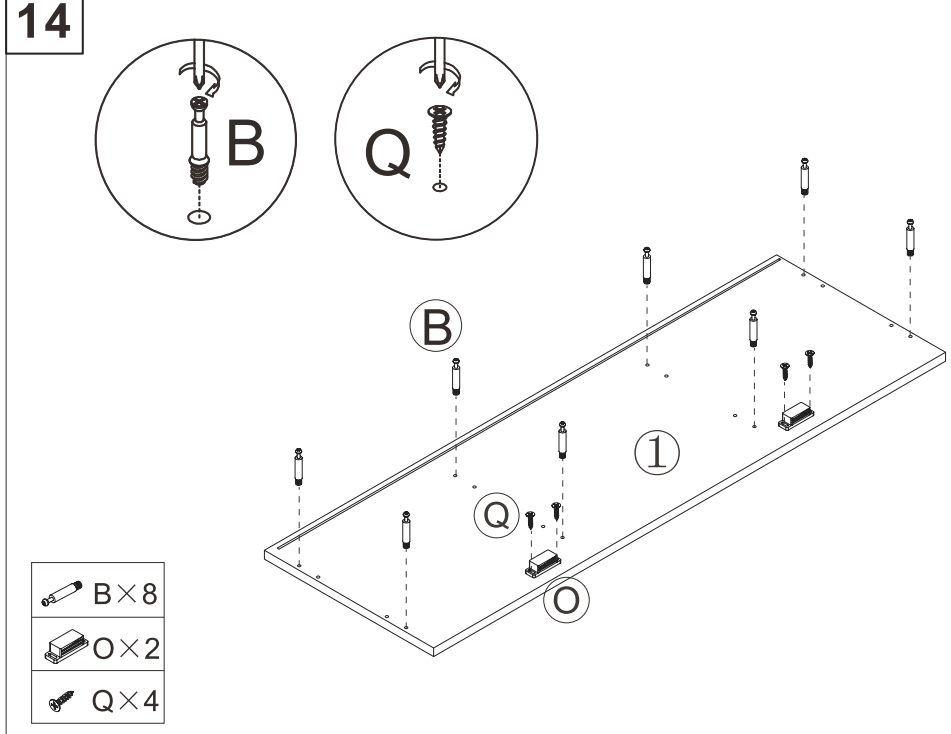

15

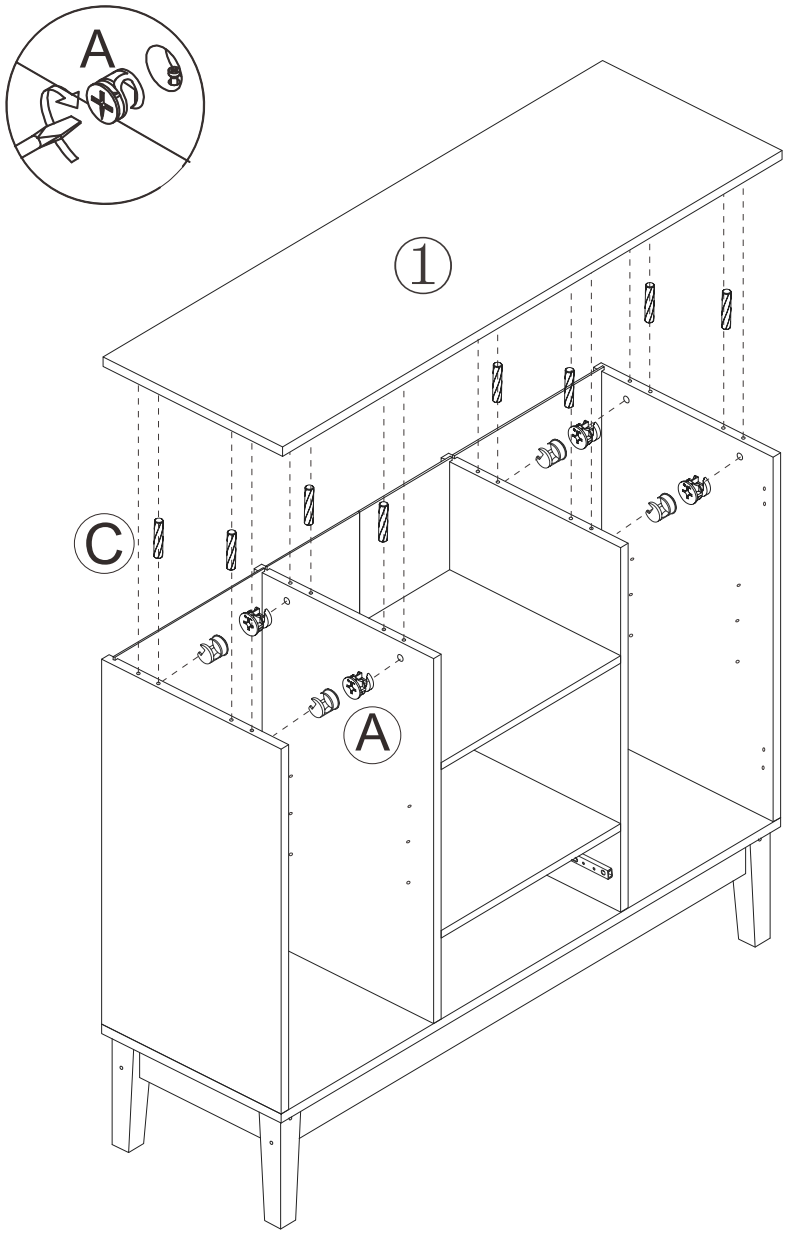

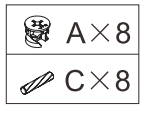

16

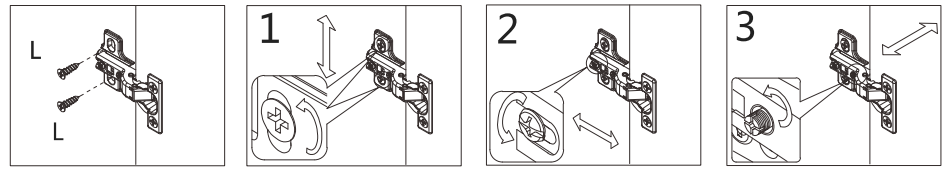

If the door panel is not sitting at a right position or angle, follow the steps below to improve.
(1) Loose the hinge, adjust the door panel position (up and down), then fasten the screws to secure the hinge (Step 1). or,
(2) Loose the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to sucre the hinge (Step 2), or
(3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

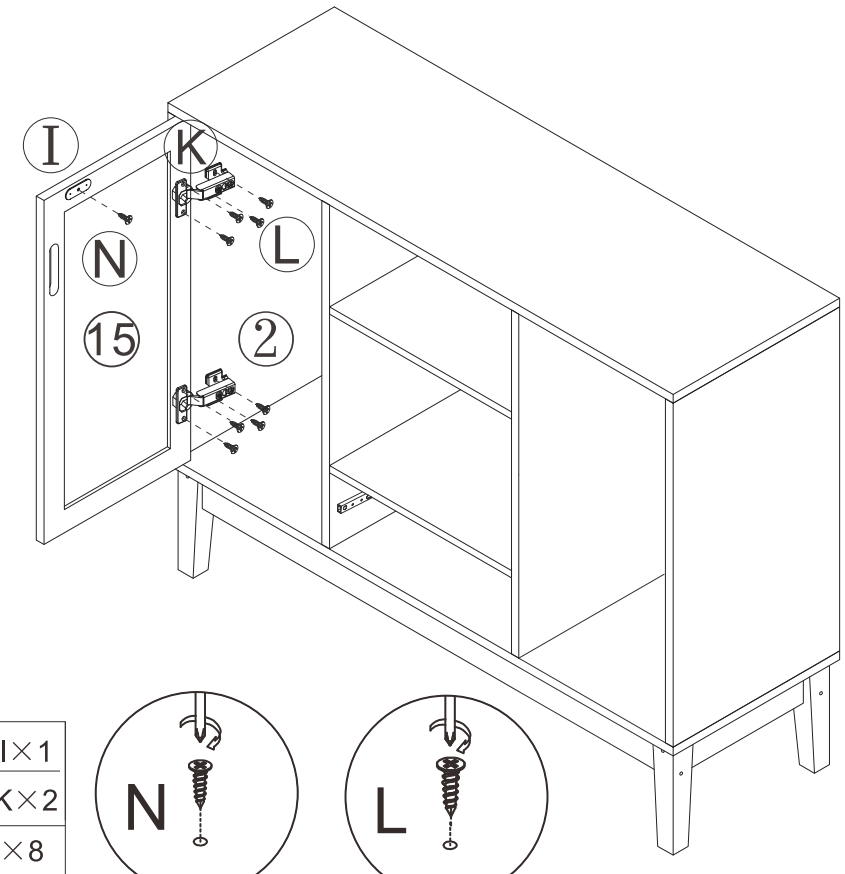

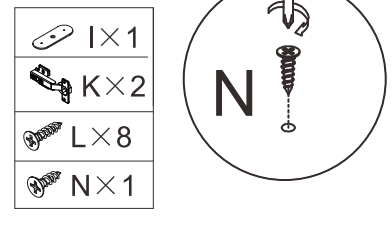

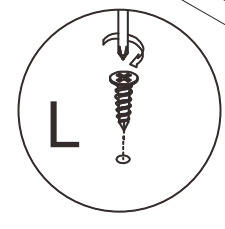

17

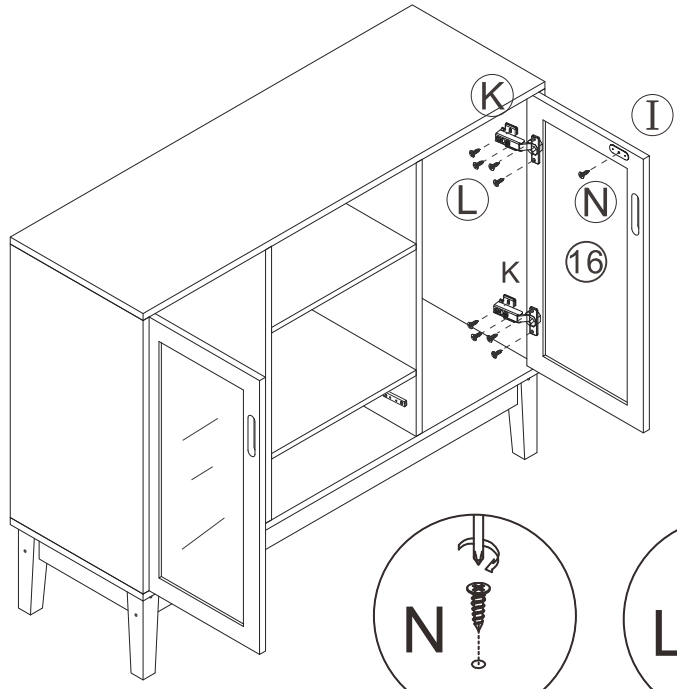

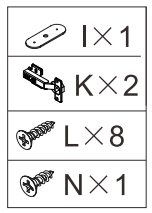

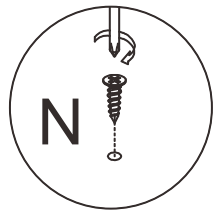

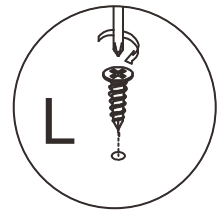

18

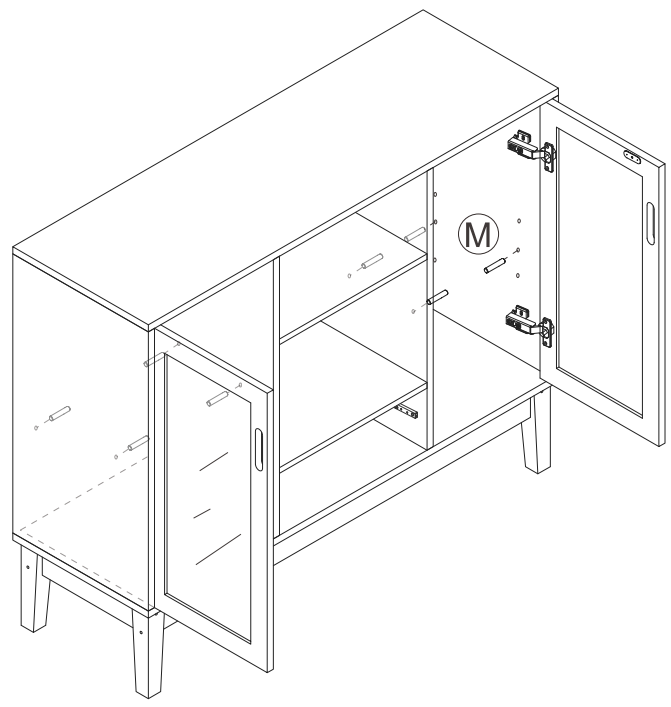



PRODUCT ASSEMBLY

19

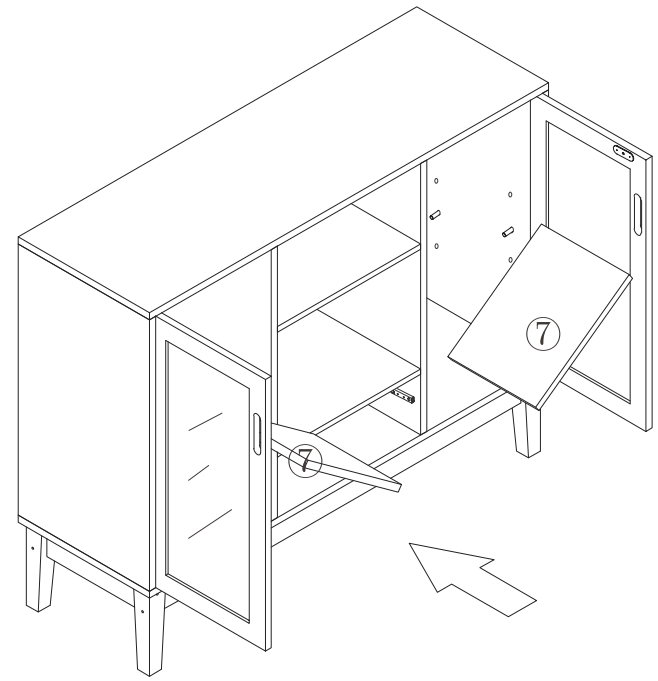

20

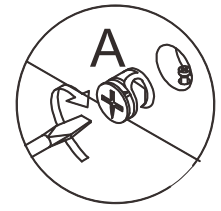

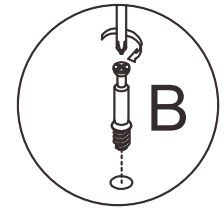

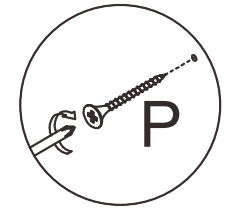

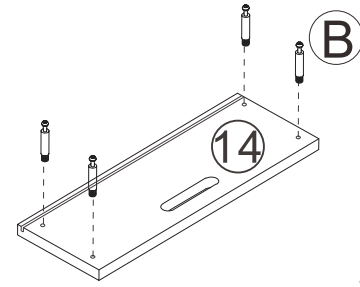

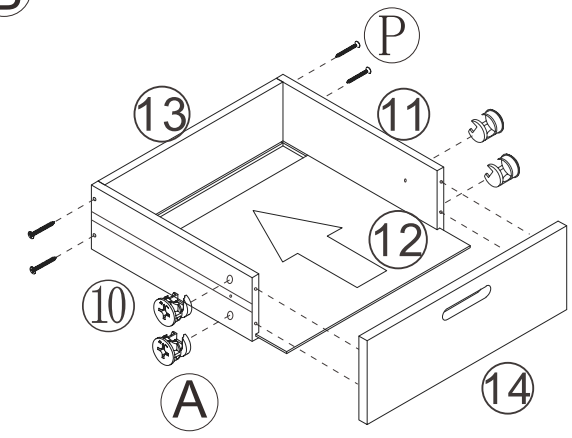

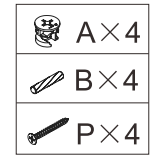

21

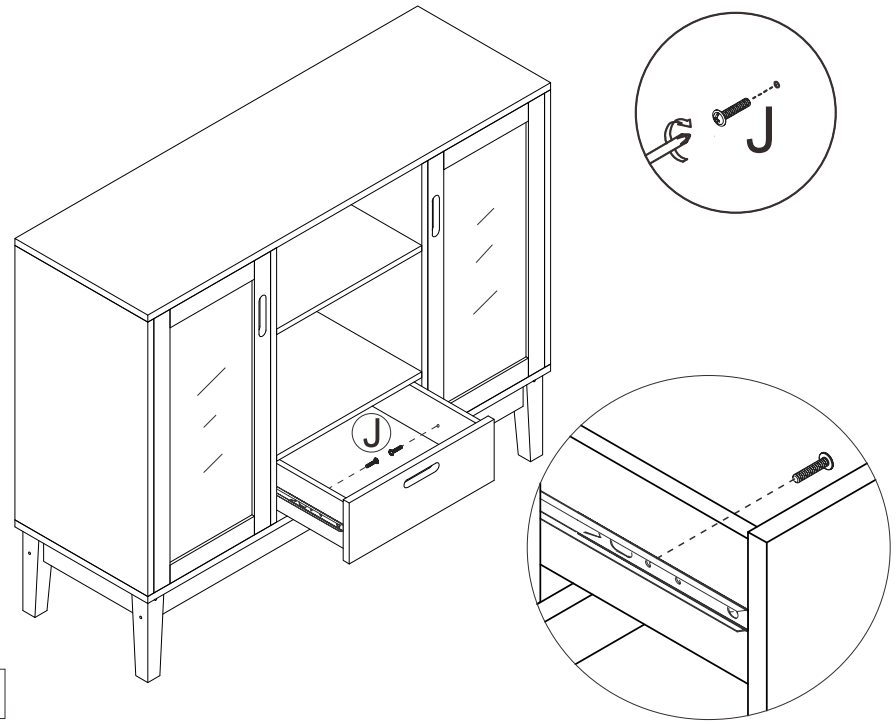

22

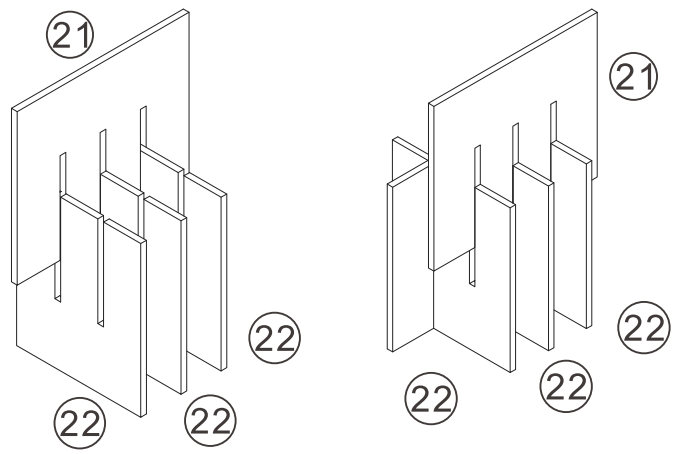

PRODUCT ASSEMBLY
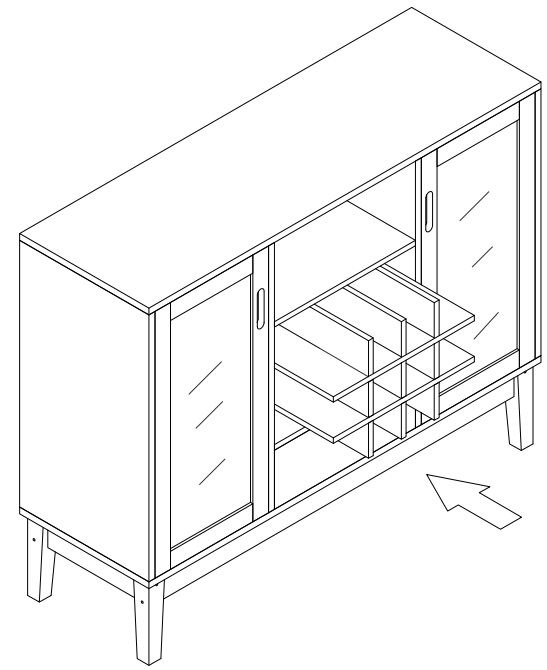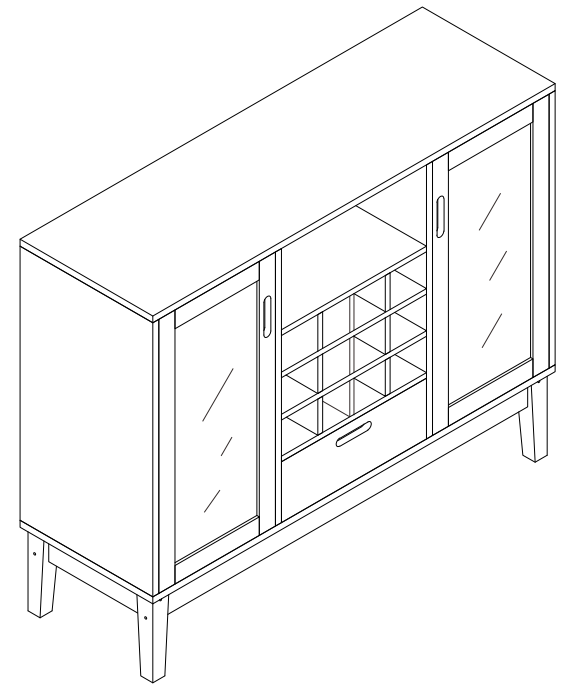
23