251*108*157inch Inflatable Water Slide

SKU: AJ06DW-1A1A1 / AJ06DW-1A1A2

Assembly Instructions -Please keep for future reference

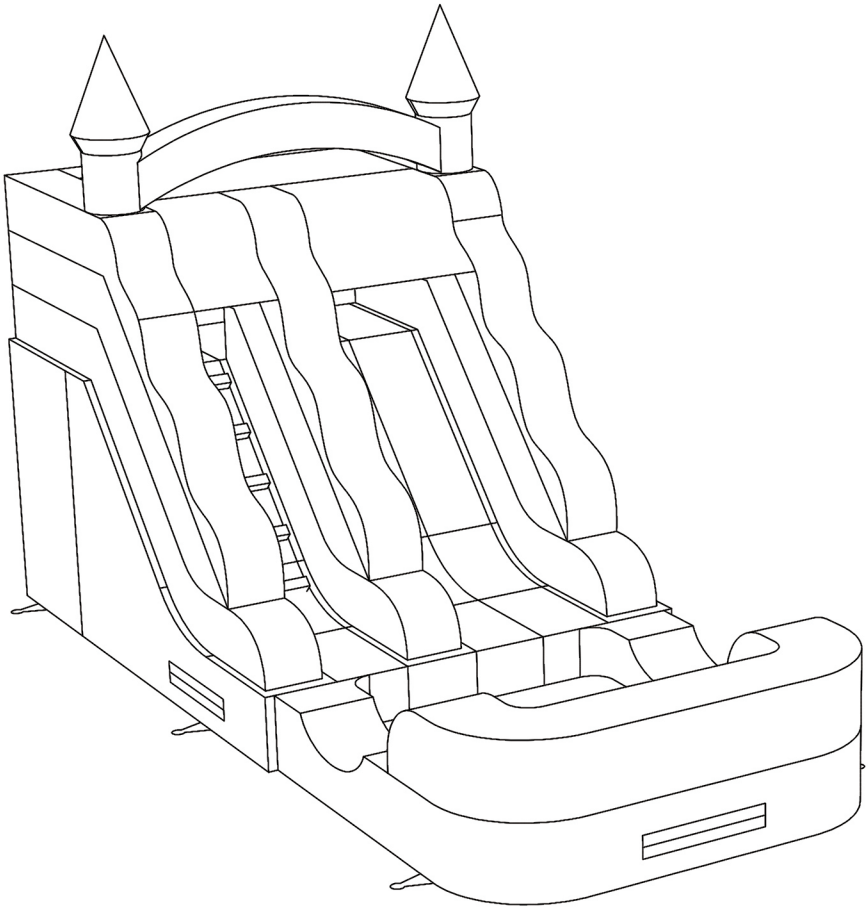

Any question please feel free to contact us:
support@albott-us.com
We will provide further assistance within 24 hours.

Important - Please read these instructions fully before starting assembly

Dear Customer:

Thank you for purchasing the NBSPORT Inflatable water slide.

If you think the water slide isn't perfect,

please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Providing pictures can expedite the resolution process.

Replacements for missing or damaged parts will be shipped ASAP!

Your satisfaction is our greatest motivation.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention: For home use only.

Attention: The product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping or falling hazard.

General Warnings:

⚠ The product must be installed and used under the supervision of an adult.

⚠ Read through each step carefully and follow the proper order.

⚠ Remove all packaging, separate and count all parts and hardware.

⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.

⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

⚠ Please check and maintain it regularly, and the most important part needs to be suspended, fixed, or anchored to the ground.

CAUTION - ELECTRICALLY OPERATED PRODUCT

Operation of Blower Fan Unit not recommended for children under 14 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

- Do not operate any fan with a damaged cord or plug.
- Do not cover cord with throw rugs, runners, or similar coverings.
- Warn the user to unplug or disconnect the appliance from the power supply before servicing.
- To prevent electric shock, do not immerse the blower in water, wipe clean with damp cloth.
- Arrange cord away from traffic area and where it will not be tripped over.

IMPORTANT CARE INSTRUCTIONS

- Environmental factors such as prolonged exposure to sun, water, heat or cold will destroy inflatables, so the inflatable must not be left outside when not in use.
- Inflatables MUST be stored dry, or mold will develop and cause irreparable decay to the material. Please note this will void your warranty. Units left outside in humid environments will develop mold as well.
- Water slide is designed with inner stitching and constant air flow, so the unit is still functional with small holes.
- To repair, deflate the product thoroughly, and ensure the surface is dry. Cut patches to sizes suitable for repair. Apply glue on both the repair patches and the damaged surface. For large punctures and rips, the unit can be repaired using the included patch and strong thread.
- Do not use harsh chemicals to clean your inflatable. Soap and water may be used sparingly.
- Maximum weight limits must be obeyed at all times, or the unit may fail.

PACKAGE CONTENTS

- Inflatable Water Slide
- 1500W Air Blower X1
- Carrying Bag X1
- Hose X1
- Slippery Cloth X1
- Climb Slide X1
- Repair Pads X4
- 23cm Bouncer Ground Stakes X6
- 3.6m Ropes X6
- Repair Patch X3
- Repair Coil X1
- Instruction Manual X1

SAFETY INSTRUCTIONS & MAINTENANCE

- Suitable for Children 3 to 10 years old to use this product.
- Combined user maximum weight limit: 400lbs (180kg).
- Individual user maximum weight limit: 99lbs (45kg).
- The maximum fall height is 110inches (280cm).
- Only one child should slide down the slide at a time.
- Do not stand on the rails, or on the slide itself.
- Do not play before it is completely inflated and properly anchored.
- Do not pour water on blower and never leave outsides overnight.
- Do not drag on concrete floor or Rough ground.
- Keep the blower away from water and fire.
- Do not modify products without authorization.
- No diving of any sort is safe.
- Remove shoes, eyeglasses, and sharp objects before playing.
- Do not jump off or dive off the slide into the pool to avoid the risk of serious injury or death.
- Keep children away from blower.



Total weight on inflated surface 300lbs (136kg)


Adult supervision required. Do not leave children unattended



Age 3-10 years


No sharp objects


No shoes, no glasses


No flipping


Do not slide head first


No Wrestling


No hands or feet


Do not use in windy conditions


Do not leave out in rain


Do not allow children to touch fan or electrical cord

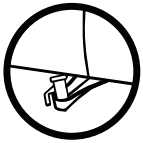
Must be anchored using stakes

INSTALLATION METHOD OF SLIDING CLOTH

Step 1

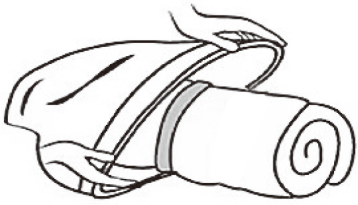

Unpack from the bag.

Step 2

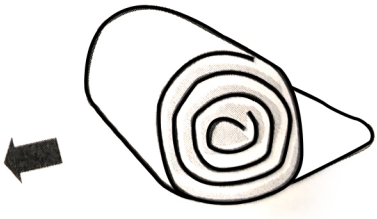

Unfold the slippery cloth

Step 3

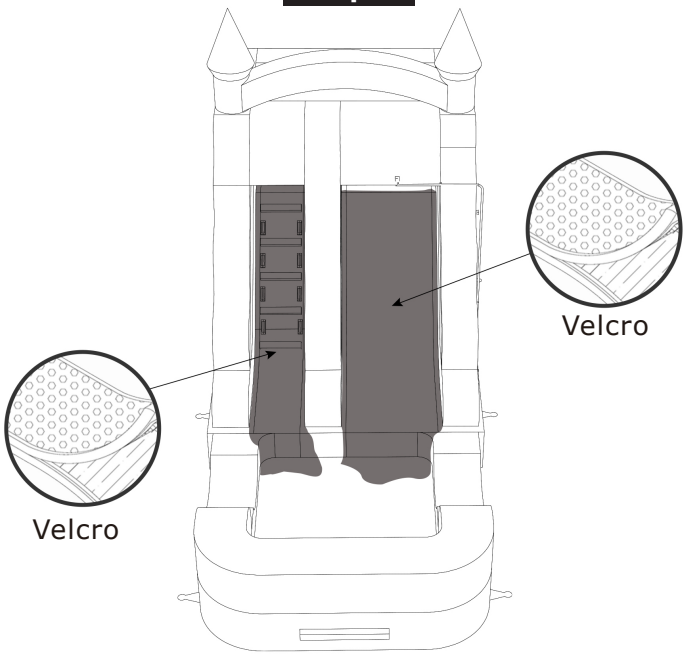

After unfolding the sliding cloth, lay it on the slide and attach the sliding cloth Velcro to the slide position

INSTALLATION METHOD

Step 1

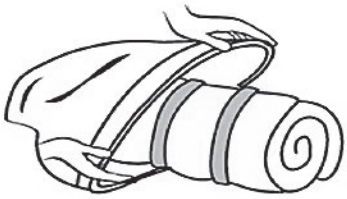

Unpack from the bag.

Step 2

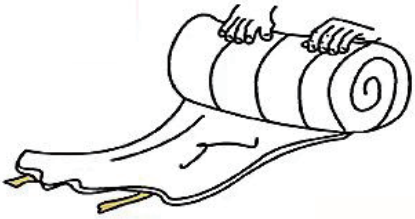

Unfold and lay out the inflatable bouncer on the ground face up.

Step 3

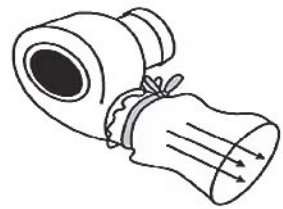

Tie the air intake sleeve to the blower, the air fill tube should be straight and untwisted and connect to the air socket.

Step 4

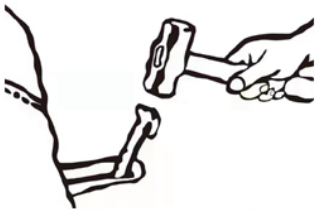

Hook stakes over loops in the bounce house, push stakes firmly into the soil. The stakes should be placed level with or under the ground.

Step 5

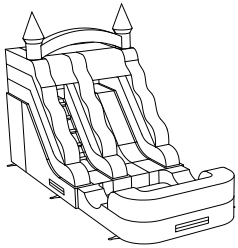

Wait for the inflatable to complete inflation before use. the blower should remain ON continuously inflate the inflatable bouncer during use.

WATER PARK SPRAY ASSEMBLY, PART

Attach the hose to the Velcro on the side of the water slide

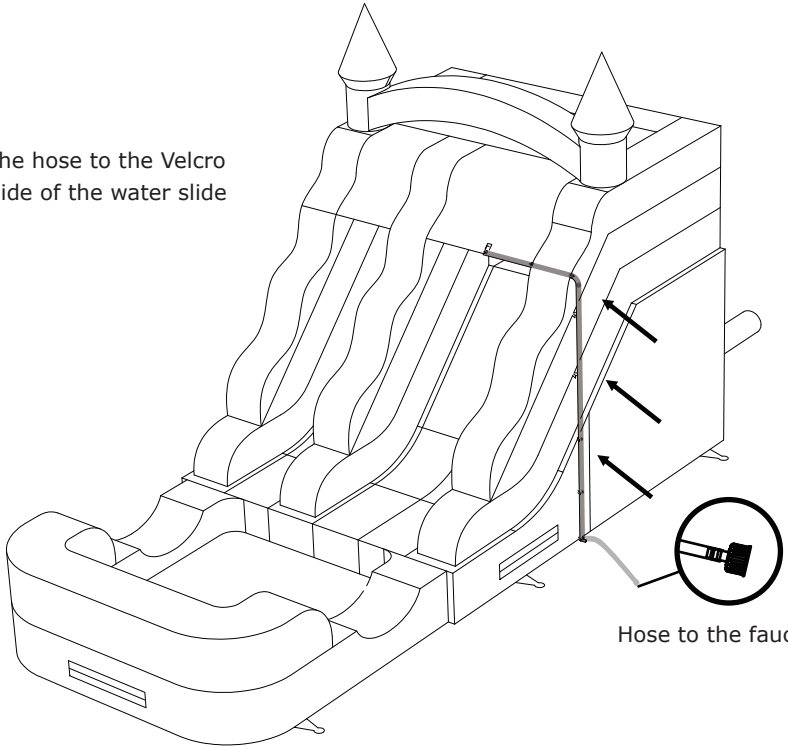

Hose to the faucet

Place the sprinkler on top of the arch

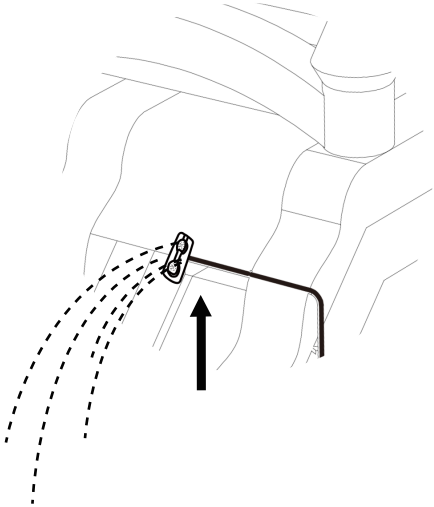

Please note:
1. The sprinkler must be placed correctly and cannot be folded, otherwise the water will not flow.
2. There are two sprinklers, corresponding to the top of the slide arch.

FOLDING METHOD

Step 1



Turn the blower (air pump) "ON/OFF" switch to off.

Step 2

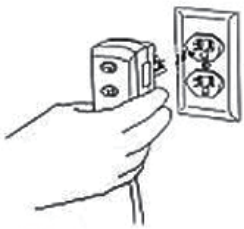

Unplug the blower (air pump) power cord.

Step 3

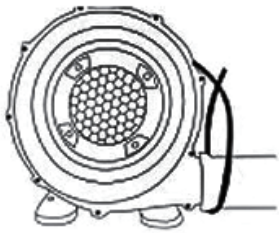

Loosen string and detach the air fill tube from the blower.

Step 4

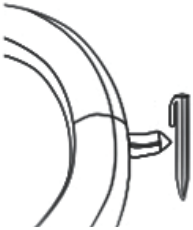

Remove ground support stakes.

Step 5



Let the bouncer deflate entirely. Fold all pieces of the inflatable bouncer toward the center.

Step 6



Roll up the inflatable bouncer tightly and compress the fabric to expel all the remaining air.