ASSEMBLY INSTRUCTION

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch foors. We recommennd using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh creansers or polish.
- ⊘  • Do not plase furnimture under direct sunlight.
- ⊘  • Do not plase furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside. For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.






- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.







Counter stool
N780P526779

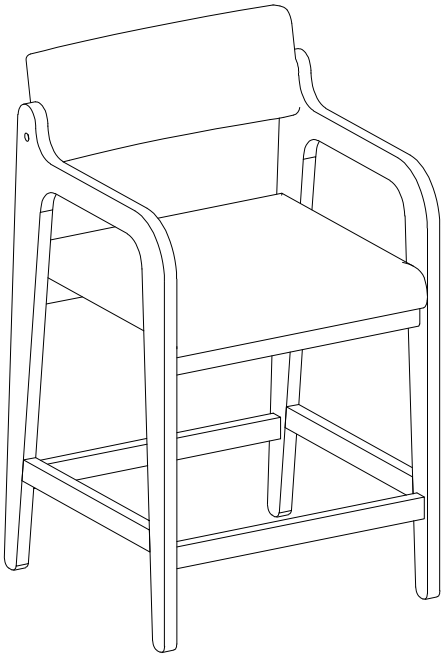

Parts List

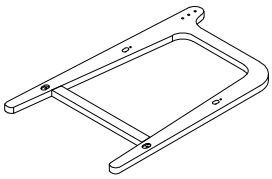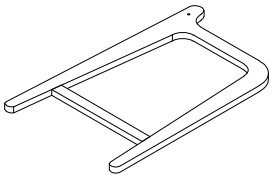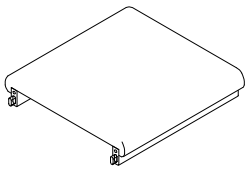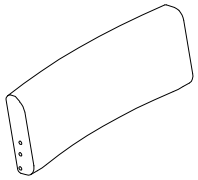
Label	Picture	Description	QTY
A		Right leg	1
B		Left leg	1
C		Seat cushion	1
D		Backrest cushion	1
E		Stretcher	2

HARDWARE LIST


Label	Picture	Description	QTY
①		Bolt (1/4" x35mm)	6+1
②		Bolt (1/4" x55mm)	4+1
③		Spring washer (10mm)	6+1
④		Flat washer (14 mm)	2+1
⑤		Crescent washer	4+1
⑥		Allen wrench	1+1
⑦		Dowel (Ø10x40mm)	4+1
⑧		Cover sticker (Ø21mm)	4
⑨		Plastic glides	2

Assembly Preparation

Before Begining Assembly:

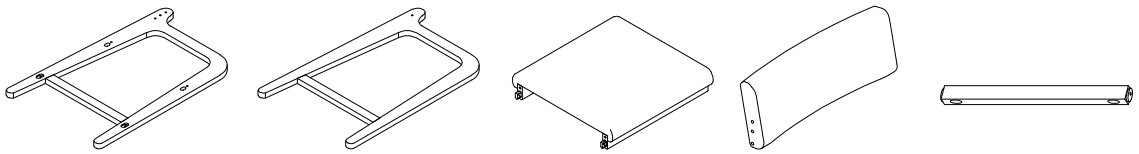

A B C D E




①x7 ②x5 ③x7 ④x3 ⑤x5 ⑥x2 ⑦x5 ⑧x4 ⑨x2

- Read instructions, cover to cover-
- Have 2 adults on hand fo assembly-
- Do not assemble on flooring of carpet-
- Assemble on a clean non-marring suface (packing foam)-
- Save all packaging until finshed-

Assembly Steps


Overview

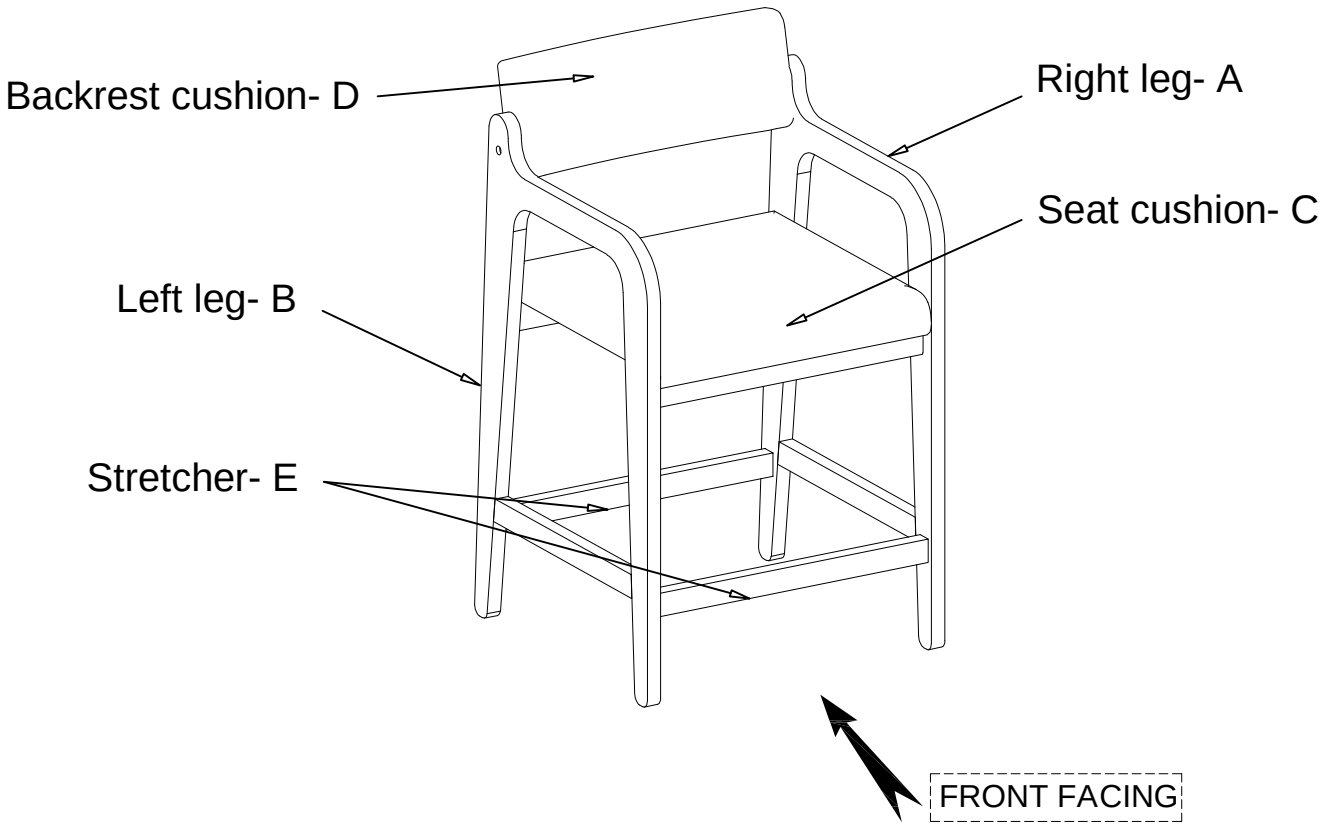

This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


CAUTION : When tightening these bolt, tighten sequentially.
DO NOT tighten any bolt fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the bolt and execute this same process.
WARNING!! IF IT IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 1

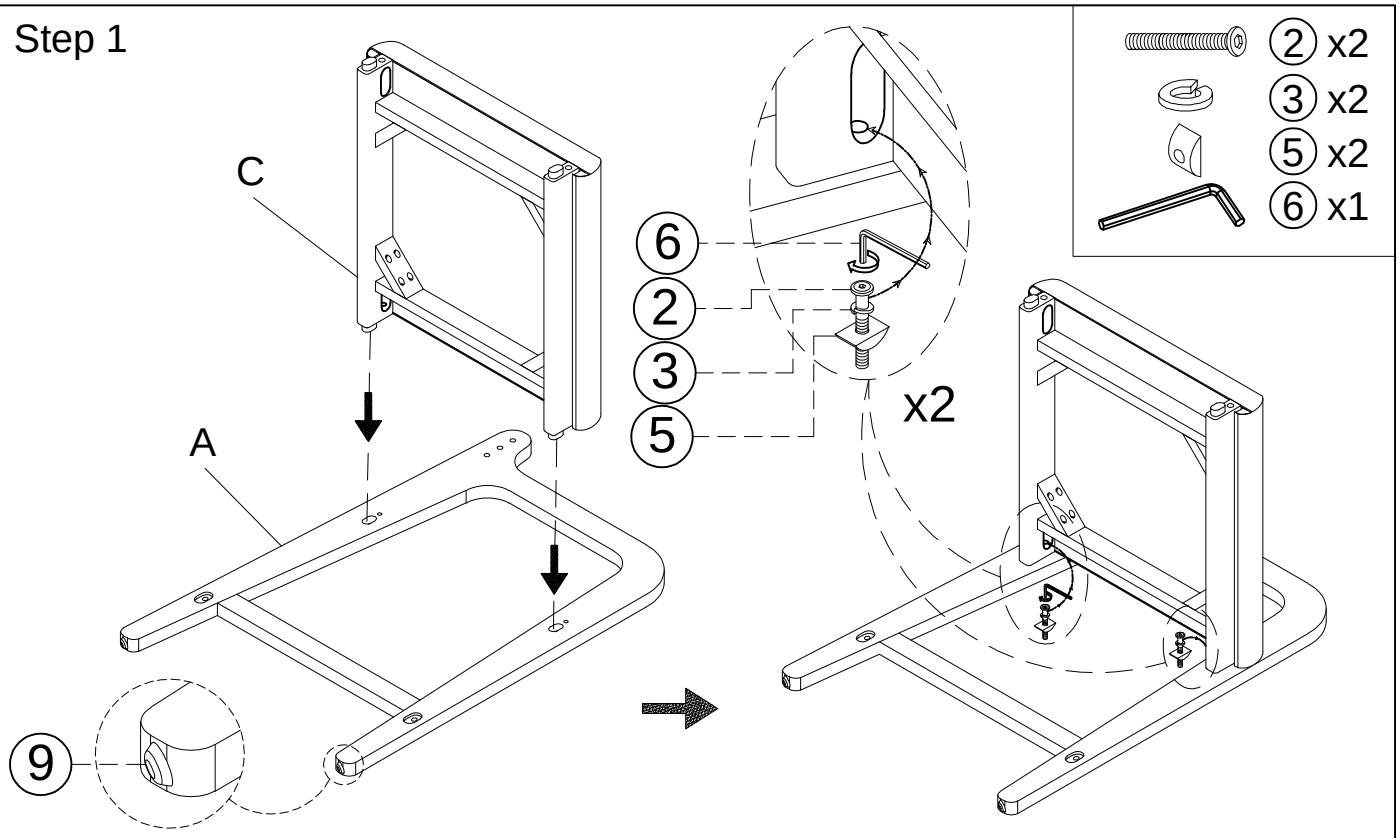


Attach the seat cushion C to the right leg A. Using bolt ②,
spring washer③, crescent washer ⑤and allen key ⑥. Do not full tighten


Step 2

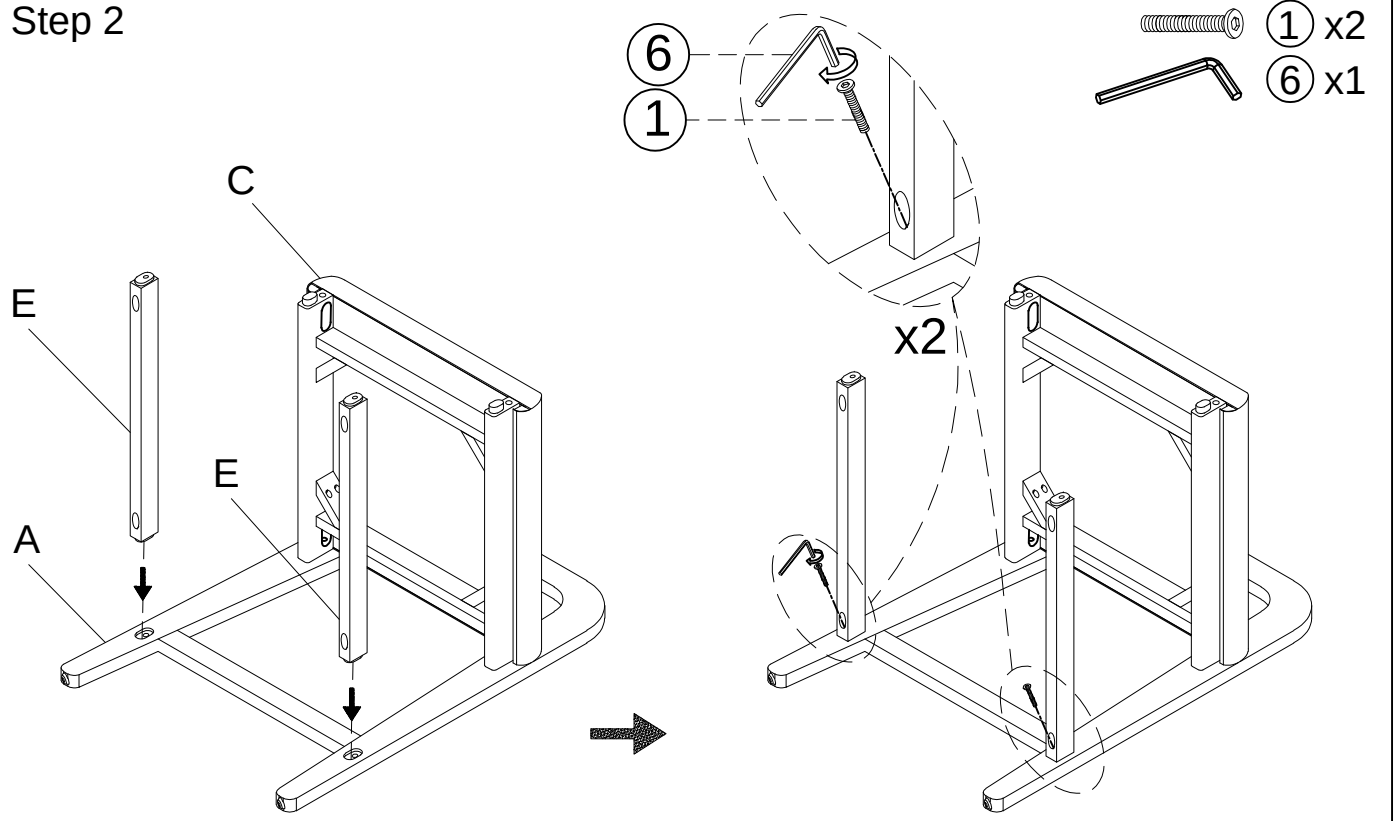

Attach the stretcher E to the right leg A.
Using bolt ① and allen key ⑥. Do not full tighten


Step 3

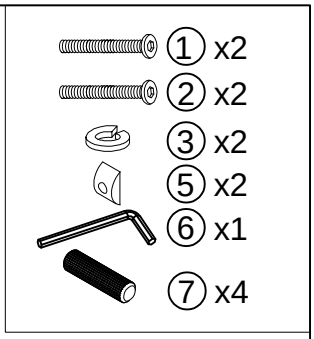


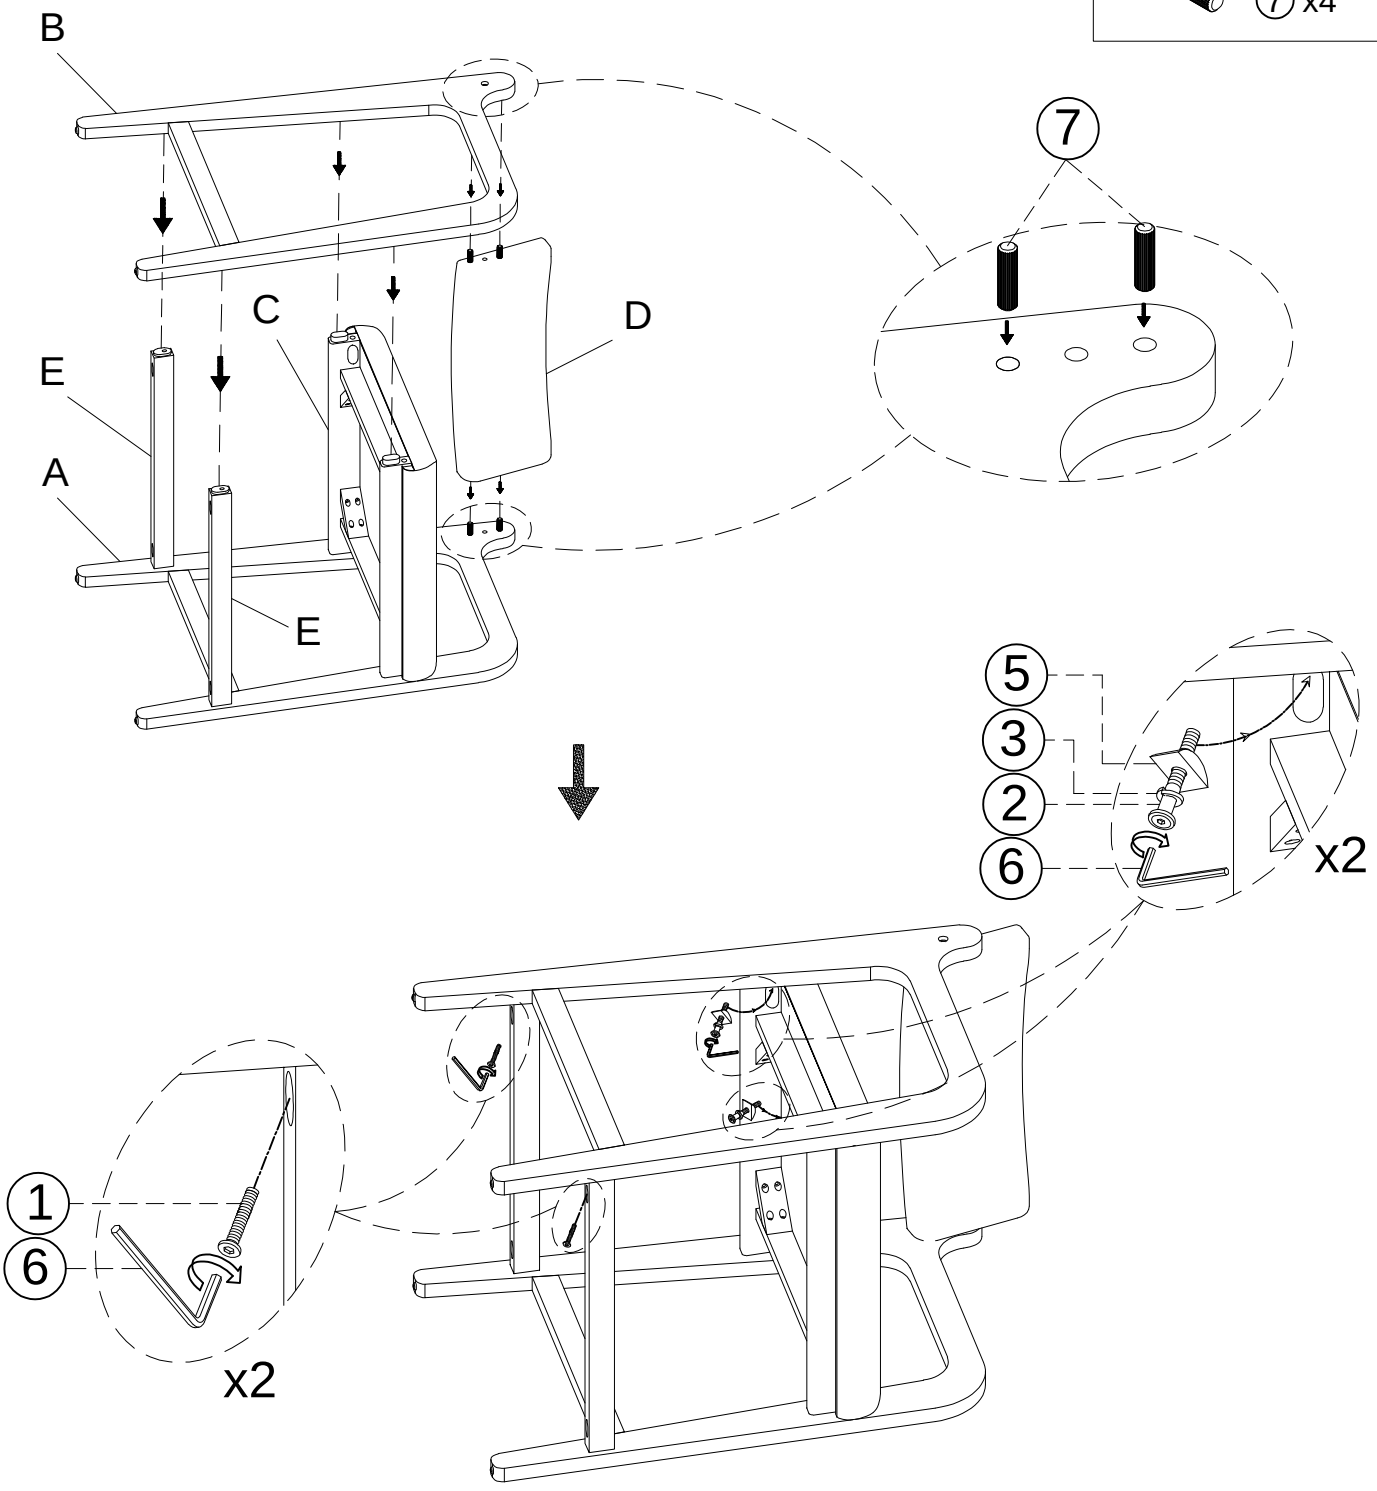

Attach the backrest cushion D and left leg B to the seat cushion C and right leg A, stretcher E. Using dowel ⑦, bolt ①, bolt ②, spring washer③, crescent washer ⑤ and allen key ⑥. Do not full tighten


Step 5

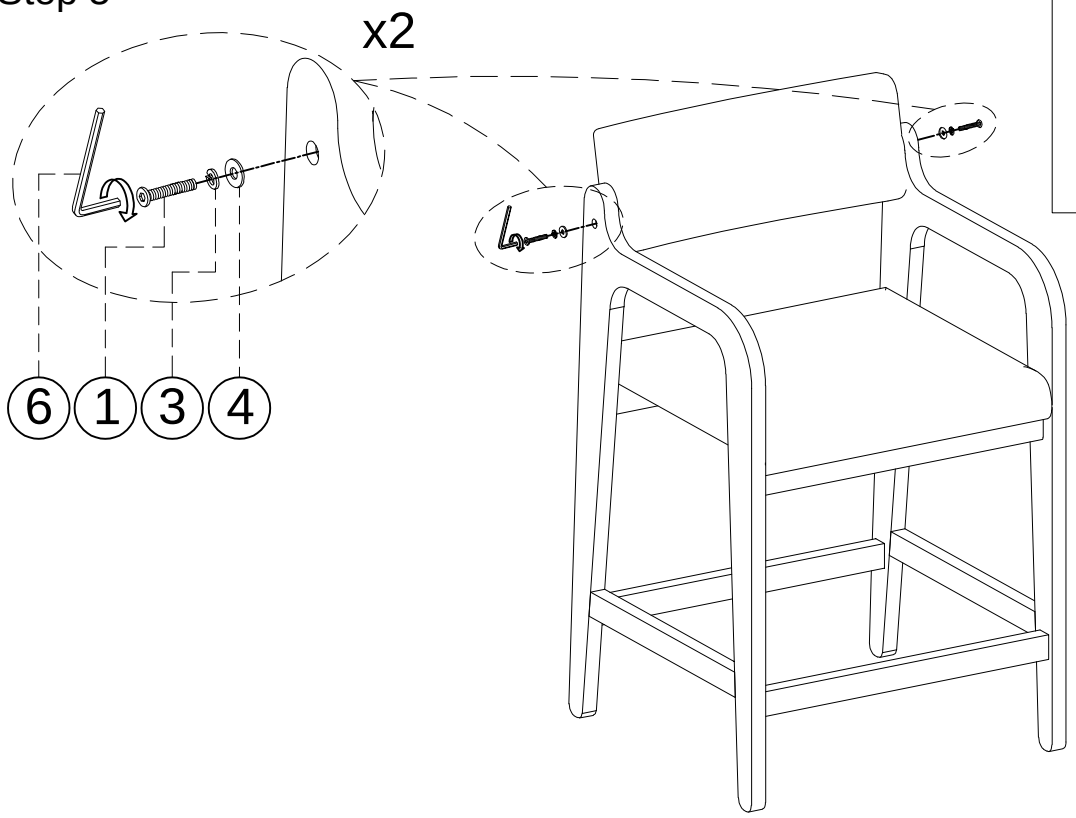

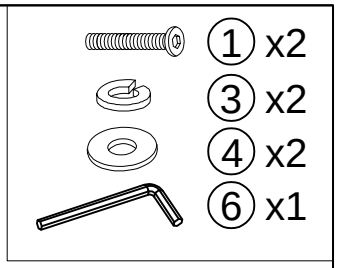


Stand the chair up. Attach bolt ①, spring washer ③, flat washer ④into legs, backrest cushion and allen wrench ⑥.
Do not full tighten.

Step 6

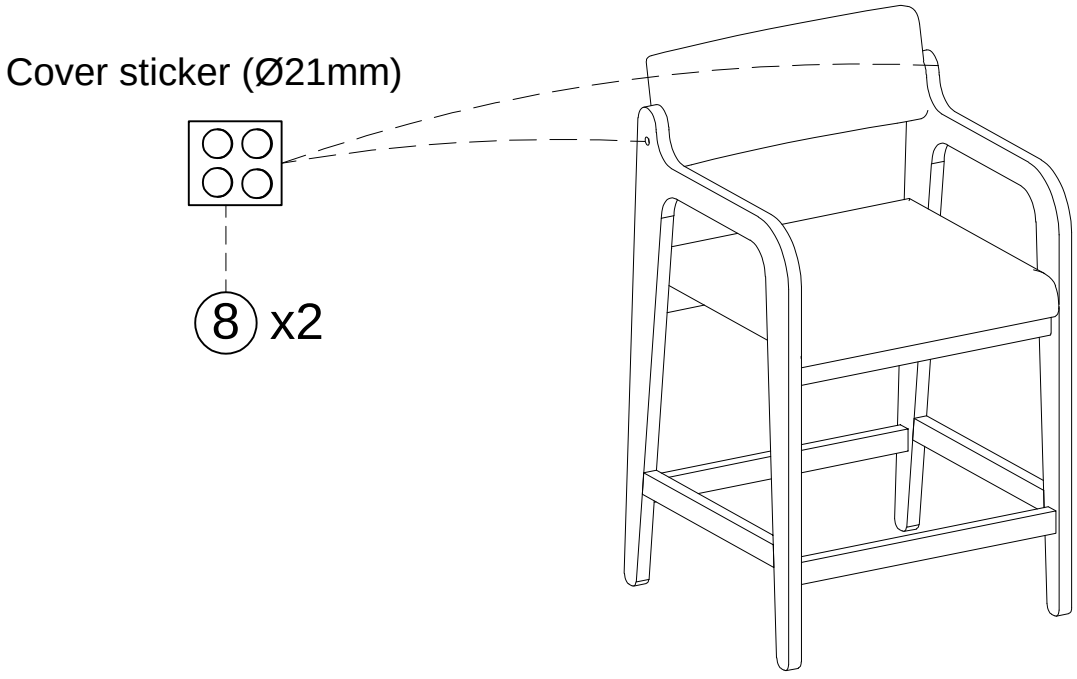


After checking the chair, if no problem, tighten all the bolts.
Place the chair on a LEVEL SURFACE to check for wobbles .
After inspection, attach the cover stickers ⑧ hidden the bolt holes.

Step 7

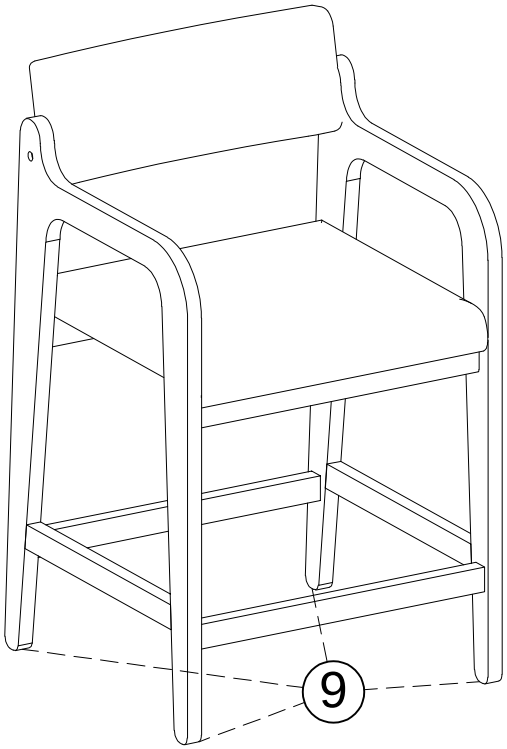

Note: If missing or fall out the plastic glides, attach new one ⑨ .

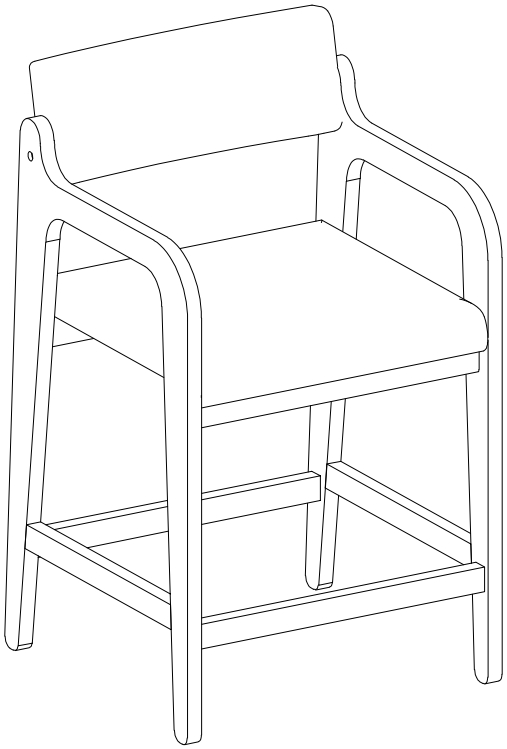

Your chair is ready for use .
This chair can only be used on a flat, level surface.