Fire Vida

Steel Chimnea

ASSEMBLY INSTRUCTIONS

SKU
333422

PARTS LIST

Please check parts against the list below before assembling your chimenea grill, Take a few moments to familiarize yourself with the contents. Check that all holes are clear of paint before assembly.

(1)CAP		1PC
(2)SPARK ARRESTOR SCREEN		1PC
(3)FLUE		1PC
(4)STOVE UP		1PC
(5)MESH STOVE ASSEMBLY		1PC
(6)CONNECTOR PLATE		4PCS
(7)STOVE BOTTOM		1PC
(8)LEG		3PCS
(9)SAFETY TOOL		1PC
(10)GRATE		1PC
(11)DOOR		1PC
(A)M6x20 BOLT		14PCS
(B)M6x30 BOLT		3PCS
(C)WASHER		17PCS
(D)LOCK WASHER		17PCS
(E)NUT		17PCS

WARNING

- Dispose of all polythene packing carefully and keep out of the reach of children..
- Please read the section on chimenea safety prior to using your chimenea.

HANDY HINTS

Please read all instructions carefully and keep outer packaging to refer
To photograph of finished product in case of diffculty.

ASSEMBLY

- While every effort has been made in the manufacture of your chimenea to remove any sharp Edge, you should handle all components with care to avoid accidental injury.
- Tools required:Either a crosshead or flat-bladed screwdriver and either an Adjustable wrench or a pair of pliers

STEP 1 -ATTACHING LEGS

Attach legs (8) to stove bottom (7) using bolts (A), washers (C), lock washers (D) and nuts (E), Tighten loosely.

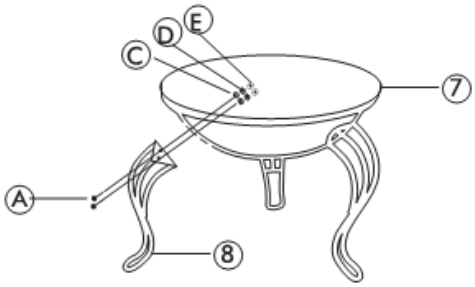

STEP 2 –ASSEMBLY GRATE

Insert grate (10) in the stove bottom (7).

Attach connector plates (6) to stove bottom (7) using bolts (A)washers (C) lock washers (D) and nuts (E).Do not tighten

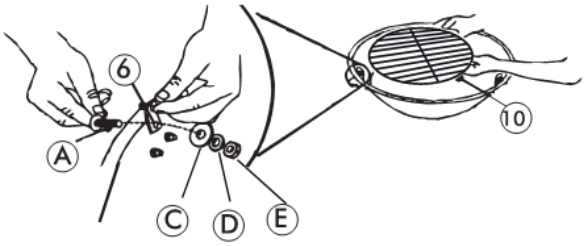

STEP 3 –ASSEMBLY MESH STOVE ASSEMBLY

Install mesh stove assembly (5) on stove bottom assemb (7)

Align connector plates and fasten using bolts (A) washers (C), lock washers (D)and nut (E) Tighten all the bolts & nuts gently,do not over-tighten

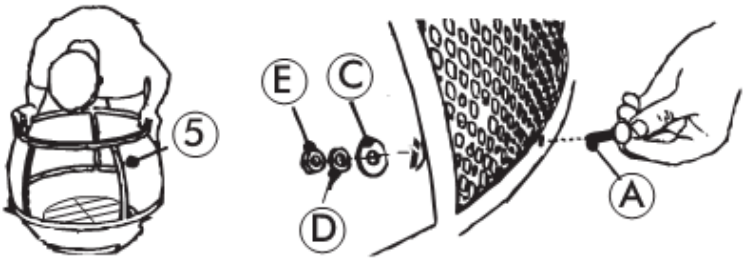

STEP 4 –ASSEMBLY MESH STOVE TOP

Install stove top (4) on mesh stove assembly (5).

Align the holes on the top with connector plate on the mesh stove assembly and connect using bolts (A) washers (C), lock washers (D) and nuts (E). Tighten securely,do not over-tighten.

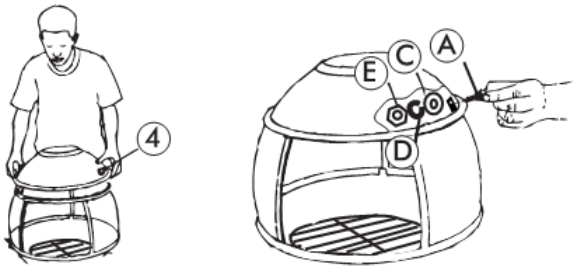

STEP 5 –ASSEMBLY FLUE

Connect flue (3) to stove top (4) using bolts (B), washers (C) ,lock washers (D) and nuts (E).

Place spark arrestor screen (2) and cap (1) onto the top of flue (3), as shown.

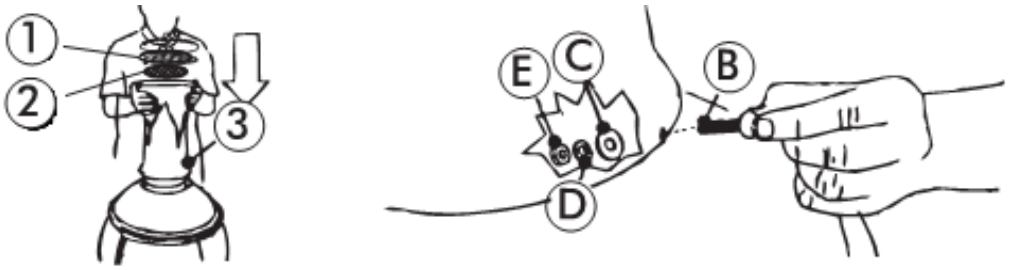

STEP 6–PLACE THE DOOR

Install the door (11) onto the mesh stove assembly (5).

To move the hot parts use the safety tool (9) .

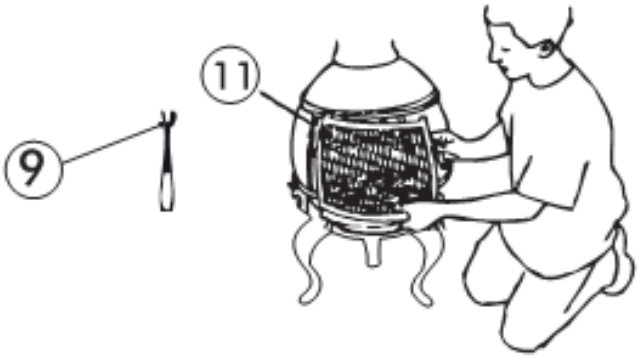

INSTRUCTIONS FOR USE

1. Make sure the assembly instructions have been followed correctly
2. Set the chimenea up in a suitable position on a level surface away from areas likely to catch fire .
   The base of the chimenea will get hot so ensure it stands on suitable surface
3. Use wood (Charcoal)and a suitable lighting method :

Method 1 – charcoal & Lighting Fluid

a) Set up your chimenea in a safe place .Place enough charcoal in the firebowl to a depth of 3-5cm.
b) Taking care not to spill any liquid onto your hands or clothes .Squirt the lighting fluid over the charcoal.
c) Wait for 30 seconds to allow the liquid to soak into the charcoal.
d) Do not light the charcoal if you have spilt fluid onto your clothes. Light the charcoal using a long taper or safety lighter .The charcoal will then burn for a period with flames
e) Do not squirt liquid onto burning charcoal .Stand well back from the chimenea and repeat –steps b)to e).

Method 2 – Lighting Blocks

a) Place three or four Lighting Blocks in the centre of the appliance bowl and light with a match
b) Place pieces of wood (Charcoal) around each burning block .Add more wood (Charcoal) as required, in a pyramid formation.

4. ALWAYS WEAR OVEN GLOVES WHEN HANDLING

5. If using split or full logs ensure they are fully and treatment free (painted etc.) to avoid smoking and spitting.

6. Ensure spark guard is securely in place once lit .Always use hook provided when fitting or removing spark guard to avoid risk of burns.

7. Ensure there is at least 1 metre clearance around all sides of the chimenea , keep away from bfences ,over hanging branches and other combustible materials.