Pure & Easy

ASSEMBLY INSTRUCTIONS

HOSDTR-0023

DYHC-V1

NOTICE

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
WICHTIG, FÜR SPÄTERE NACHSCHLAGE AUFBEWAHREN: SORGFÄLTIG LESEN
IMPORTANTE, GUARDAR PARA REFERENCIA POSTERIOR: LEER ATENTAMENTE
IMPORTANTE, CONSERVARE PER RIFERIMENTI FUTURI: LEGGERE ATTENTAMENTE
IMPORTANT, À CONSERVER POUR RÉFÉRENCE FUTURE : LIRE ATTENTIVEMENT

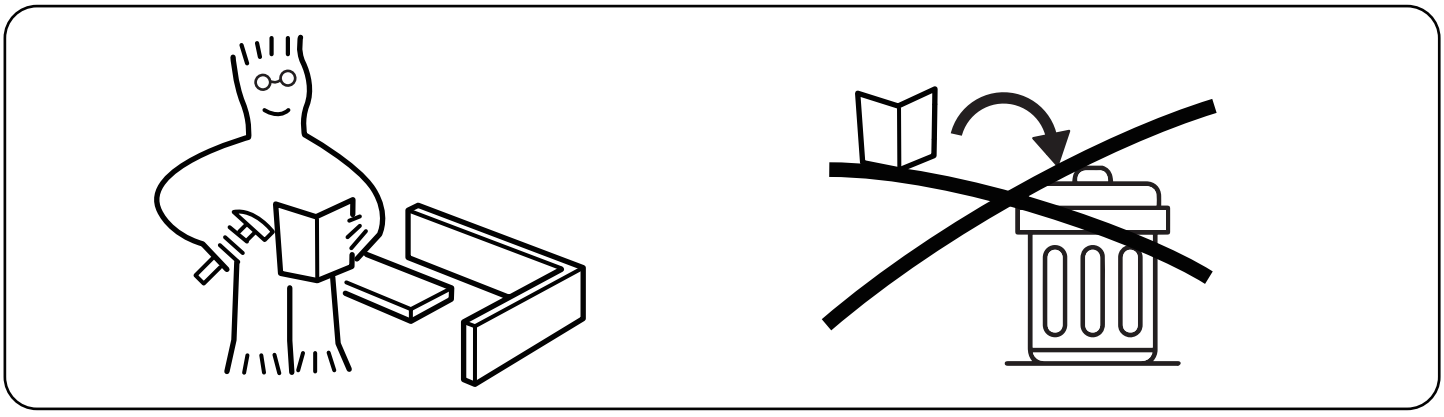

Assemble on a flat, clean and soft surface.
Auf einer flachen, sauberen und weichen Oberfläche zusammenbauen.
Assembler sur une surface plate, propre et douce.
Assemblare su una superficie piatta, pulita e morbida.
Ensamblar sobre una superficie plana, limpia y suave.

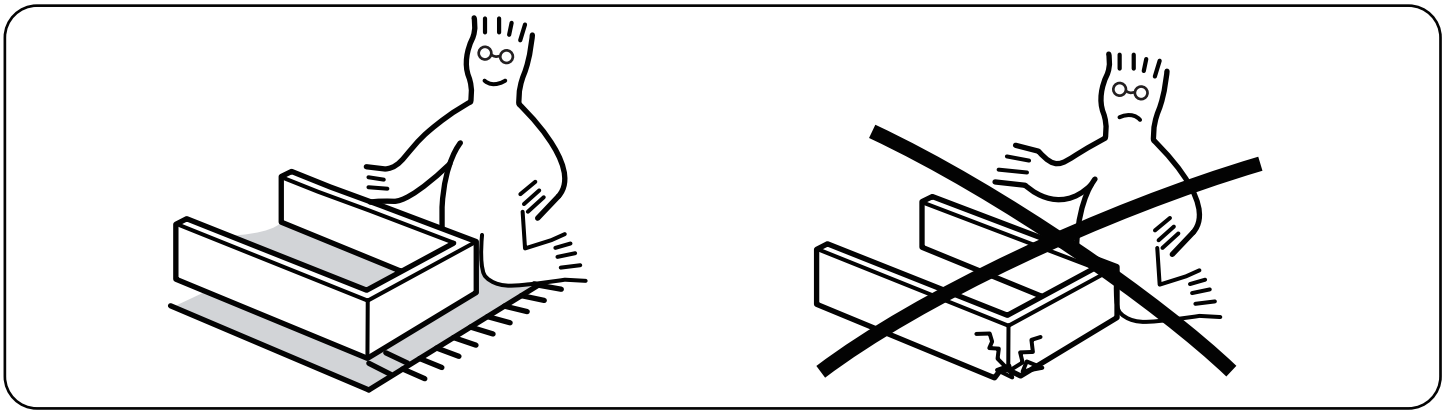

Professional installation is highly recommended.
Eine professionelle Installation wird dringend empfohlen.
Une installation professionnelle est fortement recommandée.
Si raccomanda vivamente l'installazione professionale.
Se recomienda altamente la instalación profesional.



Periodically Check That All Components Are Tightly Secured.
Überprüfen Sie Regelmäßig, Dass Alle Komponenten Fest Gesichert Sind.
Vérifiez Périodiquement Que Tous Les Composants Sont Bien Fixés.
Controllare Periodicamente Che Tutti I Componenti Siano Ben Fissati.
Verifique Periódicamente Que Todos Los Componentes Estén Bien Asegurados.



It is recommended that multiple people assemble this product.
Es wird empfohlen, dass mehrere Personen dieses Produkt zusammenbauen.
Il est recommandé que plusieurs personnes assemblent ce produit.
Si raccomanda che più persone assemblino questo prodotto.
Se recomienda que varias personas ensamblen este producto.

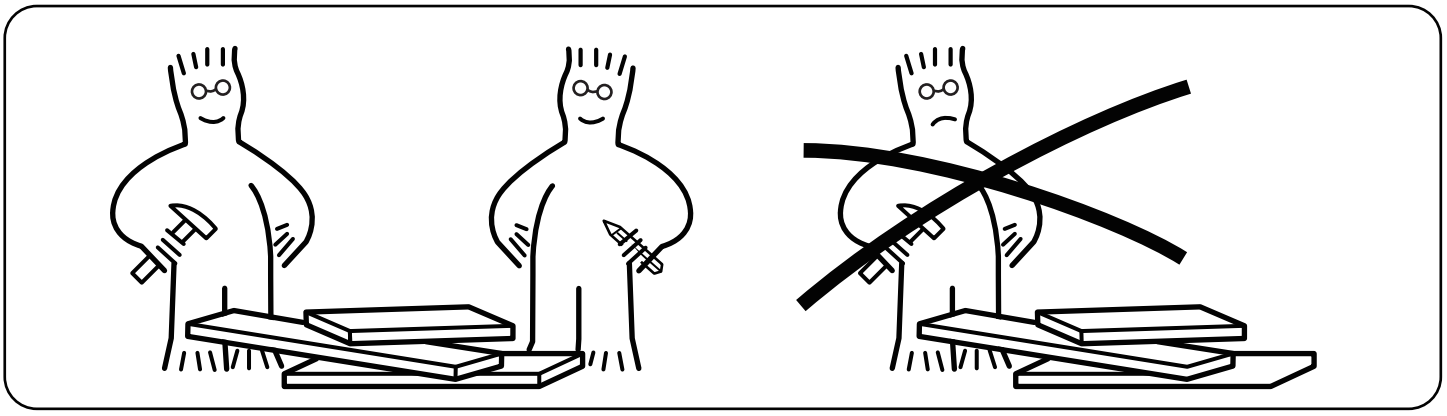

Please have the following auxiliary tools ready:

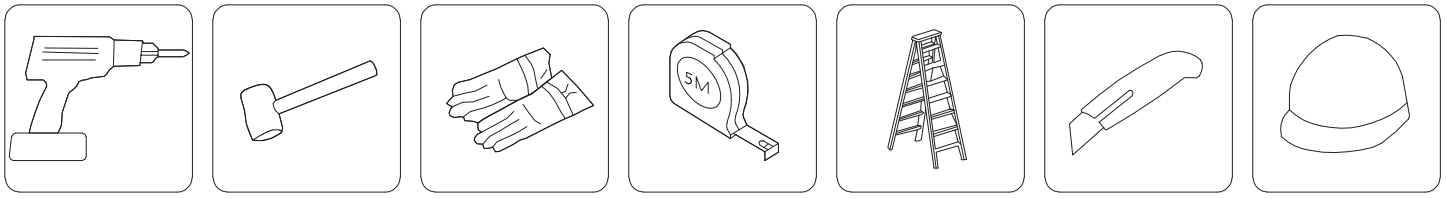

Assemble on a flat and solid surface.To avoid the unstable surface affecting the overall frame stability during installation.

Montieren Sie auf einer ebenen und festen Oberfläche.Um zu verhindern, dass eine unebene Oberfläche während der Montage die Gesamtrahmen-Stabilität beeinträchtigt.

Ensamblar en una superficie plana y sólida.Afin d'éviter que la surface inégale n'affecte la stabilité générale du cadre lors de l'installation.

Assemblare su una superficie piana e solida.Per evitare che una superficie irregolare influisca sulla stabilità complessiva della struttura durante l'installazione.

Assembler sur une surface plate et solide.Para evitar que la instalación en una superficie irregular afecte la estabilidad general del marco.

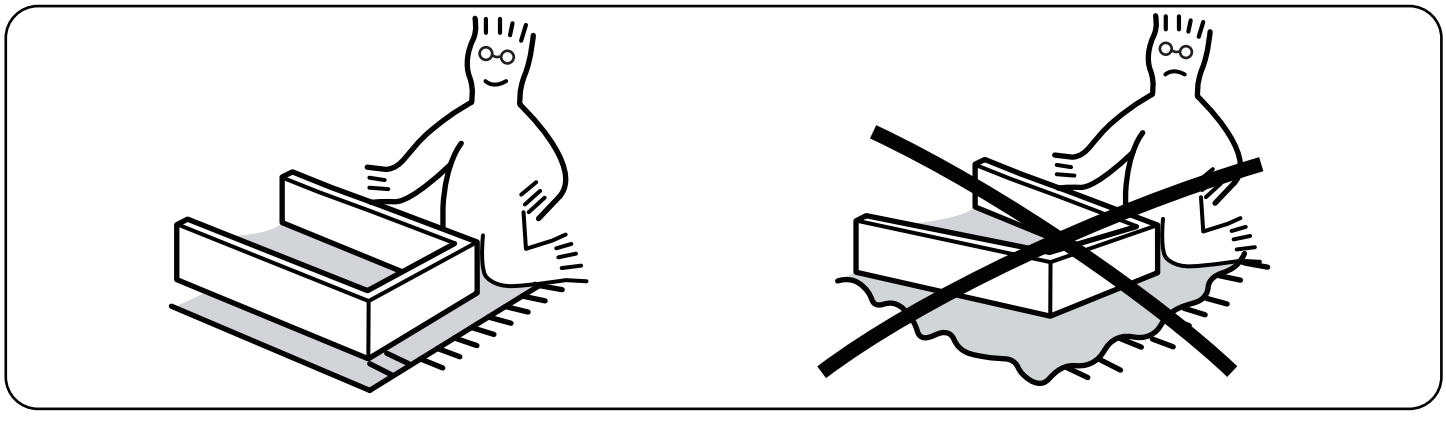

WARNING

Battery Safety Warning
- This product may or may not contain a button cell or coin battery depending on the model configuration.

INGESTION HAZARD
- Death or serious injury can occur if swallowed. A swallowed button or coin cell battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- Seek immediate medical attention if a battery is suspected to have been swallowed or inserted inside any part of the body.

Battery Use and Handling
- Use only compatible battery types (e.g., LR44, CR2032) with the correct nominal voltage.
- Install batteries according to correct polarity (+/ -).
- Do not mix old and new batteries, different brands, or different types (e.g., alkaline, carbon-zinc, or rechargeable).
- Remove batteries from devices not used for extended periods.
- Recycle or dispose of used batteries properly, following local regulations. Do NOT throw into household trash or incinerate.
- Do NOT recharge non-rechargeable batteries.
- Do NOT force discharge, disassemble, heat above the manufacturer' s recommended temperature, or incinerate. This may cause leakage, explosion, or chemical burns.

Battery Compartment Safety
- Always ensure the battery compartment is completely secured.
- If the compartment does not close properly, stop using the product. Remove the batteries and keep them away from children.



You can refer to the installation video for guidance on how to set it up.


WATCH VIDEO


LADDER (REQUIRED)


2 PERSON ASSEMBLY


UP TO 10 MIN. ASSEMBLY

- Firmly secure all screws before use.
- Product is intended for indoor use only.
- Do not place this tree in a wet location.
- This seasonal product is not intended for permanent installation or use.
- Do not use or store this item in the proximity of open flame, flammable/combustible chemicals, or other strong heat sources.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

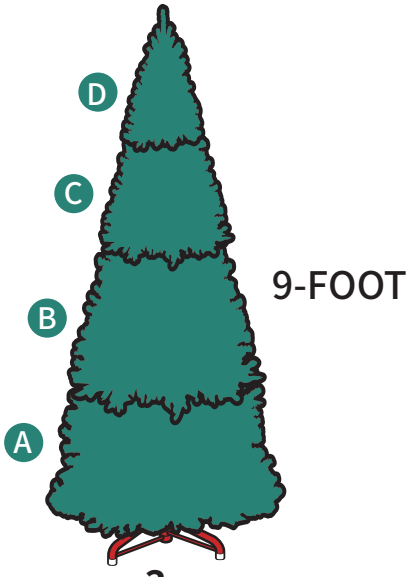

9-FOOT

PARTS

Item no.	Reference Image	Qty.
A	 BOTTOM SECTION	X1
B	 MIDDLE SECTION	X1
C	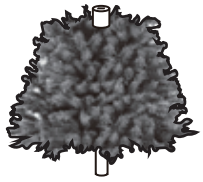 MIDDLE SECTION	X1
D	 TOP SECTION	X1

Item no.	Reference Image	Qty.
1	 BASE SCREW	X1
2	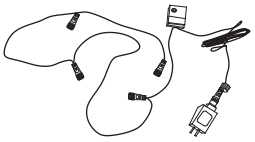 LIGHT STRING ADAPTER	X1
3	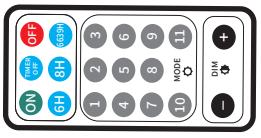 REMOTE CONTROLLER	X1
4	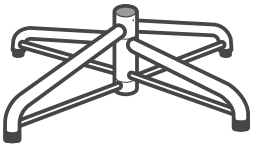 BASE	X1
5	 KRAFT PAPER	X1

1.Flock shedding from the Christmas tree is normal. You can use kraft paper to collect the debris and help keep the floor clean and tidy.

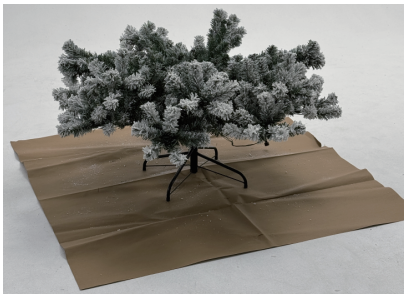

2.Even if the protective cover is damaged, it will not affect the installation of the Christmas tree.





3.During installation, make sure the connecting wires of the light string remain on the same side.

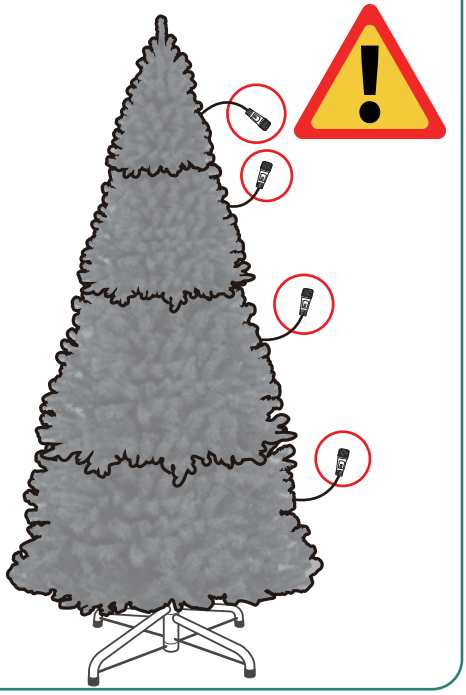

REMOTE CONTROL

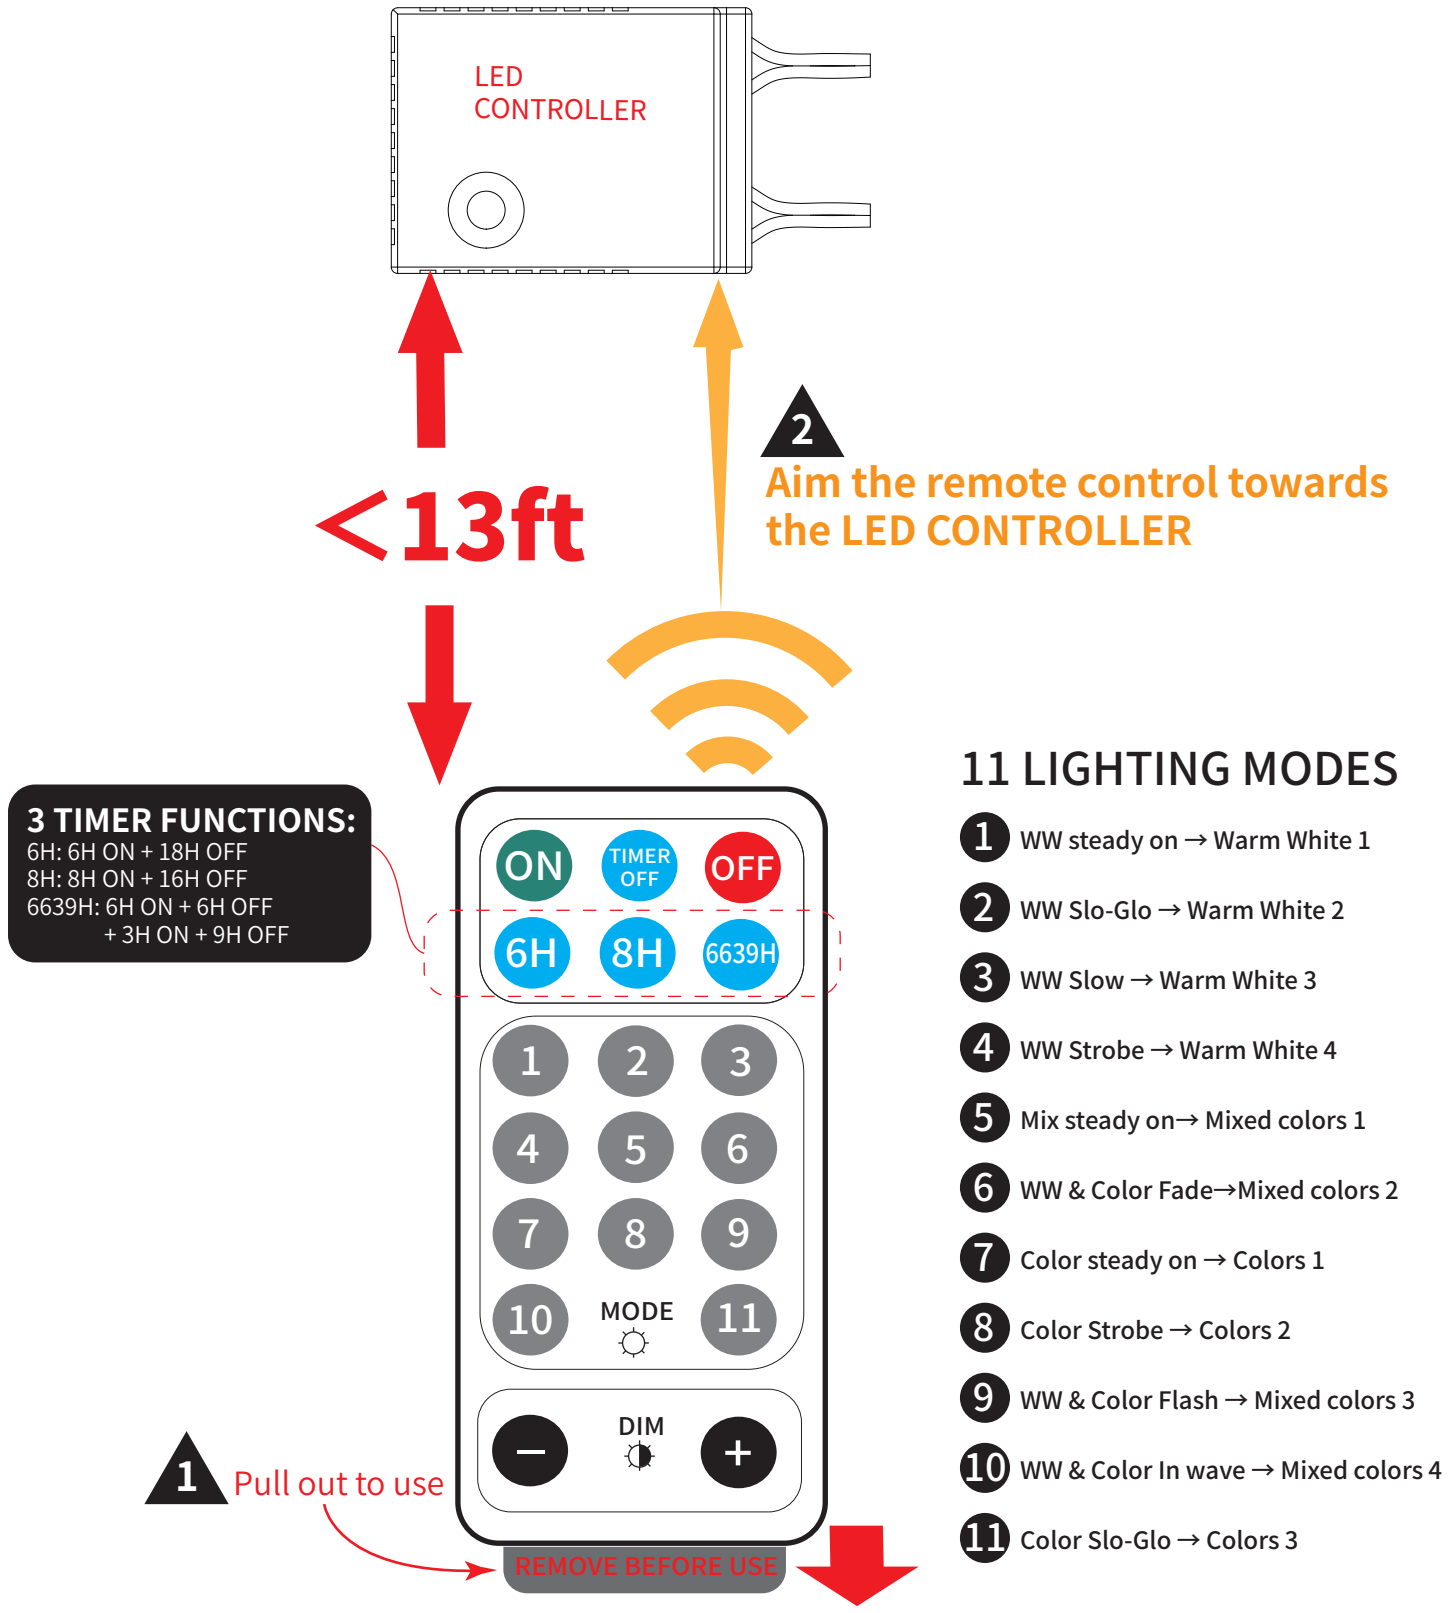

11 LIGHTING MODES

1. WW steady on → Warm White 1
2. WW Slo-Glo → Warm White 2
3. WW Slow → Warm White 3
4. WW Strobe → Warm White 4
5. Mix steady on→ Mixed colors 1
6. WW & Color Fade→Mixed colors 2
7. Color steady on → Colors 1
8. Color Strobe → Colors 2
9. WW & Color Flash → Mixed colors 3
10. WW & Color In wave → Mixed colors 4
11. Color Slo-Glo → Colors 3

1.Remove the insulation tab before use.
2.When using the remote control, it must be pointed directly at the LED CONTROLLER for proper signal transmission.

NOTE: The remote has an effective range of up to 13 feet. Be sure to aim the remote at the adapter for optimal performance.

ASSEMBLY

1

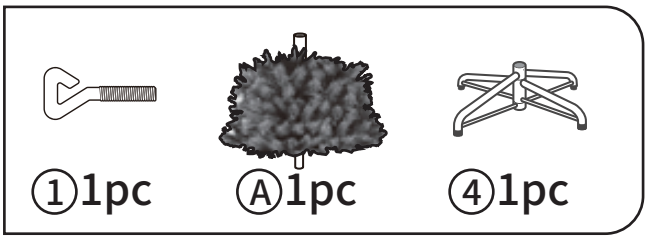

1 Please remove the caps on the end of the poles before assembly.

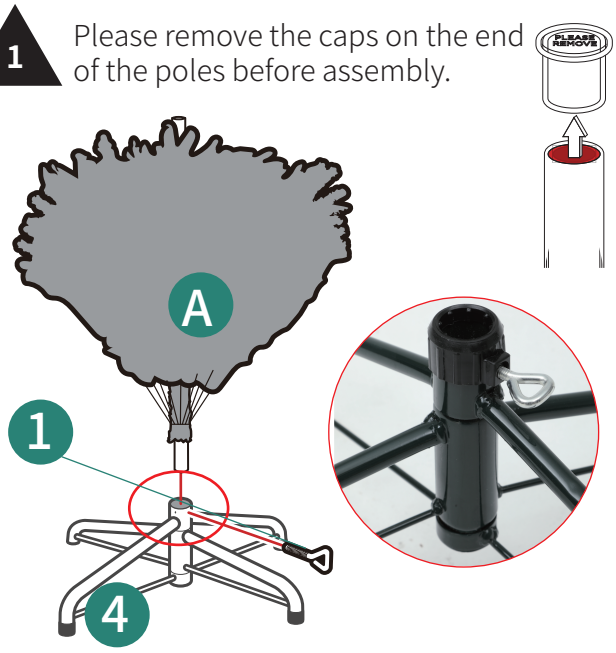

2 Don't install the B and C parts until all the leaves of the bottom tree (Part A) are unfurled.

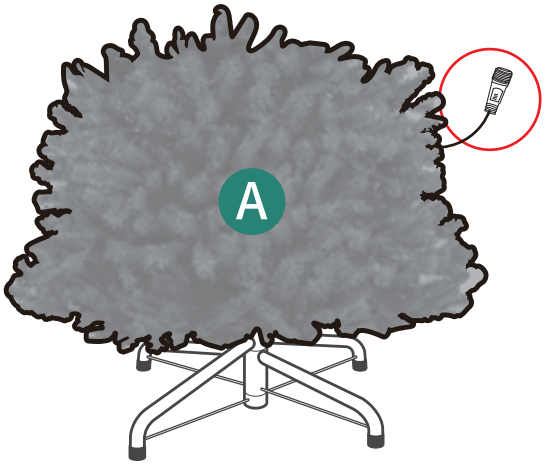

During installation, the LED light connector should be aligned on one side.









1.The branches will naturally fall into place.
2.The leaves are compressed toward the center, as shown in Figure 1.
3.Gently grasp the foliage tips on both the left and right sides from the inside out, and spread them outward from the center to both sides. Each layer of leaves should naturally fall into place, as shown in Figure 2.
4.Ensure pinecones rest on top of the leaves for a natural look, as shown in Figure 3.
5.Repeat steps 3 and 4 for the lower tree section, then move on to assemble the srest sections.

Note: Since the light strings are pre-installed, handle the tree carefully to avoid damaging the wires while adjusting the branches.

2



Ⓑ1pc Ⓒ1pc

1

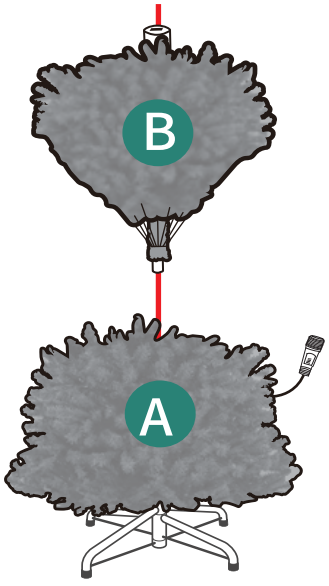

2

Don't install the C part until all the leaves of Part B is unfurled.

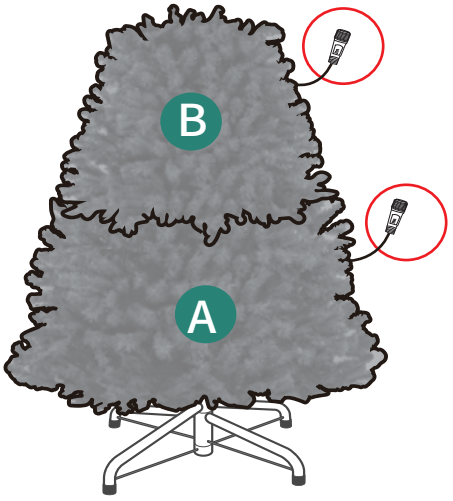

During installation, the LED light connector should be aligned on one side.

3

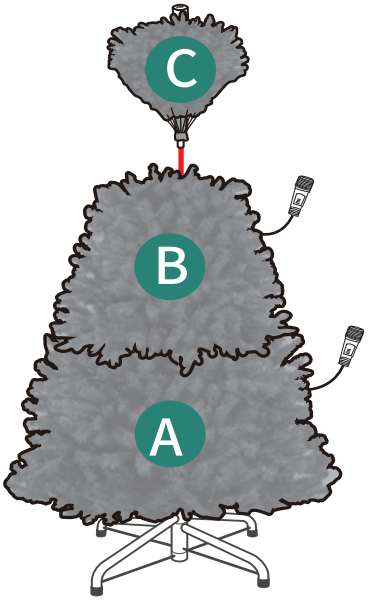

4

Don't install the D part until all the leaves of Part C is unfurled.

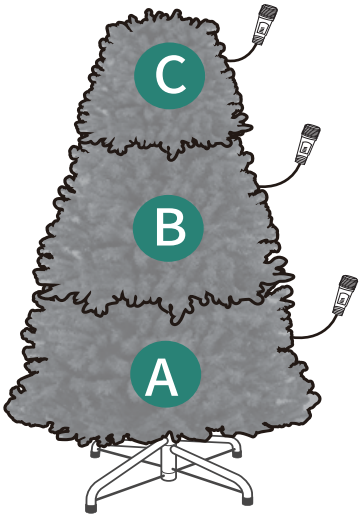

During installation, the LED light connector should be aligned on one side.

Note:Continue shaping the tree using the branch bending technique described on the previous page.

3



Ⓓ1pc

1

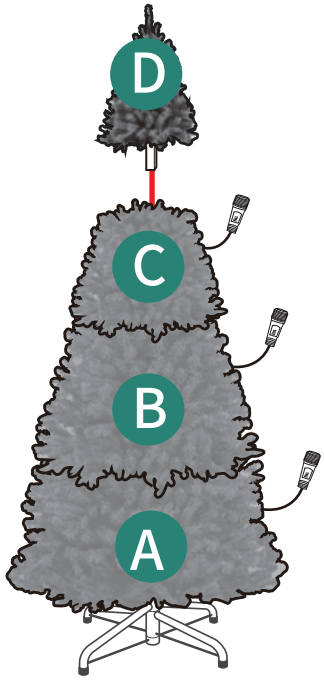

2

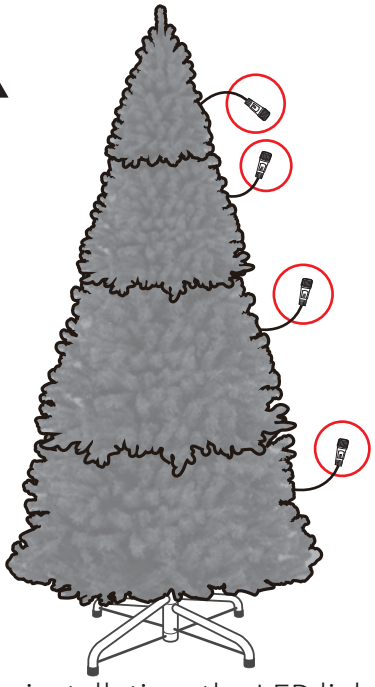

During installation, the LED light connector should be aligned on one side.

4



②1pc

Connect all the corresponding plugs.
Insert the bottom plug into a wall outlet to turn the lights on.

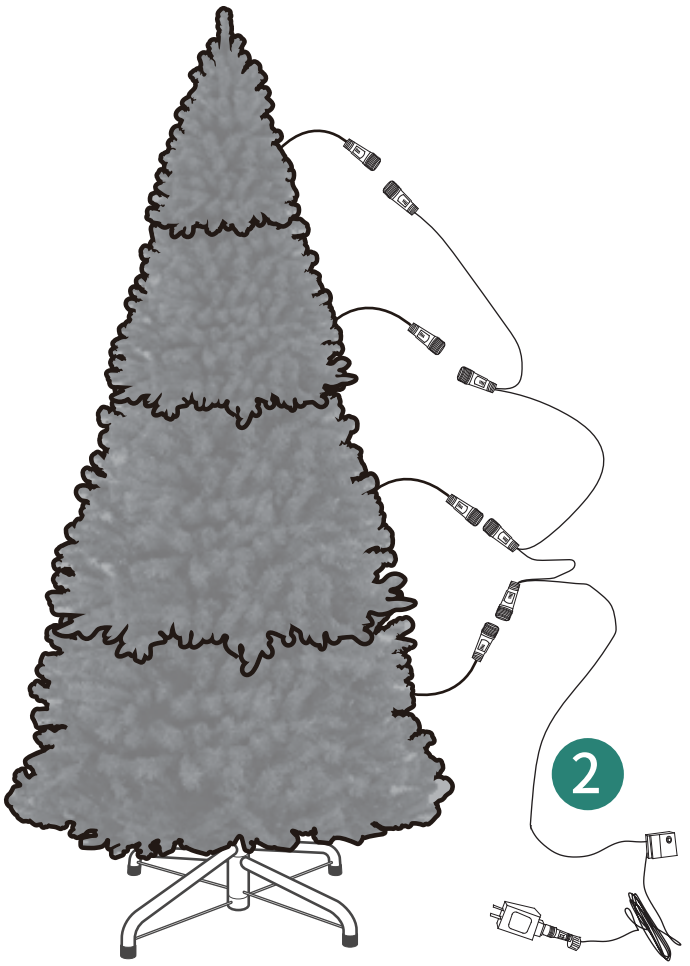

Insert plug into a wall outlet.
Press the pedal switch to toggle lights on/off.

NOTE: Branches come spread out and maintain their shape.
Lights are powered through connectors in the pole; make sure they are properly joined.

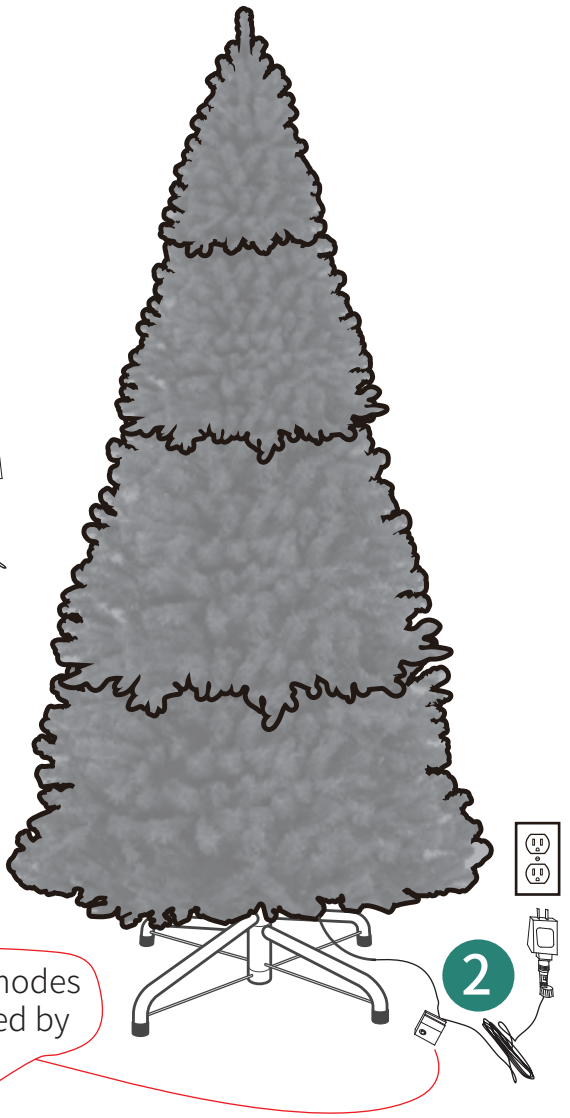

Different colors and modes of light can be adjusted by pressing the button.

CLEANING & STORAGE

- Store this tree in a cool and dry place away from heat and moisture.
- Before putting this tree in storage, do the following:
  - Completely remove all decorations.
  - Clean the tree with a slightly damped cloth and let it dry naturally.
  - Raise all branches to original upright position; make sure not to damage any branches in the process.

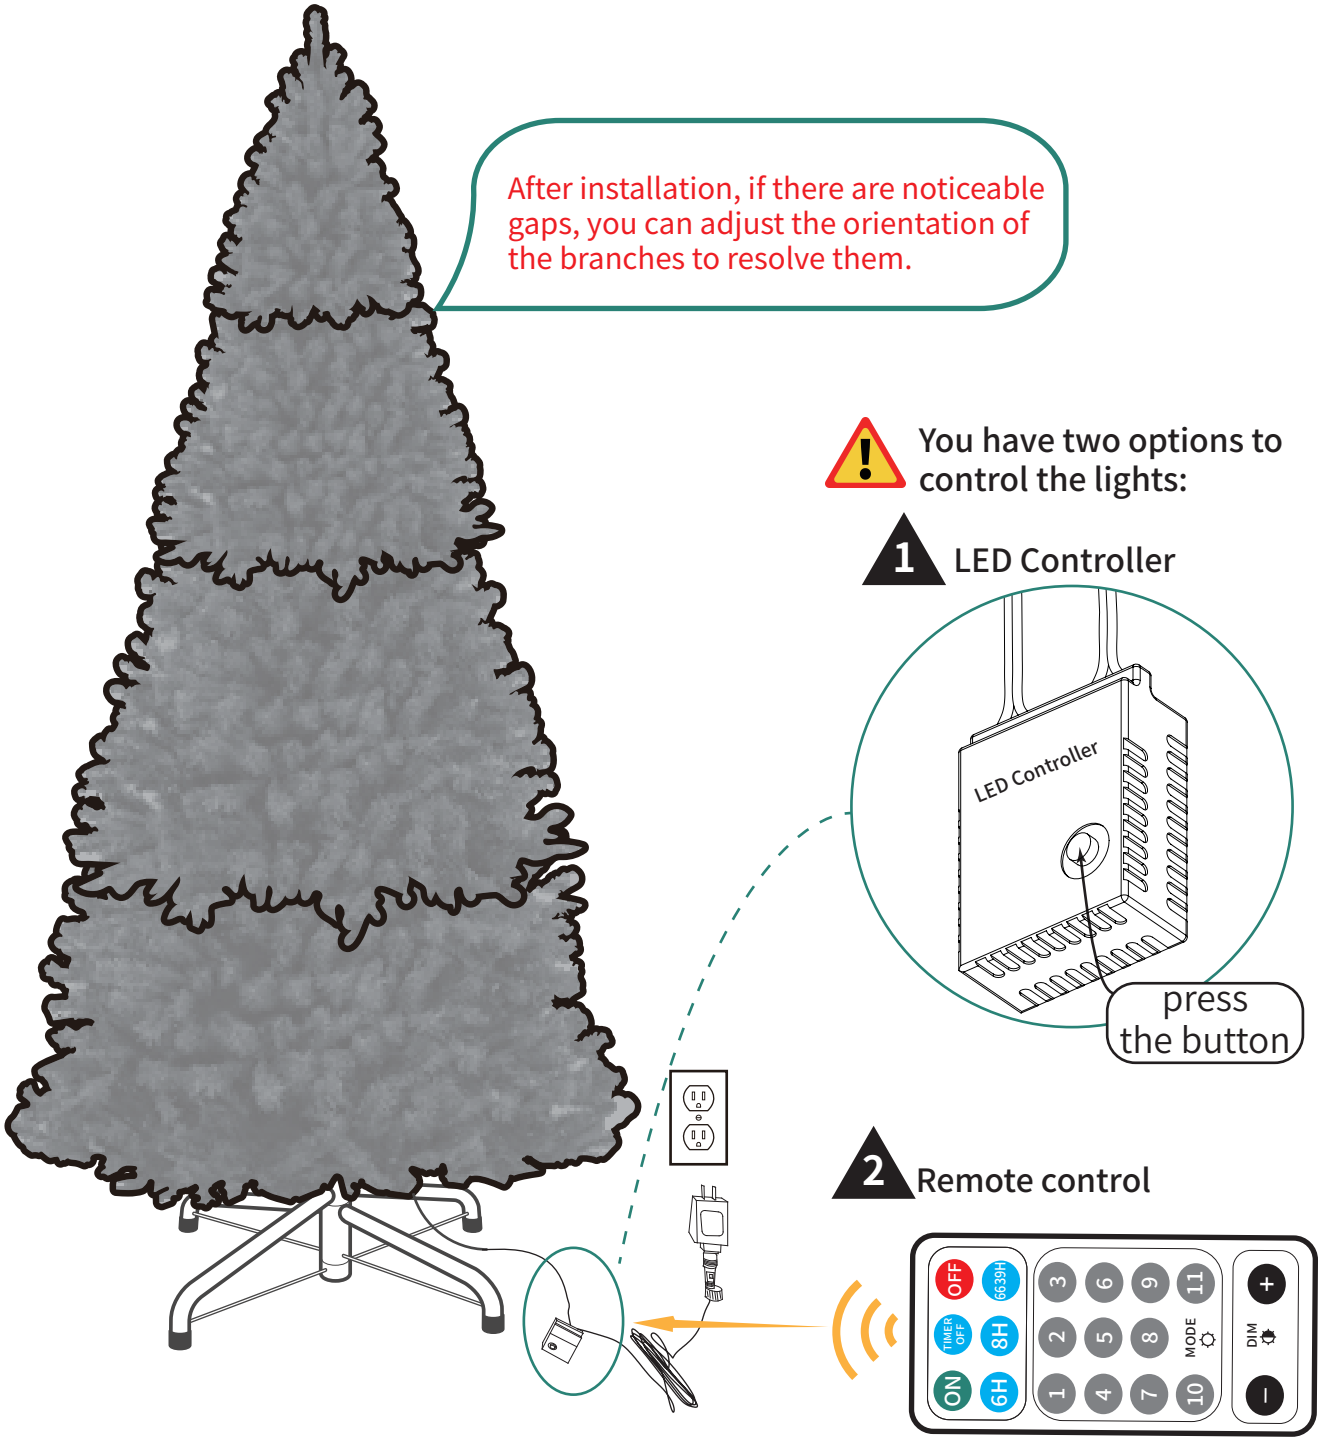

The assembly is fully complete.
The tree is ready to decorate and enjoy!

Installation Completed

Q&A

How do I make the Christmas tree look fuller?

Please make sure you are using the correct installation procedure.
1. start unfolding from the bottom 2. start from the inside of the branch and then unfold each branch. Please make sure that each branch is unfolded so that you will get a full Christmas tree.
Note: Do not install the middle & top part without unfolding the bottom branches.

Why are some needles or debris falling when I install my Christmas tree?

Slightly dropped needles/fluff is normal for a brand new Christmas tree. This will not affect the overall effect.

How can I storage my Christmas tree?

Remove the base and several trunks of the tree, then gather the branches as close as possible to the trunk, and finally put them back in the box.

What is the weight-bearing capacity of the branches? Will it support my decorations?

Each branch uses thickened metal and is perfectly suited to carry your decorations. Please be careful not to hang overly heavy items, which can cause the tree to warp.

What should I do if I receive a Christmas tree that lacks accessories (such as bolts, bases, etc.)?

Please contact customer service for replacement.

Should the bolts of the base be tightened before or after installing the Bottom Part of the Christmas tree?

First, fasten the bolt to the base hole before installing the bottom tree (don't tighten), then tighten the bolt after installing the bottom Christmas tree

HELP CENTER

 Inquiry

 Assembly issue

 Missing parts

If you encounter any difficulties during assembly, please contact us.
Wenn Sie während der Montage auf Schwierigkeiten stoßen, kontaktieren Sie uns bitte.
Si vous rencontrez des difficultés lors du montage, veuillez nous contacter.
Se incontri difficoltà durante il montaggio, ti preghiamo di contattarci.
Si encuentras alguna dificultad durante el ensamblaje, por favor contáctanos.

DISCLAIMER

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attach ment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.
Der Hersteller und Verkäufer lehnen ausdrücklich jegliche Haftung für Personenschäden, Sach schäden oder Verluste ab, egal ob direkt, indirekt oder zufällig, die durch falsche Anbringung, unsachgemäßen Gebrauch, unzureichende Wartung, nicht genehmigte Änderungen oder Vernachlässigung dieses Produkts entstehen.
El fabricante y vendedor renuncian expresamente a toda responsabilidad por lesiones perso nales, daños materiales o pérdidas, ya sean directos, indirectos o incidentales, derivados de la incorrecta colocación, uso inadecuado, mantenimiento insuficiente, modificación no aprobada o negligencia de este producto.
Il produttore e il venditore declinano espressamente ogni responsabilità per lesioni personali, danni materiali o perdite, dirette, indirette o incidentali, derivanti dall'errato fissaggio, uso improprio, manutenzione inadeguata, modifica non autorizzata o negligenza di questo prodotto.
Le fabricant et le vendeur déclinent expressément toute responsabilité en cas de blessures corporelles, de dommages matériels ou de pertes, qu'ils soient directs, indirects ou accessoires, résultant de la fixation incorrecte, de l'utilisation inappropriée, de l'entretien insuffisant, de la modification non approuvée ou de la négligence de ce produit.