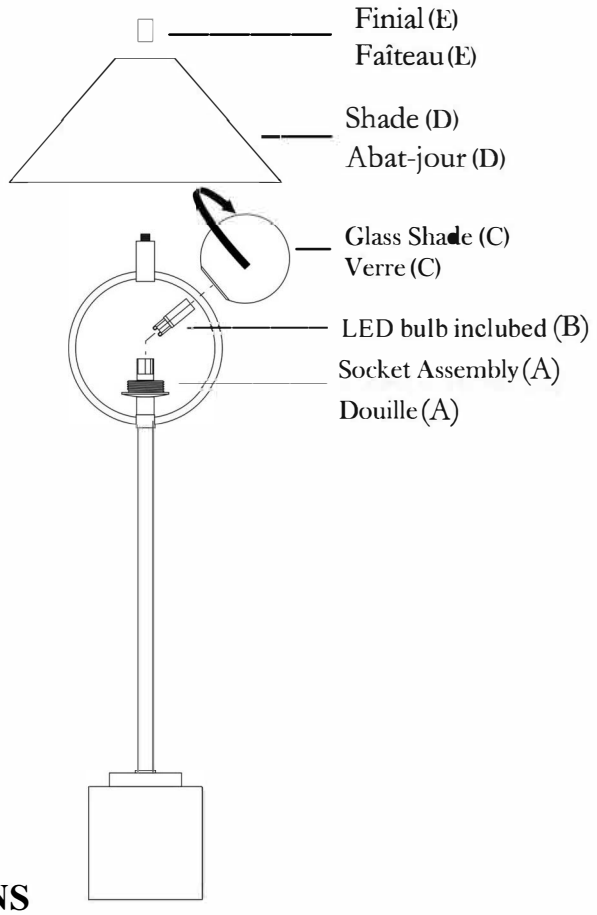


ASSEMBLY INSTRUCTIONS

1. PUT THE BULB(B) INTO SOCKET ASSEMBLY(A).
2. PUT GLASS SHADE(C) ONTO SOCKET ASSEMBLY(A), TIGHTEN THE GLASS SHADE(C).
3. PLACE SHADE (D) ONTO THE THREADED HOLDER.
4. TIGHTEN FINIAL (E) .

CLEANING

DO NOT USE POLISH OR CLEANERS ON YOUR LAMP, JUST WIPE CLEAN WITH SOFT CLOTH.

WARNING

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONE WAYONLY.IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED.

DIRECTIVES D'ASSEMBLAGE

1. PLACER LA AMPOULE(B)SUR LA DOUILLE(A).
2. PLACER LA VERRE(C)FSUR LA DOUILLE(A),BIEN SERRER VERRE(C).
3. PLACER L'ABAT-JOUR (D) SUR LA DOUILLE(A).
4. BIEN SERRER LE FAÎ TEAU (E).

NETTOYAGE

NE PAS UTILISER DE VERNIS OU DE DÉ TERGENT SUR VOTRE LAMPE. ESSUYER SEULEMENT AVEC UN CHIFFONDOUX ET PROPRE.

AVERTISSEMENT

CETTE LAMPE PORTATIVEEST MUNIE D'UNE FICHE POLARISÉE (UNE DES LAMES EST PLUS LARGE QUE L'AUTRE). AFIN DE RÉDUIRE LES RISQUES DE DÉCHARGE ÉLECTRIQUE, IL N'Y A QU'UNE SEULE FAÇON D'INSÉRER CETTE FICHE DANS UNE PRISE DE COURANT POLARISÉE. SI LA FICHE NE S'INSÈRE PAS CORRECTEMENT DANS LA PRISE, LA RETOURNER DE CÔTÉ. SI LA FICHE N'ENTRE TOUJOURS PAS, COMMUNIQUER AVEC UN ÉLECTRICIEN QUALIFIÉ. NE PAS UTILISER AVEC UNE RALLONGE À MOINS QUE LA FICHE PUISSE Y ÊTRE INSÉRÉE COMPLÈTEMENT.